



ECP/M Mercedes

Bluetooth Phone Integration

For Mercedes Benz

User Manual

Rev. 2 11.21.2007



MOST

 **Bluetooth**

Welcome to Tooki !

ECP/MOST-M Tooki is a Bluetooth phone integration system designed specifically for your Mercedes Benz vehicle.

When used properly, Tooki establishes a wireless Bluetooth link between the Mercedes COMAND radio and your mobile phone, resulting in hands-free operation of your phone.

Loaded with key features such as Phone book synchronization (phone dependent), Privacy mode, Radio keypad dial / call / hang, and noise-canceling technology, Tooki allows for a safer driving experience while keeping the driver connected to his wireless world.

Please make yourself familiar with your Tooki system and read the instructions in this manual before operating the system.

For more information, visit www.eurocarphone.com

Legend

Tooki is designed to work with a radio that has a factory SIM card based GSM phone option rather than Bluetooth. As such, certain functions displayed on the radio are not supported by Tooki. The following legend will ease your reading this manual.



Radio operation, button press




Rotate, then press the radio selector knob



Mobile phone operation, such as pairing




Operation not supported by Tooki

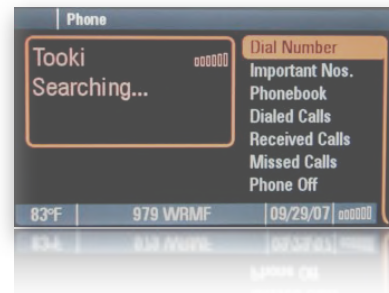



1. Press **TEL** on PCM Radio.
2. **“Tooki Searching”** indicates no phone connected.
3. Start the pairing procedure on your mobile phone. Make sure the Bluetooth feature is turned on. Consult your phone’s manual for phone-specific pairing procedures.
4. Once your mobile phone discovers **Tooki xxxx** (last 4 digits will vary), select and pair **Tooki**.
5. When prompted for a passkey, enter **6888** on your mobile phone.
6. Once pairing is complete, you should see your network provider’s name and signal strength indicator on the COMAND Radio.
7. You may pair up to 5 different mobile phones. For information on phone selection, see the CONNECTING section.

Note: the following phones require a special pairing code to be dialed from the radio prior to pairing. Please enter the code that matches your phone, then press

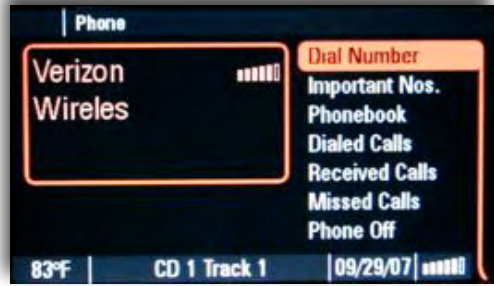

3*330033*1 - Headset profile	3*330033*6 - Samsung E-530, E-720
3*330033*2 - Motorola IDEN 605	3*330033*7 - Samsung Z300, Z500
3*330033*3 - Sagem MyX-8	3*330033*8 - Sony Ericsson K600, K750
3*330033*4 - Samsung A9xx	3*330033*9 - Sony Ericsson P800, P900
3*330033*5 - Samsung D500	3*330033*10 - Windows CE , Mobile

Connecting


If only one phone is paired, Tooki will attempt to connect to this phone as long as the COMAND radio is active.

Up to 5 phones may be paired and selected.

If more than one phone is paired, Tooki will attempt to connect to ANY of the paired phones. Last connected phone has a priority over other paired phones, but since different phone may have different Bluetooth latencies, it is hard to predict which phone will be connected if more than one phone is present within range of Tooki. You may manually connect to a paired phone following this procedure:


Selecting a paired phone:


1. Press TEL, Select Phonebook
2. Select the phone you wish to connect. In this example, a Blackberry 8830 and an iPhone are paired, and we are selecting the iPhone.

3. Press the  button on the COMAND radio.

4. Tooki will display **Dialing: Selecting...** and will attempt to connect to the phone selected. Radio will resume normal operation within a few seconds.

Deleting a paired phone:

1. Highlight *(Del Phonename)*, press **Select**
2. Press  - Radio will respond with **“Dialing: Deleting...”**

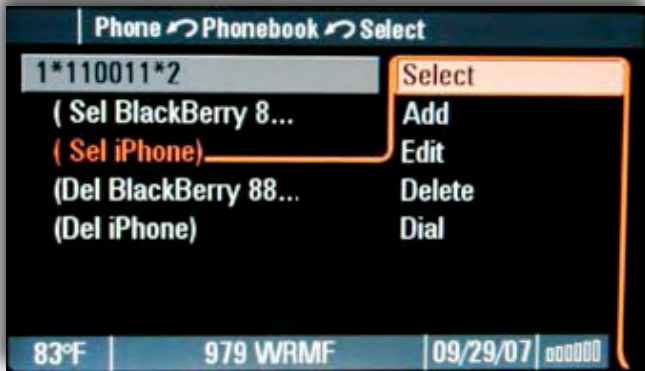




A received call will cause the following:

1. Mute the radio and generate a ring tone
2. Display **CALL: (Caller)** at the bottom of the screen
3. Display the Caller ID or caller name if the phone supports those features and phonebook has been transferred.

To answer a call:

1. Press the TALK  button, or
2. Press ACCEPT when on TEL menu

To end a call:

1. Press the HANG  button, or
2. Select **End Call** when on TEL menu




NOTE:

New Call and Hold Call may not work on all phones

Placing Calls

To place a call:

1. Press **TEL**, then dial a number on the Keypad
2. Press 

Alternatively, You may dial a number by selecting **Dial Number**, then selecting each digit as depicted, followed by selecting **Dial**

 **NOTE:** the **Store** option is not supported.

You may also dial numbers stored under the following:


Dialed Calls


Received Calls

Missed Calls

Pressing  twice will redial the last number.

Most phones allow to dial, answer and end calls via the phone buttons

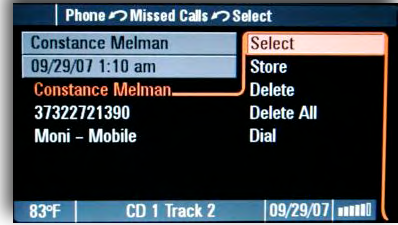

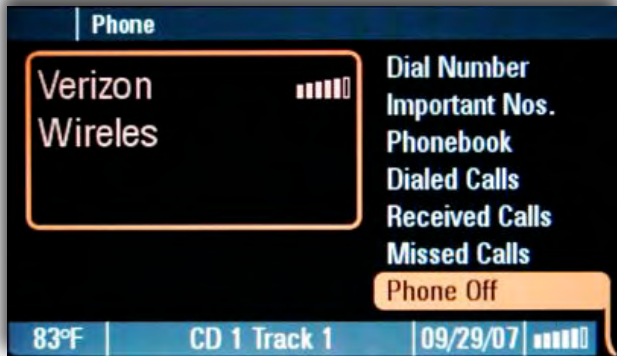

It is often convenient to switch between hands-free operation and normal phone use.

Tooki allows for a quick Privacy Mode:

Press **TEL**, Select **Phone Off**. **Privacy On** is displayed, use your mobile phone as usual.




To switch back to Hands-Free mode:

Press **TEL**, Select **Phone On**.



Phonebook



⊘ **NOTE:** The Phonebook feature is not supported by all phones.

The Radio is limited to 99 Phonebook entries !

1. Press **TEL**, then select **Phonebook**
2. Rotate the knob right or left to select your entry. Quick rotation will result in skipping the search by 25 entries.
3. Press  or select **Dial** to place a call.

⊘ **NOTE:** The Phonebook can not be modified, as it is stored in your phone. The **Add, Edit and Delete** options will **only appear** to work, but no change is actually made to your phone's content. The Phonebook will refresh and revert to the phone's content upon re-connecting.

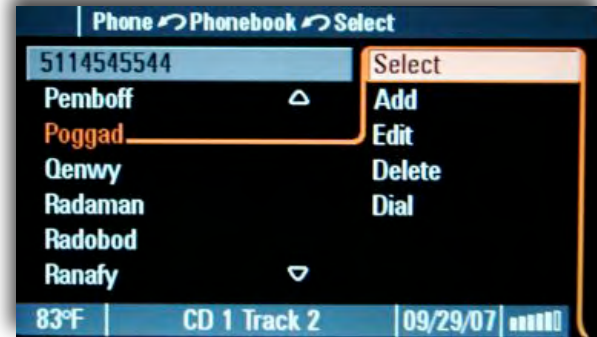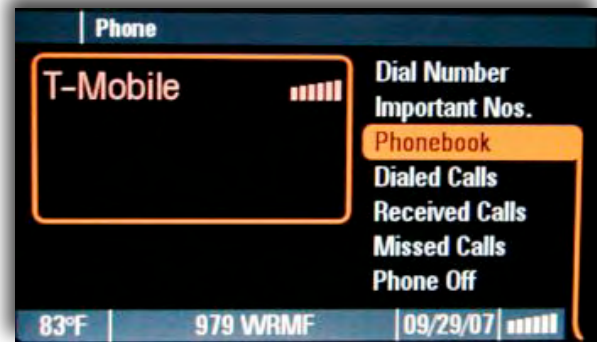

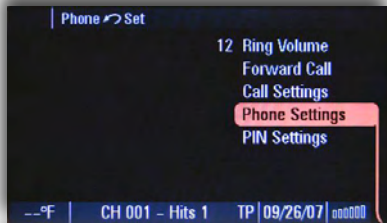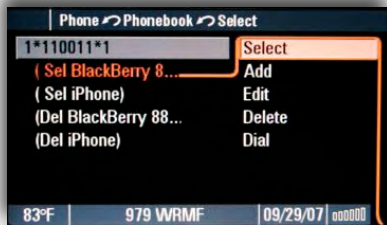

Your radio was not designed for Bluetooth operation, but rather for a hardwired phone module.

Tooki emulates many of the functions supported by the radio. However, certain functions are designed to work only with the factory phone and can not be used by Tooki. Therefore, you would notice some unused menu items.

List of unused menu items:

Store - All changed are void at restart

Hold Call - Works with some phones

New Call - Works with some phones

Add - All changed are void at restart

Edit - All changed are void at restart

Delete - All changed are void at restart

SMS - Works with some phones

Forward Call - NOT AVAILABLE

PIN Setting - NOT AVAILABLE

Phone Setting - NOT AVAILABLE

Tooki can be updated by the user via a Bluetooth-enabled laptop.

Latest software updates and instructions are available at: www.eurocarphone.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>