

ADDITIONAL INFORMATION

INTEGRATED KEYHEAD TRANSMITTER (IKT) AND REMOTE ENTRY SYSTEM FEATURES

Your vehicle comes equipped with two programmed Transmitters (IKTs) which are both a programmed ignition key and a remote keyless entry transmitter. Handle the IKT carefully when starting the car to avoid accidentally pressing any of the remote entry buttons. Press once to unlock the driver's door. The interior lamps will illuminate. Press twice to unlock all the doors, the liftgate and liftgate glass. Press once to lock all the doors. If all doors and the liftgate are closed, the turn lamps will flash.

Press twice to confirm all the doors and liftgate are closed and locked. The doors will lock again, the horn will chirp once. Press to activate the panic alarm. The horn will sound and the turn lamps will flash. Press again or turn the ignition on to deactivate the panic alarm. Press twice within three seconds to open the liftgate glass. **Car finder:** Press twice within three seconds. The horn will chirp and the turn lamps will flash. It is recommended to use this method to locate your vehicle, rather than using the panic alarm. **Note:** Ensure that you keep the adhesive security labels in a safe place for future reference. Replacements are only available through an authorized dealer.

KEYLESS ENTRY KEYPAD (if equipped) You can use the keyless entry keypad to lock or unlock the doors as well as release the liftgate without a key. To unlock the driver's door, enter your five digit factory code (available on the owner's wallet card in

the glove box or from your authorized dealer.) To unlock all doors and the liftgate, enter your five digit factory code and, within five seconds, press 3-4. To lock all doors and the liftgate, simply press 7-8 and 9-0 at the same time (you do not need to enter your factory code first). Refer to your Owner's Guide for more information.

ADVANCETRAC® WITH ROLL STABILITY CONTROL™ (RSC®) STABILITY ENHANCEMENT SYSTEM Your vehicle is equipped with the AdvanceTrac® stability enhancement system. This system consists of: Traction control, which helps avoid wheel spin and loss of traction, Roll Stability Control™ which helps avoid a vehicle roll-over, and Electronic Stability Control, which helps avoid skids or lateral slides. These features work together to help you to maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off. Refer to your Owner's Guide for safety information and more details.

MOON ROOF (if equipped) The moon roof is equipped with an automatic, one-touch, opening, closing and venting feature. To open, press and release the rear portion of the control located in the overhead console. To stop motion at any time during the one-touch opening, press the control a second time. To close, press and release the front portion of the control until the glass stops moving. To open the moon roof

to the vent position, press the front portion of the control. To close, press and hold the rear portion of the control until the glass stops moving.

OVERDRIVE CONTROL/CANCEL WITH GRADE ASSIST Drive with the vehicle in Overdrive (O) for the best fuel economy. You can deactivate overdrive by pressing the transmission control switch on the side of the shift handle. Your vehicle is equipped with a special Grade Assist feature which is automatically activated when overdrive is turned off. Grade assist helps to provide optimal gear selection and additional engine braking on hilly terrain. It is recommended that you return to O/D (Overdrive) once you return to flat terrain. To return to overdrive, simply press the transmission control switch again.

AMBIENT LIGHTING (if equipped) Your vehicle may be equipped with an ambient lighting feature which, when activated, illuminates the footwells, cup holders and console bin with a choice of seven colors. Ambient lighting is operational when the ignition is on or in the accessory position. Press the control repeatedly to turn on, cycle through your color choices, and turn off.

SYNC (if equipped) Your vehicle may be equipped with SYNC – a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC Supplement or to the SYNC section in the Navigation Supplement. Please feel free to visit www.SyncMyRide.com.

Fuses: If your electrical components are not working properly, a fuse may have blown. For more information, please see your Owner's Guide.

Fuel Pump Shut-off Switch: This device stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. After an accident, if you find that the engine cranks, but does not start, this switch may have been activated. The fuel pump shut-off switch is located in the front passenger's footwell, behind a flip-up cover, by the kick panel access cover.

Location of Spare Tire: If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Your vehicle is equipped with a temporary spare tire located under the vehicle, just forward of the rear bumper. The temporary spare tire is designed for emergency use only and should be replaced as soon as possible. The jack and tools are located under the carpeted floor panel in the rear cargo area. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

Tire Pressure: Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including spare). As an added safety feature, your vehicle has been equipped with a Tire Pressure Monitoring System (TPMS) that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more details and safety information.

Easy Fuel™ "No Cap" Fuel System: Your vehicle has a "no cap" fuel system which allows you to simply open the fuel filler door, insert the nozzle and start fueling. The Easy Fuel™ system is self-sealing and therefore protected against dust, dirt, water, snow and ice. If you need to fill your fuel tank with a portable fuel container, use the fuel funnel which is located inside the rear passenger side cargo compartment access door. Slowly insert the funnel into the Easy Fuel™ system and fill the tank with fuel from the container. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. Do not use aftermarket funnels as they will not work with the Easy Fuel™ system and may cause damage.

Fuel Type and Tank Capacity: Your fuel tank capacity is 16.5 gallons (62.5L). Your vehicle is designed to use "Regular" unleaded gasoline with an octane rating of 87. Do not use gasoline labeled as "Regular" in high altitude areas that are sold with octane ratings less than 87. Do not use E85 fuels that are blended with a maximum of 85% ethanol.

S.D.S. Post Crash Alert System: Your vehicle is equipped with the S.D.S. Post Crash Alert system. This system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the system, press the hazard flasher control or you can press the button on your remote transmitter.

Roadside Assistance: Your new Mercury Mariner comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage period and details of service, refer to your roadside assistance information.



SATELLITE COMPATIBLE SIX-DISC/MP3 RADIO (if equipped)

1. LOAD To load a CD into the system, press LOAD. When prompted, select the desired slot (1-6) using the memory presets and, when prompted, insert the CD into the system. Press and hold LOAD to autoloop up to six discs. Insert the discs, one at a time, when prompted.

2. DIRECT Press DIRECT and then, using the memory presets (0-9), enter in the numbers of the desired station, track, MP3 folder (if available) or satellite channel (if activated).

3. Press to access special phone features if equipped with SYNC. Refer to your SYNC Supplement for more information.

4. SCAN Press for a brief sampling of radio stations or CD/MP3 tracks. Press again to stop.

5. ON/OFF/VOL Press to turn on or off. Turn to increase or decrease the volume.

6. CD Press to enter CD/MP3 mode. If a disc is already loaded into the system, CD/MP3 play will begin where it ended last.

7. AM/FM Press repeatedly to select AM, FM1 or FM2 frequency band.

8. EJECT To eject a CD

from the system, press EJECT and select the desired slot (1-6) using the memory presets. Press and hold EJECT to auto eject all loaded discs.

9. CLOCK Press to set the time. The display will read SET TIME. Use the memory presets 0-9 to enter in the desired time, hours and minutes. The clock will then start from that time.

10. SOUND Press repeatedly to access settings for: Bass, Treble, Fade, Balance, Speed compensated volume (if equipped) and ALL SEATS (Occupancy mode, if equipped). When the desired selection appears in the display, press SEEK/TRACK to make adjustments.

11. SEEK/TRACK Press to access the previous/next strong radio station, satellite channel (if equipped) or CD track.

12. MENU Press repeatedly to cycle through various menu options such as: AUTOPRESET, RDS ON/OFF and SATELLITE RADIO MENU (if satellite radio is active). When SATELLITE RADIO MENU appears in the display, press OK and then press / to cycle through further options of SAVE

SONG, DELETE SONG, DELETE ALL SONGS and ENABLE/DISABLE alerts. For more information on these features, please refer to your Owner's Guide.

13. TUNE/OK In radio mode, turn to go up/down the frequency band in individual increments. If your vehicle is equipped with SYNC and/or satellite radio, you may need to press OK to confirm menu selections.

14. AUX Press repeatedly to access LINE (auxiliary audio mode), or SYNC (if equipped).

15. SIRIUS Press repeatedly to cycle through SAT1, SAT2 and SAT3 modes (satellite radio, if equipped). SIRIUS® Satellite Radio is a subscription-based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS® at 1-888-539-7474.

MOBILE MEDIA NAVIGATION SYSTEM (if equipped)

1. RADIO Press to access the Radio menu and select from AM, FM1, FM2, SAT1, SAT2 or SAT3 (satellite radio, if activated) modes.

2. MEDIA Press to access the Media menu and select from CD, DVD or Jukebox features among others. Jukebox allows you to save your favorite music to the system's hard drive for later access. You can then choose to play specific artists, genres, tracks or albums. You can even choose to create your own playlists.

3. SOUND Press to access the Sound menu and make adjustments to Bass, Treble, Balance, Fade, SCV (Speed compensated volume), DSP and the visualizer.

4. MENU Press to access menu selections of Display settings, System settings and Valet mode.

5. MAP Press to view the navigation map.

6. DEST Press to set a destination. In this menu you can select from: Quick Destinations (Emergency listings such as Police and Hospitals or previously set favorite destinations), Standard destinations (Address book, Street address, Previous destinations, etc.) or Edit Route (allows you to make any adjustments to the

currently selected navigation route with options such as Cancel Route, Detour, View route, etc.)

7. I (INFORMATION) Press to access the Information menu and select from options such as "Where am I", the system Calendar, the Help menu as well as SIRIUS Travel Link (if activated). SIRIUS Travel Link is a data service which can help you locate the best gas prices, movie listings, current traffic alerts, accurate current weather map, get to current ski conditions as well as scores

8. PHONE Press to activate the Phone menu (if equipped with SYNC). Refer to the SYNC section in the Navigation supplement for more information.

VOICE RECOGNITION – Your system is equipped with an advanced voice recognition system which allows you to speak certain commands to the system. Press on your steering wheel and say a command or "Help" after the prompt. For more information on voice commands and the features of your Mobile Media Navigation system, please refer to your Navigation supplement.



FORD MOTOR COMPANY
Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
www.customersaskford.com

May 2008
First Printing
Quick Reference Guide
Mercury Mariner
LITHO IN USA
9E6J 19G217 AA



For detailed operating and safety information, please see your Owner's Guide.

INSTRUMENT PANEL FEATURES



THE NEW 2009 MERCURY MARINER

Your new Mercury Mariner is about to turn your everyday driving experience into an everyday driving adventure. You're going and sophisticated SUV handles whatever road life lays out before you. This Quick Reference Guide was designed to help you quickly get to know the many features of your new Mariner. For more detailed information and important safety information, please see your Owner's Guide.

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

1. HEADLAMPS AND FOG LAMPS
Turn the control one position to the right to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right to turn on the headlamps. Turn the control one position to the left to activate the autolamp feature (if equipped), which automatically turns on and off, based on available daylight. Pull the control towards you to activate the fog lamps. (The fog lamps will not operate when the headlamps are turned off or when the high beams are on).

2. MULTI-FUNCTION LEVER
Rotate the end of the control up to increase the speed of the wipers and rotate down to decrease the speed of the wipers. Briefly press the end of the stalk for a single swipe of the wipers without washer fluid. A quick push and hold results in three swipes with washer fluid while a longer push and hold activates the wash pattern for up to five seconds. A 'courtesy wipe' will automatically occur after the washing cycle to ensure that

3. PANEL DIMMER CONTROL
Use the dimmer control to adjust the brightness of the instrument panel and all applicable switches in the vehicle when the headlamps and parking lamps are on. Move the control to the full upright position, past the detent, to turn on the interior lamps.

4. SPEED CONTROL
To set the speed control, press and release ON. Accelerate to the desired speed. Press and release the SET+ control. Take your foot off the

the exterior lamps on and off, based on available daylight. Pull the control towards you to activate the fog lamps. (The fog lamps will not operate when the headlamps are turned off or when the high beams are on).

any drips have been cleared from your windshield. For better visibility, your vehicle will also automatically turn on your headlights (during daylight hours) if your windshield wipers and autolamps (if equipped) are on. To operate your rear window wiper, turn the rear wiper control to 1 (intermittent speed), 2 (normal speed), or off. For a rear wash cycle, turn the rear wiper control to the position. To turn on the highbeams, push the lever toward you briefly to activate the 'flash to pass' feature.

accelerator pedal. The speed control indicator light will illuminate in the cluster. To set a higher speed: press and hold SET+ until the desired speed is reached, or briefly press SET+ to increase the speed by small amounts. To set a lower speed: press and hold SET- until the desired speed is reached, or briefly press SET- to decrease the speed by small amounts. Press RSM to return to the previously set speed. To turn speed control off, press OFF.

5. TILT STEERING WHEEL LEVER
To adjust the steering wheel, push the lever down to unlock the steering column. While the lever is down, tilt the steering wheel to your desired position. Then, while holding the steering wheel in place, pull the lever up to its original position to lock the steering column.

6. HAZARD FLASHER
Push the flasher control, located on the steering column, and all front and rear direction signals will flash. Use it when your vehicle is disabled or is creating a safety hazard for other

motorists. The hazard flashers will operate when the ignition is in any position or if the ignition is turned off.

7. SERVICE ENGINE SOON LIGHT
The service engine soon light illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

8. LOW TIRE PRESSURE WARNING LIGHT
This light illuminates when the ignition is turned on. If the light does not turn on or begins to flash, contact your authorized dealer as soon as possible. For more information, please refer to Tire pressure monitoring system (TPMS) in the Tires, Wheels and Loading chapter of your Owner's Guide.

9. MESSAGE CENTER
The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will also notify you of

potential vehicle problems with a display of system warnings followed by a long indicator chime. For more information, please refer to your Owner's Guide.

10. ABS WARNING LIGHT
The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light is also illuminated.


11. COMPASS
The compass heading (N, NE, E, SE, S, SW, W or NW) is displayed in the center stack display. The compass reading may be affected when you drive near large buildings, bridges, power lines and powerful broadcast antennas. For more information, please see your Owner's Guide.

12. AUXILIARY POWER POINTS (12V)
The 12V power point outlets, located on the instrument panel and

13. PASSENGER AIRBAG OFF
The passenger airbag off indicator light will illuminate when the passenger's front airbag is off. Please refer to your Owner's Guide for safety information and more details.

14. REVERSE SENSING (if equipped)
Your vehicle may be equipped with a reverse sensing system which can warn you if there is a large object behind the vehicle that you may be unable to see. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. Refer to your Owner's Guide for safety information and more details.

15. AUXILIARY INPUT JACK
The auxiliary input jack provides a way to

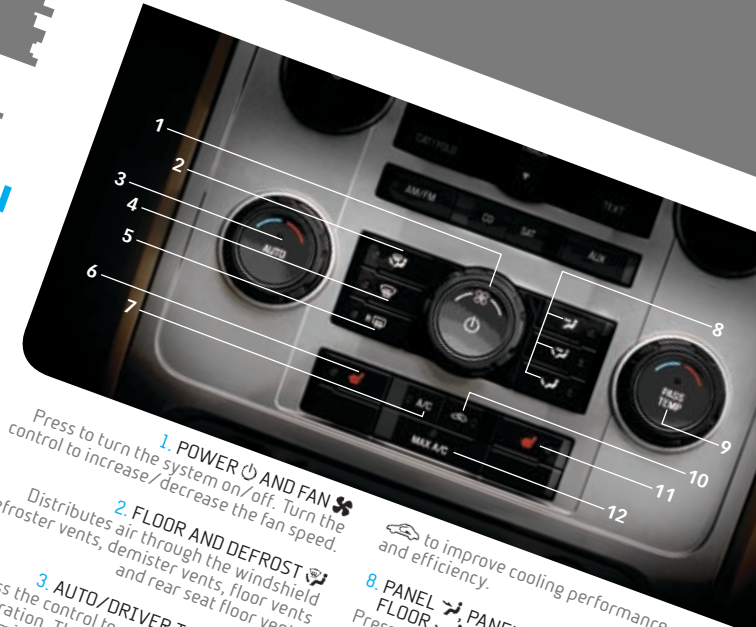

DUAL AUTOMATIC CLIMATE CONTROL WITH HEATED SEATS

1. POWER AND FAN
Press to turn the system on/off. Turn the control to increase/decrease the fan speed.

2. FLOOR AND DEFROST
Distributes air through the windshield defroster vents, demister vents, floor vents and rear seat floor vents.

3. AUTO/DRIVER TEMPERATURE
Press the control to engage full automatic operation. The system will automatically determine fan speed, airflow distribution, A/C on or off and either outside or recirculated air to heat or cool the vehicle to reach the desired temperature. Turn the control to increase/decrease the temperature on the driver side of the vehicle. **Note:** This control will also determine the temperature for the entire vehicle cabin when the passenger temperature control (PASS TEMP) is not engaged.

4. DEFROST
Press to activate air through the windshield defroster vents and demister vents. Can be used to clear the windshield of fog and thin ice.

5. REAR DEFROSTER
Press to activate the rear window defroster and clear the rear window of thin ice and fog. Press again to deactivate. The rear window defroster will turn off automatically after a predetermined amount of time, if a low battery condition is detected, or when the ignition is turned off or to the accessory position.

6. DRIVER HEATED SEAT
Press to activate or deactivate the driver heated seat.

7. A/C
Press to activate/deactivate air conditioning. Use with recirculated air

8. PANEL FLOOR PANEL AND FLOOR FLOOR
Press the desired control for airflow to be directed through the Panel (instrument panel vents), Panel and Floor (instrument panel vents, demister vents, floor vents and rear seat floor vents) or the Floor (demister vents, floor vents and rear seat floor vents).

9. PASS TEMP
Press to activate passenger side temperature control. Turn the control to decrease/increase the temperature setting for the passenger side of the vehicle. Press again to deactivate (the driver side settings will then determine the temperature for the entire vehicle cabin).

10. RECIRCULATED AIR
Press to activate/deactivate air circulation inside the vehicle cabin. Recirculated air may reduce the amount of time needed to cool down the vehicle and may also help reduce undesirable odors from entering the vehicle. Recirculated air engages automatically when MAX A/C is selected.

11. PASSENGER HEATED SEAT
Press to activate or deactivate the passenger heated seat.

12. MAX A/C
Press to distribute recirculated air through the instrument panel vents to cool the vehicle. This mode is more economical and efficient. Press again to return to normal A/C operation.

1. POWER AND FAN
Press to turn the system on/off. Turn the control to increase/decrease the fan speed.

2. FLOOR AND DEFROST
Distributes air through the windshield defroster vents, demister vents, floor vents and rear seat floor vents.

3. AUTO/DRIVER TEMPERATURE
Press the control to engage full automatic operation. The system will automatically determine fan speed, airflow distribution, A/C on or off and either outside or recirculated air to heat or cool the vehicle to reach the desired temperature. Turn the control to increase/decrease the temperature on the driver side of the vehicle. **Note:** This control will also determine the temperature for the entire vehicle cabin when the passenger temperature control (PASS TEMP) is not engaged.

4. DEFROST
Press to activate air through the windshield defroster vents and demister vents. Can be used to clear the windshield of fog and thin ice.

5. REAR DEFROSTER
Press to activate the rear window defroster and clear the rear window of thin ice and fog. Press again to deactivate. The rear window defroster will turn off automatically after a predetermined amount of time, if a low battery condition is detected, or when the ignition is turned off or to the accessory position.

6. DRIVER HEATED SEAT
Press to activate or deactivate the driver heated seat.

7. A/C
Press to activate/deactivate air conditioning. Use with recirculated air

8. PANEL FLOOR PANEL AND FLOOR FLOOR
Press the desired control for airflow to be directed through the Panel (instrument panel vents), Panel and Floor (instrument panel vents, demister vents, floor vents and rear seat floor vents) or the Floor (demister vents, floor vents and rear seat floor vents).

9. PASS TEMP
Press to activate passenger side temperature control. Turn the control to decrease/increase the temperature setting for the passenger side of the vehicle. Press again to deactivate (the driver side settings will then determine the temperature for the entire vehicle cabin).

10. RECIRCULATED AIR
Press to activate/deactivate air circulation inside the vehicle cabin. Recirculated air may reduce the amount of time needed to cool down the vehicle and may also help reduce undesirable odors from entering the vehicle. Recirculated air engages automatically when MAX A/C is selected.

11. PASSENGER HEATED SEAT
Press to activate or deactivate the passenger heated seat.

12. MAX A/C
Press to distribute recirculated air through the instrument panel vents to cool the vehicle. This mode is more economical and efficient. Press again to return to normal A/C operation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>