 




# MP4-T9-4GBK

## User Manual

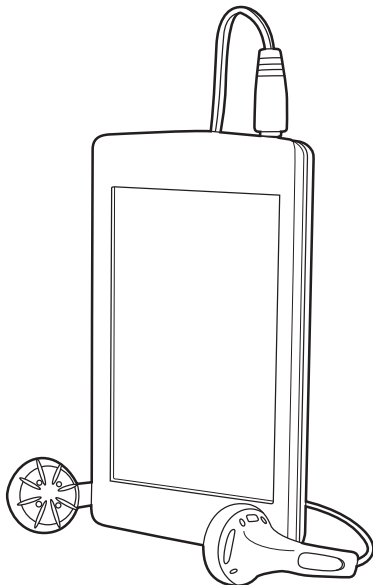

Please read carefully before use

**LASER**



# MP4-T9-4GBK User Manual

## NOTICE/ATTENTION

 
1. Please note that new batteries will achieve best performance after two to three 6-8 hour full-charge and discharge cycles. Future charges only require 4 hours.
2. To protect against data loss, please backup sensitive data regularly. General use and data loss prevention will be the responsibility of the end user.
3. This unit has no serviceable parts. Any attempts to tamper with this unit will void all warranty agreements.
4. This player is a sensitive electronic device. Please treat it with care.
5. If needed the unit can be cleaned with a clean damp cloth only.

## PLAYER INTRODUCTION

### Power On

Hold the on/off slide button, to power the unit on.

### Main interface

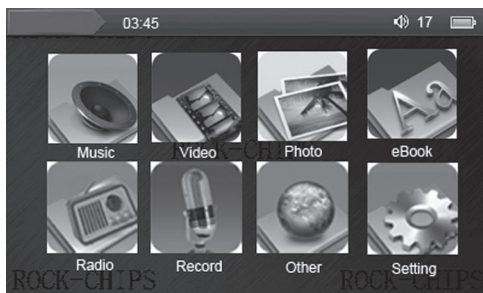

In the main interface, use the touch pen to choose the function, then double click the corresponding function menu.

## MUSIC

In the main menu, choose "music" option, then double-click to enter into "music playing" item.

### Operation

- 1 **Equaliser:** Click Settings icon to enter into the play menu. You can choose between the following: repeat mode, play mode, MSEQ, EQ select and UserEQ Setup. Then click icon to return to previous menu, and click again to return to the main music menu.
- 2 **Volume:** When playing music, click , to adjust volume.
- 3 **Next / Previous:** Click / to choose previous or next track and a long press to fast-forward or rewind
- 4 **Hold:** Click icon to pause and click it again to return to play. Hold the button to stop.
- 5 **Settings:** Click Settings icon to enter into playing setting interface.
- 6 **Repeat Mode:** Repeat, All, All repeat, Intro, Once, double click any mode and click to return
- 7 **Play mode:** In order and Shuffle, MSEQ: 3D, Bass, LEQ. EQ Select: Normal, MSEQ, Rock, POP.
- 8 **UserEQ:** Each setting can adjust the frequency up or down by 6dB.
- 9 **Lyric display:** Download lyrics and save the file name the same, as music file. When playing music, click . The player will directly enter into lyric display interface.



### How to use LRC file?

Keep consistency of lyric name and music name

For example:

The track name is : see you see me. mp3

The lyric name is : see you see me. lrc

# MP4-T9-4GBK User Manual

## VIDEO

From the main interface, click the "Video".



### Operation

- Forward and backward:** / Click for previous video and next video or long press to rewind or fast-forward.
- Choose playing file from the Video file list and double click the corresponding file to play.
- Adjust volume:** , Click to adjust volume.
- Breakpoint play:** Click icon to continue the playing previous video.

## FM RADIO

In the main menu, double click "FM radio"

- Manual search:** Click Settings icon to enter into submenu, choose manual search, then click / icon to search channel.
- Auto search:** Click Settings icon to enter into submenu, choose auto search to search channel automatically and save channel.



4

- Save channel:** Click icon to enter into saving interface, after choosing the saving channel, click icon to save channels.
- Present mode:** Click Settings icon to enter into the pre-set submenu.
- Delete channel:** Click icon to enter into saving interface, click the channel which has been saved, then click icon, then confirm "whether delete or not". The channel will then be deleted.
- Stereo switch:** Click Settings icon to enter into submenu, choose stereo switch, in this menu there are: on and off.
- Receive area:** Click Settings icon to enter into submenu, choose receive area, in this menu, there are: China, Japan, USA and Australia.
- FM recording:** Click icon to enter into FM recording interface, click icon to start to record, click icon to pause recording, click icon again to continue recording, click icon to confirm save recording.

**Remarks:** As with most FM transmissions, this device may encounter interference resulting from external conditions.

## RECORDING

In the main interface, to enter click "recording"

### Operation

- Recording:** In the recording interface, click icon to start to record, click icon to pause recording, click icon to save. A confirmation screen will then be shown. Click icon to return to the main menu.
- Recording quality:** Click Settings icon to enter into submenu, choose "recording quality", in this menu there are: Low rate and high rate.
- Recording volume:** Click Settings icon to enter into submenu, choose "recording volume", in this menu there are 4 kinds of options.




5

**LASER**

# MP4-T9-4GBK User Manual

## EBOOK

In the main interface double click "EBook". Click / to choose a file or directly double click file to enter EBook reading interface.

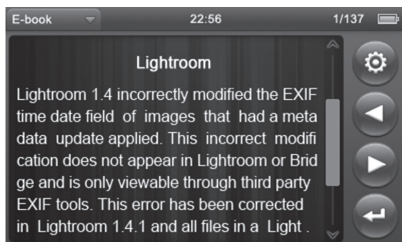

### Operation

- 1 Jump page:** Click Settings icon to enter into the submenu and enter into jump page interface, click / to adjust the page number and click YES
- 2 Save mark:** Click Settings icon to enter into the submenu, choose save mark, and double-click it to save the corresponding page
- 3 Load mark:** Click Settings icon to enter into submenu, choose load mark, double click the bookmark which has been saved, then it will auto jump the corresponding page
- 4 Delete mark:** Click Settings icon to enter into submenu, choose Delete mark, double click the saved bookmark, the corresponding bookmark will be deleted
- 5 Font size:** Click Settings icon to enter into submenu, choose Font size to enter into font settings, double click the font which you want
- 6 Font color:** Click Settings icon to enter into submenu, choose font color to enter into font color settings, double click the font color which you want
- 7 Browse mode:** Click Settings icon to enter into submenu, choose Browse mode to enter browse mode setting, in this menu there are: Auto mode and manual mode
- 8 Auto page turning:** Click Settings icon to enter into submenu, choose Auto page turning settings, in this menu there are 4 kinds of time: 10 seconds, 15seconds, 20seconds and 25 seconds
- 9 Exit:** Under reading mode, click / icon to return to the main interface

## PHOTO BROWSE

In the main interface double click "photo browse". Click / to choose file or directly click file name to enter into full display screen interface. Return to the photo browse list. Click / to return to the photo browse list, double click / to return to the main interface.



### Additional

 
In the main menu to choose "folder" item, click and enter into this item, in the explorer, when insert TF card, there will be two option: "flash Memory" and "TF Card"

- 1 Choose files:** In the explorer, there will be two option: "flash Memory" and "TF Card" when you insert TF card, the all files will be displayed when choose the corresponding option, click / icon to choose folder, and click again to play the file. The file will not be played if the file isn't recognized
- 2 Delete files:** Click / key when you want to delete some files, then it will spring a dialogue: YES or No, choose yes icon to delete that file.

# MP4-T9-4GBK User Manual

## SETTINGS

- > **Display setting:** Back light time, Brightness adjust, back light mode, carton effect, photo browse,
- > **Backlight time:** 5 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds and always on.
- > **Brightness:** 1X,2X,3X,4X,5X, The smaller of the number, the brighter of the brightness.
- > **Back light mode:** Full dark screen and half dark screen
- > **Carton effect:** Off, From left to right, up to down, Jalousie, From inside to outside and rotate.
- > **Photo browse:** Off, 2 seconds, 5 seconds, 8 seconds
- > **System settings:** In this setting there are 5 items: firmware upgrade, restorable system, screen calibration, Vibration, transfer screen
- > **Restore:** Click the System Restore option, there will be a dialogue "whether restore system to default status " Click YES, the player will restore the default settings.
- > **Calibration:** Click the center of three "t" for two series. The calibration will be completed and it will exit automatically (Remark: After calibrating the screen, you should turn off normally, the action will be saved)
- > **Vibration:** On and off (After the closure of this vibration, there will be no shock when touching the touch)

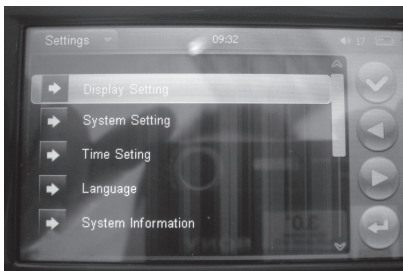

- > **Clock setting:** Time setting, date setting
  - a. click time setting to enter into clock setting interface, then click left/right icon to set hour/minute, click YES after setting
  - b. Click date setting to enter into clock setting interface, then click left/right icon to set Year/month/date, click YES after setting
- > **Language:** Simple Chinese, English, Traditional Chinese
- > **System information:** The local capacity status, manufacture name and TF card capacity, which is read-only information
- > **Auto Shut time:** 3 minutes, 5 minutes, 10 minutes, 15 minutes, 20 minutes and no automatic shut

## TF CARD OPERATE STEPS

- 1 **Insert TF card**  
Insert TF card to the player, when popping, then push TF card to exit.
- 2 **TF card connect with computer**  
Under inserting TF card, when the player connects the computer, there will be two mobile disk, now you can operate these two disk as the other mobile disk.
- 3 **Disconnect the player with computer**  
Enter into "Explorer" interface, there will be two option, "Inside Memory" and "TF card", directly double click "TF Card" option. It will show all files of the TF card, double click the file to play.

## RESET

Can be used to set unit back to factory settings

# MP4-T9-4GBK User Manual

## FAQ

 
Player can not open	Check whether the battery is ok
	Connect power adapter to inspection the player again
	If you still can not open the player after charging, please contact our customer service
Headphones can not hear the voices	Please check whether the headset connection is ok or not
	Please check volume is set to 0
Keys do not work	Make sure whether the electronic lock was locked, so please move upward unlock / reboot button, then try to open the electronic lock to operate the player
Serious noise	Please check whether the headphone plug clean, dirt can lead to noise
	Check whether music files is damaged. Try to identify other music. If the file has been damaged, may lead to very serious noise or sound jump
FM reception poor	Headset and adjust the location of players
	Turn off electrical installations nearby
	Headphones can be used as an antennas
Screen display garbled	Please check whether it has set up the correct language options, select the language <set> - <system settings> - <Language> to set up
Can not download files	Make sure the computer player with the right connections between computer and player
	Confirm whether the memory is full of storage space
	Confirm whether there is an USB cable damage

## SPECIFICATIONS:

Display screen	3.0inch 260K ,pixel 400*240, LCD display	
Connect the computer	USB2.0 high speed	
Memory size	128M-8G	
Battery	li-polymer battery	
Record	Sampling rate	8KHz
	Recording format	WAV 32K bps
	Recording time	8hrs (128M Flash)
MP3, WMA, WMV, ASF	The max output of earphone	(L) 11mW, (R) 11mW (320hm)
	MP3 bit rate	64K bps - 320K bps
	WMA/AVI bit rate	64K bps - 384K bps
	Frequency range	20Hz to20KHz
	SNR	85dB
FM radio	Receive the frequency range	76MHz - 90MHz / 87.5MHz - 108MHz
	Store station	30
	The max output of earphone	(L) 10mW, (R) 10mW (320hm)
	SNR	45dB
Music format	MP3, WMA, APE, AAC, FLAC	
Temperature	-5 to 40°C	
Language	Simple Chinese, English, Traditional Chinese, Korean	
Support system	Windows98/SE/ME/2K/XP/VISTA/ MAC OS 10	



**LASER**

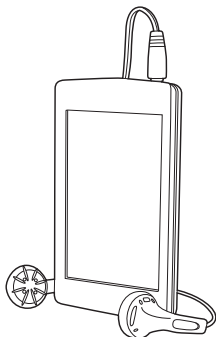

**T9**  
**4GB Video & Music Player**

For technical support please visit  
[www.LaserCo.net](http://www.LaserCo.net)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>