 




2.0 PORTABLE SPEAKER SYSTEM

User Manual

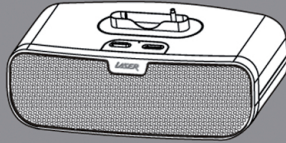

Please read and understand all safety instructions before use.



IMPORTANT SAFETY INSTRUCTIONS

For the safety of you and your speakers, always follow the precautions below:

- Disconnect the AC adapter if the power cord or plug becomes frayed or damaged, or if you suspect that your speakers need repair.
- Keep your speakers away from any source of heat, such as stoves, heaters, radiators and other similar appliance.
- Keep your speakers away from any source of liquid, such as bathrooms, wash basins and vases. Liquid could cause electrical shock or an electrical fire. Protect your speakers away from moisture.
- Please follow the installation instructions before plugging your speakers into a wall outlet.
- The speakers should be unplugged from the power source before cleaning. Use a dampened cloth to clean the surface of the speakers. Do not use liquid cleanser or aerosol cleanser.



WARNING TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. CAUTION: PILOT LAMP SOLDERED IN PLACE. TO REDUCE THE RISK OF ELECTRIC SHOCK, REFER TO QUALIFIED SERVICE PERSONNEL.

ENVIRONMENTAL PROTECTION RECOMMENDATION
At the end of its working life this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling.
This is confirmed by the symbol found on the product, user manual or packaging.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.




The lightning flash with arrowhead symbol with an equilateral triangle is intended to alert the user to the presence of unshielded dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

PRODUCT OVERVIEW

FRONT

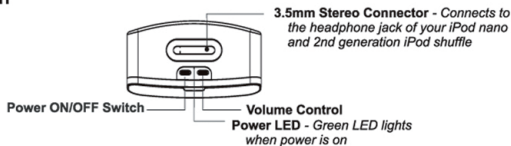


REAR

 

AUX IN - Connects to other portable audio devices

DC IN - Connect AC Adapter (not included) or Connect USB Power Input Cable

 
BOTTOM



Battery Compartment

SYSTEM SETUP

 Connect iPod nano or 2G iPod shuffle



1. Place the system on a flat sturdy surface.
2. Connect your iPod nano or 2nd generation iPod shuffle to the 3.5mm stereo connector on the cradle. Be sure to connect it to the headphone jack on your iPod.
3. Turn your iPod on and begin playing music.
4. Turn + to increase the volume, turn - to decrease the volume.

CONNECTING TO OTHER AUDIO SOURCES

Insert one end of the 3.5mm stereo input cable (included) to the AUX IN jack on the back of the system. Connect the other end to your portable audio source (iPod®, PSP™, MP3 player, portable CD player, computer, etc.).

TROUBLESHOOTING

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
No sound from speakers	Power isn't turned on	<ul style="list-style-type: none"> • Make sure the system is on and the power indicator is lit. • When using AC adapter (not included) as the power source, make sure the adapter is plugged into a wall outlet. • When using batteries as the power source, check the batteries are installed correctly. • When using USB power, check the USB cable is connected to the USB port of your computer correctly.
	Volume is set too low	<ul style="list-style-type: none"> • Increase the volume from the speaker system. • Increase the volume from the audio source and set it to the medium level.
	Stereo plug isn't connected to the audio source completely Problem with audio source	<ul style="list-style-type: none"> • Fully connect the stereo plug to the audio source. • Make sure the stereo plug is connected to the correct input. • Use an alternate audio source to test the speakers.
Crackling sound from speakers	Bad connection Problem with audio source	<ul style="list-style-type: none"> • Make sure the stereo plug is connected to the correct input. • Try another audio source such as portable CD or MD player.
Sound is distorted	Volume level on the speaker system is set too high Volume level on the audio source (e.g. laptop computer, MP3 player or portable CD player) is set too high Audio source is distorted	<ul style="list-style-type: none"> • Decrease the volume. • Check the audio source volume and decrease if necessary. • MP3 files usually have poorer quality, noise and distortion are associated with higher volume and/or high-powered speakers. Try an alternate source such as portable CD player.

POWER SOURCE

Use ONE of the following options to power the speaker:

1. Batteries: Install 4 AA batteries (as illustrated) into the battery compartment on the bottom of the speaker.
2. USB Power: Insert one end of USB power input cable to the "DC IN" jack on the back of the speaker. Then insert the USB cable to your computer.
3. AC Adapter (NOT included): Please use AC Adapter, DC 6V 0.4A with polarity (⊖ ⊕). Connect the AC cable to "DC IN" jack on the back of the system. Plug in the AC adapter to the wall outlet.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>