

# **Product Specification**

# **ATSYNC-KIT Ethernet Time Sync Kit**

#### **Features**

- Synchronizes the ATX6/ATX-C and peripheral Airtime products with the building's computer network.
- Time updates can occur once per day, per week or per month.
- Easily connects ATX6/ATX-C to LAN or WAN via Ethernet.

#### **Operation**

An ATSYNC icon appears in the system tray to indicate that the service is operating. A log file is available to verify if update events were successful and provides time and date of each past occurrence. You can manually update your Transceiver at any time by clicking the Set Time button.



Pack Contents: ATSYNC Software CD, TXTOSER Adapter and SAE0370 Cable, 25FT.

#### Main Screen

File Help	
File Thep Enable TimeSync Update Settings O Daily Weekly Time to Update Monthly 09:00 AM Day of Week Sunday y Day of Month 1 y	Auto Update Start Stop Time Offset Time Offset 0 == Current PC Time 12:30 PM Set Time
Next Update Tuesday, January 27, 2009 at 09:00	АМ

Copyright © 2009 Lathem Time Corporation. All rights reserved. Information believed to be accurate at time of printing, but is subject to change without notice. Lathem, AirTime, and their respective logos are registered trademarks of Lathem Time Corporation.

# **PC Requirements**


- Internet Requirements ......Microsoft Internet Explorer 6.0 SP1 or later (prerequisite for .NET Framework)
- RAM ......Minimum: 256 MB (512 MB if running Vista). Recommended: 512 MB or higher (1 GB if running Vista)
- Hard Disk Space .....100 MB free space
- Network ......Ethernet Network card for Ethernet communications
- CD-ROM .....Available CD-ROM drive for installation media
- Video .....SVGA with at least 800x600 screen resolution
- Processor ......Pentium III Compatible or higher, Minimum: 500 MHz, Recommended: 1 GHz
   or higher
- Operating Systems ......Windows Server 2003 SP1, Windows XP Home or Professional SP2, Windows Vista Home Premium, Business or Ultimate
- Prerequisite Software......Microsoft .NET Framework 3.5 (installs automatically if not on computer).

# Warranty

One year limited warranty on defects in material or workmanship.

### Installation

- 1. Connect Cable
- 2. Install CD
- 3. Install and connect TXTOSER
- 4. Locate and assign IP Address to TXTOSER
- Perform manual update and confirm that ATX6 is synchronized
- 6. Enter time frequency (daily, weekly or monthly) for updates to occur.
- If network traffic or processes on your PC cause updates to be somewhat slow you can add 1 to 9 seconds to the time sent by selecting the correct number of seconds to add (Offset).

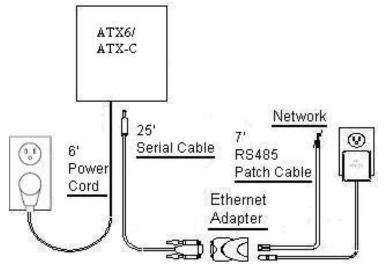



Lathem 200 Selig Drive, SW Atlanta, Georgia 30336 (800) 241-4990 | www.lathem.com

Copyright © 2009 Lathem Time Corporation. All rights reserved. Information believed to be accurate at time of printing, but is subject to change without notice. Lathem, AirTime, and their respective logos are registered trademarks of Lathem Time Corporation.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com