

More fun learning toys from LeapFrog!



**Hug & Learn™ Animal Globe**

6+ months

**Learning Band™ Walker**

9+ months



**Fridge Farm™ Magnetic Animal Set**

12+ months


**Learning Connections™ Train**

9+ months



# Learning Drum™

Follow the musical beat with this interactive drum that introduces the alphabet and counting from 1-10.

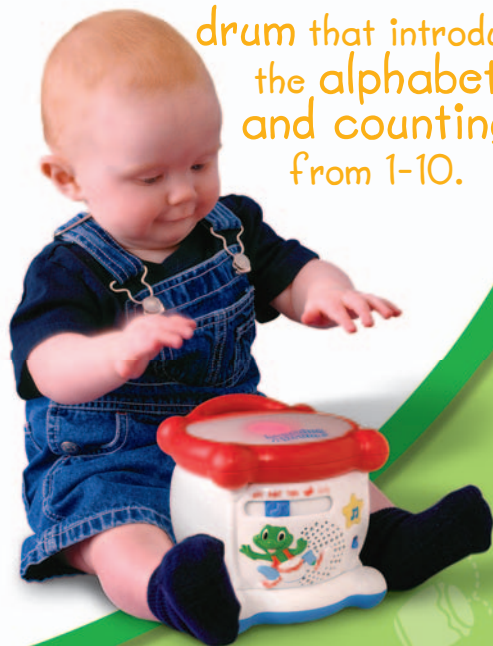

## Parent Guide & Instructions

This guide contains important information.

Please keep it for future reference. Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.



## Learning Skills



### Gross Motor

Music and positive feedback encourage baby to tap the drum and develop gross motor skills.



### Visual

Changing letters, numbers and patterns stimulate baby's visual development.



### Cognitive

Introduces alphabet and number sequence and helps develop baby's memory skills.



### Language Development

Introduces infants and toddlers to the letters of the alphabet, which are the building blocks of language.

**Dear Parent,**

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

Babies and toddlers are discovering the world for the first time. That is why we develop learning toys that introduce critical discovery skills, including color and shape recognition, fine motor skill development, and social play. They come in playful colors, with engaging features that will captivate your child's imagination.

LeapFrog™ learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site ([www.leapfrog.com](http://www.leapfrog.com)), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Tom Kalinske  
CEO  
LeapFrog Enterprises, Inc.

# INSTRUCTIONS FOR PLAY

**Mode Selector:**  
ABC, 123, Follow the Beat and Interactive Song

**Battery compartment located on bottom of Learning Drum**

**Three background tunes and two drum tones**

**Volume switch**



## How to Play with the Learning Drum

- Turn on the Learning Drum by sliding the Mode Selector from OFF to one of the four play modes.
- Turn off the Learning Drum by sliding the Mode Selector to the OFF position. The Learning Drum will also shut off after 30 seconds of inactivity.

## ABC Backbeat Mode: ABC

- Move the Mode Selector to ABC mode.
- Tap the top of the Learning Drum to see each letter of the alphabet and hear its name. Continue tapping to see and hear the entire alphabet in sequence.
- The Learning Drum will play one of three familiar instrumental songs in the background.
- Press the star-shaped button to hear a different background song.

## 123 Backbeat Mode: 123

- Move the Mode Selector to 123 mode.
- Tap the top of the Learning Drum to see each number from 1-10 and hear its name. Continue tapping to see and hear the numbers 1-10 in sequence.
- The Learning Drum will play one of three familiar instrumental songs in the background.
- Press the star-shaped button to hear a different background song.

## Follow the Beat Mode:

- Move the Mode Selector to Follow the Beat mode.
- Listen to the beats and see if you can repeat the pattern.
- Press the star-shaped button to select either a snare or steel drum tone.

## Interactive Song Mode:

- Move the Mode Selector to Interactive Song mode.
- Sing along and follow the song's instructions.
- Press the star-shaped button to select either a snare or steel drum tone.

## Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from the product for prolonged storage
- Avoid exposing the product to extreme temperatures

## Battery Information:

Batteries included are for in-store demonstration, and should be replaced to improve performance. Requires 3 AA (called LR06 in some countries) alkaline batteries.

## Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

## Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent. NE PAS INCINÉRER les piles usagées. NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir. NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard). NE PAS UTILISER de piles rechargeables. NE PAS RECHARGER des piles non rechargeables. NE PAS COURT-CIRCUITER les terminaux d'alimentation.

## Battery Installation:

1. Requires 3 AA (called LR06 in some countries) alkaline batteries.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

## TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> <li>• Make sure batteries are correctly installed</li> <li>• Make sure battery cover is securely attached</li> <li>• Remove batteries and put them back in</li> <li>• Clean battery contacts with rubbing alcohol</li> <li>• Install new batteries</li> </ul>
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> <li>• Clean battery contacts with rubbing alcohol</li> <li>• Install new batteries</li> </ul>
Toy makes improper responses	<ul style="list-style-type: none"> <li>• Clean battery contacts with rubbing alcohol</li> <li>• Install new batteries</li> </ul>

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://fcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

## U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)  
Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

## U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

## U.K. Office:

Telephone: 0800 169 5435  
Eire: 00 44 1702 200244  
Hours: Monday through Friday, 9:00 AM to 5:00 PM.

**IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.**

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**AVERTISSEMENT :** Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

**Note:** This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

## Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

**Canada:** In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

**U.K.:** In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the Leapfrog Baby logo, HUG & LEARN, LEARNING BAND, FRIDGE FARM and LEARNING CONNECTIONS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2001, 2004 LeapFrog Enterprises, Inc. All rights reserved.

U.S. Patent Number 6,716,031. Patents Pending.

Visit our fun-filled Web site at: [www.leapfrog.com](http://www.leapfrog.com)

For ages 6 months and up.  
Convient aux enfants à partir de 6 mois.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>