

Easi-Speak™ Sound Station



Please Read All Instructions Carefully Before Using

- Please retain these instructions for future reference
- Sound Station contains a rechargeable NiMH battery pack
- Do not attempt to remove the battery
- The external charger must be regularly examined for potential hazard, such as damage to the cable or cord, plug, enclosure or other parts. If such damage occurs, do not use the Sound Station until that damage has been fixed properly
- Only charge rechargeable batteries under adult supervision
- Do not short-circuit the supply terminals
- Do not allow your Sound Station to come into contact with water or other liquids
- In the event of an electro-static discharge, your Sound Station may malfunction. In this case, you may need to turn it off to reset it
- Warranty is void if the case is opened for any reason
- The warranty does not cover any data loss from the Easi-Speak™ unit nor any consequential loss of information

FCC compliance

NOTE:



THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Know Your Sound Station

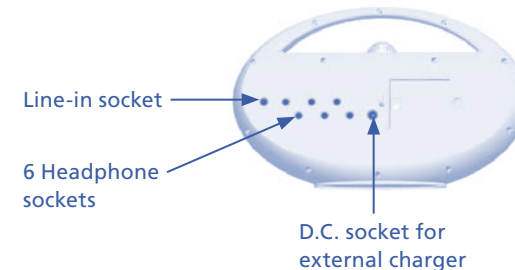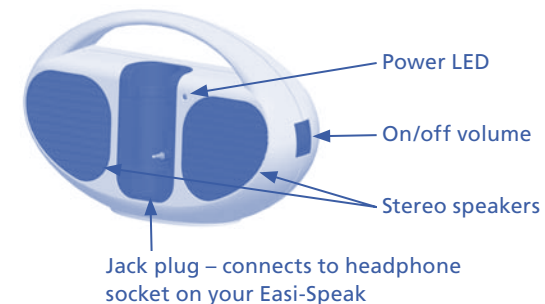

Using Your Sound Station

The Easi-Speak™ connects to the Sound Station via the headphone output socket. With the USB cap in place, turn the Easi-Speak™ until the headphone socket faces the jack plug on the Sound Station and push it into place. Turn the Sound Station on and press the Easi-Speak™ play button, then adjust the Sound Station volume control to the desired level. It may be necessary to increase the Easi-Speak™ volume, before docking, to achieve the best results (the volume controls are not accessible once the Easi-Speak™ is docked).

Power LED

The power LED is illuminated whenever the Sound Station is turned on. When not in use, turn your Sound Station off by rotating the volume switch until you hear a "click" and the red power light turns off.

Charging the Battery

Sound Station is supplied with a partially charged battery and can be used immediately without charging first. The battery can be charged by connecting the external power supply to the power input.

- Even when the battery is fully discharged, Sound Station will operate normally when the external power supply is connected. The battery will also be charging at this time.

- A complete charge of a fully discharged battery will take about 24 hours. The Sound Station is intended to be permanently left on charge so that it is always ready for use.

Technical specification

- Built-in 1300mAH NiMH battery
- Total Harmonic Distortion+Noise 0.3% (Typ)
- Six stereo 3.5 mm headphone sockets (green)
- One stereo 3.5 mm line-in socket (pink), 100mV RMS Max
- Battery life approx. 3 hours (depends on volume setting and type of audio)

Troubleshooting

Sound Station is designed to work reliably and predictably in all normal conditions. However, it is possible that problems may occur. Please check the following before contacting technical support:

Problem	Power LED appears dim
Solution	Battery is low. Charge the battery. Sound Station can be used while charging
Problem	Power LED doesn't come on
Solution	Battery completely flat; recharge
Problem	Sound is too quiet
Solution	The Easi-Speak™ recording is very quiet. Increase the Easi-Speak™ volume setting before docking
Problem	Sound is distorted
Solution	Reduce the Sound Station volume until the sound is free from distortion.

Support & Warranty

This product is provided with a one-year warranty for problems found during normal usage. Mistreating the Sound Station or opening the unit will invalidate this warranty. Any data stored on the Easi-Speak™ and any consequential loss is not covered by this warranty. The battery is not user replaceable.

All out-of-warranty repairs will be subject to a replacement fee.

Please visit www.LearningResources.com for the latest product information and technical support.

Easi-Speak™ is a registered trademark of TTS Group Ltd.

© Learning Resources, Inc., Vernon Hills, IL (U.S.A.)
Please retain our address for future reference.
Made in China. LRM4403-GUD
Fabriqué en Chine. Informations à conserver.
Made in China. Bitte bewahren Sie unsere
Adresse für spätere
Nachfragen auf.
Hecho en China. Conservar estos datos.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



www.LearningResources.com

Visit our website to write a product review or to find a store near you.

RISQUE D'ÉTOUFFEMENT. Petites pièces.
Interdit aux enfants en dessous de 3 ans.
ERSTICKUNGSGEFAHR. Kleine Teile.
Nicht geeignet für Kinder unter 3 Jahren.
PELIGRO DE ASFIXIA. Piezas pequeñas.
No se recomienda para menores de 3 años.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>