

## **OPERATING INSTRUCTIONS**

---

# LEGACY<sup>®</sup>



## **LD53M**

**4" TFT Monitor w/DVD/VCD/MP3/CD Player & AM/FM Radio**

---

**OPERATING INSTRUCTIONS**

**English**

***www.legacycaraudio.com***

# Welcome!

Thank you for purchasing our company digital media player!  
To operate the unit correctly, please read the owner's manual carefully before using the unit. Keep these instructions and retain this booklet for future reference.

# CONTENTS

- Notes on Installation..... 3**
- Precautions..... 4**
- Wiring Diagram ..... 5**
- Introduction for Key board..... 6**
- Basic Operation ..... 7**
- Location of the Remote Control ..... 14**
- Remote Control Operation ..... 15**
- Installation..... 23**
- Specification ..... 24**
- Simple Troubleshooting Guide ..... 25**

## Notes on installation

- ☞ The unit is designed for **12V DC**, negative ground operation system only. Before installing the unit, make sure your vehicle is connected to **DC 12V** negative ground electrical system.
- ☞ The negative battery terminal must be disconnected before making connections, which can reduce damaging the unit due to short circuit.
- ☞ Be sure to connect the color coded leads correctly according to the diagram. Incorrect connections may cause the unit malfunction or damage the vehicle's electrical system.
- ☞ Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect the left and right channel speaker cables each other or to the vehicle body.
- ☞ Do not block vents or radiator panels. Blocking them will cause heat to build up inside and may result in fire.






3

## English

- ☞ After the completion of the installation and begin to play the unit( including replacing the battery ),please press the **RESET** button on the front panel with pointed objects (such as ball-point pen)to set the unit to initial status .

## Precautions

- ☞ This unit can play the following discs only.

Type of disc	Label on the disc	Recorded material	Size of disc
<b>DVD</b>		Sound and moving Pictures	12cm
<b>VCD</b>		Sound and moving Pictures	12cm
<b>MP3</b>	<b>MP3</b>	Sound only	12cm
<b>MPEG4</b>	<b>MPEG4</b>	Sound and moving Pictures	12cm
<b>CD</b>		Sound only	12cm
<b>USB</b>			
<b>SD</b>			

Note: ① The unit is compatible with DVD.VCD1.0/2.0/3.0 DVCD.CD-RW. CD-R.PICTURE-CD version Disc.  
 ② The manual conforms to DVD、VCD、MP3 and CD、If no DVD、VCD or MP3 on some models,you should ignore them. While enjoying DVD、VCD、MP3 and CD, the display will automatically identify the discs and indicate the corresponding words.

- ☞ Do not attempt to modify the unit, modifying the unit may cause an accident.
- ☞ Stop the vehicle before carrying out any operation that could interfere with your driving .
- ☞ Do not work in extreme high or low temperature inside the vehicle is between +60°C and -20°C before turning your unit on .
- ☞ To enjoy optimum sound and images while playing , handle the discs as follows :  
 -- Handle the disc by its edge to keep the disc clean, and do not touch the surface.



 
- Do not use your CDs with paste residue or ink attached .



- Do not use CDs with labels or stickers attached . which may leave a sticky residue while beginning to peel off. (Shown as picture)



- Clean the discs with an optional cleaning cloth .Wipe each disc from the center out. (Shown as picture)

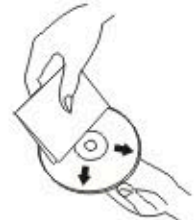


4

## English
 
# Wiring Diagram

English


## STANDARD CONNECT

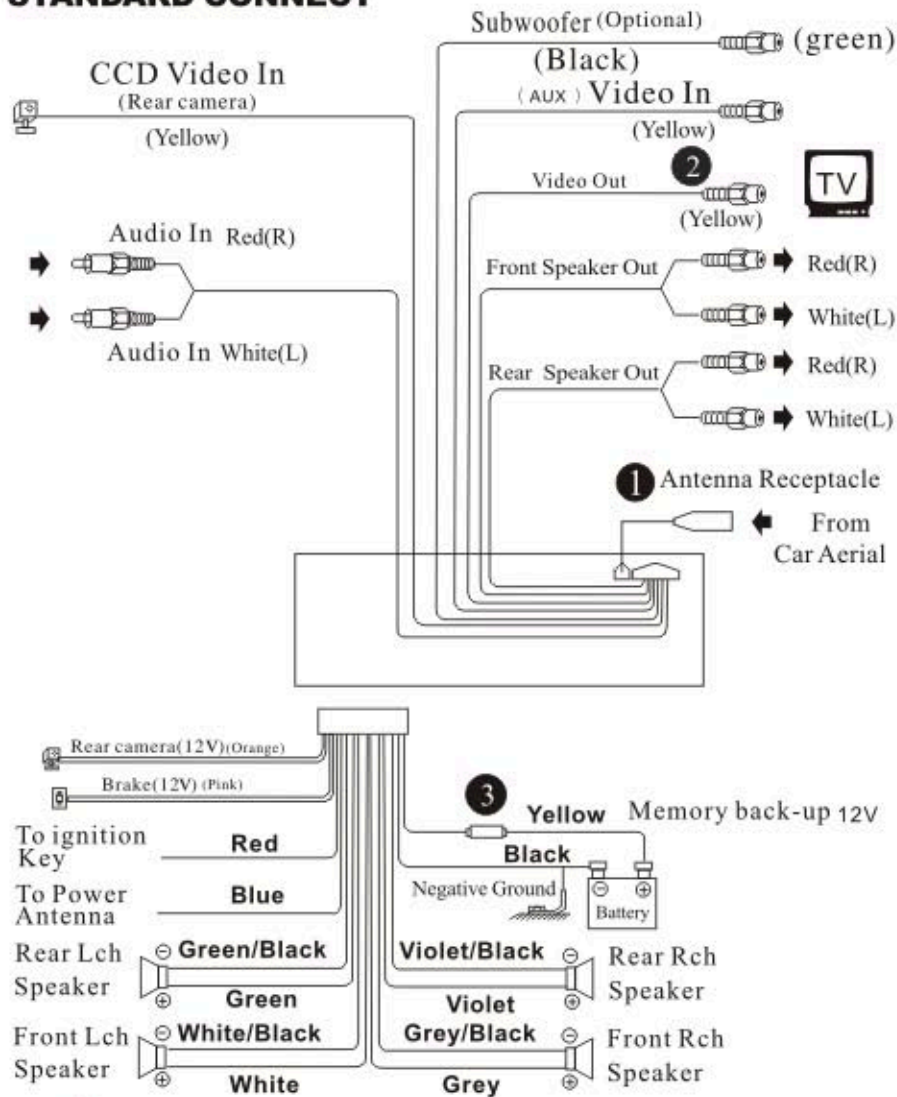

- 1 Antenna Receptacle
- 2 Video Out Receptacle
- 3 Fuse Holder

# Introduction for Key board

 English

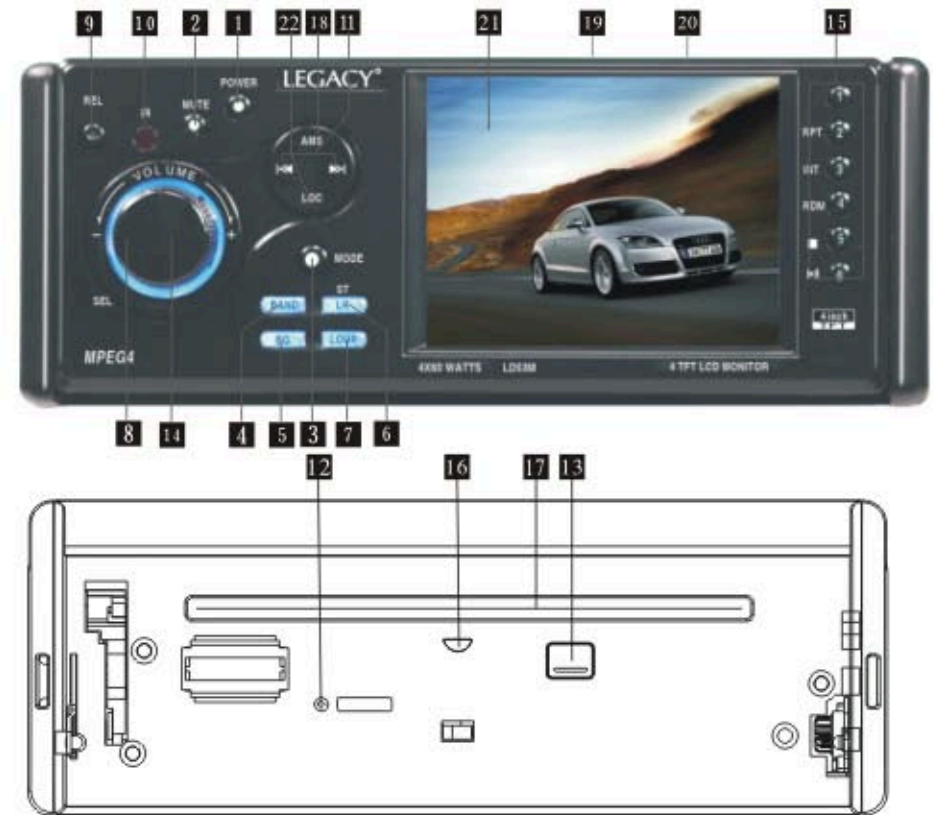

- 1. Power On/Off
- 2. Mute Button
- 3. Mode switch
- 4. Band Selector
- 5. P-EQ Button
- 6. ST Selector (L/R)
- 7. Loudness Button
- 8. Volume Control
- 9. Open/close button/Detaching panel button
- 10. Remote Control Receptor
- 11. Tuning/Selecting Tracks
- 12. Reset Button
- 13. Eject Button
- 14. Setting the Sound Characteristics
- 15. Number Buttons
- 16. LED Lamp
- 17. Disc Slot
- 18. Preset Stations/AMS For radio
- 19. SD Socket
- 20. USB Port
- 21. TFT Colour LCD Screen
- 22. LOC

# Basic Operation

English

1. Power ON/OFF control  
Press the button to the power "ON" or "OFF"

2. Mute control  
Press and keep pressed the button to mute volume control and "MUTE ON" will appear on the display. Press mute button again to return to the previous volume level. "MUTE off" will appear on display.



3. Mode control  
Press this button to select Radio (TUNER), DVD/VCD/CD/MP3(S-CDP) & USB (USB--DRIV) mode.



4. Band selector  
Each time this button is pressed, the radio band is changed. The indication "Fm1" "FM2" "FM3" "MW1" or "MW2" will appear on the display according to your selection.



5. Setting P-EQ  
While listening to the popular music, classic music and rock music, you can adjust the sound quality to make it perfect by pressing 5 (P-EQ) button. The procedure is as follows:

- ★ POP mode is selected when 5 (P-EQ) button is first pressed and "POP" appears in the display.



7

 
# Basic Operation

English

- ★ ROCK mode is selected when pressing 5 (P-EQ) button at the second time, and "ROCK" appears on the LCD.



- ★ Classic mode is selected when pressing 5 (P-EQ) button at the third time, and "CLAS" appears in the display.

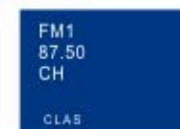

- ★ Press 5 (P-EQ) button at the fourth time to turn off the P-EQ system.

- ★ Note: Bass mode and Treble mode return to initial settings when P-EQ system is on, "BASS" and "TREBLE" disappear.

6. ST Selector (L/R)  
Press and keep pressed 6 (ST) button to select MONO mode or STEREO mode. Stereo reception is charged when "ST" appears in the LCD. And "∞" appears in the display. It is switched to MONO mode when "ST" disappears. During the player mode, press the button to switch left speaker/ right speaker/ stereo.

7. Loudness Button  
Press the button to increase the low frequency. This can improve the sensitivity for your ears. And "LOUD" appears in the LCD when the loudness mode is activated. Press it once more to shut down the LOU function.



8

# Basic Operation

English

## 8. Volume control

Press the "VOL+" to increase volume level, Press "VOL-" to decrease it:



## 9. Open/close button / Detaching panel button

- Press this button to show the disc slot in the main panel.
- To detach the front panel, press this button so that the panel slide down from vertical to horizontal position. Use thumb hold near the preset button between 3 and 4, and use other finger to hold the corrugated release button at the back of the front panel while pulling.
- To re-attach the panel, put the front panel to the slide down metal frame by clipping it into place.

## 10. Remote Control Receptor

Receptor for the card remote commander.

- ★ **Note:** This window is used for the unit with remote control function. Without this function, you should ignore the operation contents about remote control function.

## 11. Tuning/Selecting Tracks

**Manual Tuning:** Press **1** ( **+>>** ) or **2** ( **<<-** ) button continuously to select a station upward or downward respectively.

**Automatic Tuning:** Press and hold **1** ( **+>>** ) or **2** ( **<<-** ) button for more than 3 seconds, the radio automatically searches a station upward or downward respectively and plays when it finds a station.



9

# Basic Operation

English

## 12. Reset Button

Operating the unit for the first time or after replacing the car battery, you must reset the unit. Press **12** (RES) button with a pointed object (such as a ballpoint pen) to set the unit to initial procedure.

- ★ **Note:** When some errors occur in the LCD display, you can press RESET button to resume to normal. And it will erase the clock setting and some memorized functions.

 
## 13. Eject Button

Press the eject button will eject the disc.

## 14. Setting the Sound Characteristics

Audio level control (when pushing one after another)  
Press the button shortly one after another to show "VOL/BAS/TRE/BAL/FAD" control.

- **VOLUME**-press this button once, then rotate anti-clockwise to decrease, or clockwise to increase volume level.

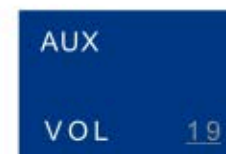

- **BASS** -press this button twice, then rotate anti-clockwise to decrease, or clockwise to increase bass level.



- **TREBLE** - press this button 3 times, then rotate anti-clockwise to decrease, or clockwise to increase treble level.



10

## Basic Operation

English

- **BALANCE** -press this button 4 times, then rotate anti-clockwise or clockwise to level balance of speaker right and left.



- **FADER** -press this button 5 times, then rotate anti-clockwise or clockwise to level fader of speaker front and rear.



- **BRIGHTNESS** -press this button 6 times, then rotate anti-clockwise to decrease, or clockwise to increase **BRIGHTNESS** level.



- **CONTRAST** -press this button 7 times, then rotate anti-clockwise to decrease, or clockwise to increase **CONTRAST** level.



- **COLOR** -press this button 8 times, then rotate anti-clockwise to decrease, or clockwise to increase **COLOR** level.



- **SHARP** -press this button 9 times, then rotate anti-clockwise to decrease, or clockwise to increase **SHARP** level.



11

## Basic Operation

English

- **HUE** -press this button 10 times, then rotate anti-clockwise to decrease, or clockwise to increase **HUE** lever.



### 15. Number Buttons

Number buttons can help you store your favorite station by pressing any one of the number buttons. You can follow the steps as below:

Press and hold any **number button 15** (1~6) until "CH" appears in the LCD display when receiving a station. And now the station is already stored in the corresponding number button.

### 16. LED Lamp

### 17. Disc Slot

Holding the disc to insert into the disc slot. The disc mechanism will automatically engage into DVD/VCD/CD/MP3 play mode.

### 18. Preset Stations/AMS

#### AMS RADIO OPERATION

Press **18** (**AMS**) button to scan each stored station 10 seconds respectively which stored in **15** (1~6) **number buttons**. When **AMS** mode is carried out, "INT" appears on display. You also can press the corresponding **number button** or **AMS** button when your desired station is charged. It starts playing that station.

- ★ Press and hold **18** (**AMS**) button for more than 3 seconds to activate automatically memory storing function. The radio automatically selects a station and has it stored in any one of the **number buttons 15** (1~6).

- ★ *Note: The unit can be stored up to 6 stations for each band. Regarding the function of number buttons, refer to **15** number buttons for details.*

12





# Remote Control Operation

 
English

XXXXXXXXXXXXXXXXXXXXXXXXXXXX


## Replacing the Battery

★ When the range of the operation of the card remote control becomes short or no functions while operating. Replace the battery with a new button cell. Make sure the battery polarity before replace.


1. Pull out the Battery Holder while pressing the Stopper ①

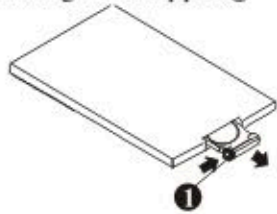

 2. Put the button-type battery(+) mark upward into the Battery Holder.

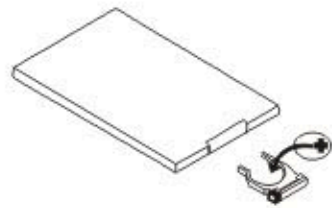

 3. Insert the Battery Holder into the Remote Control.

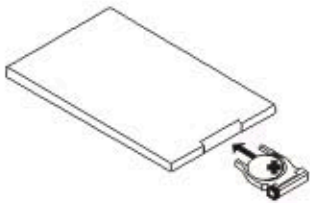

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Power Button

— Press **1** (⏻) button to turn On/Off the power.

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Pause/Play Button

— Press **2** (⏸) button to suspend the playback of CD、MP3、VCD、DVD. Press it again to return to normal playback mode.



XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Mute Button

— Press **3** (🔇) button to cut down the sound output, press it once more to resume the previous sound level.



XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Menu selector

— Press **4** (⏪/⏩/⏴/⏵) to select your desired menu, then press **6** (ENTER) or press the play button **2** (▶) to confirm.

*Note: This function works in main menu mode only. refer to page 13.*

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

# Remote Control Operation

 
English

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Band/System Switch

— During radio mode, press **5** (BAND/SYS) to switch receiving band.

— During the player mode **5** (BAND/SYS) button to switch to AUTO, PAL, PLA60 or NTSC system.

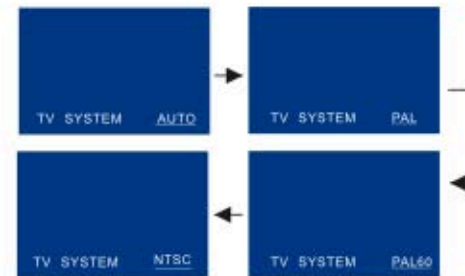

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Volume Increasing/Decreasing

— Press **7** (VOL+ or VOL-) button to increase or decrease the volume level respectively.



XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Tuning/Selecting Tracks /FastRewind/Forward

— During radio mode, continuously press **8** (⏪ or ⏩) button to manual search a station downward or upward respectively; if press and hold **8** (⏪ or ⏩) button for more than 3 seconds, the radio will automatically search a station downward or upward respectively until it finds a station.



— During the playing mode, press and hold **8** (⏪ or ⏩) button to fast rewind or fast forward for you to reach your desired track quickly. When discontinuously press **8** (⏪ or ⏩) button, you can select your desired portion downward or upward respectively



XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ Program Playing

— During CD、VCD mode, you can set the program order to play, you can follow the steps as below: Firstly press **16** (PBC) button, and then press **9** (PGM) button, and the television displays programming P00:00. You can set the program order to play them by using **14** (0 ~ 10+) button, and then press **2** (▶) to play.

*Note: Program doesn't function in playing MP3.*

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ On-Screen Display

— During CD、VCD、DVD mode, press **10** (OSD) button. The display shows single track elapsed time, single track left time or entire disc

# Remote Control Operation

English

left time, and the track being played and the amount of the whole disc.

Note: During MP3 mode, only single track elapsed time is displayed in OSD mode.

\*\*\*\*\*

## ★ VOL/BAS/TRE/BAL/FAD Selector

— Repeatedly press **11** (SEL) button to select the desired mode in the following order:



Note: After selecting your desired mode, you can adjust the current mode being displayed by using (VOL+ or VOL-) buttons. When P-EQ mode is activated, press **SEL** button to select the modes. And Bass/Treble mode are inva-Lid. (shown as below)



\*\*\*\*\*

## ★ Repeat Playing/AMS

— During DVD mode, firstly Press **12** (Ams/RPT) to repeat the current chapter being played; Press it again to repeat playing the title. The third press it to repeat all

(LCD will display different designs) Press 4 times to cancel the function (off)

— During CD, MP3, VCD mode, firstly press **12** (Ams/RPT) to repeat the current track being played;

press it again to cancel the repeating functional.



Note: In VCD, MP3, CD mode. The initial procedure is repeat playing all the tracks.

Note: In radiomode. Press **12** (Ams/RPT) to scan each stored station 10 seconds respectively which stored in Number Buttons.

\*\*\*\*\*

## ★ Random Playing

— During the playing mode, press **13** (RDM) button to play any track at random. (Viz. The unit plays tracks out of turn.)



Note: RDM is not functional in DVD mode.

\*\*\*\*\*

## ★ Number Buttons

— During radio mode, you can select one of the 6 stored stations on each hand by pressing any one of the number button **14**

— During the playing mode, you can select any track directly by using **14** number button (0-10+). For example, if you need the fifteenth track, you can first press button 10+ and then press button 5, the corresponding track (15)<sup>th</sup> will be played.

# Remote Control Operation

English

Note: When button 10+ is first pressed, it works as 10+. it works as 20+ when pressed at the second time, the third time ...30+...and the like.

 
In PBC playback mode, Number Button is not functional.

\*\*\*\*\*

## ★ Left/Right/Stereo Selector

— During the playing mode, continuously press **15** (Audio) can change the sound to left / right speaker or stereo mode.

Note: There are 5 grades surrounding effect in surround mode. During VCD mode you can see the different pictures indicating different effects on the television.

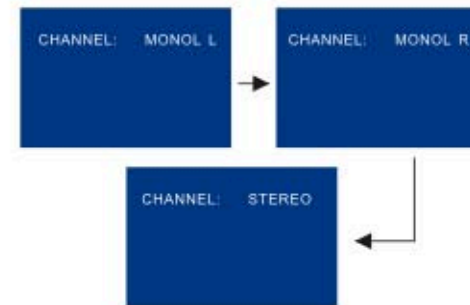

\*\*\*\*\*

## ★ Playing PBC (menu)

— During VCD mode only, when pressing **16** (PBC) button at the first time, PBC playback starts and the menu of entire disc appears on the television. And then you can select your favorite track by using number button **14** (0-10+) When a track is playing, you can press

**20** (STOP/RETURN) button to return to the menu if you want to stop to select other tracks. To cancel PBC playing, press **16** (PBC) button again.



\*\*\*\*\*

## ★ Subtitle Selector

— During DVD mode, press **17** (SUB-T) button to switch the menu to English, French, China, Thai and Italian



# Remote Control Operation

English

The languages depend on the disc inserted.



Pressing Enter button into the your desired item.

## ★ Mode Switch

— Press **19** (MODE) button to switch to radio mode or playback mode.

## ★ Stop the Playback

— In DVD mode, press **20** (■) button to suspend the playback and “press play to continue” shown on TV, press it again to stop the playback.

Note: In VCD, MP3 and CD, press this key once to stop.



## ★ MULT-ANGLE KEY

— In DVD playing mode, press **21** (ANGLE) key, you can watch the DVD content from different angle.

Note: In VCD, MP3 and CD, it is not the function, this function depends on the disc inserted

## ★ SLOW REVERSE/ SLOW ADVANCE KEY

— In DVD playing mode, press **22** (SLOW) key once for 1/2 slow advance, twice for 1/3 slow advance, third for 1/4 slow advance, fourthly

# Remote Control Operation

English

for 1/5 slow advance, fifthly for 1/6 slow advance, sixth for 1/7 slow advance, seventh for normal player. — In VCD playing mode, press **22** (SLOW) key once for 1/2 slow advance, twice for 1/3 slow advance, Third for 1/4 slow advance, press fourthly for 1/5 slow advance, fifthly for 1/6 slow advance sixth for 1/7 slow advance.

**2** (▶||) key to, cancel slow reverse / Slow advance function.

Note: In MP3 and CD, it is not the function.

## ★ SET UP KEY

— In playing mode, press **23** key (Setup), menu will be showed on Screen. (see the picture)

Pressing **7** (ENTER) key to confirm after selecting your desired content:

SYSTEM SETUP: TV system, video, TV type, password, rating, default

the system can display NTSC, PAL, PAL60, AUTO, when selecting tv system (shown as picture)



the system can display interlace YUV TV-RGB, P-SCAN, YPBPR, S-VIDEO, when selecting video (shown as picture)



the system can display 4:3PS, 4:3LB, 16:9 to adjust the size of tv, when selecting tv type (shown as picture)



It can set up password when selecting password (Shown as picture)

The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 0000, then press Enter to confirm. To change the password, you will be prompted for the old password, then be prompted for a new. Enter a 4-digit number (this is your password).



the system can display Kid to Adult 8 options, when selecting Rating



the system can display restore, when selecting DEFAULT (Shown as picture)



# Remote Control Operation

English

LANGUAGE SETUP:OSD language, audio lang,subtitle lang,menu lang, exit setup

the system can display English,Chinese,Germany, Spanish,Franch,Portguese for options when selecting OSD language (Shown as picture)



the system can display Chinese,English,Japan, Franch,Spanish,Portguese,Latin, German,for options when selecting audio lang(Shown as picture)



the system can display Chinese,English,Japan, French,Spaish,Portguese,German,and off for options when selecting subtitle(Shown as picture)



the system can display Chinese,English,Japan Franch,Spanish,Portguese,German and Latin for options when selecting menu lang (Shown as picture)



Please select exit option for exit.

AUDIO SETUP:audio out,key, exit setup

the system can display spdif/off,spdif/raw, spdif/pcm,when selecting audio out. (Shown as picture)



It can adjust the size when selecting key (Shown as picture)



VIDEO SETUP:brightness,contrast,hue saturation,sharpness,exit setup

It can adjust the brightness when selecting Brightness (Shown as picture)



It can adjust the contrast when selecting contrast(Shown as picture)



It can adjust the hue when selecting Hue. (Shown as picture)

# Remote Control Operation

English

The system will offer STEREO,MONO L, MONO R and MIX MONO to choose when selecting DUAL MONO (Shown as picture)



It can adjust the saturation when selecting Saturation. (Shown as picture)



It can adjust the sharpness when selecting Sharpness.(Shown as picture)

 


DIGITAL SETUP:op mode,dynamic range, dual mono,exit setup.

The system will offer LINE OUT and RF REMOD to choose when selecting OP MODE.(Shown as picture)



You can choose DYNAMIC RANGE including FULL,6/8,4/8,and 2/8 when selecting DYNAMIC RANGE. (Shown as picture)

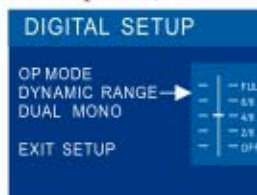

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ TITLE KEY

— In DVD、VCDplaying mode,  
Press **24** (TITLE) key to show all tracks 'title on TV screen. Then press **14** (0~10+) key or press **4** (◀/▶/△/▽) key to choose your desired track number and press **7** (ENTER) key or **2** (▶||) key to start.

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

## ★ ZOOM KEY

— In DVD、VCDplaying mode,  
press **25** (ZOOM) key once for 2x Mode, twice for 3x Mode, third time for 4x Mode, fourthly time for 1/2x five times for 1/3X six times for 1/4X,seven times to off

Note: NO ZOOM function CD/MP3 playing mode.

XXXXXXXXXXXXXXXXXXXXXXXXXXXX



Problem	Cause/Solution
No power	★ Check and make sure whether the fuse is blown, replace with the proper value if necessary.
Some errors occur in the <b>LCD</b> or no function when pressing the button.	★ Press the <b>RESET</b> button.
Unable to receive stations.	★ Check and make sure whether the antenna is inserted or the antenna is properly connected. if so, insert the antenna or connect it properly.
Poor effect on receiving a station.	<ul style="list-style-type: none"> <li>★ Antenna may not be the proper length. Make sure the antenna is fully extended or broken: if broken, Replace the antenna with a new one.</li> <li>★ The broadcasting signal is too weak.</li> <li>★ The antenna is poorly grounded, check and make sure the antenna is properly grounded at its mounting location.</li> </ul>
ACDs cannot be loaded.	★ ACDs is loaded in the mechanism.
The stereo indicator "Ⓒ" is flashing.	<ul style="list-style-type: none"> <li>★ Tune in the frequency accurately.</li> <li>★ The broadcasting signal is too weak. (Set to the <b>MONO</b> mode) (page 12)</li> </ul>
No picture.	★ The Video line from main unit to the <b>TV</b> is not connected properly.
The picture noise appears.	<ul style="list-style-type: none"> <li>★ Improper setting of the color system. Set the color system to "PAL" or "SECAM" according to the connected television.</li> <li>★ The <b>CDs</b> is dirty or damaged.</li> </ul>

★ Note: If any of the problem persist after check list had been made, consult your nearest service dealer. Never attempt to disassemble your unit by yourself.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>