

 
DURABRAND

COMPACT DISC PLAYER

WITH AM/FM RADIO

MODEL CD-1095

OPERATING INSTRUCTIONS

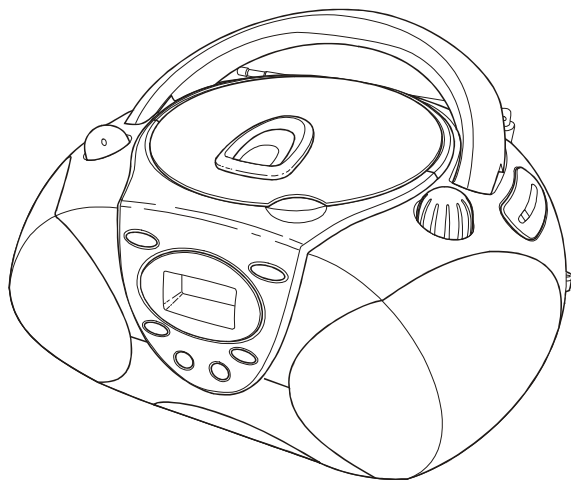

- **PLAYS MUSIC COMPACT DISCS**
- **FULLY PROGRAMMABLE CD PLAYER WITH REPEAT PLAY**
- **RECEIVES AM/FM BROADCASTS**
- **POWER LED INDICATOR**
- **2 WAY POWER - AC/DC**
- **REQUIRES 6 SIZE "C" BATTERIES (not included)**

PLEASE READ CAREFULLY BEFORE USE

IB-CD1095(SY)-WM-E-031604

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

ADDITIONAL SAFETY INSTRUCTIONS

1. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
2. **Wall or Ceiling Mounting** - The appliance should not be mounted to a wall or ceiling.
3. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
4. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Do not apply oil or petroleum products or solvents to any part of this set.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This compact disc player is classified as CLASS 1 LASER PRODUCT as stated at the back of the set.

BATTERY SAFETY INSTRUCTIONS

 
CAUTION: TO REDUCE THE RISK OF FIRE OR PERSONAL INJURY OR DAMAGE TO YOUR SET, READ AND FOLLOW THESE INSTRUCTIONS.

1. Use only the type and size of batteries mentioned in the operating instructions booklet (batteries are not included with this set, please buy the proper batteries).
2. Do not dispose the batteries into a fire. The cells may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Be careful when handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may over heat and cause burns.
5. Do not attempt to recharge non-rechargeable batteries. The batteries may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the batteries identified for use with this product by heating them. Sudden release of the battery electrolyte may cause burns or irritation to eyes or skin.
7. All batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the batteries.
8. When inserting batteries into this product, the proper polarity (\oplus and \ominus) or direction must be observed. Reverse insertion of some or all of the batteries may result in battery electrolyte leakage or explosion.
9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during the period the batteries could leak, damaging the product.
10. Discard weak or dead batteries as soon as possible since they are more likely to leak in the product. Batteries should be replaced (depending on the product) when the display gets dim or if the Low Battery Indicator shows or if the sound gets distorted.
11. Do not store this product in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
12. If this product does not operate normally, see TROUBLE SHOOTING in this instruction manual. If you can't resolve the problem, or if the product is damaged, refer to the LENOXX WARRANTY INFORMATION. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
13. If liquid leaks from the batteries, carefully wipe this liquid. Do not allow it to touch your skin, and discard the leaking batteries.
14. Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.).
15. The use of rechargeable batteries is not recommended for this set because their voltage and life is lower than standard batteries.
16. Installation of batteries should be done by an adult only.

SAVE THESE INSTRUCTIONS

CHOOSING THE POWER SOURCES

You can use the AC power or batteries as a power source.

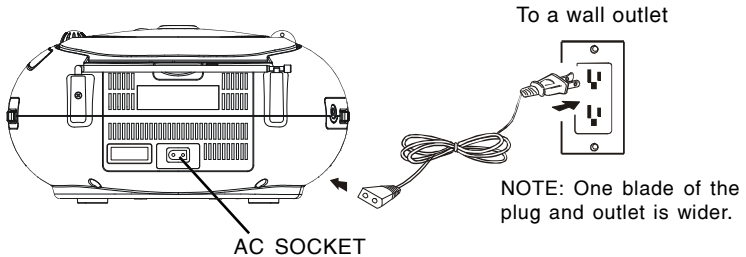

- Replace the batteries when the POWER lamp dims or when the player stops operating. Replace all the batteries with new ones. Before you replace the batteries, be sure to take out the CD from the player and remember to check the Battery Safety Instructions on Page 3.
- If the CD does not play on batteries, this means the batteries are almost used up. But the radio may continue to play on these weak batteries because it uses less power than the CD player.

1. Connecting the AC power cord

 
Insert one end of the supplied AC power cord into the socket located at the rear of the player, and the other end to the wall outlet.

2. Using the player on batteries


Insert 6 size "C" batteries (not supplied) into the battery compartment.

To use the player on batteries, disconnect and remove the AC power cord both from back of the player and the wall outlet.

Insert new batteries as shown.

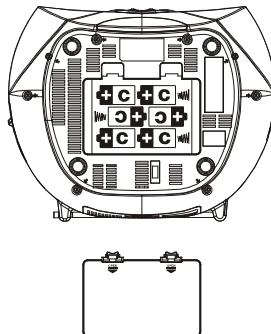


PLAYING A CD

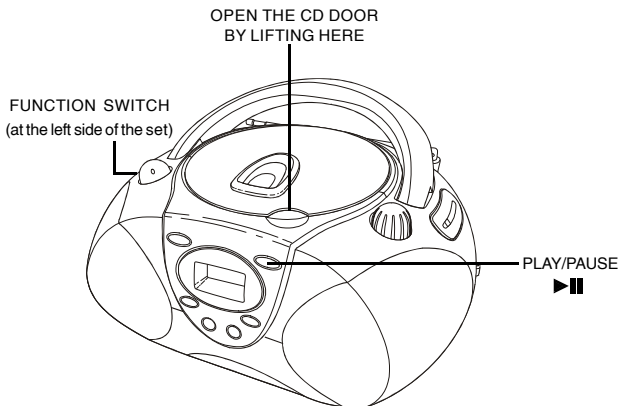 

Connect the supplied AC power cord or batteries (see page 4).

 1

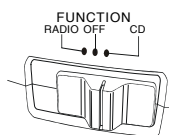


Slide the FUNCTION switch (at the left side of the set) to CD position, the POWER lamp will turn on and the display will show 2 dashes "--" flashing, then "00".




POWER lamp

2

 Lift the right corner of the CD DOOR to open it and place a CD in the CD compartment. The label side of the CD should face upward.

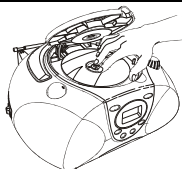

3

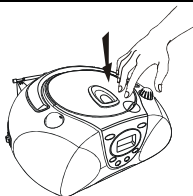 

Close the CD DOOR by pushing it down. The display will show the total tracks of that CD.



TRACK

4



 
Press the PLAY/PAUSE button. The PLAY/PAUSE lamp will be steadily on, the player will play all the tracks in order once.



Track number

PLAY/PAUSE lamp

USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

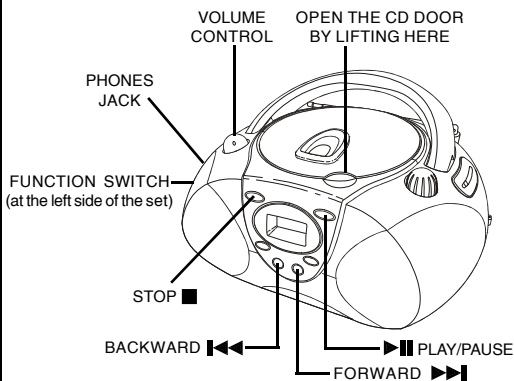

TIP

When CD play is paused, the PLAY/PAUSE lamp will flash and no music will play.

To resume play, press the PLAY/PAUSE button again, the PLAY/PAUSE lamp will stop flashing and music will play.


TIP

If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.

To	Press or Adjust
Adjust the volume	VOLUME control
Stop playback	STOP ■
Pause playback	PLAY/PAUSE ▶▶ The PLAY/PAUSE lamp will flash during pause. Press again to resume play after pause.
Go to the next track	▶▶ FORWARDS
Go back to the previous track	◀◀ BACKWARDS
Locate a point in a song	BACKWARDS ◀◀ or FORWARDS ▶▶, press and hold down while playing until you find the point.
To enjoy the music without disturbing others	Insert your headphones (not included) plug into the PHONES jack (at the left side of the set).
Remove the CD	Lift the right corner of the CD DOOR (press STOP first).
Turn off the power	Slide the FUNCTION switch (at the left side of the set) to OFF position.

PLAYING CD TRACKS REPEATEDLY (REPEAT PLAY)

 You can play CD tracks over and over in normal or programmed play modes (see page 8).

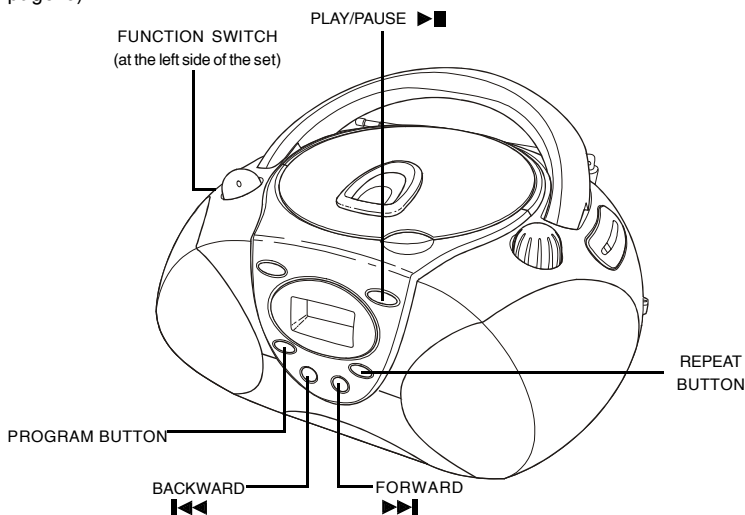

1. Slide the FUNCTION switch (at the left side of the set) to the CD position.
2. Select the track by pressing SKIP/SEARCH BACKWARD **⏮** or FORWARD **⏭**, and then press **▶**.
3. Press the CD REPEAT button.


To repeat	Press	Display shows
a single track (song)	Press the REPEAT button once, the REPEAT lamp will be flashing.	REPEAT PROGRAM PLAY/PAUSE
all the tracks (all songs)	Press the REPEAT button twice, the REPEAT lamp will be steadily on.	REPEAT PROGRAM PLAY/PAUSE
programmed tracks	During programmed play, press the REPEAT button twice, the REPEAT lamp and the PROGRAM lamp will be steadily on.	REPEAT PROGRAM PLAY/PAUSE

To cancel Repeat Play


Press the REPEAT button until the REPEAT lamp goes off.

SELECTING YOUR OWN MUSIC PLAYING ORDER (Programmed Play)

 You can make a program of up to 20 tracks in the order you want them to be played.

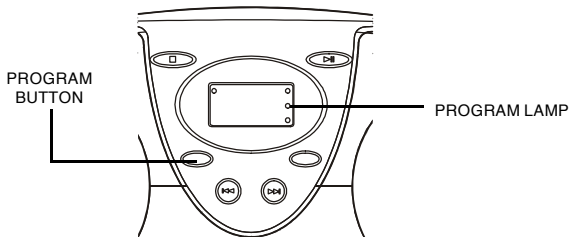

1. Slide the FUNCTION switch to CD position. Make sure the CD is stopped.
2. Press the PROG. button. The letters "01" and the PROGRAM lamp will flash in the display.
3. Press ►► or ◀◀ to select the tracks you want to program in the order you want. The selected number will be steadily on and the program lamp will be flashing.
4. Press the PROG. button to confirm. The letters "02" and the PROGRAM lamp will flash in the display for next selection.
5. Repeat steps 3 and 4. You can program up to 20 tracks until the display shows the tracks what you selected.
6. Press ►|| to start programmed play. The PLAY/ PAUSE lamp and the PROGRAM lamp will be steadily on.

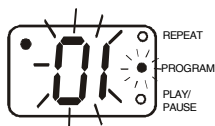 


To change the current program

Just create a new program following the programming procedure.


To cancel Programmed Play

Slide the FUNCTION switch to OFF position.

 
LISTENING TO THE RADIO

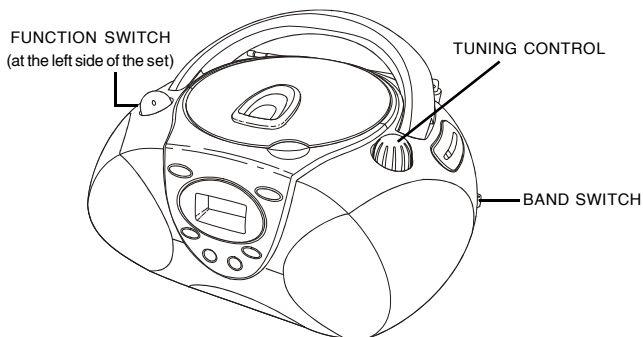

 
Connect the supplied AC power cord or batteries (see page 4).

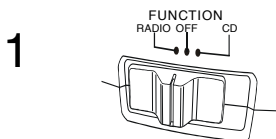

 Slide the FUNCTION switch (at the left side of the set) to RADIO position, the POWER lamp will turn on.

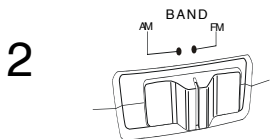


 Slide the BAND switch (at the right side of the set) to the proper band position (AM or FM) that you want.

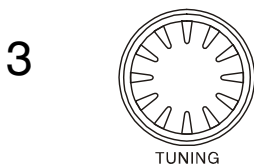

Tune into the station you prefer using the TUNING control. Adjust for the clearest sound.

 USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

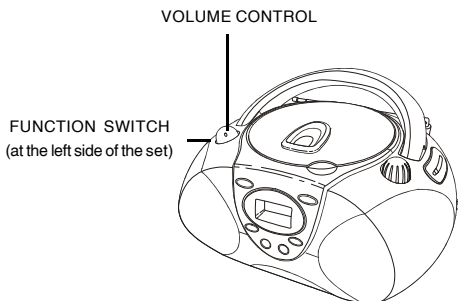


TIP

- Next time you want to listen to the radio, just slide the FUNCTION switch to RADIO position. The player automatically starts playing the previously tuned station.

To	Slide or Adjust
Adjust the volume	VOLUME control
Turn off the Radio	Slide the FUNCTION switch (at the left side of the set) to OFF position

To improve broadcast reception

 Change position of the antenna for FM. Move the set itself for AM.

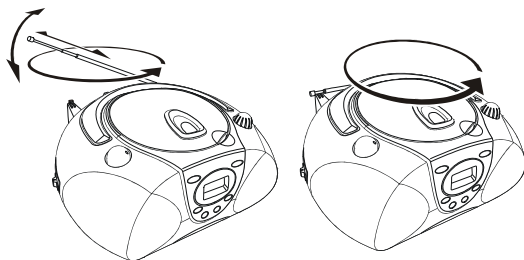

PRECAUTIONS

On Safety

- As the laser beam used in the CD player section may be harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

On Placement

- Do not leave the player in a location near a heat source, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 1 inch of the back of the cabinet. The ventilation holes must not be covered for the player to operate properly and prolong the life of its components.
- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or springwound watches away from the player to prevent possible damage from the magnets.

On Power Sources

- For battery operation, use 6 size "C" batteries. We recommend alkaline batteries for longer life.
- When the batteries will not be used for a few weeks or more, remove them to avoid damage that can be caused by battery leakage or corrosion.

 
On Operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- This CD player is designed to be played on a stable no vibration position. If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.

PRECAUTIONS (continued)

Notes on CDs

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.

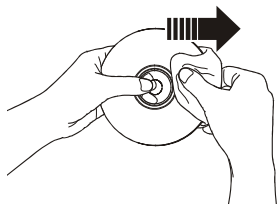


- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or stickers on the CD, nor scratch the CD.
- After playing, store the CD in its case. If there is a scratch, dirt or fingerprints on the CD, it may cause a tracking error or skipping.

MAINTENANCE

Cleaning the Lens

 If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available lens cleaner and blower.

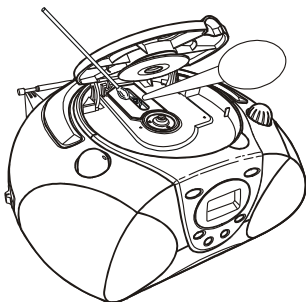

Cleaning the Cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.

TROUBLE SHOOTING

	Problem	Remedy
General	The power is not on.	<ul style="list-style-type: none">• Connect the AC power cord to a wall outlet securely.• Make sure the batteries are inserted correctly and they are fresh.
	There is no sound.	<ul style="list-style-type: none">• Make sure the FUNCTION switch is at the right position as you want.• Adjust the volume.• Unplug the headphones when listening through speakers.
	"CD" appears in the display even when a CD is in place.	<ul style="list-style-type: none">• Insert the CD with the label side up.
CD player	CD does not play.	<ul style="list-style-type: none">• Make sure that the CD compartment is closed.• Place the CD with the label side up.• Clean the CD.• Take out the CD and leave the CD DOOR open for about an hour to dry moisture condensation.• Make sure the FUNCTION switch is at CD position.
	The sound drops out.	<ul style="list-style-type: none">• Clean the CD, or replace it if the CD is badly damaged.• Place the player in a location free from vibration.• Check if your batteries are fresh.
	CD does not play while radio may continue to play.	<ul style="list-style-type: none">• It is normal since the radio uses less power than the CD player.
Radio	The sound is weak or has poor quality.	<ul style="list-style-type: none">• Replace all the batteries with new ones if they are weak, or bring the set near a window, or rotate the set.

SPECIFICATION

General Description

Power source:	AC 120V, 60Hz, 14Watts DC 9V (6 size "C" batteries) (Alkaline batteries are recommended)
Speakers:	2 - 3 " 8 ohm
Output power:	1.5W/channel
Dimensions:	Width: 12" Depth: 10" Height: 6" Weight: 3.3LBs (without batteries)

CD Section

Plays disc type:	Any normal CD used in portable players	
Laser wavelength:	760 - 800 NM	
Tracking method:	3 - spot error detection	3.86 mm lens
Frequency response:	50Hz - 15kHz +1/-2dB	

NOTE: This CD player will only play **NORMAL** music CDs (or CD-R CDs).
This set will not play **CD-RW** encoded discs.

Radio Section

Frequency range:	FM: 88 - 108 MHz AM: 530 - 1700 kHz
------------------	--

LENOXX reserves the right to make design and specification changes for product improvement.

PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL BE PLACED UNDER THE SET WHEN PLACING IT ON SURFACE WITH A NATURAL OR LACQUER FINISH.

LIMITED WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a period of 90 days after purchase and we will repair it free of charge or replace it at no charge, should it become defective under this warranty, providing you submit proof of purchase (sales slip) with the set.

During the initial 90 day period after original purchase, we will service or exchange, at no charge, the set that is returned to LENOXX ELECTRONICS CORP. After the initial 90 day period expires, and for a period of 12 months from original purchase, we will repair the unit covering any part(s) that need to be replaced at no charge, but will charge for the cost of labor, return postage paid by Lenoxx.

This warranty does not apply to any products which have been subject to misuse, neglect or accident. This warranty does not cover broken cord or cabinet. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS CORP. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The following charges apply to repairs beyond the warranty period: \$10.00. Be sure to pack carefully and return postage paid insured together with your money order (personal checks will not be accepted) and sales receipt to:

LENOXX ELECTRONICS CORP., 2 GERMAK DRIVE, CARTERET N.J. 07008

For customer service dial 1-800-315-5885

(MONDAY - THURSDAY 09:00 AM - 05:00 PM, FRIDAY: 09:00 AM - 01:00 PM EST)

<http://www.lenoxx.com>

© 2004 LENOXX ELECTRONICS CORP.
2 GERMAK DRIVE
CARTERET, N.J. 07008
MADE & PRINTED IN CHINA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>