

 
Lennox Sound[®]

COMPACT DISC PLAYER

MW/FM DUAL CASSETTE RECORDER
WITH REMOTE CONTROL

MODEL CD-511

OPERATING INSTRUCTIONS

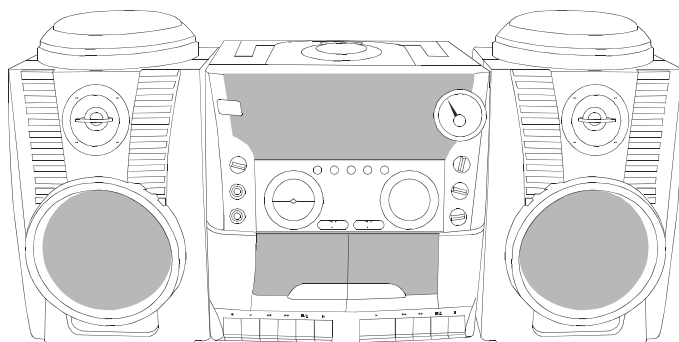

- INCLUDES FULL FEATURE REMOTE CONTROL
- MULTI-COLOURED FLUORESCENT DISPLAY
- PLAYS MUSIC COMPACT DISCS
- SING ALONG WITH KARAOKE
- FULLY PROGRAMMABLE CD PLAYER WITH REPEAT PLAY FUNCTION
- RECEIVES MW/FM STEREO BROADCASTS
- ROTARY BASS & TREBLE CONTROLS
- RECORDS FROM CD, TAPE OR RADIO
- 2 WAY POWER - AC/DC
- REQUIRES 8 X LR20 (SIZE " D ") BATTERIES (NO INCLUDED)



PLEASE READ CAREFULLY BEFORE USE

Imported and distributed by Worldwide Retail Sourcing (UK) Limited
491 Holloway Road London N19 4DD
email address: WWRetailSourcing@AOL.COM

IB-CD511(TA)-SW-E-091002

WARNINGS



The exclamation mark within a triangle is a warning sign alerting the user of important instructions accompanying the product.



The lightning flash with arrowhead symbol within a triangle is a warning sign alerting the user of "dangerous voltage" inside the player.



To reduce the risk of electric shocks, do not remove the cover. No user-serviceable parts inside the player. Refer all servicing to qualified personnel.



This player uses a laser. Only a qualified service person should remove the cover or attempt to service the player, due to possible eye injury.



Invisible laser radiation may occur when the player is opened or interlocks are by-passed. Avoid exposure to laser beam. Use of controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.

240V ~

This player operates on 12V and PSU = 240V. If it is not to be used for a long time, the AC power cord should be unplugged.



The player must not be exposed to moisture or rain. The player should not be exposed to dripping or splashing and objects containing liquids, such as vases, should never be placed on top of it.



The power switch for the player is mounted on a secondary circuit and does not disconnect the whole player from the mains in OFF position.



Please ensure all connections are properly made before operating.



The player should be positioned so that it is properly ventilated. Avoid placing it, for example, close to curtains, on a carpet or inside a built-in fixture such as a bookcase. Openings for ventilation must not be blocked or covered during use.



Do not expose the player to direct sunlight or heat sources.

CAUTION

This compact disc player is classified as a CLASS 1 LASER PRODUCT as stated on the back of the player.

BATTERY SAFETY INSTRUCTIONS

 
CAUTION: TO REDUCE THE RISK OF FIRE, PERSONAL INJURY OR DAMAGE TO THE PLAYER, PLEASE READ AND FOLLOW THESE INSTRUCTIONS.

1. Use only the type and size of batteries stated in the operating instructions booklet (Batteries are not included with the player. Please buy the correct batteries).
2. Do not dispose of the batteries by burning them as they may explode. Check with local regulations for any special instructions on the disposal of batteries.
3. Do not open or dismantle batteries. Do not recharge non-rechargeable batteries.
4. Be careful when handling batteries in order not to short-circuit them with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
5. Do not attempt to extend the life of batteries for use with this product by heating them.
6. All batteries should be replaced at the same time. Mixing old and new batteries could increase internal cell pressure and damage the batteries.
7. When inserting batteries into this product, the correct polarity (\oplus or \ominus) or direction must be observed.
8. Remove the batteries from the product if it is not to be used for a long period of time (several weeks or more).
9. Remove old or flat batteries as soon as possible as they are more likely to leak in the product.
10. Do not store the product in high temperature areas.
11. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly may cause electric shocks when the appliance is subsequently used.
12. If any liquid leaks from the batteries, wipe it up immediately. Do not let any of the liquid come into contact with your skin and discard the leaking batteries.
13. Do not mix batteries (OLD and NEW or CARBON and ALKALINE etc.).
14. The use of rechargeable batteries is not recommended for this player because their voltage and life is lower than those of standard batteries.
15. Installation of batteries should only be done by an adult.

PLEASE SAVE THESE INSTRUCTIONS

CHOOSING A POWER SOURCE

AC power or batteries may be used as a power source.

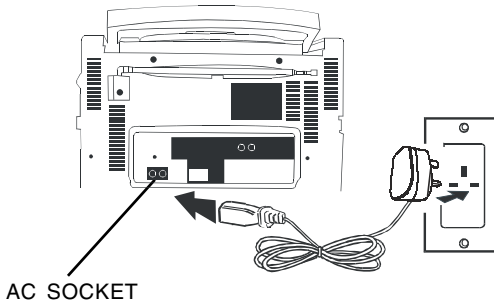

TIP

- Replace the batteries when the display dims or when the player stops operating. Replace all batteries with new ones. Before replacing batteries, make sure there is no CD in the player and remember to check the Battery Safety Instructions on Page 2.
- If the CD does not play on batteries, this means the batteries are almost used up. But the radio may continue to play on these weak batteries because it uses less power than the CD player.

 
1. Connecting the AC power cord

Insert one end of the supplied AC power cord (located in the polyfoam) into the socket located at the back of the player, and the other end into a wall outlet.

2. Using battery power

Insert 8 X LR20 (size "D") batteries (not included) into the battery compartment.

To use the player on batteries, disconnect the AC power cord from the player.

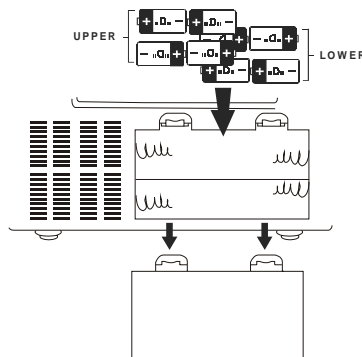

VFD DISPLAY

The VFD display only lights up when using AC power.

ATTACHING THE SPEAKERS

1. Position one of the speakers to the right of the main unit.

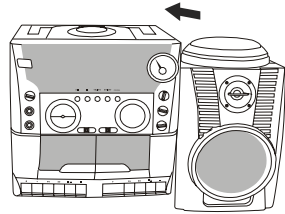 


FIG.1

2. Align the tracks (rails) on the speaker with the main unit as shown in FIG. 1.

3. When the speaker tracks (rails) are lined up, push the speaker into the tracks (rails) on the main unit as shown in FIG. 2.

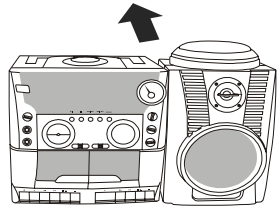 


FIG.2

4. Repeat steps 1 to 3 above for the left side.

5. Carefully unwind the speaker wire from behind each speaker and insert the right plug into Speaker Jack R and the left plug into Speaker Jack L (as shown in FIG. 3). Wrap the remaining wire behind each speaker.

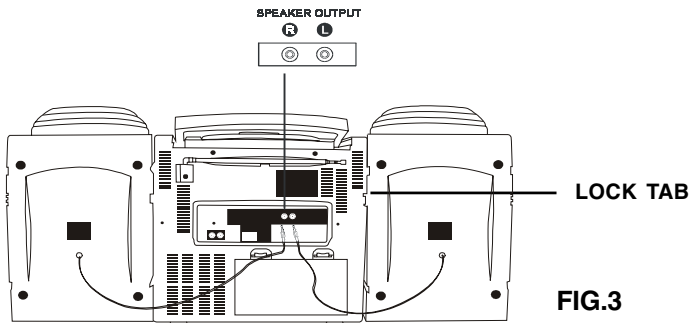 


FIG.3

 
NOTE: This player can be used with the speakers either attached to the main unit or standing alone so long as both speaker plugs are plugged into the jacks.

To detach the speakers, press the lock tab and push the speakers out of the tracks (rails).

REMOTE CONTROL

The CD PLAYER can be operated with the REMOTE CONTROL provided (includes the following controls: POWER ON/OFF, MUTE, VOLUME, CD REPEAT and PLAY).


NOTE: When you use the REMOTE CONTROL to operate the CD PLAYER, make sure the POWER button on the main unit is turned on. Otherwise, the REMOTE CONTROL will not work.

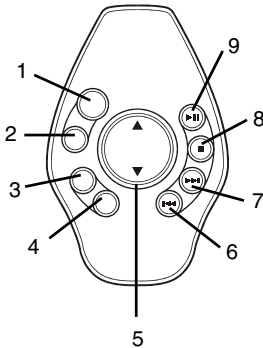

1. POWER ON/OFF
2. MUTE
3. REPEAT - ONE & ALL SONGS
4. PROGRAMME
5. VOLUME UP/DOWN
6. SKIP/SEARCH BACKWARD
7. SKIP/SEARCH FORWARD
8. STOP
9. PLAY/PAUSE

NOTE: When you press the POWER ON/OFF button to switch the player off, the VFD display will go out and the STANDBY indicator on the main unit will come on.

  
Slide the battery cover off to remove the batteries. Insert 2 X LR4 (size "AAA") batteries (not included) correctly so that the + and - polarities match the polarity indicators inside the battery compartment.

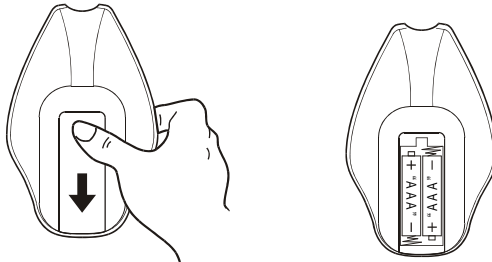

 
 
 


 
 



 
NOTE:

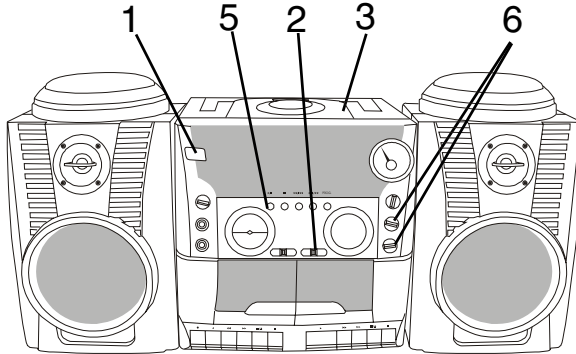- About half a year of normal operation can be expected when using alkaline batteries.
- When the batteries are worn out, the remote control will stop working. Replace both batteries with new ones.
- When the remote control is not to be used for a long time (2 months or more), the batteries should be removed to avoid possible damage that may be caused by battery leakage.
- Avoid keeping the remote control in extremely hot or humid locations.
- The remote control will operate at a distance of between about 0.2m (8 inches) and 6m (20 feet) from the remote sensor.

PLAYING A CD



Connect the supplied AC power cord or batteries (see page 3).

- 1**  Press the POWER button for the VFD display and AUDIO LEVEL to come on. 
- 2**  Slide the FUNCTION switch to the CD position. Two dashes, "--", will appear on the VFD display. 
- 3**  Open the CD DOOR by pressing the bottom righthand corner of the CD door marked OPEN/CLOSE and place the CD in the CD compartment. The label side of the CD should face upward. 
- 4**  Close the CD DOOR by pushing it down. The display will show the total number of tracks (songs) on that CD. 
- 5**  Press the CD PLAY button. The player will play all the songs (tracks) once in order. 
- 6**  To change the sound effect, adjust the BASS and TREBLE knobs as desired.

TIP: "--" WILL APPEAR IN THE DISPLAY IF THERE IS NO DISC IN THE CD COMPARTMENT OR IF THE DISC IS UPSIDE DOWN.

USE THESE BUTTONS FOR ADDITIONAL OPERATIONS



TIP

The **AUDIO LEVEL** will light up when the power is on and the pointer will indicate any changes in audio levels.

TIP

When CD play is paused, "▶" will flash and the CD will stop playing.



 
To resume play, press the **PAUSE** button again, "▶" will stop flashing and the CD will play.

TIP

If the player or the table it is sitting on is knocked while a CD is playing, the CD will stop or skip for a few seconds. This is normal for this type of player.

TIP

This set has an electronic volume control. The volume can be raised or lowered by pressing the **VOLUME UP** or **DOWN** button.

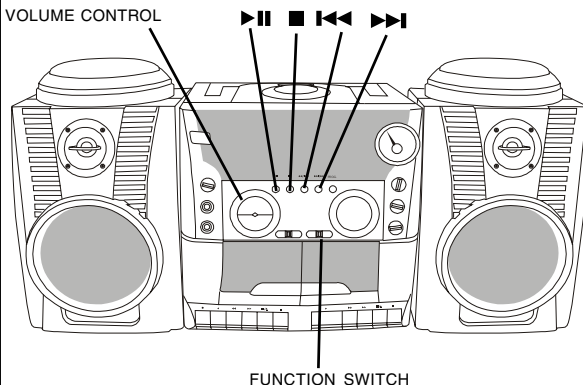


To	Press or Adjust
Adjust the volume	VOLUME control
Stop playback	■ STOP
Pause playback	▶ PLAY/PAUSE "▶" will flash when a CD is in pause mode. Press again to resume play.
Go to the next track	▶▶ FORWARD
Go back to the previous track	◀◀ BACKWARD
Locate a point in a song	◀◀ or ▶▶ Press and hold down while playing until you find the point.
Remove the CD	Press the bottom righthand corner of the CD DOOR marked OPEN/CLOSE (press STOP first).
Turn off the player	Press the POWER button and the display will go off.
To turn off the sound instantly	Press the MUTE button on the REMOTE CONTROL.




REPEAT PLAY

 PLAYING CD SONGS (TRACKS) REPEATEDLY

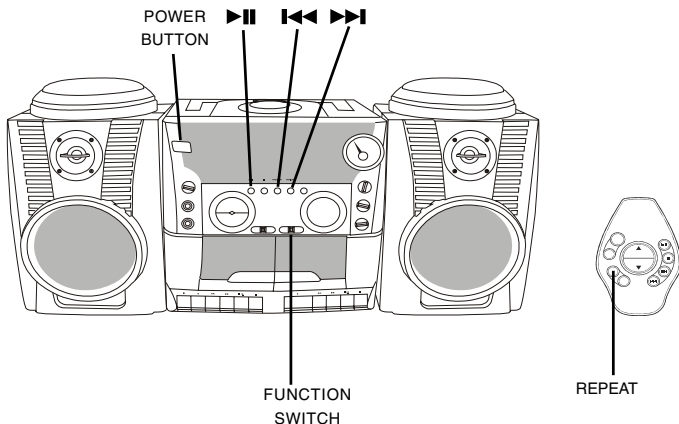CD tracks can be played over and over again in either normal or programmed play mode (see page 9). (**NOTE:** To use this feature, you need to operate the set with the REMOTE CONTROL, because there is no REPEAT button on the main unit.)



1. Press the POWER button for the display to light up.
2. Set the FUNCTION switch to the CD position.
3. Select the track by pressing **⏮** or **⏭**, and then press **▶▶**.
4. Press the CD REPEAT button on the REMOTE CONTROL.

To repeat	Press	Display shows
a single track (song)	Press the REPEAT button once	 "REP" will flash.
all the tracks (all songs)	Press the REPEAT button twice	 "REP" will stay on continuously
programmed tracks	Press the REPEAT button twice while programmed tracks are being played	 "REP" will stay on continuously

To cancel Repeat Play

 
Press the REPEAT button until "REP" goes off.


PROGRAMMED CD PLAY

 

 
 
SELECTING YOUR OWN MUSIC PLAYING ORDER



Up to 19 tracks may be programmed to play in whatever order you wish.



NOTE: Programming is only done during **STOP** mode.

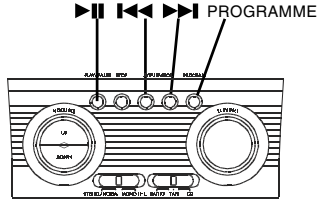


- 1**  **PROGRAM** During **STOP** mode, press the PROGRAM button. “0” and “PRG.” will flash in the display.

 
- 2**  **SKIP/SEARCH** Press the SKIP/SEARCH buttons,  or , until the desired track shows in the display.

 
- 3**  **PROGRAM** Press the PROGRAM button. “0” and “PRG.” will flash in the display.

 
- 4** Repeat steps 2 and 3 until all the desired tracks are programmed.
- 5**  **PLAY/PAUSE** Press the PLAY button to start programmed play. “▶”, “PRG.” and the track number being played will show in the display.




To change the current programme

Simply create a new programme by following the programming procedure.

To cancel Programmed Play

Press the STOP button twice and “PRG.” will disappear from the display.

 LISTENING TO THE RADIO

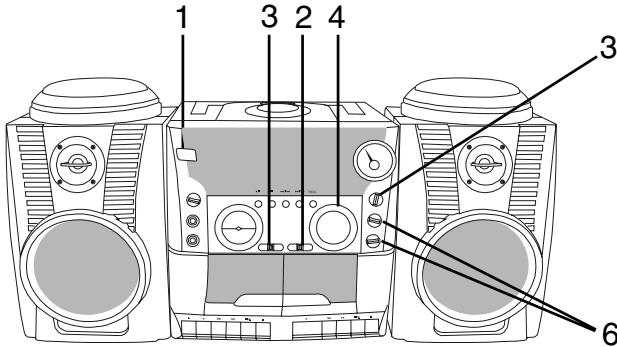


Connect the supplied AC power cord or batteries (see page 3).

1



Press the POWER button for the VFD display and the AUDIO LEVEL to come on.

 2




Set the FUNCTION switch to the RADIO position.


3



 Set the BAND switch to the proper band position (MW or FM), and the FM MODE switch to STEREO or MONO.



4

 


Tune into the station of your choice using the TUNING control. Adjust for the clearest sound.

5




"FM ST." will appear in the VFD display when receiving FM Stereo broadcasts.

 6



To change the tone, adjust the BASS and TREBLE controls as desired.

 USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

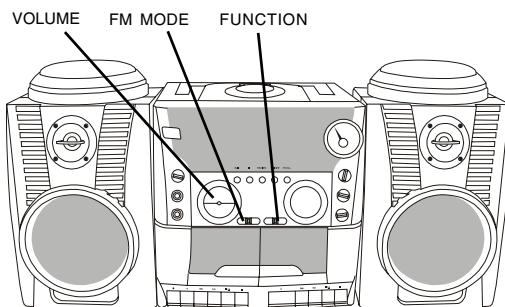


TIP

- If an FM broadcast is noisy, move the FM MODE switch from STEREO to MONO.
- This player has an electronic volume control. The volume can be raised or lowered by pressing the VOLUME UP or DOWN button.


To	Press or Set
Adjust the volume	VOLUME control (UP or DOWN).
Turn off the Radio	Set the FUNCTION switch to the TAPE position or press the POWER button.

To improve broadcast reception

 Change position of the antenna for FM or FM Stereo.
Move the player itself for MW.

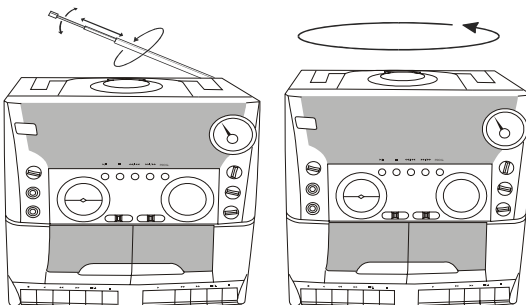

PLAYING A TAPE

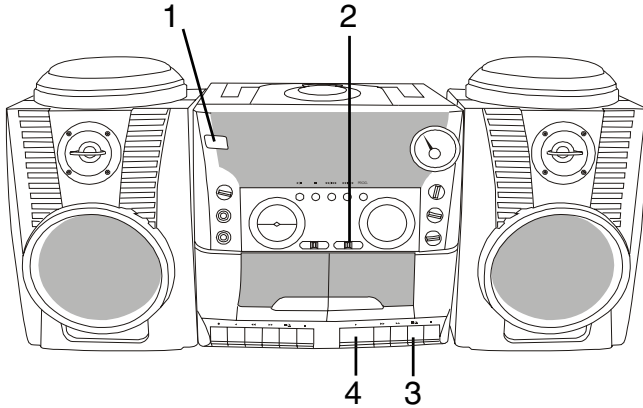 

Connect the supplied AC power cord or batteries (see page 3).



 
Press the **POWER** button for the VFD display to come on.



Set the **FUNCTION** switch to the **TAPE** position.




Press the **STOP/EJECT** button (**DECK A** or **DECK B**) to open the tape compartment and insert a recorded tape. Close the door.




Press the **PLAY** button. The player will come on and start playing the tape.



 
When the player comes to the end of one side of the tape, it will stop. To listen to the other side of the tape, turn the tape over, insert and press **PLAY**.




INSERT THIS WAY

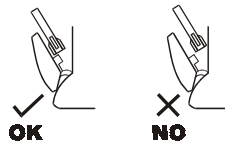 

OK **NO**

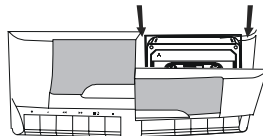  
 


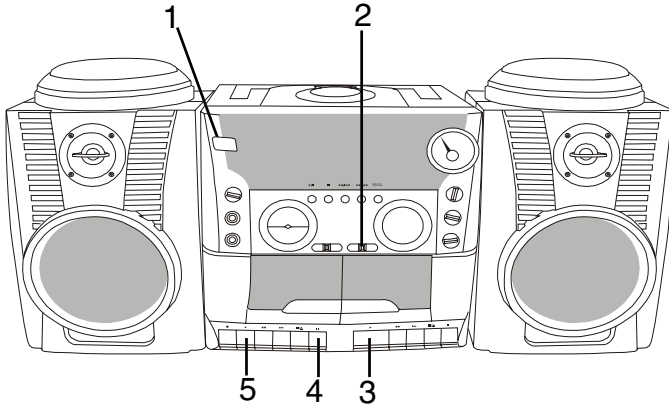


RELAY PLAY

 


Connect the supplied AC power cord or batteries (see page 3).


To play tapes in DECK A and then DECK B, follow the steps below:

- 1**  Press the POWER button for the VFD display and AUDIO LEVEL to come on.
- 2**  Set the FUNCTION switch to the TAPE position.
- 3**  Press the cassette PLAY button on DECK A for the tape in DECK A to play.
- 4**  Press the cassette PAUSE button on DECK B.
- 5**  Press the cassette PLAY button on DECK B. When DECK A finishes playing, DECK B will automatically start playing.
- 6** When the player reaches the end of the tape in DECK B, it will stop.

USE THESE BUTTONS FOR ADDITIONAL CASSETTE TAPE OPERATIONS

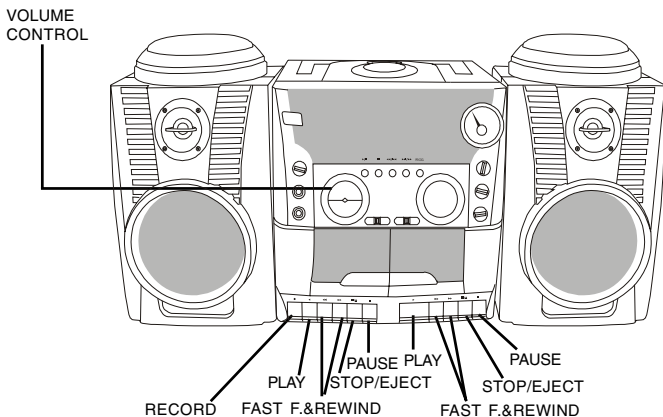


To	Press or Adjust
Adjust the volume	Press the VOLUME button (UP or DOWN)
Stop playback	STOP/EJECT button
Fast forward or rewind	FAST FORWARD button or REWIND button
Pause playback	PAUSE button Press again to resume play
Eject the cassette	STOP/EJECT button
To enjoy music without disturbing others (headphones are not included)	Insert your headphone plug into the HEADPHONE jack (at the front of the player).

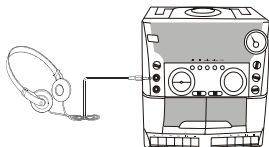 



To turn the power off	Make sure none of the cassette buttons are down (on) and the POWER button is off.
-----------------------	---

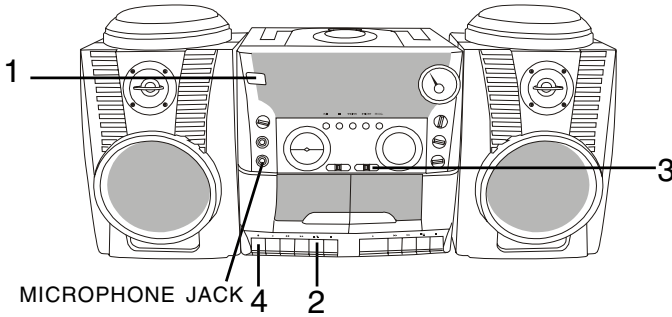 
RECORDING ONTO A TAPE




Connect the supplied AC power cord or batteries (see page 3).

1  Press the **POWER** button for the VFD display and **AUDIO LEVEL** to come on.

  
2 **STOP/EJECT**  Press the **STOP/EJECT** button (**DECK B**) to open the tape compartment and insert a blank tape. Select the source (**MW, FM, CD, or microphone**) you wish to record from.




 
 
OK




NO

3  To record from the **CD player**, set the **FUNCTION** switch to the **CD** position, insert a **CD** and follow the steps for playing a **CD** (see page 6).
 To record from the **radio**, set the **FUNCTION** switch to the **RADIO** position, and tune into the desired station (see page 10).
 To record from the **microphone**, set the **FUNCTION** switch to the **TAPE** position, and plug the microphone (not included) into the **MICROPHONE JACK**. Speak into the microphone.
 To record from **DECK A**, set the **FUNCTION** switch to the **TAPE** position and follow the steps for playing a **TAPE** (see page 12).

4 **RECORD**  Press the **RECORD** button to start recording. (The **PLAY** button will automatically be depressed.)

5 **REWIND**  **PLAY**  To listen to what you have recorded, set the **FUNCTION** switch to the **TAPE** position, press **REWIND** and then **PLAY**.

 USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

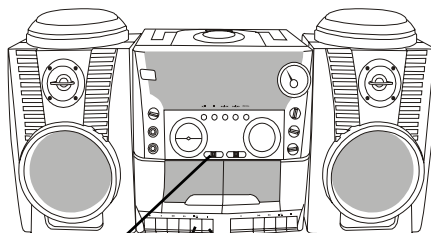


TIP

- For best recording effect, use AC power instead of batteries.
- To erase a recording, simply start a new recording, and the old one will automatically be erased.
- See page 20 for notes on cassettes.

DOUBLE SPEED SWITCH STOP/EJECT PAUSE

To	Press or Set
Stop recording	STOP/EJECT button
Pause recording	PAUSE button Press the button again to resume recording.
Adjust recording speed when copying tapes	DUBBING SPEED switch from NORMAL to HIGH speed.
Turn off the power	Press the STOP/EJECT button and the POWER button. The VFD display will go off.

 SING ALONG WITH KARAOKE FUNCTION

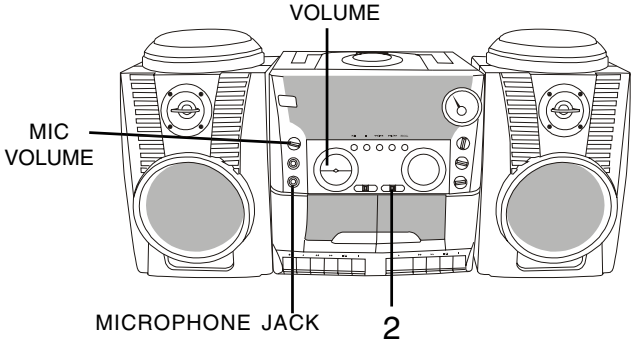

Connect the supplied AC power cord or batteries (see page 3).

 
1



Insert the microphone plug into the microphone jack. To avoid howling from the microphone, lower the volume level first.

NOTE: Microphone is not included. You can purchase one at the shop where you purchased your player.

2




To sing along with the CD player, set the FUNCTION switch to the CD position, insert a KARAOKE CD disc and follow the steps for playing a CD (see page 6).




To sing along with a tape, set the FUNCTION switch to the TAPE position, insert a KARAOKE TAPE into Deck A or B, and follow the steps for playing a TAPE (see page 12).

 3



  
Press the CD PLAY/PAUSE button on the CD player or the PLAY button on Deck A or B.


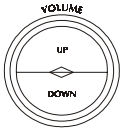 
 
4



Adjust the volume controls (both the VOLUME control on the player and the MICROPHONE VOLUME control) to achieve the best effect.

USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

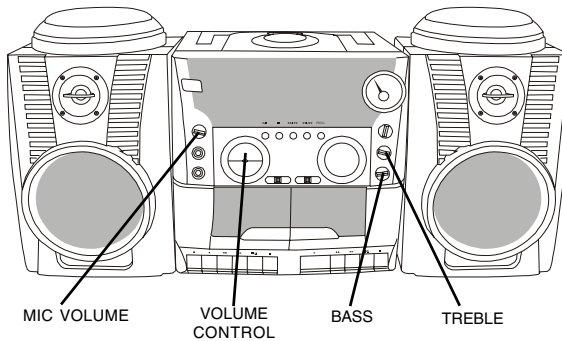

To	Press or Adjust
 <p>MIC. VOLUME</p>	<p>Adjust the MIC volume</p> <p>MIC. VOLUME</p>
	<p>Adjust the CD or TAPE volume</p> <p>VOLUME control</p>
	<p>Adjust the sound effect for low or high tones.</p> <p>BASS or TREBLE control.</p>

TIP: If any squealing or howling (feedback) occurs during KARAOKE use, move the microphone away from the speakers or turn down the volume.

PRECAUTIONS

Safety

- The laser beam used in the CD player section could damage your eyes so you should never attempt to take the cabinet apart. Refer servicing to qualified personnel only.
- If any solid object or liquid gets into the player, unplug it, and have it checked by qualified personnel before operating it again.

Location

- Do not leave the player near a heat source in direct sunlight or where it might be exposed to excessive dust or mechanical shocks.
- Do not place the player on a sloping or unstable surface.
- Do not place anything within one inch of the back of the cabinet. The ventilation holes must not be covered for the player to operate properly and to prolong the life of its components.
- If the player is left in a car parked in the sun, be sure to put it somewhere in the car where it will not be in direct sunlight.
- Powerful magnets are used in the speakers so personal credit cards using magnetic coding and spring-wound watches should be kept away from the player to prevent possible damage from the magnets.

Power Sources

- For battery operation, use 8 X LR20 (size "D") batteries (not included). We recommend alkaline batteries for longer life.
- When the batteries will not be used for several weeks or more, they should be removed to avoid damage that could be caused by battery leakage or corrosion.

 
Operation

- If the player is moved directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens in the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate. If the player has not been used for a long time, put it in playback mode to warm up for a few minutes before inserting a CD.
- This CD player is designed to be played on a stable, vibration-free surface. If it is knocked while a CD is playing, the CD will stop or skip for a few seconds. This is normal for this type of player.

PRECAUTIONS (continued)

CDs


- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the centre out.




- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose CDs to direct sunlight or heat sources such as hot air ducts, or leave them in a car parked in direct sunlight as the temperature inside the car could get extremely hot and cause damage to the CDs.
- Do not attach paper or stickers to CDs or scratch them.
- After playing, CDs should be stored in their cases. If there is a scratch, dirt or fingerprints on the CD, tracking errors or skipping may occur.

Cassettes

 - Break off the cassette tab from Side A or B to prevent accidental recording.

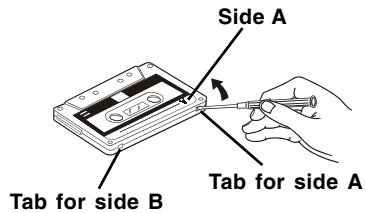


- To record on a tape with its tab broken off, cover the respective tab hole for Side A or B with adhesive tape.
- **Use of a cassette with more than 90 minutes, such as C-120 (120 minutes), is not recommended. The extreme thinness of this tape may damage this set.**
- To reduce the chance of tapes jamming or tangling, check that there is no tape slack visible through the window in the centre of the cassette. Any tape slack should be taken up with a pencil before inserting the cassette into the player.

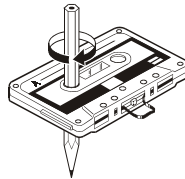 

MAINTENANCE


Cleaning the Lens

 If the lens is dirty, skipping may occur while the CD is playing. Clean with a commercially available lens cleaner and blower.

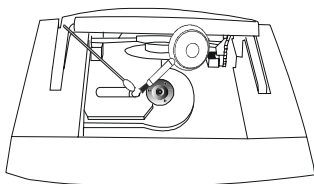

Cleaning the Tape Heads

 
Wipe the heads, the pinch roller and the capstan with a cleaning swab slightly moistened with cleaning fluid or alcohol after every 10 hours of operation for optimum playback and recording quality. After cleaning, wait until the areas cleaned are completely dry before inserting a tape.

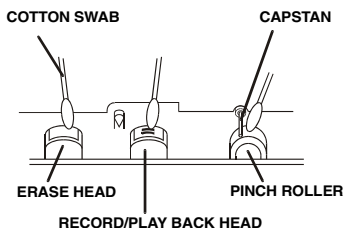

NOTE: In order to see and clean the head(s), you may have to press PLAY first.

Storage Cassette Tapes

 1. Never place tapes near a magnetic field such as a TV, or speaker. Magnetic fields may reduce tape sensitivity or even erase recording.
2. Do not store tapes for any length of time in hot, damp or dusty locations.

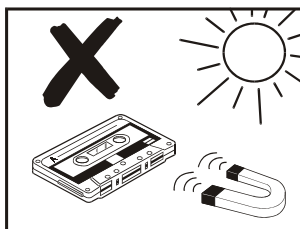

Cleaning the Cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

TROUBLE SHOOTING

	Problem	Remedy
General	The power is not on.	<ul style="list-style-type: none"> • Connect the AC power cord securely to a wall outlet. • Make sure the batteries are inserted correctly and are not worn out.
	There is no sound.	<ul style="list-style-type: none"> • Make sure the FUNCTION switch is in the correct position. • Adjust the volume. • Unplug the headphones when listening through the speakers.
	VFD display does not light up.	<ul style="list-style-type: none"> • You may be using battery power. The VFD display will only light up when AC power is used.
CD player	“ - - ” appears in the display even when a CD is in place.	<ul style="list-style-type: none"> • Insert the CD with the label side up.
	CD does not play.	<ul style="list-style-type: none"> • Make sure that the CD compartment is closed. • Clean the CD. • Remove the CD and leave the CD DOOR open for about an hour to get rid of moisture condensation. • Make sure the FUNCTION switch is in the CD position.
	The sound drops out.	<ul style="list-style-type: none"> • Clean the CD or replace it if it is badly damaged. • Place the player in a location free from vibrations. • Check that the batteries are not worn out.
Radio	CD does not play while radio may continue to play.	<ul style="list-style-type: none"> • It is normal since the radio uses less power than the CD player.
	Sound is weak or sound quality is poor.	<ul style="list-style-type: none"> • Replace all the batteries with new ones if they are low, move the player close to a window for better MW reception or rotate it for better FM reception.
Tape player	The RECORD button does not function/The tape does not play.	<ul style="list-style-type: none"> • Make sure the safety tab on the cassette is in place (see page 20). • Make sure the FUNCTION switch is in the TAPE position.
	The tape does not erase completely.	<ul style="list-style-type: none"> • Clean the erasing head (see page 21). • Replace all the batteries with new ones if they are low.
	The tape does not record.	<ul style="list-style-type: none"> • Make sure the tape is inserted correctly. • Make sure the safety tab on the cassette is in place.
	Sound is weak or sound quality is poor.	<ul style="list-style-type: none"> • Clean the heads, pinch roller and capstan (see page 21).
	Cassette PLAY button pops up.	<ul style="list-style-type: none"> • The tape has reached the end of one side. Remove, turn over and re-insert.
	Tape jamming or tangling	<ul style="list-style-type: none"> • Use only better quality tapes. • Do not use a cassette with more than 90 minutes. • Make sure there are no loose layers of tape visible before inserting the cassette.

SPECIFICATION

General Description

Power source: AC 240V, 50Hz 20Watts
DC 8 X LR20 (size "D") batteries (not included) for player
DC 2 X LR4 (size "AAA") batteries (not included) for Remote Control
(Alkaline batteries are recommended)

Speakers (2 ways): 50 - 125mm 4 ohm woofers
50 - 75mm 4 ohm tweeters with crossover

Output power: 5.0W/channel

Dimensions (approx.):

	MAIN UNIT	SPEAKER
Width:	265MM	172MM
Depth:	220MM	195MM
Height:	260MM	315MM
Weight:	2.0KG	1.3KG

CD Section

Type of disc played: Any normal CD used in portable players
Laser wavelength: 760 - 800 NM
Tracking method: 3 - spot error detection 3.86 mm lens
Frequency response: 50Hz - 15kHz +1/-2 dB

NOTE: This CD player will only play **NORMAL** music CDs (or CD-R CDs).
It will not play **CDRW** encoded discs.

Tape Recorder Section

Frequency response: Standard normal bias cassette tapes
70Hz - 10kHz

Radio Section

Tuning range: FM: 88 - 108 MHz
MW: 530 - 1600 kHz

LENOXX reserves the right to make design and specification changes for product improvement.

PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL IS PUT UNDER THE PLAYER WHEN IT IS PLACED ON SURFACE WITH A NATURAL OR LACQUER FINISH.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>