 


Lenox Sound[®]

MODEL DVD- 2002

DVD VIDEO PLAYER

INSTRUCTION MANUAL

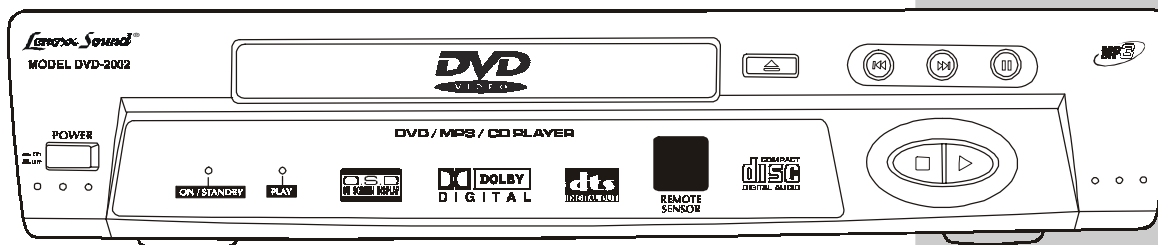 



- FULL ON SCREEN DISPLAY
- PLAYS DVD VIDEOS
- PLAYS ALL AUDIO CDS
- COMPATIBLE WITH CD-R & CDRW DISCS
- PLAYS MP3 RECORDED DISCS

PLEASE READ CAREFULLY BEFORE USE

IB-DVD-2002-WC-ZR-E-V1

SAFETY INSTRUCTIONS

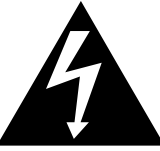 <p>The lightning flash and arrow head within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
---	---	---

SEE BACK OF THE SET

THESE IMPORTANT SAFETY INSTRUCTIONS ARE INCLUDED, AS APPLICABLE TO THE APPLIANCE, CONVEYING TO THE USER THE INFORMATION ITEMIZED BELOW:

- 1. Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** - All operating and use instructions should be followed.
- 5. Water and Moisture** - The appliance should not be used near water - for example near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
- 6. Wall or Ceiling Mounting** - The appliance should not be mounted to a wall or ceiling.
- 7. Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that impede the flow of air through the ventilation openings.
- 8. Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 9. Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 10. Grounding or Polarization** - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
- 11. Power Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenient receptacles, and the point where they exit from the appliance.
- 12. Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
- 13. Nonuse periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 14. Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 15. Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
- 16. Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

NOTE

This device is protected by U.S. patent numbers 4,631,603 and 4,819,098 and other intellectual property rights. The use of Macrovision's copy protection technology in the device must be authorized by Macrovision and is intended for home and other limited pay-per-view uses only, unless otherwise authorized in writing by macrovision. Reverse engineering or disassembly is prohibited.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified personnel.
This DVD VIDEO player is classified as CLASS 1 LASER PRODUCT as stated on the back of the set.

Do not apply oil or petroleum products or solvents to any part of this set.

TABLE OF CONTENTS

• Getting Started:

Safety Instructions-----	1
Connections	
Choose Your Connection-----	3
Cables Needed to Connect Components to Your TV-----	3
DVD Player + TV with Audio/Video Input Jacks-----	4,5
DVD Player + TV + VCR-----	6
DVD Player + TV + Dolby Digital Theatre System (Audio/Video Receiver)-----	7
DVD Player + TV + VCR + Satellite Receiver -----	8
Introduction-----	9
Location of Controls-----	9,10
Remote Control Preparation-----	11
Notes on Discs -----	12
Precautions-----	13

• Initial Setting:

How to Find Your TV's Video Input Channel----	14
How to Move Around the DVD Player's Menu System-----	14
Setting Languages (OSD menu, Subtitle, Audio and DVD Menu)-----	15
Select TV Screen Type -----	16
Setting Soundtrack Output -----	17
Setting Parental Controls Rating Level -----	17

• Basic Operation:

1.Basic Play-----	18,19
2.Using the Search & Skip Functions-----	20
3.Pause or Step Play-----	20
4.Repeat Play-----	21
5.Programmed Play-----	22
6.Search for Preferred Play-----	22
7.Zoom Play-----	23
8.Slow-Motion Play-----	23
9.Viewing from a Desired Angle-----	24
10.Selecting Audio Soundtrack Language----	24
11.Changing Subtitle Language-----	25
12.MP3 CD Operation-----	25,26

• Trouble Shooting -----27,28

 

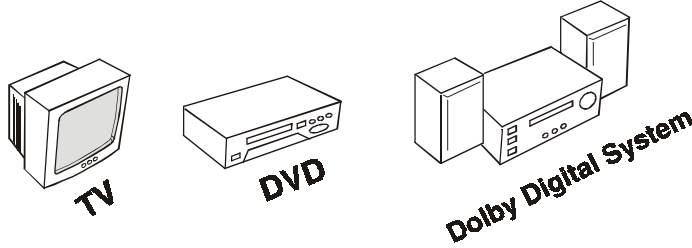 
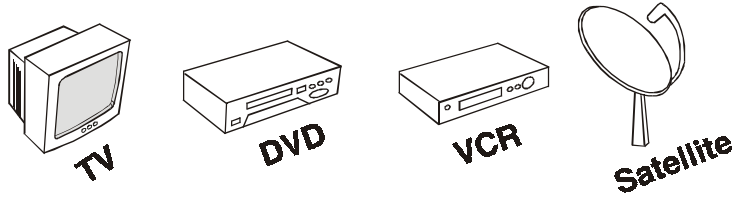 
• Specifications -----29

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.
"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

CONNECTIONS

Choose Your Connection


There are several ways to connect your DVD player. Please use the following chart to determine which connection is best for you. Turn to the appropriate page and connect your DVD player.

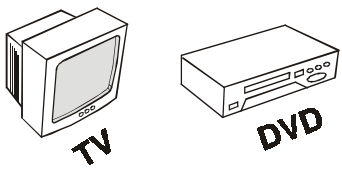COMPONENTS	CABLES NEEDED		GO TO ...
 <p>TV DVD</p>	<ul style="list-style-type: none"> • Audio/Video (included) • Coaxial (optional) • S-Video (optional) 	TV + DVD	Page 4,5
 <p>TV DVD VCR</p>	<ul style="list-style-type: none"> • Audio/Video (included) • Coaxial (optional) • S-Video (optional) 	TV + DVD + VCR	Page 6
 <p>TV DVD Dolby Digital System</p>	<ul style="list-style-type: none"> • Audio/Video (included) • Coaxial (optional) • S-Video (needed but not included) 	TV + DVD + Dolby Digital	Page 7
 <p>TV DVD VCR Satellite</p>	<ul style="list-style-type: none"> • Audio/Video (included) • Coaxial (optional) • S-Video (optional) 	TV + DVD + VCR + Satellite	Page 8


Cables Needed to Connect Components to Your TV

The pictures below show the cables needed for the connections represented in this booklet.

 
NOTE: Audio/Video cables (A/V cables for short) are usually sold as a bundled set, but the connection pictures in this booklet show each cable separately for better visibility.

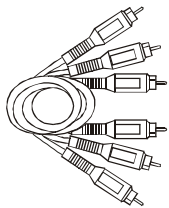

Audio/Video cables
(1 set is included)

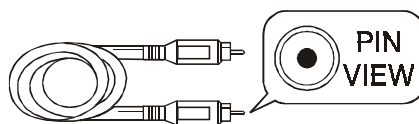 


Coaxial cable
(not included)

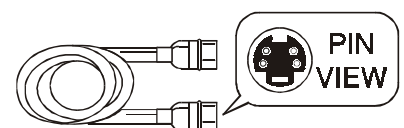 

S-Video cable
(not included)

CONNECTIONS

 DVD Player + TV with Audio/Video Input Jacks

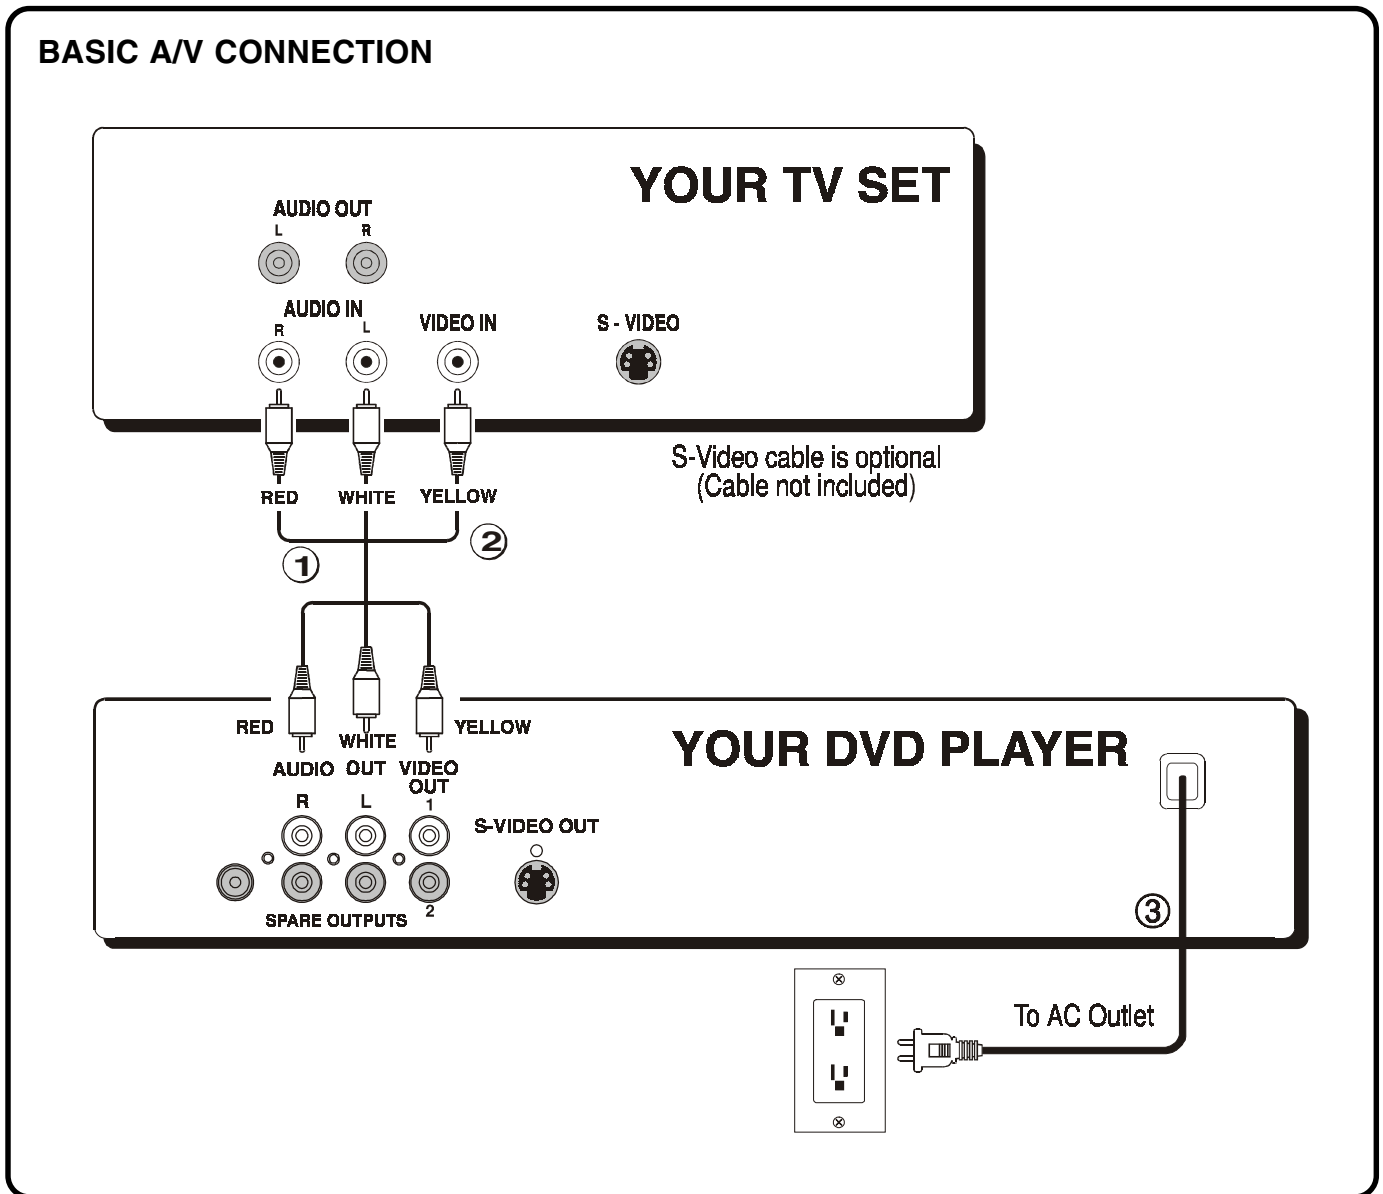


1. Connect the audio cables to the AUDIO OUT L (left=white) and R (right=red) jacks on the back of your DVD player, and to the corresponding AUDIO IN jacks on your TV.
2. Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the VIDEO IN jack on your TV. This connection will allow you to enjoy standard quality images.
3. The SPARE OUTPUTS are same as AUDIO OUT R, AUDIO OUT L, they can provide more connection possibilities to other equipment you have.
4. Insert the AC power cord into an AC outlet.
5. Go to Page 18 for playing DVDs (discs).

NOTE: Your cable or antenna connection to the television should not be affected by this connection. Connect your antenna cable to your television as you normally would. You may need to consult your television manual for details, but no changes will be made to your current antenna connections.

CONNECTIONS

 DVD Player + TV with Audio/Video Input Jacks Using S-Video Cable

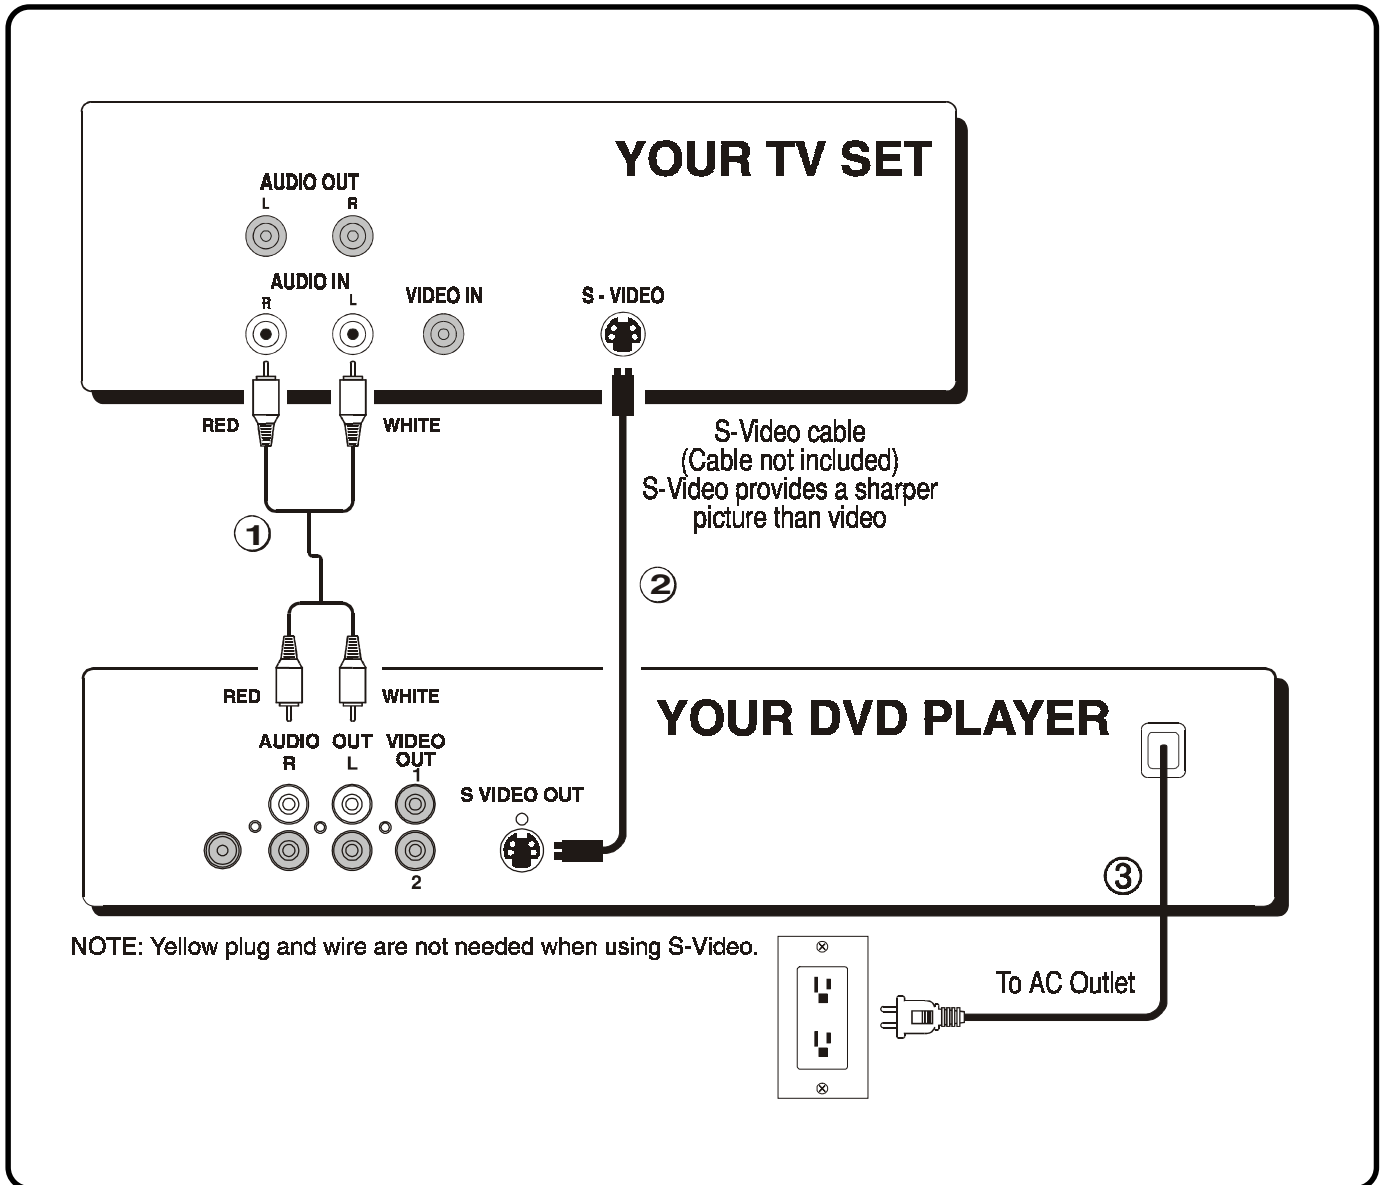


1. Connect the audio cables to the AUDIO OUT L (left=white) and R (right=red) jacks on the back of your DVD player, and to the corresponding AUDIO IN jacks on your TV.
2. Connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD player and to the S-VIDEO jack on your TV. This connection will allow you to enjoy higher quality images. If your TV doesn't have S-VIDEO, use the basic video connection listed above (yellow plugs: VIDEO IN or OUT, are not needed for S-Video).
3. Insert the AC power cord into an AC outlet.
4. Go to Page 18 for playing DVDs (discs).

NOTE: Your cable or antenna connection to the television should not be affected by this connection. Connect your antenna cable to your television as you normally would. You may need to consult your television manual for details, but no changes will be made to your current antenna connections.

CONNECTIONS

 
DVD Player + TV + VCR

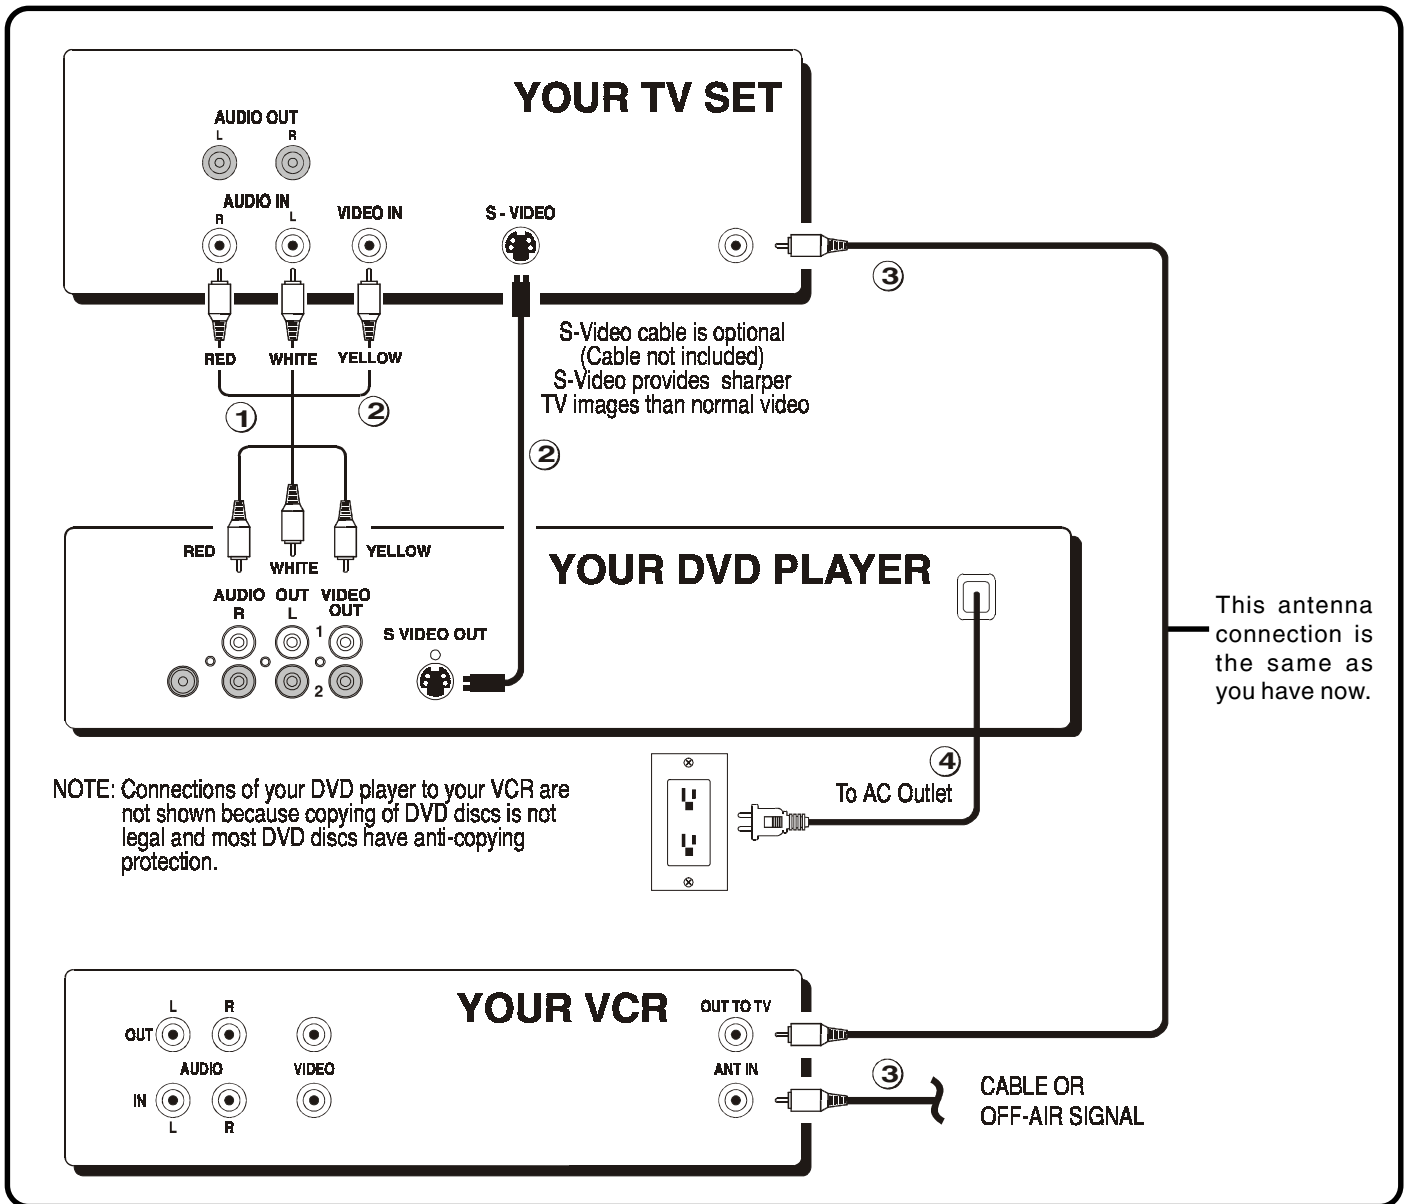

1. Connect the audio cables to the AUDIO OUT L (left=white) and R (right=red) jacks on the back of your DVD Player, and to the corresponding AUDIO IN jacks on your TV.
2. Connect the video cable.
 - **Basic video connection** - Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.
 - _____ OR _____
 - **S-Video** (optional) - If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above (yellow plugs: VIDEO IN or OUT, are not needed for S-Video).
3. Connections of your antenna cables are not changed when you add your DVD player.
4. Insert the AC power cord into an AC outlet.
5. Go to Page 18 for playing DVDs (discs).

CONNECTIONS

 
DVD Player + TV + Dolby Digital System (Audio/Video Receiver)

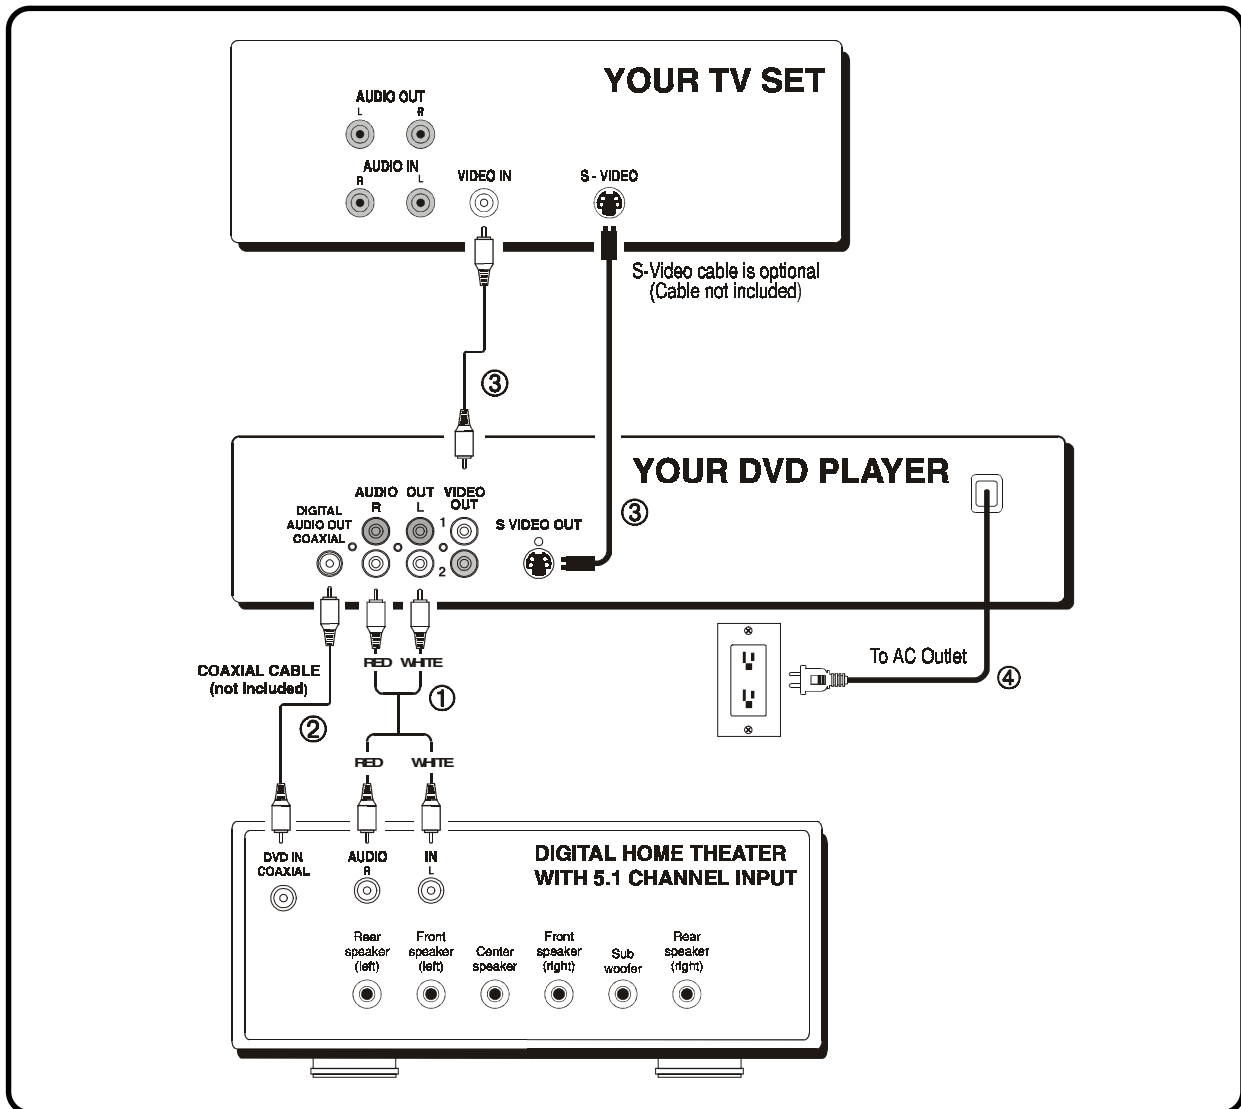

1. Connect the audio cables to the AUDIO OUT L (left -white) and R (right-red) jacks on the back of your DVD Player, and to the corresponding audio input jacks on your audio video receiver.
2. If you have a Dolby Digital or DTS receiver, insert a coaxial digital cable (not included) to the DIGITAL AUDIO OUT jack on the DVD player and to the Digital Input jack on the back of the receiver. This connection will allow you to use the Dolby Digital or DTS decoder functions of your AV amplifier (receiver). You must also set the Digital Output setting in the Soundtrack menu (see page 17).
3. Connect the video cable.
 - **Basic video connection** - Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.
_____ OR _____
 - **S-Video** (optional) - If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above (yellow plugs: VIDEO IN or OUT, are not needed for S-Video).
4. Insert the AC power cord into an AC outlet.
5. Go to Page 18 for playing DVDs (discs).

CONNECTIONS

 DVD Player + TV + VCR + Satellite Receiver

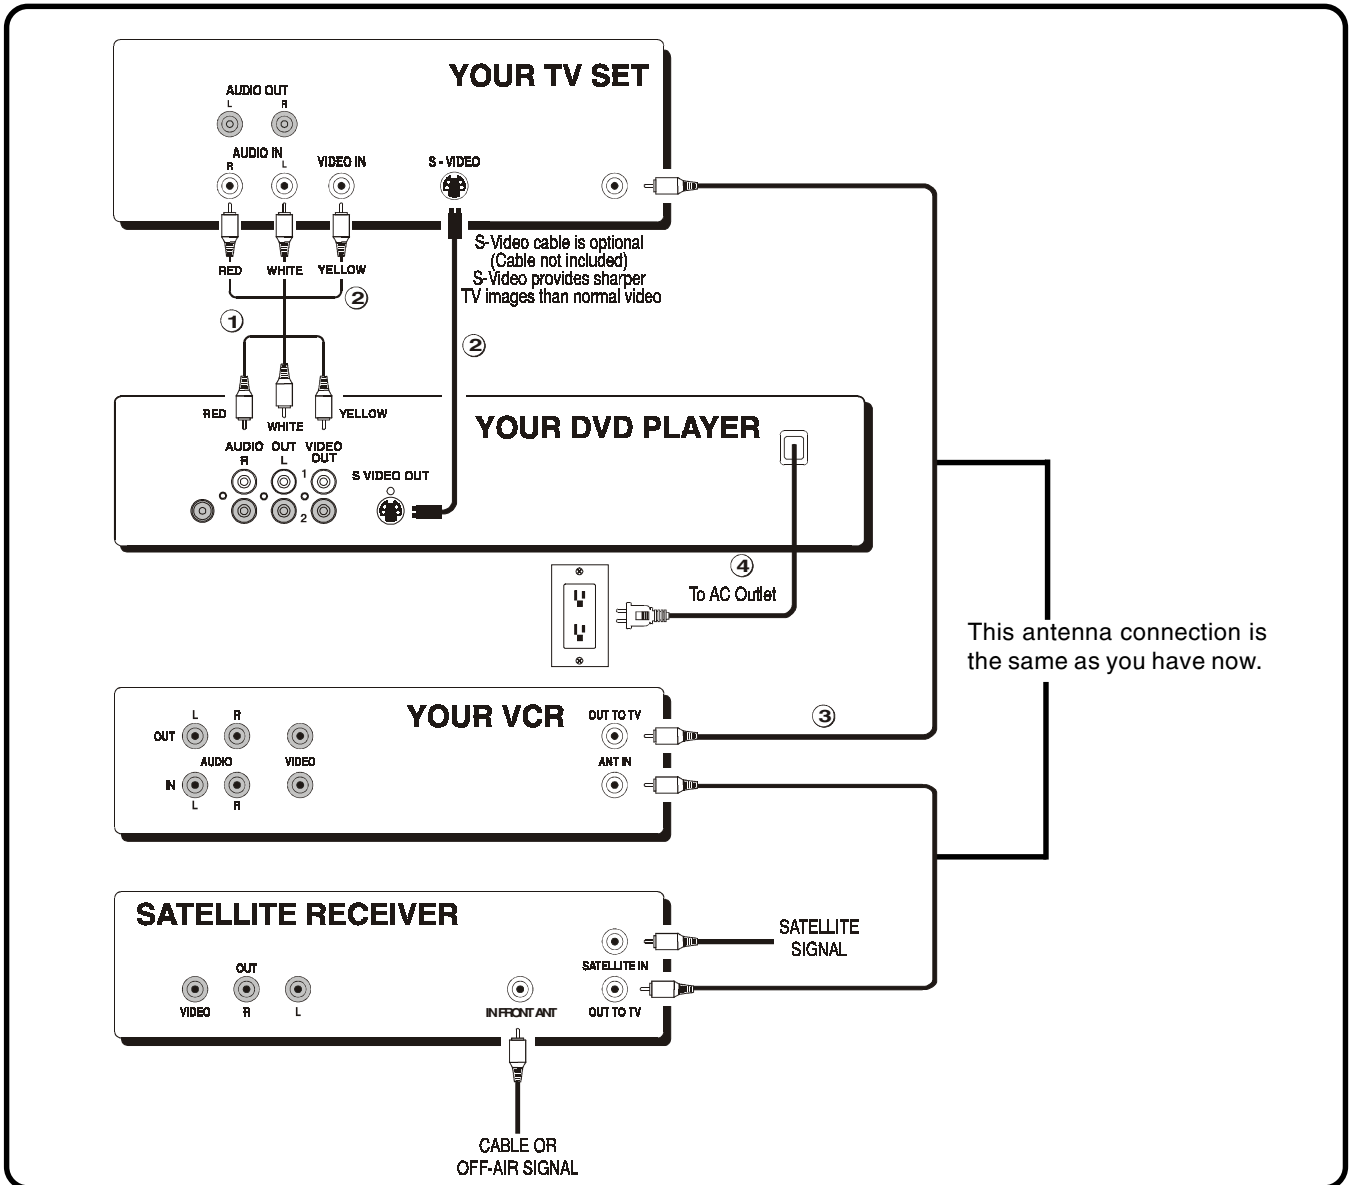

1. Connect the audio cables to the AUDIO OUT L (left -white) and R (right-red) jacks on the back of your DVD Player, and to the corresponding AUDIO IN jacks on your TV.
2. Connect the video cable.
 - **Basic video connection** - Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the VIDEO IN jack on your TV.
 - _____ OR _____
 - **S-Video** (optional) - If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above (yellow plugs: VIDEO IN or OUT, are not needed for S-Video).
3. Use an antenna cable to connect the antenna output on the satellite receiver to the antenna input on the VCR. This DVD player does not change any antenna connections.
4. Insert the AC power cord into an AC outlet.
5. Go to Page 18 for playing DVDs (discs).

INTRODUCTION

NOTE: This DVD player will play DVD movies as well as Audio CDs. To simplify, we refer to these as “discs” in this booklet.

Your DVD player is equipped with some special features. The following information summarizes some of these features.

The On-Screen Information Display

This menu bar display can bring up to access certain features while discs are playing. Icons and words represent the different features supported by your DVD player. By selecting different icons and words, you can access features including REPEAT, AUDIO, SUBTITLES, CAMERA ANGLE and LANGUAGES, etc.

Time Search

The Time Search feature lets you go to a point on a disc by entering the elapsed time in the on-screen time display. For example, if your favorite scene in a movie is one hour and twelve minutes after the beginning of the movie, you can enter 01:12:00 into the time display and go right to that point in the movie.

Ratings Limits

 
Your DVD player allows you to set ratings limits and passwords. For example, you can set the DVD player so that any movie with a PG-13 rating or above requires a password to be entered. There are many levels of ratings to choose from.

Since not all discs contain ratings, you can also decide if you want to allow free access or require a password to view unrated discs.

Screen Saver

When the power is on and no video signal is output, several minutes later, your DVD will change to “Screen Saver” mode automatically. For example, when playing a CD music disc (no video output), the screen will change to “Screen Saver”, you will see a moving ball on the screen. You may exit “Screen Saver” mode by pressing any of the remote buttons.


LOCATION OF CONTROLS

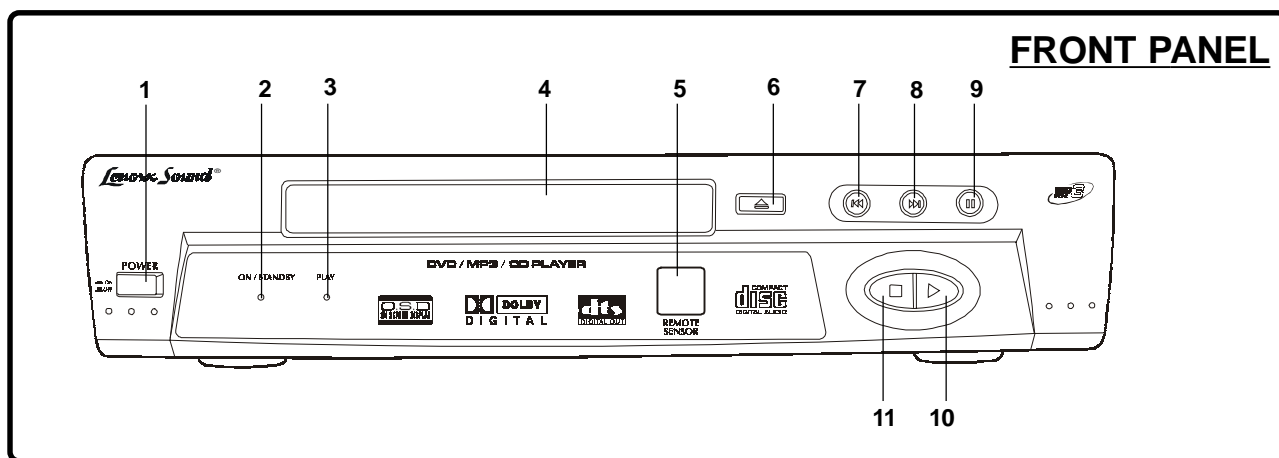

- 1. POWER button** - Press to switch the set on or off.
- 2. STANDBY indicator** - This lamp has 2 colors: red and green (green is STANDBY, red is ON). When the player is off (standby), press the POWER button on the REMOTE, the indicator lights up in RED which turns the set on.
- 3. PLAY indicator** - During play, this indicator lights up, also when you press any button on the REMOTE, this lamp flashes rapidly to show you the remote's signal was received.
- 4. DISC TRAY** - Load the disc here.
CAUTION: Do not put anything but a disc on the tray.
- 5. REMOTE CONTROL SIGNAL sensor** - Receives the signal from the REMOTE CONTROL.
- 6. OPEN/CLOSE button** - Opens and closes the DISC TRAY.
- 7. PREVIOUS SKIP button** - Skips to previous chapter (backwards).
- 8. NEXT SKIP button** - Skips to next chapter (forwards).
- 9. PAUSE button** - Press to pause the picture.
- 10. PLAY button** - Press to start playing the disc.
- 11. STOP button** - Stops playing the disc.


LOCATION OF CONTROLS

 REMOTE CONTROL

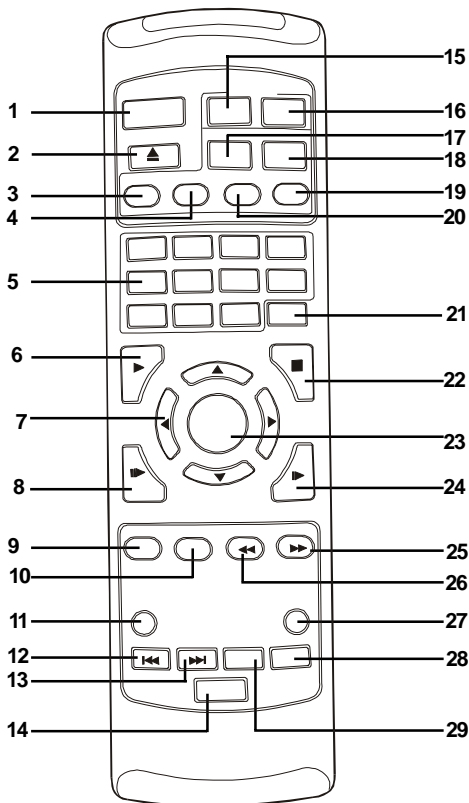

1. **POWER** button - Switches the player from STANDBY to ON or ON to STANDBY.
2. **EJECT** button - Opens and closes the DISC TRAY.
3. **SUBTITLE** button - Press to display the subtitle menu (if available on your disc).
4. **ZOOM** button - Press to enlarge the picture.
5. **NUMERIC** buttons - Used in DVD menus & audio CD track selection.
6. **PLAY** button - Press to start play.
7. **DIRECTION** buttons (**LEFT, RIGHT, UP & DOWN**)- Used in DVD menus, audio CD track selection.
8. **PAUSE/STEP** button - Pauses the picture or music.
9. **VOLUME DOWN** button - Press to lower the volume level a little.
10. **VOLUME UP** button - Press to raise the volume level a little.
11. **TITLE** button - Displays the title menu if present on the disc.
12. **BACK SKIP** button - Skips to previous chapter.
13. **NEXT SKIP** button - Skips to next chapter.
14. **SETUP** button - Press to display the DVD player's setup menu (in STOP mode only).
15. **A-B REPEAT** button - Use to mark a segment to repeat between A and B.
16. **REPEAT 1/ALL** button - Allows you to repeat a title, a chapter, a song or all songs on the disc.
17. **DISPLAY/EXIT** button - Press once to display all the disc information; press again to exit display.
18. **MUTE** button - Instantly turns off the sound, press again to restore sound.
19. **ANGLE** button - Uses to access various camera angles on a DVD.
20. **AUDIO** button - Displays and changes the audio menu and language of a DVD if present on the disc; or selects stereo, left or right audio channel of a music disc.
21. **CLEAR** button - Use this to erase any wrong number you input.
22. **STOP** button - Stops play.
23. **SELECT** button - Used to confirm your selection.
24. **SLOW** button - Makes the picture advance in slow motion.
25. **FORWARD** button (**FAST FORWARD**) - Searches forward through a disc.
26. **REWIND** button (**FAST BACKWARD**) - Searches backward through a disc.
27. **MENU** button - Press to display the disc's menu (if your disc has a menu).
28. **SEARCH** button - Allows you to select the desired disc starting time, track or title.
29. **PROGRAM** button - Allows you to play the disc in a programmed order. This is especially useful on Audio discs.

 
BACK PANEL

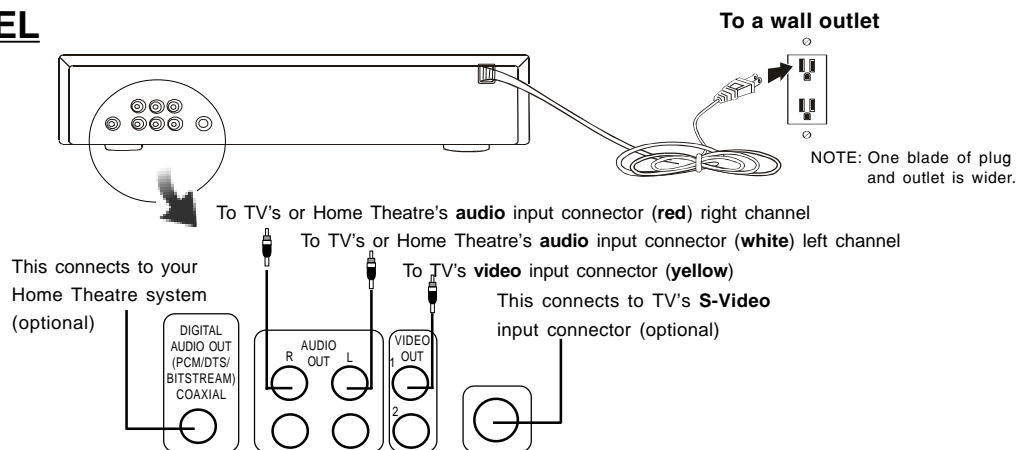

REMOTE CONTROL PREPARATION

Battery Installation

 Remove the BATTERY COMPARTMENT DOOR of the REMOTE CONTROL and insert 2 size "AAA" alkaline batteries (included) according to the + and - markings inside the BATTERY COMPARTMENT of the REMOTE CONTROL unit.

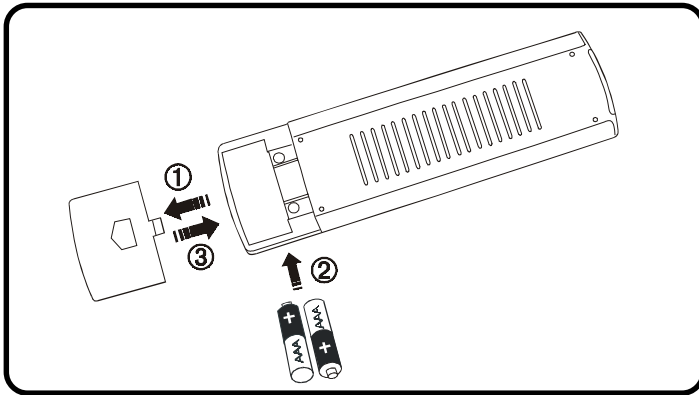


Tips on Battery Use

- Reversing polarities will damage the batteries and possibly your REMOTE. Be sure to follow polarity (+ and -) as indicated.
- Do not mix different types together (Alkaline, Carbon-Zinc, Nickel-Cadmium etc.), or old batteries with new ones.
- When not in use for an extended period of time (over 60 days) remove the batteries to prevent possible acid leakage or corrosion resulting in damage to your remote.
- When the batteries have become discharged, they must be disposed of in a safe manner that complies with all applicable laws.
- Installation of batteries should only be done by an adult (for safety).

Remote Control Operation Range

 Point the REMOTE CONTROL unit from less than 20 feet from the remote control sensor and within about 60° of the front of the DVD player (not your TV set).

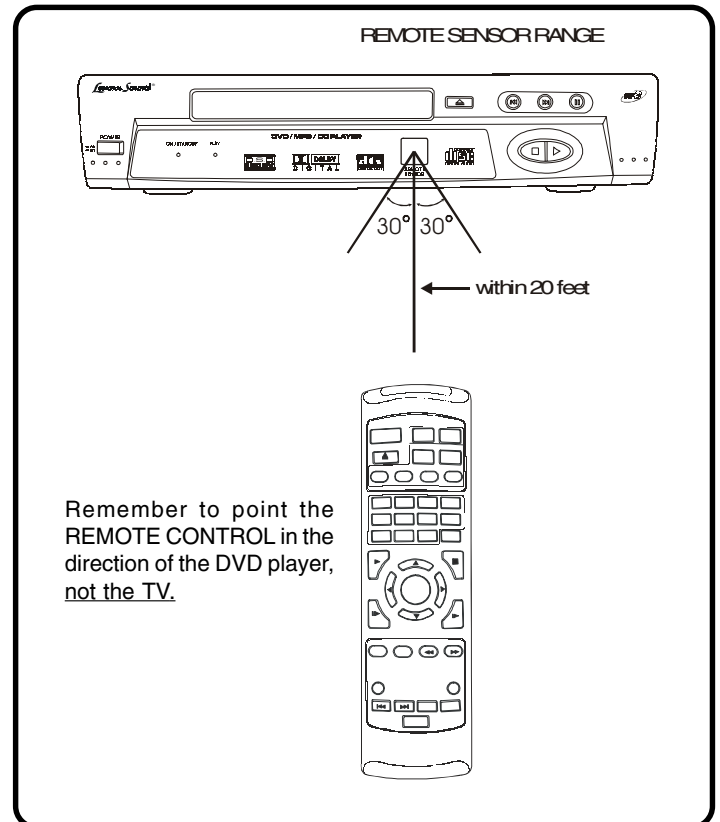

Point the REMOTE CONTROL in the Right Direction






When you want the remote to operate the DVD player, point the remote at the DVD player, not the TV. The Remote has to be pointed in the correct direction and toward the correct component (DVD player) in order for the remote control's signal to communicate with the remote sensor on the DVD player. Make sure there is a clear path between the remote control and the DVD player so the signal is not blocked.

Tips on REMOTE CONTROL operation

- The operating distance may vary according to the brightness of the room.
- Do not point bright lights at the remote control sensor.
- Do not place objects between the remote control unit and the remote control sensor.
- Do not use this remote control unit while simultaneously operating the remote control unit of any other equipment.

NOTES ON DISCS

The following types of discs can be played by this unit:

DISC TYPE & LOGO MARK	RECORDED CONTENT	DISC SIZE	MAX. PLAYING TIME	
DVD Video (NTSC only - for USA)		Video	5 inches (12cm)	Approx. 4 hours (single sided disc) Approx. 8 hours (double sided disc)
			3 inches (8cm)	Approx. 80 minutes (single sided disc) Approx. 160 minutes (double sided disc)
Music CD		Audio	5 inches (12cm)	74 minutes
			3 inches (8cm)	20 minutes
CD-R disc		Audio	5 inches (12cm)	85 minutes
			3 inches (8cm)	VARIES
CD-RW disc		Audio	5 inches (12cm)	85 minutes
			3 inches (8cm)	VARIES
MP3 disc		Audio	5 inches (12cm)	Approx. 12 hours
			3 inches (8cm)	Approx. 3 hours

NOTE: “⊘” may appear on the TV screen during operation. A “⊘” means that the operation is not permitted by the DVD video player of the disc in that mode or at that time. This DVD player can not play the following discs: CD-Is, CD-ROMs (including PHOTO CDs or computer software discs), Data part of CD-Extras, DVD-ROMs, DVD Audio discs, HD layer on SACDs or discs recorded in another format such as PAL, SECAM, and regions other than REGION 1.

DVD Video Disc

 
These are the typical marks on some DVD disc packages:




Multiple Languages



Multi-language subtitles



 Multi-Angle viewing available for some scenes



Multi-Aspect (wide screen or normal)

 


Region number, only region number “1” (USA) DVD discs can be used on this unit and only NTSC (USA standard) DVD discs can play on this set.


Structure of Disc Contents

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. Audio CDs are divided into tracks.

DVD video discs

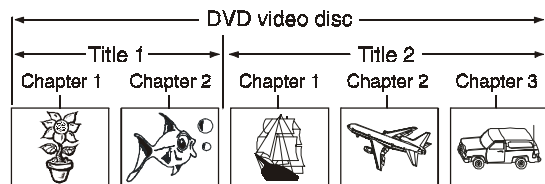

Audio CD

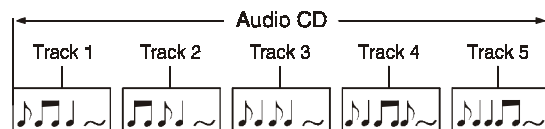 

Each title, chapter or track is assigned a number, which is called “title number”, “chapter number” or “track number” respectively. There may be discs that do not have these numbers.

PRECAUTIONS

On Safety

- As the laser beam used in the DVD player may be harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only (it is perfectly safe if you don't open the cabinet).
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

On Placement of Your DVD Player

- Do not leave the player in a location near a heat source, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 1 inch of the sides or back of the cabinet. The ventilation holes must not be covered for the player to operate properly and prolong the life of its components.
- If the player or discs will be left in a car parked in the sun, put the player in the trunk or where the player will not be subjected to the direct rays and heat of the sun.

Cleaning the Cabinet

 
Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.

On Operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside. Should this occur, the player may not operate properly. In this case, remove the disc and wait about an hour for the moisture to evaporate. If the player has not been used for a long time, turn the POWER button to ON to warm it up for a few minutes before inserting a disc.
- This DVD player is designed to be played on a stable no vibration position. If you bump the set during DVD play, the picture or music may stop or skip for several seconds. This is normal for this type of player.

On Handling DISCs

- Do not touch the playback side of the disc.

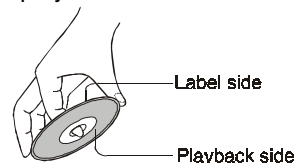


- Do not attach paper or tape to disc.

NOTE: If the playback side gets scratched, it may not play any more.

On Cleaning DISCs

 - Before playing, clean the DISC with a cleaning cloth. Wipe the DISC in a straight motion from the center out.



- If you can not wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Never touch or scratch the playing side (silver or gold side) of a disc, you may permanently damage it.

On Storing DISCs

- Do not store the DISCs in a place subject to direct sunlight or near heat sources.
- Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping or scratching of the disc, and permanently damage the disc.

INITIAL SETTING

How to Find Your TV's Video Input Channel

You need to tune your TV to the Video Input Channel to see the DVD Player's menu and to see the movie on a disc. The video channel on TVs varies for different brands and different models. In order for your DVD remote to work, your TV must be set on the correct video input channel.

Below are some things to try:

- Depending on your TV brand, press the TV button on the remote that came with your TV (not the DVD remote). Then press the INPUT button or SELECT button or VIDEO button on the remote.
- Consult your TV's owner's Manual.

If the above options don't work, try one of the following options:

- Press a button on the TV's remote (see this chart).
- Select it from the TV's menu system.
- Tune directly to the DVD input channel by pressing a specific number (see this chart).
- Go through all the channels in the channel list by pressing the channel up/down buttons on the TV.

Button/Switch on the TV	Button on the TV Remote	Possible Channel#
VIDEO	VID 1	00
SIGNAL	LINE	90
VID 1	VID	91
VID 2	VIDEO	92
S-VID	S-VID	93
S-VIDEO	INPUT	VID 1
	S-VIDEO	VID 2
	SOURCE	
	AUX	
	VIDEO 2	VIDEO 2

Some common scenarios are listed in the table to the right.

Once you locate the correct video channel, write it down for future reference.

NOTE: Most people will not adjust the following functions and will go directly to Page 18 for basic play.

How to Move Around the DVD Player's Menu System

 
This booklet tells you how to select different menu items, but you can explore the menu system on your own by following a few rules.

Press the DIRECTION buttons (▲, ▼, ◀, ▶) on the remote to highlight different menu items on the screen.

To select a menu item, press SELECT on the remote when the menu item is highlighted.

If the invalid symbol "⊗" appears on the screen when you press a button, this means that function cannot be done at this time.

NOTE: The SELECT button confirms your selection and acts like an "enter" button on a computer, remember to press this after your selection.

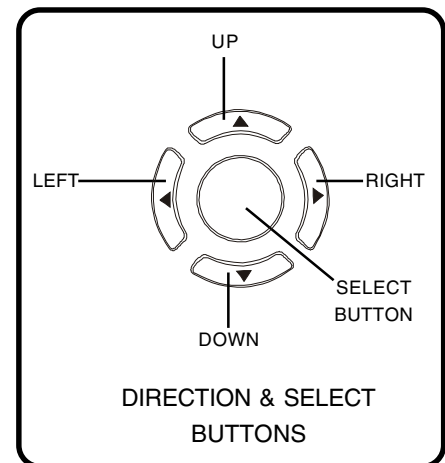


INITIAL SETTING

NOTE: Most people will not adjust the following functions and will go directly to Page 18 for basic play.

Once the initial programming is entered, it is retained in memory until changed. The player will always be operated under the same conditions even if the set is shut off.

Common procedure for initial settings is as follows:

 - 1 Press SETUP button in the stop mode, a menu like below will appear on your TV.

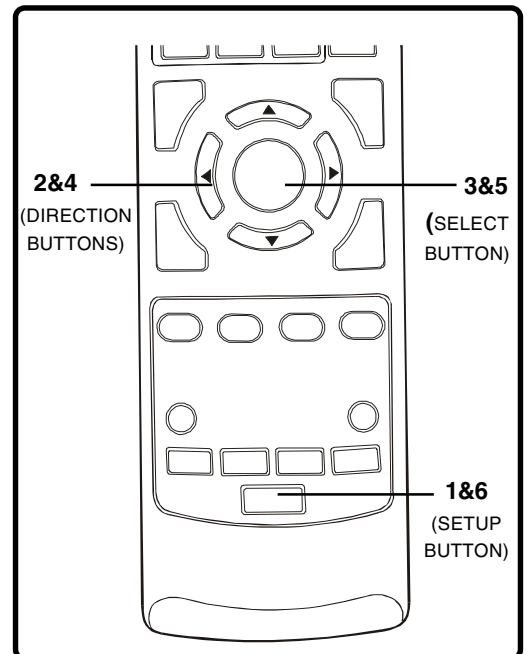


- 2 Move the DIRECTION buttons (◀ & ▶) to select the preferred item.

- 3 Press SELECT button, and a sub-screen will open. Each screen for setting the value is displayed (SELECT button is similar to an ENTER button on a computer).

- 4 Move the DIRECTION buttons (▲, ▼, ◀ & ▶) to select what you want to change.

- 5 Press SELECT button to confirm (this is like the "ENTER" button on a computer).

 - 6 Press SETUP button to close the initial menu and return to STOP mode.

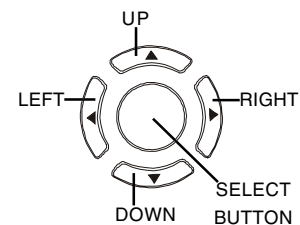


Setting LANGUAGE (OSD MENU, SUBTITLE, AUDIO AND DVD MENU)

- 1 After entering the initial setting, move the DIRECTION buttons (▲, ▼, ◀ & ▶) to select the "Language".

NOTE: OSD stands for " ON SCREEN DISPLAY ".

- 2 Press the SELECT button to open language menu.

 - 3 Move the DIRECTION buttons (▲, ▼, ◀ & ▶) again to select "OSD MENU", then press SELECT button to open submenu of OSD.

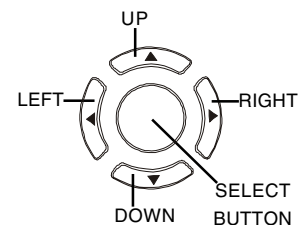


- 4 Select the language you want for your OSD using the UP & DOWN buttons (▲, ▼), press SELECT button to confirm.

- 5 Follow the above 3-4 steps to set the languages for subtitle, audio and DVD Menu.

- 6 To exit the language setting menu, press the UP button to return back to the initial setting menu, or press SETUP button to close initial setting directly.

 NOTE: The factory settings for LANGUAGE is English.

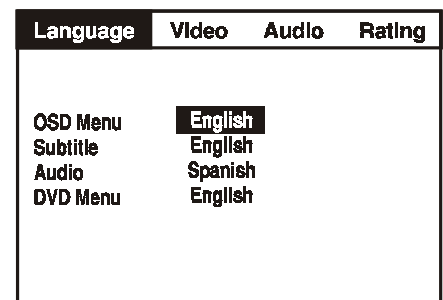


INITIAL SETTING

NOTE: Most people will not adjust the following functions and will go directly to Page 18 for basic play.

Select TV screen type

 
- 1 After entering the initial setting, press the DIRECTION buttons (▲, ▼, ◀ & ▶) to select "Video" item.
- 2 Press the SELECT button to open the Video menu.
- 3 Press the DIRECTION buttons (▲, ▼, ◀ & ▶) again to select "TV Shape", then press SELECT button to open submenu of TV Shape.

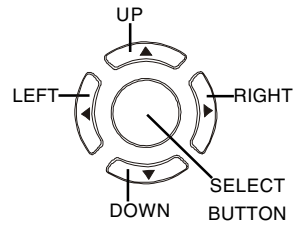


Language	Video	Audio	Rating
TV Shape Video	4:3 PS Ntsc	4:3 PS 4:3 LB 16:9	



 4X3 Letterbox

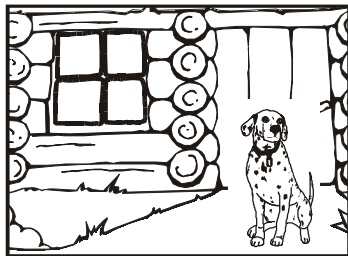

4X3 Standard

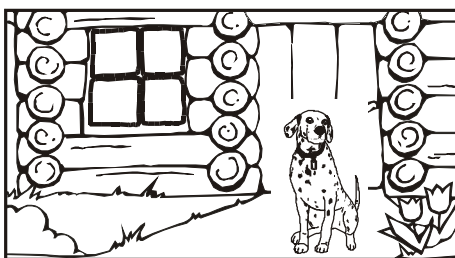 

16X9 Widescreen

4 X 3 Letterbox (4:3 LB) - Choose this setting if you want to see movies in their original aspect ratio (width-to-height ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.

4 X 3 Standard (4:3 PS) - Choose this setting if you want to see movies to fill the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen. Most discs produced in a widescreen format can't be cropped in this fashion. This means the black bars will appear at the top and the bottom of the screen.

16 X 9 Widescreen (16:9) - Choose this setting if your DVD Player is connected to a widescreen TV. If you choose this setting and you don't have a widescreen TV, the images on the screen may appear distorted due to vertical compression (faces may seem long and thin). If you play a disc recorded in 4 X 3 format on a widescreen TV, the left and right side of the screen will appear black. Press STOP button and SETUP button to change to 4:3 ratio or match the type of TV you have.

 
- 4 Select the TV shape you want using the UP & DOWN buttons (▲, ▼), press SELECT button to confirm.

NOTE: The factory settings for TV shape is " 4:3 PS "

- 5 Note VIDEO is preset to NTSC USA normal standard at the factory.
- 6 To exit the Video setting menu, press the UP button to return back to the initial setting menu, or press the SETUP button to close the menu and exit the initial setting directly.

INITIAL SETTING

NOTE: Most people will not adjust the following functions and will go directly to Page 18 for basic play.

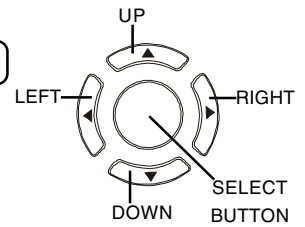

Setting soundtrack output

NOTE: You will not need to change any of these settings for normal play and all the settings are preset except that the “Digital Out” for AC3 is selectable.

- After entering the initial setting, move the DIRECTION buttons (▲, ▼, ◀ & ▶) to select “Audio” item.
- Press the SELECT button to open the Audio menu.
- Move the RIGHT button (▶) to select the “Digital Out”, press SELECT several times to choose from the following:
 - Dolby Digital (for Dolby Digital 5.1 channel audio signal)**
 - Off (no AC3 digital output)**
 - Pcm (only for 2 channel audio signal)**
- To exit the soundtrack setting menu, press the UP button to return back to the initial setting menu, or press SETUP button to close the menu and exit the initial setting directly.

Language	Video	Audio	Rating
AC3	Analog Out	Digital Out	
DTS	2 Channel	Off	Dolby Digital
MP3	2 Channel	2 Channel	Ready
CD/VCD	2 Channel	2 Channel	Pcm
			Pcm

Setting parental controls rating level

- After entering the initial setting, move the DIRECTION buttons (▲, ▼, ◀ & ▶) to select “Rating” item.
- Press the SELECT button to open Rating menu.
- Press the DOWN button (▼) to activate rating selection, press SELECT several times to choose from the following (some of these ratings are USA type, some of these are foreign type):

1. Kid Saft (suitable for all ages)	5. PG-R (restricted to over 13 years old)
2. G (general audience)	6. R (restricted to 18 or over)
3. PG (parental guidance)	7. NC-17 (restricted to over 17)
4. PG 13 (recommended for over 13 years old)	8. Adult (adult can view any DVD)
- Press UP button (▲) again to set “Password”. 4 digit password blanks will show with lock open “🔓”.
- Enter your 4 digit password to lock the set, the screen will show “****” stars in place of the 4-digit password, press SELECT button, the open lock icon “🔓” will change to closed lock “🔒”.
- To exit the rating level setting menu, press the UP button to return back to the initial setting menu, or press SETUP button to close the menu and exit the initial setting directly.

Language	Video	Audio	Rating
Password	----	🔓	
Rating	6. R		

 
NOTE: When playing a movie with a higher rating, you will be asked to input the code. Input the code you selected and press SELECT. If you forget your code, please refer to TROUBLE SHOOTING on page 27.

1. BASIC PLAY


To Load and Play a Disc

NOTE: We call any DVD or AUDIO CD as “disc” in this booklet.

Turn on the TV and DVD player (press ON/OFF on the player or press the POWER button on the remote control in STANDBY mode).

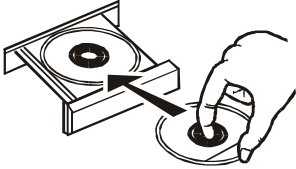


This is an example of a one-sided disc.

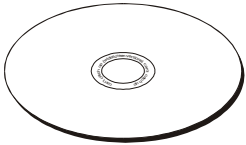 


This is an example of a 2-sided disc. The title is in the center.

- 1 Press the OPEN/CLOSE button on the front of the DVD player or the EJECT button on the REMOTE, wait a few seconds, the disc tray will open.
- 2 Place a disc gently into the tray with the disc's label facing up (double-sided discs have content on both sides, so you can place either side up).
- 3 Press the OPEN/CLOSE or PLAY button, the disc tray will close.

The DVD player reads the disc's table of contents (this may take a few seconds) with a loading icon “” on the left upper corner of the screen, and then one of the three things happens depending on how the disc was programmed:

 - The disc starts playing.
- The disc menu appears on the screen. One of the options will be “Start Disc Play”. Highlight that option and press the SELECT button or PLAY button.
- The DVD Player's main menu appears on the screen. Highlight the Play option and press SELECT button.

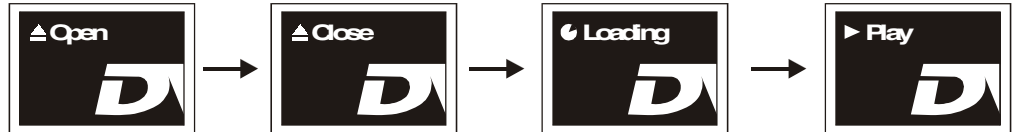

- 4 Press VOLUME UP or DOWN button to adjust the volume level on your TV's REMOTE and DVD's REMOTE.
- 5 Press STOP button to stop play.

NOTE: When player is stopped, the display will show “Pre Stop”, the player records the point where STOP was pressed (RESUME function). Press PLAY again, playback will resume from this point. When the tray is opened or STOP is pressed again, the return function will be cleared and the set is fully stopped.

- 6 After play, press OPEN/CLOSE or EJECT button to open the tray and take the disc out of the disc tray.

1. BASIC PLAY

 
Continued

Using a Disc Menu


A DVD movie disc is capable of having an on-screen menu that is separate from the DVD player's menu and on-screen display. The disc menu might only contain a list of the titles and chapters, or it may allow you to change features such as language and playback settings.

Although the content and operation of disc menus varies from disc to disc, the following example will give you an idea of what to expect (most people will just put a disc in the door and press PLAY).


TIP: Many discs skip the disc menu and start playing automatically. To access the disc menu when you're playing a disc, press MENU on the remote.

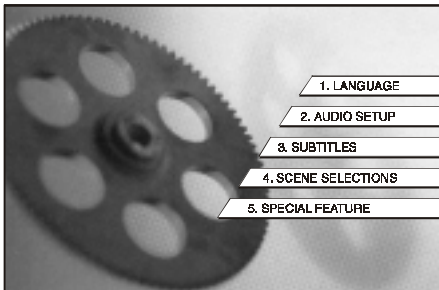

 An example of a disc menu. The menus on discs vary because the disc menu is created by the disc's author and director.

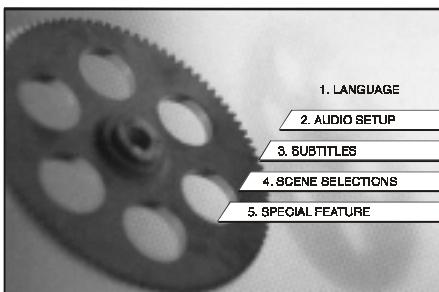

 In this example, the **LANGUAGE** setting is highlighted. To see the language options, press SELECT on the remote.

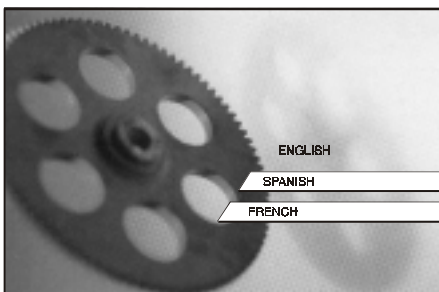

In this example, **ENGLISH** setting is highlighted. Press SELECT on the remote to play the disc in English.

- 1 While the disc is playing, press MENU, the disc menu appears, but varies from disc to disc, the following example will give you an idea of what to expect.

NOTE: Every DVD is slightly different, these are just examples.

- 2 Press the UP and DOWN buttons to highlight the section of the disc menu you want to choose, and press SELECT. In the example on the left, *Language* has been selected.

- 3 Press the UP and DOWN buttons (▲ & ▼) to select a language, and press SELECT.

- 4 Press MENU to resume playback.

 
NOTE: Any settings you change on the disc menu only override the settings in the DVD Player's menu temporarily (only for this current movie). Default settings for your DVD player are the settings that you set up in the DVD player's menu system.

2. USING THE SEARCH & SKIP FUNCTIONS


During play, you can search quickly through a chapter or track or use the skip function to jump to the next selection.

Skipping through a Chapter or a track

During play, press the FORWARD button **▶▶** on the REMOTE CONTROL, continuously press it to search forward at a faster speed X2, X4, X8 or X20, press PLAY button to resume normal play.

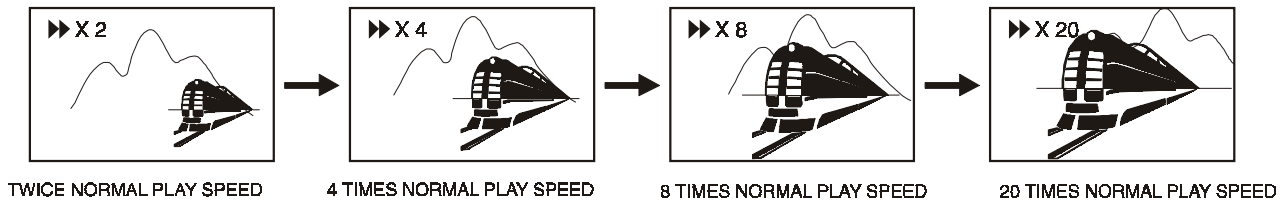


 During play, press the REWIND button **◀◀** on the REMOTE CONTROL, continuously press it to search backward at a faster speed X2, X4, X8 or X20, press PLAY button to resume normal play.

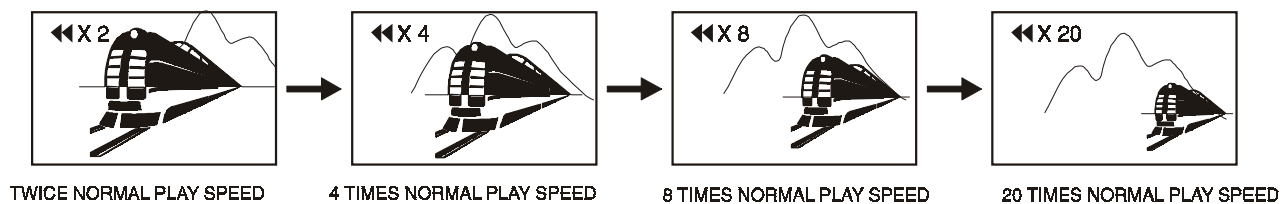


Skipping tracks

 During DVD play, press the NEXT button **▶▶** on the player or the REMOTE CONTROL, it moves to the next chapter; press the BACK **◀◀** button on the REMOTE CONTROL or PREVIOUS **◀◀** button on the player, it moves to the beginning of the chapter, press once more, it moves to the beginning of the previous track.

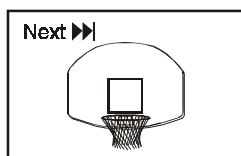


SKIP TO THE NEXT CHAPTER

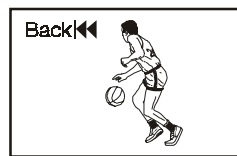 

SKIP TO THE BEGINNING OF THE CURRENT CHAPTER OR THE PREVIOUS CHAPTER

3. PAUSE OR STEP PLAY

During DVD play, press the PAUSE/STEP **||▶** button, play will be paused, if you continue to press the PAUSE/STEP **||▶** button, the player will play one single frame picture at a time. To resume normal play, press PLAY button.

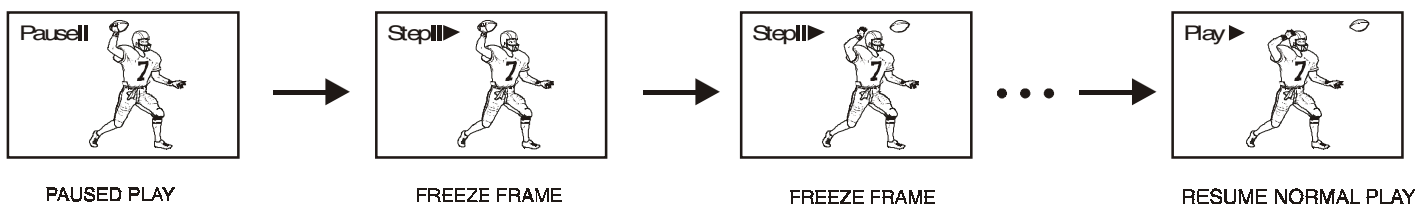 


4. REPEAT PLAY

Allows you to repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.


Repeating a title, chapter or track

 Each time you press the REPEAT 1/ALL button, the repeat mode changes as follows:

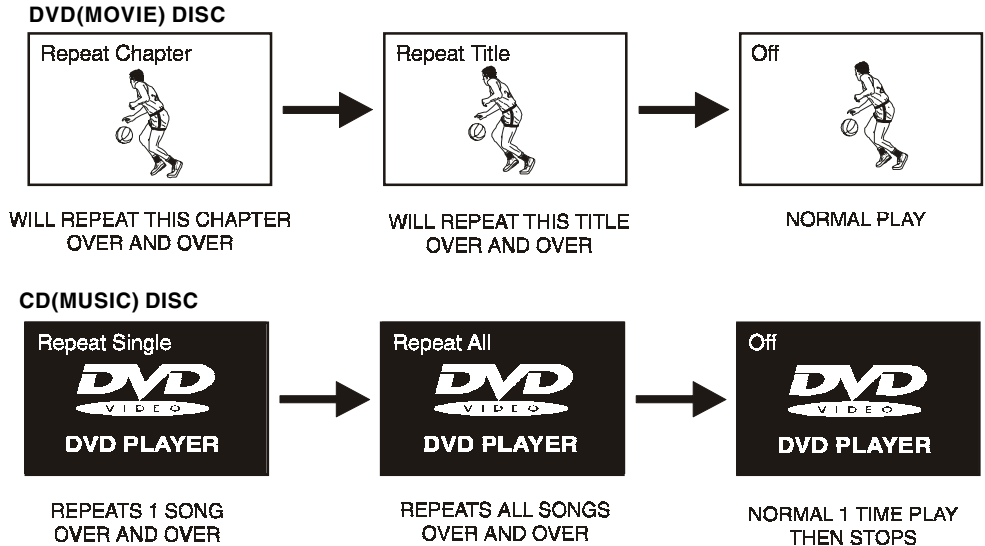


A-B repeat play (NOTE: DO THIS OPERATION SLOWLY)

 - 1 Press A-B REPEAT button during play at the beginning of the segment (point A) you want to play repeatedly.
- 2 Press A-B REPEAT button again at the end of the segment (point B).
The DVD video player will automatically return to point A and starts repeat playback of the selected segments A to B over and over till you press A-B REPEAT button again.

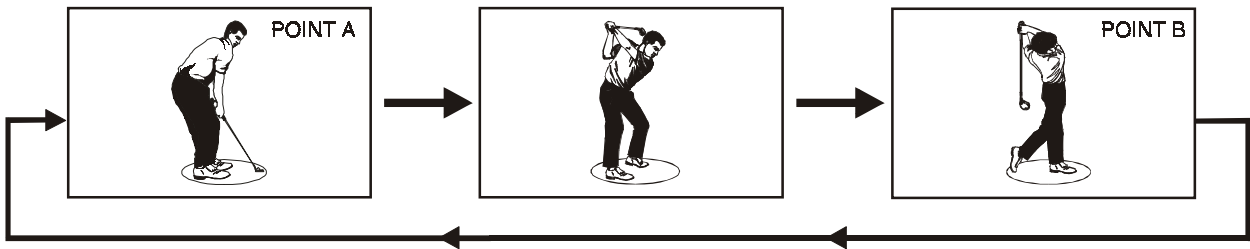

THIS SCENE WILL REPEAT OVER AND OVER TILL YOU PRESS A-B REPEAT BUTTON AGAIN AND "Rep A_B" DOES NOT SHOW. THIS LENGTH OF REPEAT PLAY DEPENDS ON YOU, YOU CAN HAVE SHORTER OR LONGER PLAY.

 - 3 Press A-B repeat button again to return to normal play.

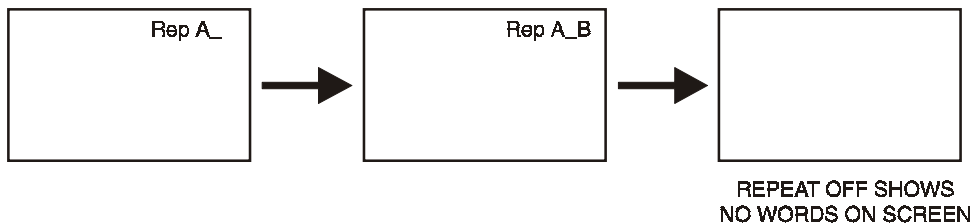

5. PROGRAMMED PLAY

You can make a program of up to 16 tracks in the order you want them to be played. This feature is normally used on CDs.

- 1 Press PROGRAM button in the **stop** mode, and the screen will display the program menu.

CD(MUSIC) DISC

Program Input			
1	5	9	13
2	6	10	14
3	7	11	15
4	8	12	16
Play Program		Clear All	

- 2 Press the numeric button and the DIRECTION buttons (▲, ▼, ◀&▶) to choose the preferred title/chapter or track.

 
- 3 After programming, use the DIRECTION buttons (▲, ▼, ◀&▶) to select "PLAY PROGRAM", then press the SELECT button, the player will start to play the disc in the programmed order you selected. The program menu will disappear from the screen.

- 4 To skip to the next (programmed) scene or track, press the NEXT button.

- 5 To clear programmed play press STOP button, then the PROGRAM button to enter into program menu, the menu will show all numbers, use the DIRECTION buttons to select "CLEAR ALL", then press SELECT button to clear.

- 6 Press the PROGRAM button again to exit the programmed play.

- 7 The screen returns to the normal DVD screen as shown right.

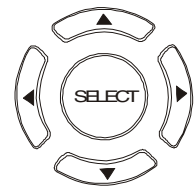

DIRECTION buttons



6. SEARCH FOR PREFERRED PLAY

To select scene with title number when playing DVD disc.

NOTE: Press PLAY button to start playback after each operation.

- 1 Press SEARCH button during play or in stop mode, the screen will show as right:

 
- 2 Move the DIRECTION buttons (▲, ▼, ◀&▶) and press the number buttons on the REMOTE to select the time, or the chapter, or the title, or the track, then press the SELECT button to confirm.

NOTE: In case you press a wrong number, press CLEAR button.


- 3 The player will jump to play the section you selected.

- 4 To turn off the menu display, press the SEARCH button again.

DVD(MOVIE) DISC

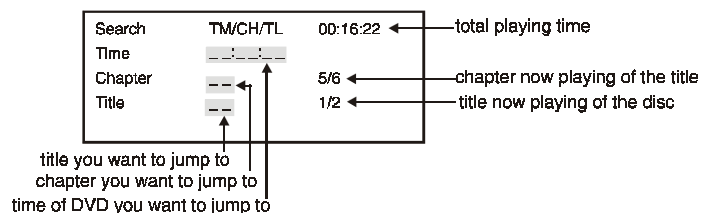


CD(MUSIC) DISC

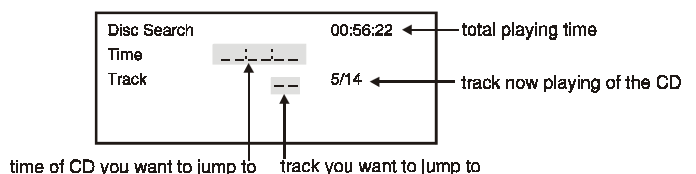 



7. ZOOM PLAY (DVD ONLY)

This DVD video player allows you to zoom into a picture as well as shift the zoom point.

 - 1 During play, press the ZOOM button, the picture will show as follows:

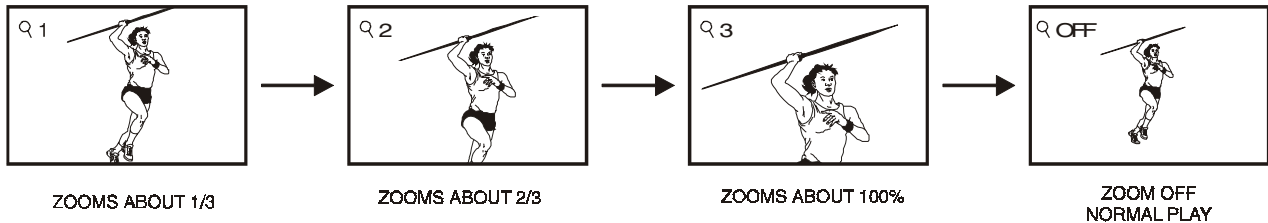

  - 2 Press the DIRECTION buttons (▲, ▼, ◀ & ▶) to move the enlarged picture a little to right or left, up or down.

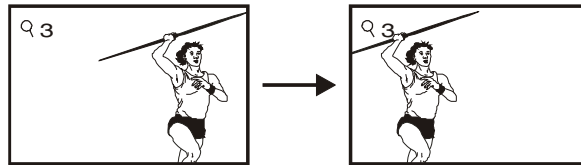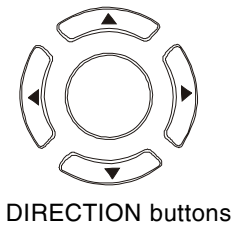


- 3 To return to normal play, press ZOOM till icon shows "Q OFF".

8. SLOW-MOTION PLAY (DVD ONLY)


A disc can also be played back in slow-motion

  - 1 Press SLOW button ► during play, the playback speed will become 1/2, 1/4, 1/6 or 1/7 of normal speed every time you press the SLOW button.

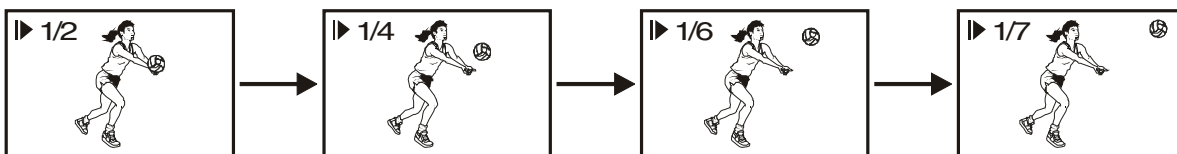


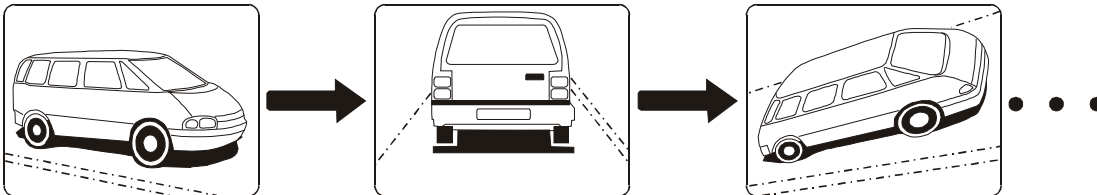 
- 2 Press PLAY button to resume normal play.

NOTE: 1. During the slow-motion playback, the sound is muted (no sound).
2. Only DVD discs have this feature.

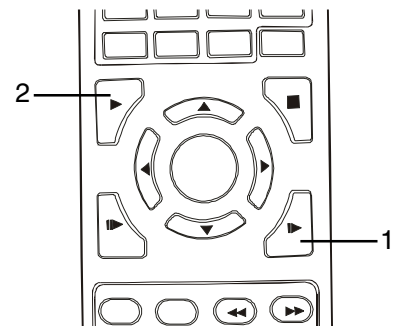

9. VIEWING FROM A DESIRED ANGLE (DVD ONLY)

Some DVD video discs may contain scenes which have been shot simultaneously from a number of different camera angles. The jacket or case of discs that are recorded with angles will be marked with this icon:  For these discs, the same scene can be viewed from any of these different angles using the ANGLE button. Press the ANGLE button during play, number of angles being playback will be displayed in the screen, press the button will change to different angles.



NOTE: 1. The recorded angles differ depending on the disc used.
2. Only DVD discs have this feature.

10. SELECTING AUDIO SOUNDTRACK LANGUAGE

 
You can select a desired language quickly and easily with the AUDIO button if present on the disc.

NOTE: This operation works only with disc on which multiple audio languages are recorded. Also some DVD have the director's narration on them.

- 1 Press the AUDIO button during DVD disc play, the screen will display the number of current soundtrack languages available.
- 2 Repeat pressing the button to change the language or back to the initial language.

NOTE: When no soundtrack languages are recorded, pressing this button will not change the language.

NOTE: When the power is turned on, or the disc is removed, the language heard is the one selected at the initial setting.

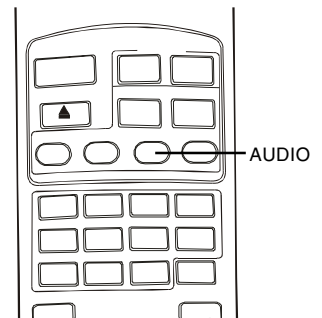

HELLO

Hola

¡Hola

- 3 To play another language, press the AUDIO button again.

NOTE: When you play a music disc, press the AUDIO button, the screen will display the current sound output mode, such as "Stereo", "Left" or "Right".

SCREEN DISPLAYS	SOUND OUTPUT
Stereo	LEFT SPEAKER-----LEFT CHANNEL RIGHT SPEAKER-----RIGHT CHANNEL
Left	LEFT SPEAKER-----LEFT CHANNEL RIGHT SPEAKER-----LEFT CHANNEL
Right	LEFT SPEAKER-----RIGHT CHANNEL RIGHT SPEAKER-----RIGHT CHANNEL

11. CHANGE SUBTITLE LANGUAGE

 
(DVD ONLY)

You can select a desired subtitle quickly and easily with the SUBTITLE button.


NOTE: This operation works only with DVD discs on which multiple subtitle languages are recorded.

Press the SUBTITLE button during play, the screen will display the current language and change language or off, such as ".... 1/3" (1/3 means 1 of 3 possible), ".... 2/3" (language 2 of 3), or ".... OFF".

NOTE: If no subtitles are recorded on your DVD, pressing this button will not change the subtitles.

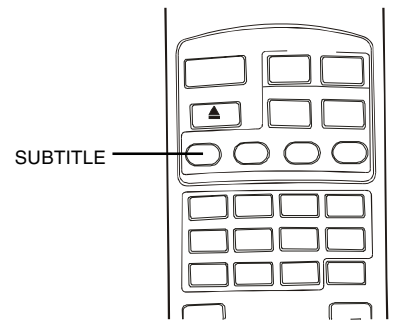

CHANGING SUBTITLE LANGUAGE

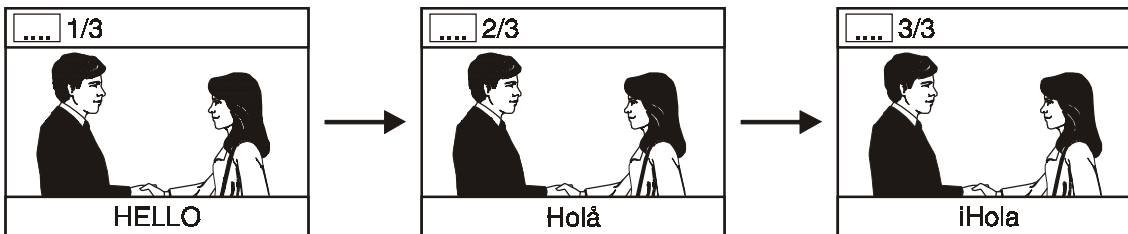 

To remove subtitles, press the SUBTITLE button again till ".... OFF" icon shows.

12. MP3 CD OPERATION

This player can play the CD-R or CD-RW discs that have been pre-recorded with music, or MP3 FILES.

Before playing back a MP3 CD, please read the following.

MP3 CD Information

Limitations on MP3 CD playback

- This player can recognize up to 225 files or folders per disc. A CD with 256 files or folders or more is not playable by this player.
- This player can recognize up to 8 directory trees per disc.
- MP3 CDs may not play in the recorded order.
- As for multi-session disc, only the first session can be played.
- If the CD has both audio tracks and MP3 files, only audio tracks will be played.

Limitations on Display

- The maximum number for display of artists names or song names is 33 letters. Available letters for display are the following: capital or small alphabets of A through Z, numbers of 0 through 9, and _ (underline).
- Other letters than those above are replaced with blanks.

Notes on MP3 files

 
- The recommended recording setting for a high-quality sound is 44.1 kHz of sampling frequency and 128kbps of fixing bit rate.
- To play back MP3 CD in the recorded order,
 1. please use the MP3 software with the function that can record data alphabetically or numerically.
 2. put the name including two-digit or three-digit number like "01", "02", or "001", "002" on each file.
 3. please refrain from making many sub-folders.

CAUTION


- Some MP3 CDs can not be played back depending on the recording conditions and how the MP3 was made, quality of the disc and recorder, ect.
- A CD-R/RW that has no music data or non-MP3 files can not be played back.

12. MP3 CD OPERATION

MP3 CD playback

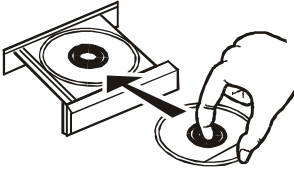

 - 1 Press the OPEN/CLOSE button on the front of the DVD player, the disc tray opens.
- 2 Place a MP3 CD gently into the tray with the disc's label facing up.
- 3 Press the OPEN/CLOSE or PLAY button, the disc tray closes.
The DVD player reads the MP3 CD's table of contents, and a table of contents appears on the screen.

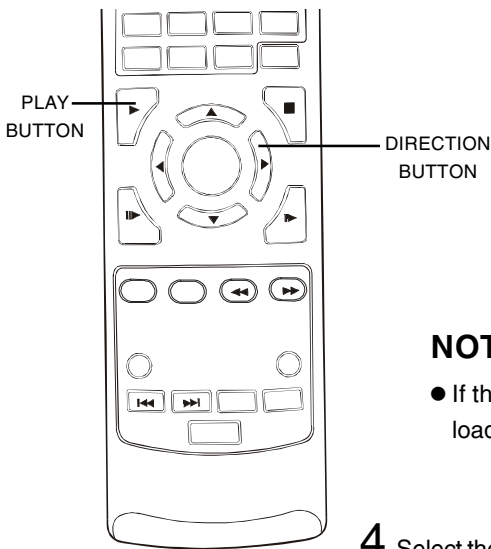

MP3 CD01	Track 1/117 00:00:00
1. M0101	8. M0108
2. M0102	9. M0109
3. M0103	10. M0110
4. M0104	11. M0111
5. M0105	12. M0112
6. M0106	13. M0113
7. M0107	14. M0114

NOTE:

- If the MP3 CD is loaded with the label side downward, or if a badly scratched MP3 CD is loaded, " NO DISC " appears. If this occurs, load the MP3 CD correctly or replace the MP3 CD.


- 4 Select the desired file by pressing the UP or DOWN button. The selected file is highlighted.
- 5 Press SELECT button to start playback.

MP3 CD01	Track 1/117	00:00:24	Playing time
1. M0101	8. M0108		
2. M0102	9. M0109		
3. M0103	10. M0110		
4. M0104	11. M0111		
5. M0105	12. M0112		
6. M0106	13. M0113		
7. M0107	14. M0114		

TROUBLE SHOOTING

	Symptom	Remedy
General	No power	Insert the AC power plug securely into the power outlet. Make sure your outlet has power.
	<ul style="list-style-type: none"> • Play fails to start even when PLAY is pressed. • Play starts but then stops immediately. 	<ol style="list-style-type: none"> 1. The disc may be damaged. 2. This player cannot play a DVD disc other than USA region 1 standard. 3. The disc may be dirty and may require cleaning. 4. Ensure that the disc is installed with the label side up. 5. If your disc is rented, it may be scratched or damaged from a previous renter. 6. Condensation may have formed on your disc. Wait about 1 to 2 hours to allow the player to dry out.
	No picture.	<ol style="list-style-type: none"> 1. Ensure that the equipment is connected properly. Double check all cables and AC power. 2. Select the proper video channel on your TV set VIDEO 1, 2, 3, etc. 3. Make sure both the TV and DVD player are on.
	<ul style="list-style-type: none"> • No sound. • Distorted sound. 	<ol style="list-style-type: none"> 1. Press AUDIO button several times. The disc may have been set to a blank on multiple language, please reset to main language or English. 2. Ensure that the equipment is connected properly. 3. Ensure that the input setting for the TV and stereo system are correct. 4. Adjust volume setting on both your TV's remote and the DVD's remote. 5. Ensure the MUTE button is <u>not</u> pressed on your TV remote or DVD remote (If yes, press the MUTE button again).
	Picture is distorted during rapid advance or rapid reverse.	The picture may be somewhat distorted at times: this is normal.
	No rapid advance or rapid reverse play.	Some discs may have sections which prohibit rapid advance (or rapid reverse).
	Faces are too long or no 4:3 (16:9) picture.	Choose the correct setup item which matches the TV set used, see Page 16.
	The REMOTE CONTROL unit does not work.	<ol style="list-style-type: none"> 1. Check if the batteries are installed with the correct polarities (+ and -). 2. The batteries are weak or dead, replace them with new ones (size "AAA"). 3. Point the remote control unit at a distance of less than 20 feet from the remote control sensor. 4. Remove the obstacles between the remote control unit and remote control sensor.
	No buttons operate (on the main unit and / or the REMOTE CONTROL unit).	Press the POWER button on the REMOTE to set the player to the standby mode and then press the POWER button again to turn the player to ON. Reset the DVD player by disconnecting the power plug and then re-connecting it (the player may not be operating properly due to lightning, static electricity, damaged or wrong discs, or some other external factors).
	The disc is stuck inside the player.	In case the disc is stuck inside the tray, please switch off your player first, wait for at least 2 minutes, then switch on again and press the disc tray OPEN/CLOSE button. Wait 10 seconds.
DVD	Play does not start even when title is selected.	Confirm the "Parental Ratings" setting. To return Parental Rating to Adult. See Page 17.
	Audio soundtrack and/or subtitle language is not at the initial settings.	If the audio soundtrack and / or subtitle language does not exist on the disc, the language selected at the initial setting will not be seen/heard. Try setting it up again, see Page 15.
	No subtitles.	Subtitles appear only on discs which contain them. If subtitles don't show, press the SUBTITLE button to display the subtitles.
	Alternative audio soundtrack (or subtitle) Language does not show.	An alternative language is not possible with discs which do not have more than one language. In the case of some discs, the alternative language cannot be selected by operating the AUDIO or SUBTITLE buttons. Try selecting it from the DVD menu if one is available.
	Angle cannot be changed.	This function is dependent on the DVD disc. Even if a disc has a number of angles recorded, these angles may be seen only on specific scenes.
	DVD password is locked (parental control on)	To disable parental control (in case you forget your code), enter 9999 for each movie you want to see. To remove parental controls, permanently go to setup, rating, enter password or 9999 and press the SELECT button, the lock will open, then use the DOWN button and press SELECT for the rating you want. Press SETUP to exit, you can always enter a new password later.

TROUBLE SHOOTING

Symptom	Remedy
The subtitle or language is not what you selected.	Go to page 15.
The  icon appears in the left top corner.	The feature or action you selected cannot be done at this time or with this disc.
Door cannot open from the set.	Wait a few seconds, this function takes a little longer, also try the EJECT button on the REMOTE control.
"No Disc" shows on left top corner.	The disc is upside down or a non-playable disc was inserted. Change the disc.
"Wrong Region Disc" shows on left top corner.	Press the EJECT button and replace a good <u>USA standard disc</u> into the player. This player only plays NTSC region 1 DVD discs made for USA use. This set will not play PAL or other foreign DVDs (due to legal reasons).
"Damaged Disc" shows on left top corner.	<ol style="list-style-type: none"> 1. Clean the disc. 2. See if the disc is defective by trying another disc (If disc is very badly scratched or dirty, it will not play). 3. check if the DVD disc is for Region 1.
No picture.	<ol style="list-style-type: none"> 1. Check if the TV or VIDEO is switched on. 2. Check if the proper AV input is selected on your TV set video inputs (some TV sets have 3 or 4 different inputs). 3. Check the Audio / Video cables.
Images appear distorted.	If faces seem stretched and too long, your TV shape may be adjusted to 16:9 ratio. Please adjust it to 4:3 for better results or match to your TV type, see page 16.
If your TV set does not have Audio / Video input jacks.	<ol style="list-style-type: none"> 1. Buy a newer TV with these jacks. 2. You may try using your VCR's jacks but the color may be distorted due to macrovision licensed DVD protection (against copying discs). 3. Talk to your dealer (or local TV repair shop) if they can sell you an RF adaptor which may be able to convert the signals for inputting into the TV's RF input (antenna) jacks. However, your results will never be as good as a new modern TV with proper input jacks.
Picture is frozen	If a button is pressed too fast over and over, the signals may jam the circuits inside. To restore to normal, press OPEN/CLOSE or EJECT or remove the AC power plug for 2 minutes and reinsert to reset the circuits.
Picture is distorted.	Do you connect your DVD player to your VCR? Please disconnect from VCR.
Screen saver appears on TV screen.	Turn off screen saver by press any button on the REMOTE control.
Menu is in foreign language.	Please reset the language to English by following Page 15.
Can not copy discs to VHS video tapes.	You can't copy most discs due to copy protection built into the disc.
Disc will not eject.	<ol style="list-style-type: none"> 1. When the disc is busy loading (or during play), the disc must stop spinning first, then the tray will open. Please be patient, it may take over 30 seconds. 2. If you put a disc into the tray UPSIDE DOWN, the DVD player will try to read the data but there will be no data to read. It may take as long as 40 seconds for the attempts to finish and the door to open.
Picture is too short.	Change the picture screen type, see page 16.
REMOTE will not work.	Reset the REMOTE by removing the batteries and pressing a button for 2 minutes, then replace the batteries.

DVD

SPECIFICATIONS

General Description

Power source: AC 120V, 60Hz 25Watts (approx. 3W when the set is in the standby mode).
Signal system: NTSC USA Standard TV system only. This set will not play PAL or SECAM DVD's.
Video output level: 1 Vp-p
Audio output level: 2 Vrms (1 kHz, 0dB)
Dimensions (Approx.): Width: 14"
Depth: 12¹/₄"
Height: 3"
Weight: 7.3LBs

Audio Signal Output Characteristics:

DVD (linear audio):

- (1) Frequency response:
20Hz-22kHz (48 kHz sampling)
20Hz-22kHz (96 kHz sampling)
- (2) S/N ratio: 100dB
- (3) Dynamic range: 90 dB
- (4) Wow and flutter: below measurable level

CD audio:

- (1) Frequency response: 20 Hz - 22 kHz
- (2) S/N ratio: 100dB
- (3) Dynamic range: 90 dB
- (4) Wow and flutter: below measurable level

Pickup: Wave length: 655nm
Laser power: Class 1

LENOXX reserves the right to make design and specification changes for product improvement.

PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL BE PLACED UNDER THE SET WHEN PLACING IT ON SURFACE WITH A NATURAL OR LACQUER FINISH.

For customer service

Visit Our Website: <http://www.lenoxx.com>

© 2001 LENOXX ELECTRONICS CORP.
2 GERMAK DRIVE
CARTERET, N.J. 07008
MADE & PRINTED IN CHINA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>