 


*Lenox Sound*<sup>®</sup>


# DESIGNER PHONE

MODEL: PH-600, BP-600 AND BP-601  
OPERATING INSTRUCTIONS

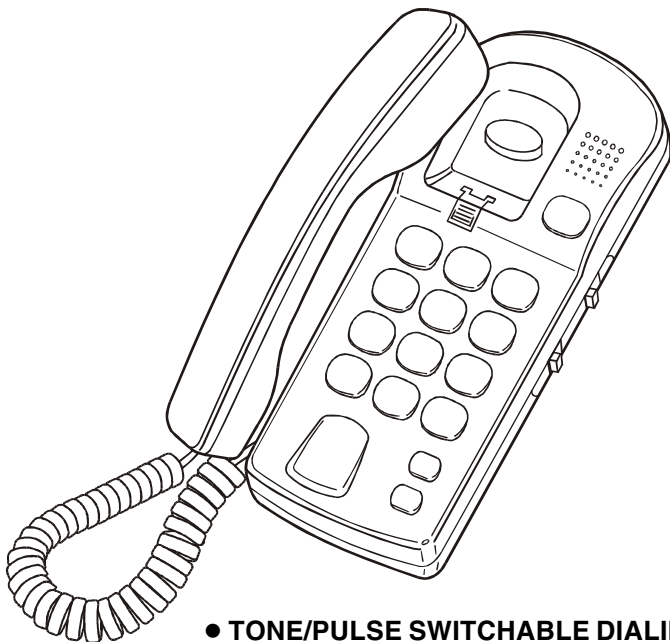

- TONE/PULSE SWITCHABLE DIALING
- RECEIVER VOLUME CONTROL
- MUTE BUTTON - FOR TEMPORARY HOLD
- FLASH BUTTON - FOR NEW DIAL TONE
- REDIAL BUTTON - FOR BUSY SIGNALS
- DESK OR WALL MOUNTABLE
- FULLY MODULAR JACKS
- MODERN CONTEMPORARY STYLING

NOTE: READ AND FOLLOW THESE INSTRUCTIONS BEFORE USING YOUR TELEPHONE

PH-600082799 MS V.2 

# IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury:

1. Read and follow all instructions and warnings.
2. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a slightly dampened cloth only.
3. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
4. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to itself.
5. Slots and openings in the cabinet at the back or bottom are provided for ventilation, to protect the phone from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator, heat register or a built-in installation such as a bookcase or cabinet unless proper ventilation is provided.
6. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind on the product.
7. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman, when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
8. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the cord or plug is damaged or frayed.
  - B. If liquid has been spilled into the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
  - E. If the product has been dropped or the cabinet has been damaged.
  - F. If the product exhibits a distinct change in performance.
9. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
10. Do not use the telephone to report a gas leak in the vicinity of the leak.
11. Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be abused by persons walking on it.
12. Never install telephone wiring during a lightning storm.
13. Never install telephone jacks in wet locations unless the jack is specially designed for wet locations.
14. Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
15. Be careful when installing or modifying telephone lines.

**SAVE THESE INSTRUCTIONS**

**HELP LINE 1-800-315-5885**

(MONDAY - FRIDAY 09:00 AM - 5:00 PM EST)

## IMPORTANT TELEPHONE COMPANY & FCC INFORMATION

**CAUTION : TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND PERSONAL INJURY, DO NOT OPEN CABINET.**

**WE SUGGEST THAT YOU REVIEW THE FOLLOWING INFORMATION PROVIDED BY THE FCC (FEDERAL COMMUNICATIONS COMMISSION).**

### **FCC REGISTRATION**

This telephone set is registered with the FCC based upon compliance with Part 68 of its rules. Connection of this telephone to the nationwide telecommunications network must be through a standard network jack (RJ11W or RJ11C) which you can order from your telephone company, if not already installed.

**NOTE :** FCC registration does not constitute an expressed or implied guarantee of performance. Only the Lenoxx warranty in this booklet covers the performance of this telephone set.

### **IMPORTANT FCC INFORMATION**

In the event that terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service providing that they:

1. promptly notify the customer.
2. give the customer an opportunity to correct the problem with their equipment.
3. inform the customer of the right to bring a complaint to the Federal Communications Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

The telephone company may make changes in its communications facilities, equipment, operations or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68. If such changes can be reasonably expected to render any customer terminal equipment incompatible, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

### **RINGER EQUIVALENCE NO. (REN):**

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

### **NOTE :**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, try the following:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for assistance.

### **GENERAL**

The FCC prohibits customer-provided terminal equipment to be connected to party lines or to be used in conjunction with coin telephone service.

This phone is hearing aid compatible.

Congratulations for purchasing a Lenoxx Sound telephone. Some of the features of the PH-600, BP-600 and BP-601 are:

**LAST NUMBER REDIAL** - Useful if line is busy.

**DESK OR WALL MOUNTABLE** - No special hardware needed.

**STONE/PULSE SWITCHABLE** - Select the desired dialing mode.

**ADJUSTABLE HANDSET VOLUME CONTROL** - Adjusts and raises volume of receiver.

**FLASH BUTTON** - For alternate pay service such as call waiting or getting a new dial tone quickly.

**FULLY MODULAR JACKS** - For easy plug-in installation.

 
**REVERSIBLE HANDSET HOLDER FOR WALL USE** - Holds Handset in up-right position, if your phone is wall mounted.

## YOUR SALES RECEIPT

You will need your sales receipt should you ever need warranty service. You should also save the packing material if you want to move or ship this phone.

# INSTALLATION INSTRUCTIONS

## INSTALLATION

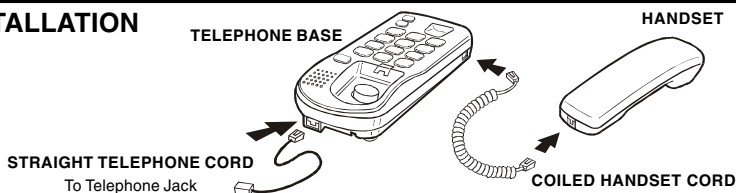

1. Insert the modular plugs of the Coiled Handset Cord into the jack of the Telephone Handset and into the jack on the **SIDE** of the Telephone Base (either end can be plugged in).
2. Insert the modular plugs of the Straight (not coiled) cord into the modular jack at the **TOP** of the Telephone Base and into the Telephone Jack. (either end can be plugged in).

**NOTE:** To insure your phone is properly connected, lift Handset and listen for dial tone.

## RINGER ON/OFF SWITCH

ON - Normal setting, rings on incoming calls.


OFF - The ringer does not sound, for undisturbed privacy.

**NOTE:** If your Ringer Switch is in OFF position, only **THIS** phone will not ring, other phones in your home on the same line will ring.

## STONE/PULSE SWITCH

STONE - The phone will operate using tone dialing.

PULSE - The phone will dial using rotary dial type pulse.

**NOTE:** Even when your phone is set to pulse service, this phone can dial tones for access to services that require tone sounds like computer systems or call directors. Just press the Tone Button  after dialing in pulse and your buttons can now be used for tone signaling for this call only. After you hang up, the phone resets itself to pulse dialing.

# TELEPHONE OPERATION

 
- 1. RECEIVING A CALL:** When your telephone rings, pick it up and use like any basic telephone.
- 2. DIALING A CALL:** Pick up the phone, wait for dial tone and dial the number desired.
- 3. ENDING A CALL:** After you have finished a conversation, just hang up.
- 4. TO REDIAL LAST NUMBER:** If you want to redial the last number quickly, get a new dial tone, press the Redial Button. To erase redial memory, lift the handset and dial any numbers.
- 5. FLASH BUTTON:** The button is used to get a new dial tone, also this button is used to activate customer calling services available through your local phone company, such as call waiting. These service are provided by your phone company and cost extra.
- 6. MUTE BUTTON:** Pressing the Mute Button prevents the other party from hearing your conversation WHILE THE BUTTON IS HELD DOWN.

## WALL MOUNTING

The phone can be mounted on a wall phone plate.

1. Use the **SHORT** Straight Wall Cord.
2. Plug one end into the top of the phone.
3. Plug the other end into wall jack.
4. Route the cord into the channel as shown.
5. Put phone over wall plate, make sure both posts fit into slots on the back of phone. Then push down to lock phone onto wall plate.

**NOTE:** After your phone is mounted, listen for dial tone to confirm the connection is good.

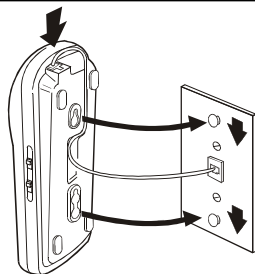

**REVERSIBLE HANDSET HOLDER** - When the telephone is mounted on the wall, the Reversible Handset Holder must be adjusted so it will hold the Handset.

### 1. SLIDE OUT

 


HANDSET HOLDER

### 2. REVERSE




### 3. REPLACE INTO PHONE



## WALL MOUNTING WITHOUT A WALL JACK

**FOLLOW THESE INSTRUCTIONS TO MOUNT THE PHONE ON THE WALL WITHOUT A WALL JACK.**

 1. Drill 2 holes 3 15/16" (100mm) apart.
2. Put a screw into each hole and leave 3/16" (5mm) of the head exposed.
3. Connect the straight cord to the phone and jack.
4. Put the keyhole slots over the screws and slide down to secure phone.

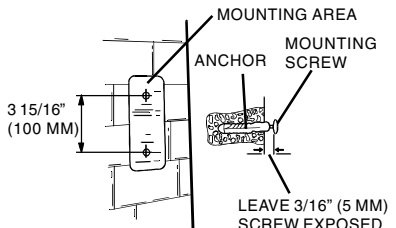

# TROUBLE SHOOTING

PROBLEM	LIKELY CAUSES
No dial tone	1.Plug disconnected from jack. 2.Jack improperly wired.
Phone is dead	1.Damaged cord. 2.Jack improperly wired. 3.Line out of order.
Can make calls but phone does not ring	1.Ringer Switch in OFF position. Slide the Switch to ON position.
Can receive but cannot make calls	1.If your other telephones are Rotary type phones, move Tone/Pulse Switch to PULSE position. 2.Contact your phone company to have your line changed to Tone and Pulse service.

## LIMITED WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a period of 1 year after purchase and we will repair it free of charge or replace it at no charge, should it become defective under this warranty, providing you submit proof of purchase (sales slip) with the set.

During the initial 1 year period after original purchase, we will service or exchange, at no charge, the set that is returned to LENOXX ELECTRONICS CORP. (LENOXX will pay the shipping back to you). After the initial 1 year period expires, we will repair the unit covering any part(s) that need to be replaced at no charge, but will charge for the cost of labor, return postage paid by LENOXX.

This warranty does not apply to any products which have been subject to misuse, neglect or accident. This warranty does not cover broken headphones or cabinet. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS CORP. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The following charges apply to repairs beyond the warranty period: \$5.00. Be sure to pack carefully and return postage paid insured together with your money order (personal checks will not be accepted) and sales receipt to :

LENOXX ELECTRONICS CORP. 2 GERMAK DRIVE, CARTERET N.J. 07008

For customer service, dial 1-800-315-5885. (MONDAY - FRIDAY 09:00 AM - 5:00 PM EST)

© 1999 LENOXX ELECTRONICS CORP.

2 GERMAK DRIVE  
CARTERET, N.J. 07008  
MADE & PRINTED IN CHINA  
<http://www.lenoxx.com>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>