 


DURABRAND

DELUXE TRIM PHONE

MODEL PH-301

OPERATING INSTRUCTIONS

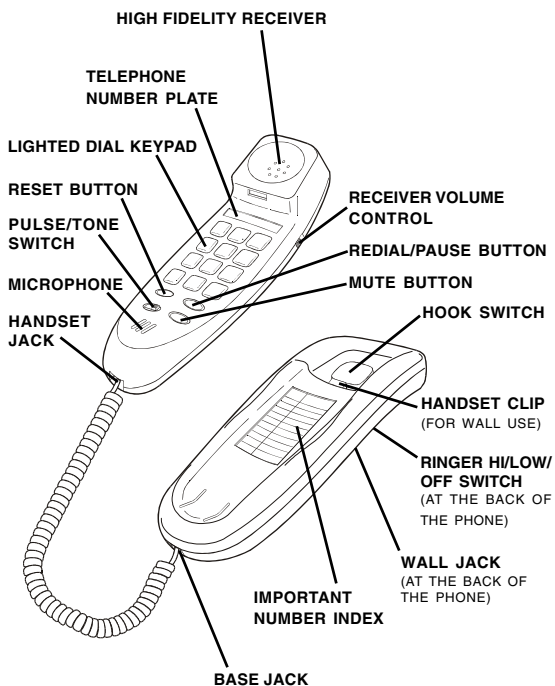

- PULSE/TONE DIALING
- DESK OR WALL MOUNTABLE
- RINGER HI/LOW/OFF SWITCH
- FULLY MODULAR CORDS INCLUDED
- HEARING AID COMPATIBLE
- RECEIVER VOLUME CONTROL

NOTE: READ AND FOLLOW THESE INSTRUCTIONS BEFORE USING YOUR TELEPHONE
IB-PH301(MS)-WM-E-113003

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to itself.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind on the product.
8. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman, when some service or repair work is required. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
9. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
10. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
11. Do not use the telephone to report a gas leak in the vicinity of the leak.
12. Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be abused by persons walking on it.
13. Never install telephone wiring during a lightning storm.
14. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
15. Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
16. Be careful when installing or modifying telephone lines.

SAVE THESE INSTRUCTIONS

IMPORTANT TELEPHONE CO. & FCC INFORMATION

CAUTION: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, DO NOT OPEN CABINET.

WE SUGGEST THAT YOU REVIEW THE FOLLOWING INFORMATION PROVIDED BY THE FCC (FEDERAL COMMUNICATIONS COMMISSION).

FCC REGISTRATION

This telephone set is registered with the FCC based upon compliance with Part 68 of its rules. Connection of this telephone to the nationwide telecommunications network must be through a standard network jack (RJ11W OR RJ11C) which you can order from your telephone company if not already installed.

NOTE: FCC registration does not constitute an expressed or implied guarantee of performance. Only the Lenoxx warranty in this booklet covers the performance of this telephone set.

IMPORTANT FCC INFORMATION

In the event that terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service providing that they:

1. Promptly notify the customer.
2. Give the customer an opportunity to correct the problem with their equipment.
3. Inform the customer of the right to bring a complaint to the Federal Communications Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68. The telephone company may make changes in its communications facilities, equipments, operations or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68. If such changes can be reasonably expected to render any customer terminal equipment incompatible, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

RINGER EQUIVALENCE NUMBER (REN):

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most areas, but not all, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

NOTE:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, try the following:

1. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
2. Consult the dealer or an experienced radio/TV technician for help.

GENERAL

The FCC prohibits customer-provided terminal equipment to be connected to party lines or to be used in conjunction with coin telephone service.

This phone is hearing aid compatible.

INTRODUCTION

Congratulations for purchasing a Durabrand telephone. Your model PH-301 will provide you with many years of trouble-free enjoyment.

Your Sales Receipt

You will need your sales receipt should you ever need warranty service. You should also save the packing materials if you want to move or ship this set.

 
CAUTION:

To avoid the possibility of electrical shock, do not use your phone while in the bathtub or shower or when you are wet. If you accidentally drop the phone into water, first unplug its cord from the modular jack, then remove the equipment from the water.

Avoid using this telephone during electrical storms in your immediate area.

INSTALLATION INSTRUCTIONS


Insert one end of the modular plugs of the COILED HANDSET CORD into the HANDSET JACK and the other into the BASE JACK on the **BOTTOM** of the TELEPHONE BASE (either end can be plugged in).

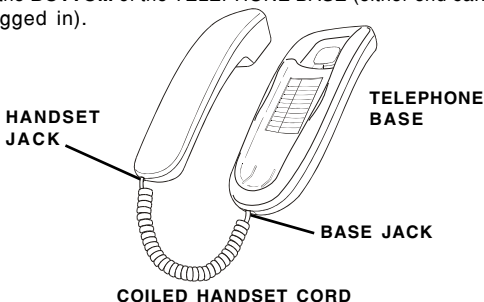

For Desk Use

Insert the modular plug of the STRAIGHT TELEPHONE LINE CORD into the modular jack at the **BACK** of the TELEPHONE BASE (either end can be plugged in).

 
The modular plug at the other end of the STRAIGHT TELEPHONE LINE CORD is for connection to the telephone line jack (either end can be plugged in.)

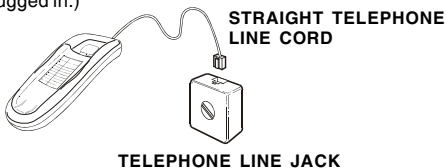

For Wall Mounting

WALL MOUNTING WHEN YOU HAVE A MODULAR WALL PLATE

 1. Use the short 4" cord.
2. Insert either plug into the modular jack in the TELEPHONE BASE (at the back of the phone).
3. Insert the other end into the wall jack.
4. Hang the TELEPHONE BASE on the wall plate studs and push down to lock.

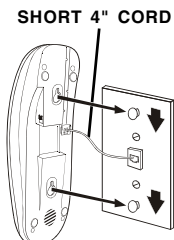

TELEPHONE OPERATION

Setting the Pulse/Tone Switch

Set the switch at TONE position for tone type, or set the switch at PULSE position for pulse (rotary) type (clicking sounds).

If you are not sure which setting you need, try dialing a call with the switch set to TONE. If the call cannot connect, switch to PULSE.

Ringer HI/LOW/OFF Switch


OFF - The ringer does not sound, for undisturbed privacy.

LOW - Lower rings on incoming calls.

HI - Loud rings on incoming calls.

NOTE: If the RINGER switch is in the OFF position, only **THIS** phone will not ring, the other phones in your home will continue to ring.

NOTE: Even when your phone is set to pulse service, **this** phone can be switched to temporary tone dialing for access to services that require tone signaling like computer systems.

Just press the  button after dialing in pulse and your buttons can now be used for tone signaling **for this call only**.

Receiving Calls

1. Pick up the handset when the phone rings.
2. Hang up the handset to release the telephone line when conversation is completed.

Making Calls

1. Select the desired dialing mode with the PULSE/TONE switch.
2. Pick up the handset and listen for a dial tone.
3. Dial your call.

Last Number Redial

1. To redial last number, just press RESET to get a new dial tone then press the REDIAL/PAUSE button.
2. This phone will keep the last number dialed in memory even overnight.

Pause Function

If you make a dial with a pause in the number, simply press the REDIAL/PAUSE button for the pause.

Handset Volume Control

You can adjust the sound level of the handset receiver by adjusting the VOLUME control setting.

Mute Button

 
Allows you to hear the other party without them hearing you. To use the mute function, press and hold down the MUTE button.

Release the button to return to normal.

WALL MOUNTING WITHOUT A WALL PLATE

FOLLOW THESE INSTRUCTIONS TO MOUNT THE PHONE ON THE WALL WITHOUT A STANDARD WALL PLATE.

1. Drill 2 holes $3\frac{15}{16}$ " (100mm) apart.
2. Put a screw into each hole and leave $\frac{3}{16}$ " (5mm) of the head exposed.
3. Connect the straight cord to the phone and wall jack.
4. Put the key hole slots over the screws and slide down to secure phone.

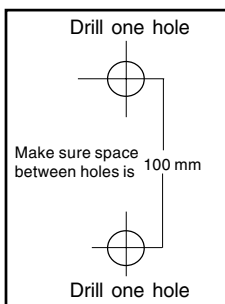

TROUBLE SHOOTING

PROBLEM	LIKELY CAUSES
No dial tone	1. Plugs disconnected from jacks. 2. Jack improperly wired.
Phone is dead	1. Damaged cord. 2. Jack improperly wired. 3. Line out of order.
Can make calls but phone does not ring	1. RINGER switch is in OFF position. 2. Ensure plugs are well connected.
Can receive but cannot make calls	1. If your line is conditioned to accept pulse dialing only, slide PULSE/TONE switch to PULSE position. 2. Contact your telephone company to have your line changed to TONE or PULSE service.
Static noise on line or cannot hear the calling party or calling party cannot hear you	Replace the COILED HANDSET CORD. Any phone store has these cords in different lengths.

1. If problems with your telephone service occur later, try to determine if the trouble is with the telephone or with the telephone company equipment.

Unplug the telephone and try it in a different room or in a neighbor's home to see if the phone line or jack is bad.

2. If disconnection of your equipment ends the problem, your telephone may be the source of the trouble and it should be tested and repaired if necessary before it is reconnected.

We recommend a cloth or other protective material be placed under the set when placing it on surface with a natural or lacquer finish.

LIMITED WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a period of 1 year after purchase and we will repair it free of charge or replace it at no charge, should it become defective under this warranty, providing you submit proof of purchase (sales slip) with the set.

During the initial 1 year period after original purchase, we will service or exchange, at no charge, the set that is returned to LENOXX ELECTRONICS CORP. After the initial 1 year from original purchase, we will repair the unit covering any part(s) that need to be replaced at no charge, but will charge for the cost of labor, return postage paid by LENOXX.

This warranty does not apply to any products which have been subject to misuse, neglect or accident. This warranty does not cover broken cabinet. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS CORP. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The following charges apply to repairs beyond the warranty period: \$2.00. Be sure to pack carefully and return postage paid insured together with your money order (personal checks will not be accepted) and sales receipt to :

LENOXX ELECTRONICS CORP., 2 GERMAK DRIVE, CARTERET N.J. 07008

For customer service, dial 1-800-315-5885.

(MONDAY - THURSDAY 9:00 AM - 5:00 PM, FRIDAY 9:00 AM - 1:00 PM EST)

© 2004 LENOXX ELECTRONICS CORP.

2 GERMAK DRIVE
CARTERET, N.J. 07008
<http://www.lenoxx.com>
MADE & PRINTED IN CHINA

— 5 — IB-PH301(MS)-WM-E-113003

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>