





LG245 USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

P/N: MMBB0232701 (1.0) G

IMPORTANT SAFETY PRECAUTIONS

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! Violation of the instructions may cause serious injury or death.

1.
1
<u> </u>

- 1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- **P**
- 2. Never place your phone in a microwave oven as it will cause the battery to explode.
- 3. Never store your phone in temperatures less than -4 $^\circ F$ or greater than 122 $^\circ F$.
- 4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near an air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



- 6. Do not use a hand-held phone while driving.
- 7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



- 4. Do not use your phone in high explosive areas as the phone may generate sparks.
- 5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



- 7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- 8. Do not disassemble the phone.

1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



2. Do not hold or let the antenna come in contact with your body during a call.



- 3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
- 4. Give instructions for children to use the battery carefully.



 Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



- 7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- 8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

TABLE OF CONTENTS

IMPORTANT SAFETY PRECAUTIONS	1
Table of Contents	4
Welcome	9
Technical Details	10
Phone Overview	13
Menus Overview	14
Getting Started with Your	
Phone	16
The Battery	16
Installing the Battery	16
Removing the Battery	16
Charging the Battery	16

Battery Charge Level	17
Turning the Phone On and Off	17
Signal Strength	18
Screen Icons	18
Making Calls	18
Correcting Dialing Mistakes	19
Redialing Calls	19
Receiving Calls	19

Quick Access to Convenient Features 20

Vibrate mode	20
	20
Lock Mode	20
Mute Function	20
Volume Quick Adjustment	20
Call Waiting	21
Caller ID	21
Speed Dialing	21

Entering and Editing Information

Text Input	22
Key Functions	22
Text Input Modes	22
T9Word (T9) Mode	22
Abc (Multi-tap) Mode	22
123 (Numbers) Mode	22
Symbols Mode	23
Changing Letter Case	23
Initial Cap (T9Word/ Abc)	23
Caps Lock (T9WORD/ ABC)	23
Lower Case (T9word/ abc)	23
Text Input Examples	23
Using Abc (Multi-tap) Text Input	23
Using T9 Mode Text Input	23
Using the NEXT Key (In T9 Mode)	24
Adding Words to the T9 Database	24

22

Contacts in Your Phone's Memory 25

The Basics of Storing Contacts	
Entries	25
Options to Customize Your	
Contacts	25
Adding or Changing the Group	25
Changing the Call Ringer	26
Adding or Changing the Memo	26
Adding or Changing the Picture ID	26
Adding Speed Dial	27
Editing Contacts Entries	27
Adding Another Phone Number	27
Default Numbers	28
Editing Customized Options	29
Deleting	29
Deleting a Contact Entry or a Phone	
Number from a Contact	29
Additional Ways to Delete a Contact	30

Phone Numbers With Pauses	30
Storing a Number with Pauses	30
Adding a Pause to an Existing Number	31
Searching Your Phone's Memory	31
Making a Call From Your Phone's Memory	33
Using Phone Menus	34
Menu Access	34
Messaging	35
1. New Text Message	36
2. New Picture Message	38
3. Inbox	40
4. Sent	41
5. Drafts	42
6. Voicemail	42

7. Settings	43
7.1 Auto Save	43
7.2 Auto Delete	43
7.3 Text-Auto View	43
7.4 Picture-Auto Receive	43
7.5 Text-Callback #	43
7.6 Edit Voicemail #	43
7.7 Entry Mode	43
7.8 Quick-Text	43
7.9 Text-Auto Play	44
7.0 Text Signature	44
8. Delete All	44
Brew	45
1. Brew Apps	46
2. Brew Info	46

TABLE OF CONTENTS

Web	47
1. Start Browser	47
2. Web Messages	49
3. Web Alerts	49
Multimedia	50
1. Take Picture	50
2. Record Voice	51
Contacts	52
1. New Contact	52
2. Contact List	53
3. Groups	53
4. Speed Dials	54
5. My Name Card	54
Recent Calls	55
1. Missed	55
2. Received	55

3. Dialed
4. Data
5. All Calls
6. Call Timer
7. Data Counter
My Media
1. Image
2. Audio
Tools
Tools 1. Voice Command
1. Voice Command
1. Voice Command 2. Calendar
 Voice Command Calendar Alarm Clock
 Voice Command Calendar Alarm Clock My Menu
 Voice Command Calendar Alarm Clock My Menu World Clock

8. Ez Tip Calc	61
9. Stopwatch	61
0. Unit Converter	61
Settings	62
1. Sound	62
1.1 Ringers	62
1.2 Volume	62
1.3 Message Alerts	63
1.4 Alert Type	63
1.5 Service Alerts	63
1.5.1 Minute Beep	63
1.5.2 Call Connect	63
1.5.3 Back To Top	63
1.6 Power On/Off Tones	63
2. Display	64
2.1 Wallpaper	64
2.2 Banner	64
2.3 Backlight	64

2.4 Menu Styles	64	4.7 TTY Mode	69
2.5 Languages	64	5. System	70
2.6 Dial Fonts	65	5.1 Network	70
2.7 Clocks	65	5.2 Location	70
2.8 Color Schemes	65	6. Data Settings	71
3. Security	66	6.1 PC Connection	71
3.1 Lock Phone	66	6.2 Mode(1X/QNC)	71
3.2 Restrict Call	66	6.3 PAP ID	71
3.3 Emergency #s	67	6.4 PAP Password	71
3.4 Change Lock Code	67	7. Bluetooth®	72
3.5 Reset Default	67	7.1 Paired Devices	72
4. Call Settings	68	7.2 Power	73
4.1 Answer Options	68	7.3 My Visibility	73
4.2 Auto Retry	68	7.4 Bluetooth Name	73
4.3 One-Touch Dial	68	7.5 Bluetooth Info	73
4.4 Voice Privacy	68	8. Memory	74
4.5 Auto Volume	69	9. Phone Info.	74
4.6 Application Mode	69		

Safety	75
TIA Safety Information	75
Exposure to Radio Frequency Signal	75
Antenna Care	75
Phone Operation	75
Tips on Efficient Operation	76
Driving	76
Electronic Devices	76
Pacemakers	76
Persons with pacemakers:	76
Hearing Aids	77
Other Medical Devices	77
Health Care Facilities	77
Vehicles	77
Posted Facilities	77
Aircraft	77
Blasting Areas	77
Potentially Explosive Atmosphere	78
For Vehicles Equipped with an Air	
Bag	78

TABLE OF CONTENTS

Safety Information	78	INDEX
Charger and Adapter Safety	78	
Battery Information and Care	78	
Explosion, Shock, and Fire Hazards	79	
General Notice	79	
Avoid damage to your hearing	80	
FDA Consumer Update	82	
10 Driver Safety Tips	89	
Consumer Information on		
SAR	91	
FCC Hearing-Aid Compatibilit (HAC) Regulations for Wireles	<i>,</i>	
Devices	93	
ACCESSORIES	95	
LIMITED WARRANTY		
STATEMENT	96	

99

WELCOME

Thank you for choosing the advanced and compact LG245 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA) and Advanced Mobile Phone Service (AMPS). Along with the many advanced features of the CDMA system, this phone offers:

- Significantly enhanced voice clarity.
- Large, easy-to-read, 9-line backlit LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 23-key keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth[®] wireless technology.

Note

The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

TECHNICAL DETAILS

Technical Details

The LG245 is a trimode phone that operates on both (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz and (Personal Communication Services PCS) at 1.9 GHz. Also, the LG245 works on Advanced Mobile Phone Service. We call it a tri-mode phone. Since the phone operates on Cellular, PCS and AMPS, the call fail rate is less than on a conventional dual-mode or single-mode phone.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The following table lists some major CDMA standards.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Tri-Mode Air Interface 14.4kbps radio link protocol and inter-band operations 15-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface Advanced Mobile Phone Service
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Async Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

TECHNICAL DETAILS

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna (Optional, if available.)

A minimum distance of 8 inches (20cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

PHONE OVERVIEW



- 1. Earpiece Lets you hear the caller.
- **2.** Flip Open the case to answer an incoming call and close to end the call.
- 3. LCD Screen Displays messages and indicator icons.
- 4. Left Soft Key Use to display the function setting menu.
- 5. SEND Key Use to place or answer calls.
- 6. Side Keys Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
- 7. BACK Key Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.
- 8. Voice Command Key Use for quick access to Voice Command.
- 9. Manner Mode Key Use to set Manner mode (from standby mode press and hold ★☆ for about 3 seconds).
- Navigation Key Use for quick access to Messaging, Ringers, Brew Apps and Mobile Web.
- 11. Right Soft Key Use to select an action within a menu.
- 12. Camera Key Use for quick access to Camera function.
- 13. PWR/END Key Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.
- 14. Camera Key Use for quick access to Camera function.
- 15. Alphanumeric Keypad Use to enter numbers and characters and select menu items.
- **16.** Lock Mode Key Use in standby mode to set the lock function by pressing and holding the key **#**. for about 3 seconds.
- 17. Microphone Lets callers hear you.
- 18. Camera Lens Projects the object when taking a picture.
- 19. Flash Use to add flash when taking photos.
- 20. Earphone Jack Allow the use of a headset to hear caller's voice.
- 21. Outside Display Displays the inner LCD screen.
- 22. Charger Port Connects the charger to the phone.

MENUS OVERVIEW

Messaging
1. New Text Message
2. New Picture Message
3. Inbox
4. Sent
5. Drafts
6. Voicemail
7. Settings
1. Auto Save
2. Auto Delete
3. Text-Auto View
4. Picture-Auto Receive
5. Text-Callback #
6. Edit Voicemail #
7. Entry Mode
8. Quick-Text
9. Text-Auto Play
0. Text Signature
8. Delete All
1 Delete Inhov

1. Delete Inbox

2. Delete Sent
3. Delete Drafts
4. Delete All Messages
Brew
1. Brew Apps
2. Brew Info
Web
1. Start Browser
2. Web Message
3. Web Settings
Multimedia
1. Take Picture
2. Record Voice

Contacts
1. New Contact
2. Contact List
3. Groups
4. Speed Dials
5. My Name Card
Recent calls
1. Missed
2. Received
3. Dialed
4. All Calls
5. Call Timer
1. Last Call
2. Home Calls
3. Roam Calls
4. All Calls
6. Data Counter
1. Received Data
2. Sent Data
3 All Data

3. All Data

My Media

1. Image

2. Audio

Tools

Voice Command
 Calendar
 Alarm Clock
 My Menu
 World Clock
 Notepad
 Calculator
 Ez Tip Calc
 Stopwatch
 Unit Converter

1. Sound 1. Ringers 2. Volume 3. Message Alerts 4. Alert Type 5. Service Alerts 6. Power On/Off Tones 2. Display 1. Wallpaper 2. Banner 3. Backlight 4. Menu Styles 5. Languages 6. Dial Fonts 7. Clocks 8. Color Schemes 3. Security

3. Emergency #s 4. Change Lock Code 5. Reset Default 4. Call Settings 1. Answer Options 2. Auto Retry 3. One-Touch Dial 4. Voice Privacy 5. Auto Volume 6. Application Mode 7. TTY Mode 5. System 1. Network 2. Location 6. Data Settings 1. PC Connection 2. Mode(1X/QNC) 3. PAP ID 4. PAP Password

7. Bluetooth®
1. Paired Devices
2. Power
3. My Visibility
4. Bluetooth Name
5. Bluetooth Info
8. Memory
1. Memory Status
2. Media Status
3. User Memory
9. Phone Info.
1. My Number
2. SW Version
3. Icon Glossary

1. Lock Phone 2. Restrict Call

GETTING STARTED WITH YOUR PHONE

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

Remove the battery cover, insert the battery into the opening by first aligning the bottom of the battery with the terminals near the bottom of the phone. Align the battery cover over the battery then slide it slightly upward until it clicks into place.

Removing the Battery

Turn the phone off. Slide the battery cover downward and remove it. Use the opening near the top of the battery to lift the battery out.

Charging the Battery

To use the charger provided with your phone:

- Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG245 may damage your phone or battery.
- Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
- 2. The charge time varies depending upon the battery level.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Fully Charged

Empty

Turning the Phone On and Off

Turning the Phone On

- Install a charged battery or connect the phone to an external power source such as a cigarette lighter charger or hands-free car kit.
- Press provide for about 3 seconds until the LCD screen lights up.

Turning the Phone Off

1. Press and hold 👼 until the display turns off.

GETTING STARTED WITH YOUR PHONE

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Screen Icons

To see the icon glossary, go to Menu -> Settings -> Phone Info. -> Icon Glossary on your phone.

Making Calls

- 1. Make sure the phone is turned on. If not, press for about 3 seconds.
- 2. Enter the phone number (include the area code if needed).
- 3. Press 🤷 .

If the phone is locked, enter the lock code.

Call Failed - indicates the call did not go through. Restricted - indicates outgoing calls are in restricted mode.

Note

If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts list. To turn off this function: Menu -> 9^{wer} Settings -> 3^{ee} Security -> Lock Code -> 2^{ee} Restrict Call -> Off -> OK

4. Press 👼 to end the call.

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press **BACK** once to erase the last digit entered, or hold down **BACK** for at least 2 seconds to go to the standby mode.

Redialing Calls

 Press wice to redial the last number you dialed. The last 30 numbers (dialing, incoming, missed) are stored in the call history list and you can also select any of these to redial.

Receiving Calls

1. When the phone rings or vibrates, press 🔤 to answer.

Note

If you press b or \oiint (the side keys) while the phone is ringing, the ringing or vibration is muted for that call.

2. Press 👼 twice to end the call.

QUICK ACCESS TO CONVENIENT FEATURES

Vibrate mode

Sets the phone to vibrate instead of ring (\mathbf{P} is displayed). To quickly set Vibrate mode press and hold $\mathbf{x}_{\mathbf{m}}$. To return to Normal Mode, press and hold $\mathbf{x}_{\mathbf{m}}$.

Lock Mode

Sets your phone to require a 4-digit password in order to use the phone.

Note

Until you change it, the default lock code/password is the last 4 digits of your phone number.

To quickly lock your phone press \blacksquare for three seconds. To cancel, press Left Soft Key \checkmark Unlock and enter the password.

Mute Function

The Mute Function is used during a phone call. To quickly activate Mute press Left Soft Key $\underline{\mathscr{O}}$ Mute, then to cancel press Left Soft Key $\underline{\mathscr{O}}$ Unmute.

Volume Quick Adjustment

Use the side keys to adjust the earpiece and ringer volumes. The upper key increases the volume and the lower key decreases the volume.

• Earpiece volume can be adjusted during a call. Ringer volume can be adjusted during a call.

Note

Key Tone Volume is adjusted through the Sounds Volume (Menu -> 9 -> 1 -> 2 -> 2).

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

- 1. Press 💩 to receive a waiting call.
- 2. Press 🧠 again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A number key can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contacts list and display it briefly while simultaneously dialing that phone number for you. Speed Dial Number 1 is set to Voice Mailbox by default and is unchangeable.

Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.

OR

Enter the speed dial number and press 🐜 .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press $\[ensuremath{\overline{\sc w}}\]$.

ENTERING AND EDITING INFORMATION

Text Input

You can input and edit your Banner, Schedule, Contacts, Notepad, and Messages.

Key Functions

- Left Soft Key: Press to scroll through the following text input modes: T9Word (T9WORD/T9Word/ T9word) -> Abc (ABC/Abc/abc) -> 123 -> Symbols.
- Shift: Press to change case.
 T9 text : T9Word -> T9WORD -> T9word
 Abc text : Abc -> ABC -> abc
- •••• Next : In T9 mode, press to display other matching words.
- **#**... **Space** : Press to complete a word and insert a space.
- **Clear** : Press to delete a single space or character. Hold to delete the whole message.
- **Punctuation** : In T9 mode, press to insert punctuation in a word and complete a sentence.

Text Input Modes

There are four modes for entering text; numbers, special characters, and punctuation. In a text entry field, pressing Left Soft Key \checkmark displays a pop-up list of text modes.

T9Word (T9) Mode

Also known as predictive text mode, T9 allows the phone to automatically translate keystrokes into common words that are in the T9 internal database. The technology allows words to be entered by a single keypress for each letter as opposed to the multi-tap method where selecting a single letter requires multiple key presses.

Abc (Multi-tap) Mode

Use to add words to the T9 database.

123 (Numbers) Mode

Use to type numbers using one keystroke per number.

Use to insert special characters or punctuation. There are 36 special characters including "SP" which inserts a space, and "LF" which forces the text to the beginning of the next line.

Changing Letter Case

Text can be capitalized when in T9 and Abc input mode. Press * to reach the following:

Initial Cap (T9Word/ Abc)

Only the first letter is capitalized and subsequent letters are lower case.

Caps Lock (T9WORD/ ABC)

All letters are capitalized.

Lower Case (T9word/ abc)

All letters are in lower case.

Text Input Examples

Display the text modes and select a text mode:

- 1. In a text entry field, press Left Soft Key 🖉 to display text modes.
- 2. Press (1) to use the text input mode you want to use.
- 3. Press \bigcirc to select the text input mode.

Using Abc (Multi-tap) Text Input

- 1. Press Left Soft Key 🧭 to change to Abc mode.
- 2. Press ***** to change to ABC Caps Lock every time for capital letters.
- 3. Press 5 jki 5 jki 5 jki 4 9hi .

LG is displayed.

Using T9 Mode Text Input

- 1. Press Left Soft Key 🖉 to change to T9Word mode.
- 2. Press 2 abc 2 abc 5 jkl 5 jkl .
- 3. Press **#**. to complete the word and add a space.

ENTERING AND EDITING INFORMATION

4. Press 8 tov 4 th 3 def ## 6 mo 3 def 3 def 4 th 2 obc 3 def 1 2 .

Call the office. is displayed.

Using the NEXT Key (In T9 Mode)

After you have finished entering a word, if the word displayed is not the one you want, press **O** to display additional choices of words from the database.

1. Press 4 ghi 6 mno 6 mno 3 def .

Good is displayed.

2. Press **0**^{next}.

The display gives you additional choices such as: Home, Gone, Hood, etc.

Adding Words to the T9 Database

If a word is not in the T9 database, add it using Abc (multi-tap) mode text entry.

1. Press Left Soft Key 🖉 to change to Abc (multitap) mode.

Bop is displayed.

- 3. Press BACK to erase the existing word.
- 4. Press 2^{abc} 6^{mno} 7^{pqrs}.

Amp is displayed.

CONTACTS IN YOUR PHONE'S MEMORY

Contacts Entries

This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 500 entries with up to 5 phone numbers each. Each entry 'Name' may be up to 22 characters.

The Basics of Storing Contacts Entries

- 1. From standby mode enter the phone number you want to save (up to 48 digits).
- 2. Press Left Soft Key 🥑 Save.
- Press Left Soft Key and select either Save New or Update Existing.
- Use (♣) to highlight a Label and press (ℝ).
 Mobile 1/ Home/ Work/ Mobile 2/ Fax

Note

Use **Update Existing** to add another phone number to a contact already stored in memory.

 Enter a name for the phone number (up to 22 characters) and press
 A confirmation message is displayed briefly.

Options to Customize Your Contacts

Once the basic phone number and name information is stored in your Contacts, you can edit and customize each entry.

- 1. Press Right Soft Key 🕑 **Contacts** and use 💭 to highlight the contact entry you want to edit, then press 🞯 **View**.
- 2. Press Left Soft Key 🧭 Edit to access the Edit Contact screen.
- 3. Use (a) to highlight the information you want to customize.
- 4. press 🞯 Save when it's done.

Adding or Changing the Group

Allows you to manage your Contacts entries by organizing them into groups.

- 1. Press Right Soft Key 🕥 **Contacts** and use 🔘 to highlight an entry, then press 🞯.
- 2. Press Left Soft Key 🖉 to select Edit.

CONTACTS IN YOUR PHONE'S MEMORY

- 3. Use \bigcirc to highlight **No Group**, \bigcirc to select a group.
- 4. Use () to select the Group. No Group/ Family/ Friends/ Colleagues/ **Business/School**
- 5. Press (K) Save to save the change.

Changing the Call Ringer

Allows you to identify who is calling, by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

- 1. Press Right Soft Key 🕥 Contacts and use 🔘 to highlight an entry, then press \bigcirc .
- 2. Press Left Soft Key 🧭 to select Edit.
- 3. Use (to highlight **Ringtone**, then press Left Soft Key 🖉 List.
- 4. Use () to select one of the Ringtone available, then press Left Soft Key Set.
- 5. Press or Save to save the change.

Adding or Changing the Memo

Allow you to enter up to 60 characters as a memo to the Contact entry.

- 1. Press Right Soft Key 🕥 Contacts and use 💭 to highlight an entry, then press ().
- 2. Press Left Soft Key 🖉 to select Edit.
- 3. Use 💭 to highlight Memo.
- 4. Enter text.
- 5. Press **OK** Save to save the change.

Adding or Changing the Picture ID

Allows the phone to display an image to identify the caller.

- 1. Press Right Soft Key 🕥 Contacts and use 🔘 to highlight an entry, then press ∞ .
- 2. Press Left Soft Key 🖉 to select Edit.
- 3. Use () to highlight Picture.
- 4. Press Left Soft Key 🥑 List to see additional choices.

- 5. Use \bigcirc to select one of the images available, then press \odot .
- 6. Press Left Soft Key 🥖 Set.
- 7. Press 🞯 Save to save the change.

Adding Speed Dial

- 1. Press Right Soft Key 🕑 **Contacts** and use 💭 to highlight an entry, then press 🞯.
- 2. Press Left Soft Key 🖉 to select Edit.
- Use (to highlight the phone number you want to set with a Speed Dial, then press Right Soft Key
 Options.
- 4. Select Set Speed Dial.

Editing Contacts Entries

Adding Another Phone Number

From standby mode

- 1. From standby mode enter the phone number you want to save (up to 48 digits).
- 2. Press Left Soft Key 🖉 Save.
- 3. Select Update Existing.
- 4. Use (*) to highlight the existing Contact entry, then press (*).
- 5. Use to highlight a Label, then press .

Mobile/ Home/ Work/ Mobile2/ Fax

6. Press 🞯 to save Contact.

CONTACTS IN YOUR PHONE'S MEMORY

Default Numbers

The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be designated as the Default Number.

Changing the Default Number

- Press Right Soft Key
 Contacts to display your Contacts alphabetically.
- Use to highlight the Contact entry you want to edit, then press (19).
- 3. Press Left Soft Key 🥑 Edit.
- Use to highlight the phone number you want to set as the Default Number, then press Right Soft Key Options and Set As Default.

Editing Stored Phone Numbers

- 1. Press Right Soft Key 🕥 Contacts to display your Contacts alphabetically.
- 2. Use (a) to highlight the Contact entry you want to edit, then press (b).
- 3. Press Left Soft Key 🖉 Edit.
- 4. Use 🔘 to highlight the phone number.

Editing Stored Names

- 1. Press Right Soft Key 🕤 Contacts to display your Contacts alphabetically.
- 2. Use (a) to highlight the Contact entry you want to edit, then press (b).

- 3. Press Left Soft Key 🥑 Edit.
- 4. Use 💭 to highlight the name.
- 5. Edit the name as necessary.
- 6. Press **Save** to save the change.

Editing Customized Options

Edit any of the Contacts options in the same manner as when the Contact is created.

- Press Right Soft Key
 Contacts to display your Contacts alphabetically.
- 2. Use (a) to highlight the Contact entry you want to edit, then press (b).
- 3. Press Left Soft Key 🦉 Edit.
- 4. Use (1) to highlight the information you want to customize.
- 5. Edit the information as necessary.
- 6. Press 🞯 Save to save the change.

Deleting

Deleting a Contact Entry or a Phone Number from a Contact

- 1. Press Right Soft Key 🕥 **Contacts** to display your Contacts alphabetically.
- Use (C) to highlight the Contact entry, then press
 .
- 3. Press Right Soft Key 🕥 Options.
- 4. Select 2^{abc} Delete.
- 5. Select 1. Yes.

A confirmation message is displayed.

CONTACTS IN YOUR PHONE'S MEMORY

Additional Ways to Delete a Contact

At any time when your Contacts are displayed, the Right Soft Key 🔊 **Options** allows you to erase the highlighted entry.

Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing number, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (P, T). There are two different types of pauses you can use when storing a number:

Wait (W)

The phone stops dialing until you press Left Soft Key \checkmark Release to advance to the next number.

Pause (P)

The phone waits 2 seconds before sending the next string of digits.

Storing a Number with Pauses

- 1. Press Left Soft Key 🦪 Menu.
- 2. Press **5** M Contacts.
- 3. Press 1. New Contact.
- 4. Enter the name (up to 22 characters) and enter a number.
- 5. Press Right Soft Key 🕤 Options and select Pause.
- 6. Enter additional number(s) then press 🞯.

Adding a Pause to an Existing Number

- Press Right Soft Key
 Contacts to display your Contacts alphabetically.
- 2. Use (C) to highlight the Contact entry to edit, then press (R).
- 3. Press Left Soft Key 🖉 Edit.
- 4. Use 🔘 to highlight the number.
- 5. Press Right Soft Key 🕥 Options.
- 6. Press 3 def Wait or 4 shi Pause.
- 7. Enter additional number(s), then press 🞯.

Searching Your Phone's Memory

The LG245 phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter

Scrolling Through Your Contacts

- 1. Press Right Soft Key 🕥 Contacts to display your Contacts alphabetically.
- 2. Use 🔘 to scroll through the list.

CONTACTS IN YOUR PHONE'S MEMORY

Searching by Letter

- 1. Press Right Soft Key 🕥 Contacts to display your Contacts alphabetically.
- 2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

Searching Options

- 1. Press Right Soft Key 🕤 Contacts.
- 2. Press Right Soft Key 🕥 Options.
- Select the search criteria (use then press not press the corresponding number on the keypad):
- **1** Send Message Send a text message or picture message to the selected contact.
- **2**^{abc} **Delete** Delete the selected entry in your Contacts.
- **3**^{def} **Edit** Edit the selected contact information.
- 4 Delete All Deletes all contacts.

Send via Bluetooth - Send a contact(vCard) via Bluetooth. In case Bluetooth power is not on, a notice pops up to turn Bluetooth on.

Making a Call From Your Phone's Memory

Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing Send Key after searching for a phone number in Contacts or Recent Calls and highlighting it.
- By using Speed Dialing

From Contacts

- 1. Press Right Soft Key 🕤 Contacts to display your Contacts alphabetically.
- 2. Use (C) to select the Contact entry, then press (R).
- 3. Use 💭 to select the phone number.
- 4. Press 🤄 to place the call.

From Recent Calls

- 1. Press Left Soft Key 🧷 Menu.
- 2. Press 6mm Recent Calls.
- 3. Use (a) to select the type of recent call, then press (8).

Missed/ Received/ Dialed/ Data/ All Calls

- 4. Use 💭 to select the phone number.
- 5. Press 🔤 to place the call.

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press Signal - Gamma - Gamma

USING PHONE MENUS

Menu Access

Press Left Soft Key / Menu to access nine phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the menu (or submenu).

For example:

- 1. Press Left Soft Key / Menu to display nine menu items.
- Use O to scroll through the list of menus.
- 2. Press the appropriate number key corresponding to the menu item you want to select.

The submenu list will be displayed.

- 3. Press the appropriate number key corresponding to the submenu you want to access.
- 4. Use 🔘 to highlight your preferred setting, then press 🔍 to select it.

Note

Press BACK to go back one step (while accessing a menu or selecting a setting). Changes to settings will not be saved.

MESSAGING

Messaging

Access and Options

- 1. Press Left Soft Key 🥑 Menu.
- 2. Press 1. Messaging.
- 3. Select a submenu.



- 1. New Text Message: Sends a text message.
- 2. New Picture Message: Sends a picture message.
- 3. Inbox: Shows the list of received messages.
- 4. Sent: Shows the list of sent messages.
- 5. Drafts: Shows the list of saved and draft messages.
- 6. Voicemail: Shows the number of messages in voice mailbox.
- 7. Settings: Sets the way of sending and receiving messages.
- 8. Delete All: Deletes all stored messages.

Text messages, pages, and voicemails become available as soon as the phone is powered on.

- Check types of messages by pressing the message key Q.
- Make a call to the callback number by pressing Send Key during an Inbox message check.
- Read and edit messages saved in the outbox after transmission and resend them.

The phone can store up to 385 messages (50 inbox text messages, 50 picture messages, 100 picture notification messages, 50 text outbox messages, 50 picture messages, 15 text draft messages, 15 picture draft messages). The LG245 supports up to 160 characters. The information stored in the message is determined by phone mode and service capability. Other limits such as available characters per message may exist, please check with your service provider for system features and capabilities.

New Message Alert

There are three ways your phone alerts you to new messages.

- 1. The phone displays a message on the screen.
- 2. One of eight ring tones is heard, if selected.
- 3.2 min reminder

Note

If you receive the same message twice, your phone deletes the older one and the new one is stored as a Duplicate.

1. New Text Message

Allows you to send text messages, pages, and e-mail transmissions. Each message has a destination (Address 1) and information (Message). These are dependent upon the type of message you want to send.

The Basics of Sending a Text Message

- 1. Press Left Soft Key 🖉 , 1. , 1.
- 2. Enter the recipient's address.
- 3. Press or to access the message screen.
- 4. Type your message.
- 5. Press 🞯 Send.
 - A confirmation message is displayed.

Customizing the Text Message Using Options 1. Create a new message. can insert customized text. 2. Press Right Soft Key 🕥 Options. 1. Create a new message. 3. Select the option(s) to customize. Contacts To select a recipient from 3. Press Right Soft Key 💽 Options. your Contacts list. 4. Select the option(s) to customize. Recent Calls To select a recipient from Add Graphic/ Animation/ Sound/ your Recent calls. Quick-Text/ Signature **Recent Messages** Inbox/Sent Groups Select a recipient from your Groups. No Group/ Family/ Friends/ Colleagues/ Business/ School

Cancels editing your message.

4. Complete and send the message.

Cancel

Text Options

While you are composing the text of a message you

2. Use \bigcirc to highlight Message, and then press \bigcirc .

	4 0
Text Format	Alignment/ Font Size/ Font Style/ Text Color/ Background
Save As	Draft/ Quick-Text
Priority Level	Normal/ High
Callback #	On/ Off
Delivery Notice	Enhanced/ Normal
Cancel	Cancels editing your message.

5. Complete and send or save the message.

Message Icon Reference

Text N	lessage
💽 М	ulti Picture Message delivered
De De	elivered Picture Message
🖾 Fa	iled Multi Text/Picture Messages
🖾 Fa	iled Text/Picture Messages
🖾 М	ulti Messages Pending
🖾 Se	ent Message Pending
🖾 М	ulti Text/Picture Messages in transfer
🛃 Re	ead SMS/EMS
🖂 Ur	nread
🖾 Se	ent Text/Picture Messages
🖂 La	ocked message

2. New Picture Message

Allows you send messages with Text, Picture and Sound.

- 1. Press Left Soft Key 🧭 , 1.8 , 2 *** .
- 2. Use Right Soft Key 🕥 Options to search for the recipient's address.
- 3. Enter the recipient's address.
- 4. Press 🞯 to access the message screen.
- 5. Type your message (text or e-mail).
- 6. With the highlight on Image, press Left Soft Key 🖉 Add.
- Use (a) to highlight a picture, then press Left Soft Key ? Set.
- 8. With the highlight on Audio, press Left Soft Key 🖉 Add.
- Use ^(C) to highlight a sound, then press Left Soft Key ^(C) Set.

Or you can record your own voice memo by pressing Left Soft Key $\, \underbrace{ \mathscr{O} } \,$ Voice and send it with your message.

Download from Www.Somanuals.com. All Manuals Search And Download.

MESSAGINC

- 10. Press Right Soft Key 🕥 Options.
- 11. Select the option(s) to customize.
- * Editing the Receiver

Contacts/ Recent Calls/ Recent Messages/ Groups/ Online Album/ Cancel

* Editing the Text

Preview Add	Shows your message before sending. Quick Text/ Signature/ Slide
	. 0
Go to	Previous Slide/ Next Slide
Save As	Draft/ Quick-Text
Priority Level	Normal/ High
Delivery Notice	Informs you that the message has been successfully delivered to the recipient. Enhanced/ Normal
Remove	Image/ Audio/ Slide
Cancel	Cancels the contents of the message field.

* Editing Image

Preview/ Add Slide/ Go to/ Save As Draft/ Priority Level/ Delivery Notice/ Remove/ Cancel * Editing Audio

Preview/ Add Slide/ Go to/ Save As Draft/ Priority Level/ Delivery Notice/ Remove/ Cancel

* Editing Subject

Preview/ Add/ Go to/ Save As/ Priority Level/ Delivery Notice/ Remove/ Cancel

12. Press 🞯 to send.

Message Icon Reference

Picture Message

 Image: Read Picture Message
 Image: Unread Picture Message

 Image: Read Picture Message Notification

 Image: Unread Picture Message

 Image: Sent Picture Message

 Image: Delivered Picture Message

 Image: Delivered Picture Message

 Image: Multiple Recipient Failed Picture Message

 Image: Multiple Recipient Incomplete Picture Message

3. Inbox

The phone alerts you in 2 ways when you receive a new message by:

- Displaying a message notification on the screen.
- Displaying the message icon (It blinks when the message is urgent).

Received text messages, page messages, picture messages and e-mail lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

Viewing Your Inbox

Up to 50 received messages can be stored in the Inbox.

- 1. Press Left Soft Key 🖉 , 1 🎂 , 3 def .
- 2. Use 💭 to highlight an Inbox message.
 - Left Soft Key 🖉 **Reply** complying with the kinds of messages (text/ picture).
 - Right Soft Key 🕥 Options.
- 3. Use (C) to highlight an Inbox message, then press (N).

4. While viewing the selected message, press Left Soft Key 🕜 Reply or Right Soft Key 🕥 Options.

Options from here:

Delete	Deletes the selected message.		
Forward	Forwards a received message to other destination address(es).		
Save Contact	Stores the callback number, e-mail address, and number extracted from the received message into your Contacts.		
Lock	Locks or unlocks the selected message.		
Information	Shows the message type priority and status.		

4. Sent

Message Info

Shows the message type priority and status.

Up to 50 sent text or picture messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press Left Soft Key 🧭 , 1 🚨 , 4 🕬 .

2. Use \bigcirc to highlight an Outbox message.

- Press Left Soft Key 🥖 Resend.
- Press Right Soft Key Doptions.
- 3. Use () to highlight an Outbox message, then press (). While viewing the selected Outbox message, press Left Soft Key 🖉 Resend to or press Right Soft Key 🕤 Options.

Delete	Deletes the selected message
Forward	Forwards a received message to other destination address(es).
Save Contact	Save New/ Update Existing
Lock	Locks or unlocks the selected message.

Delete Multiple

Selective/ All

5. Drafts

Displays saved messages and draft messages.

- 1. Press Left Soft Key 🖉 , 1.8 , 5 🕅 .
- 2. Use 💭 to highlight a Saved message.
 - Press 🞯 Edit.
 - Press Right Soft Key Difference

Delete	Deletes the selected message from the Drafts.
Save Contact	Save New/ Update Existing
Lock	Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.
Delete Multiple	Selective/ All

6. Voicemail

Allows you to view new voice messages recorded in the voice mail box. Your phone will alert you when you receive a new voice message.

Checking Your Voicemail Box

1. Press Left Soft Key 🧭 , 1.8 , 6 m.

2. Options from here:

• Press Left Soft Key 🧭 Clear to delete information, then select Clear Count.

• Press 🔤 to listen to the message(s).



7. Settings

Allows you to configure 10 settings for received messages.

- 1. Press Left Soft Key 🖉 , 1.8 , 7 Pers .
- 2. Use (C) to highlight one of the settings and press (W) to select it.

Message Settings Submenu Descriptions

7.1 Auto Save

Allows you to automatically save sent messages in your Outbox. (Auto Save/ Prompt/ Do Not Save)

7.2 Auto Delete

With this feature on, read messages(except locked messages) are automatically deleted when you exceed the storage limit. (On/ Off)

7.3 Text-Auto View

Allows you to directly display the content when receiving a message. (On/ Off)

7.4 Picture-Auto Receive

Allows you to set pictures to be received automatically. (On/ Off)

7.5 Text-Callback

Allows you to automatically send a designated callback number when you send a message. Allows you to manually enter the number. (On/ Off/ Edit)

7.6 Edit Voicemail

Allows you to manually enter the number for Voice Mail Service. This number should be only used when a VMS access number is not provided from the network. (Enter Number)

7.7 Entry Mode

Allows you to select the default input method. (T9Word/ Abc/ 123)

7.8 Quick-Text

Allows you to insert default or customized text phrases. These text strings allow you to reduce manual text input into messages.

7.9 Text-Auto Play

With this feature on, the display automatically scrolls down while viewing messages. (On/ Off)

7.0 Text Signature

Allows you designate a signature to be automatically sent with your messages. You can create a custom signature line or use your Contact Info. (On/ Off/ Edit)

8. Delete All

Allows you to erase all the messages stored in your Inbox, Sent, or Saved messages folders. You can also erase all of these at the same time.

- 1. Press Left Soft Key 🖉 , 1 🚨 , 🛽 🗤 .
 - Press **1.** Delete Inbox to erase all messages stored in the Inbox.
 - Press **2**^{and} **Delete Sent** to erase all messages stored in the Outbox.
 - Press 3 er Delete Drafts to erase all messages stored in the Saved messages folder.
 - Press <u>4</u> Delete All Messages to erase all messages stored in the Inbox, Outbox, and Saved messages folder.

Brew

Brew Apps allows you to do more than just talk on your phone. Brew Apps is service that allows you to download and use applications on your phone. With Brew Apps, it is quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones to games to productivity tools, you can be assured that you can find something useful, practical, or down right entertaining.

Downloading Applications

You can download applications and use **Brew Apps** wherever service is available, see map for details.

Incoming Calls

While downloading an application, incoming calls will automatically be sent to your voice mail, if available. If you do not have voice mail, downloading will not be interrupted by an incoming call, and the caller will receive a busy signal.

When using applications, an incoming call will automatically pause the application and allow you to

answer the call. When you complete your call, you can resume using the application.

Access and Options

1. Press Left Soft Key 🦉 Menu.

2. Press 2^{abc} Brew.

3. Select a sub-menu.



- 1. Brew Apps: To add, delete, or disable Brew Apps applications.
- **2. Brew Info:** To view information about Brew Apps applications.



BREW

1. Brew Apps

Allows you to download selected applications while displaying the entire application list retrieved from the **Brew Apps** server connection.

1. Press Left Soft Key 🧭 , 🛛 2 🗤 , 🥵 .

2. Press OK.

3. Select [Brew Apps] Icon and press @.

Shortcut

Pressing the right arrow key 🕖 will start Axcess Apps.

2. Brew Info

Gives you information about the **Brew Apps** selection key.

1. Press Left Soft Key 🖉 , 🛛 2 abc , 🖉 abc .

2. Press 🛞.

3. Press Left Soft Key 🞯 Yes.

Managing Your Brew Apps Applications

Add new applications and remove old ones at any time.

Removing Brew Apps Applications

By deleting an application you will restore memory capacity to the phone. To restore an application once it has been removed will require that you pay and download it again.

- 1. Access Brew Apps.
- 2. Use \bigcirc to select **Settings**, then press \oslash .
- 3. Use (a) to highlight Manage Apps, then press (N).
- Use to highlight the application to be deleted, then press (8).
- 5. Use 💭 to select **Remove**, then press 🞯.

Web

The Mobile Web feature allows you to view internet content. Access and selections within this feature are dependent upon your service provider. For specific information on Mobile Web access through your phone, contact your service provider.

Access and Options

- 1. Press Left Soft Key 🖉 Menu.
- 2. Press 3 def Web.
- 3. Select a sub-menu.



- 1. Start Browser
- 2. Web Messages
- 3. Web Alerts

1. Start Browser

Allows you to initiate a MiniBrowser session.

- 1. Press Left Soft Key 🧭 , 🖪 🚾 , 🔳 🚨 .
- 2. After a few seconds, you see the Home Page.

Ending a MiniBrowser Session

End a MiniBrowser session by pressing 👼 .

Navigating Through the Browser

On-screen items may be presented in one of the following ways:

Numbered options

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Key(s).

Links embedded in content

You can act on the options or the links by using the Soft Keys just below the display screen.

Text or numbers

You can select the items by moving the cursor and pressing the appropriate Soft Keys.

WEB

Scrolling

Use \bigcirc to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.

Fast Scrolling

Press and hold \bigcirc to quickly move the cursor up and down on the current screen.

Scrolling by Page

Press the Side Keys to move up and down a page at a time.

Home Page

Press and hold or **BACK** to access the Home Page.

Soft Keys

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.

Left Soft Key 🥖

Left Soft Key \mathscr{D} is used primarily for first options or selecting an item but its function may change, depending on the content displayed.

Right Soft Key 🕥

Right Soft Key \bigcirc is used primarily for secondary options or a menu of secondary options.

Entering Text, Numbers, or Symbols

When prompted to enter text, the current text entry method appears above the Right Soft Key 🖻 as Alpha, Symbol, Number, Word, or Smart. To change the input mode, press the Right Soft Key <table-cell> . To change to upper case, press ##... The text method appears above the Right Soft Key 🗟 as ALPHA, WORD, or SMART.

Clearing Out Text/Number Entered

When entering text or numbers, press **BACK** to clear the last number, letter, or symbol. Press and hold **BACK** to clear the input field completely.

Initiating a Phone Call From Mobile Web

You can make a phone call from Mobile Web if the site you are using supports the feature (the phone number may be highlighted and Left Soft Key appears as Call). The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

2. Web Messages

Allows you to view Web messages. If there are any browser messages, the list is displayed from newest to oldest.

1. Press Left Soft Key 🥑 , 3 def , 2 abc .

Your list of Web messages is displayed.

3. Web Alerts

Allows you to select a browser alert sound.

- 1. Press Left Soft Key 🧭 , 3 def , 3 def .
- 2. Select an alert option.

Web Alerts Mute/ 2 beeps/ 4 beeps

MULTIMEDIA

Multimedia

View, take, and trade your digital pictures and video right from your wireless phone.

Access and Options

- 1. Press Left Soft Key 🖉 Menu.
- 2. Press 4 m Multimedia.
- 3. Select a submenu.



1. Take Picture

2. Record Voice

Yanti De Commentaria de Commentaria

1. Take Picture

1. Press Left Soft Key 🥑 , 🖪 🖬 , 🔳 .

Note

Pressing the side Camera key from standby mode is a hot key to Take Picture.

- 2. Set the brightness (), zoom () and press Right Soft Key () Options to change other settings.
- Select the option(s) to customize.

Resolution	640X480/ 320X240/ 176X144
Quality	Fine/ Normal/ Economy
Zoom	
Brightness	
Flash	Always On/ On This Shot/ Off
Night Mode	On/ Off
Self Timer	3 Seconds/ 5 Seconds
White Balance	Auto/ Sunny/ Cloudy/ Tungsten/ Fluorescent

Filter Effects

Color/ Sepia/ Mono/

MULTIMEDIA

Negative/ Vivid None/ Sound 1/Sound 2 Shutter Sound On/ Off

Note

Template

When the Flash is On, take the photo within 12 inches of the subject.

- 3. Take a picture by pressing ON.
- 4. Press OK Save.

The picture is stored in Camera Gallery.

Using the Side Camera Key

You can use the Side Camera Key a to initiate the camera.

- 1. Press the Side Camera Key for about 3 seconds to enter the Take Picture mode.
- 2. Take a picture by pressing Side Camera Key

2. Record Voice

Allows you to add, listen to, and erase short verbal reminders.

- 1. Press Left Soft Key (1, 4^{shi}), 2^{shc}.
- 2. Press or Record to record a new voice memo.
- 3. Talk into the microphone, then press **Stop**. The default memo title is the date and time of recording.
- 4. While the highlight is still on the recording, press Right Soft Key 💽 Options to access the following:

Set As/ Rename/ Delete

CONTACTS

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 500).

Access and Options

- 1. Press Left Soft Key 🥑 [Menu].
- 2. Press **5** M Contacts.
- 3. Select a submenu.



Contacts
 New Contact
 Contact List
 Groups
 Speed Dials
 Mu Name Card

- 1. New Contact
- 2. Contact List
- 3. Groups
- 4. Speed Dials
- 5. My Name Card

1. New Contact

Allows you to add a new contact to your Contacts.

Note

Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

- 1. Press Left Soft Key 🖉 , **5** , **1** .
- 2. Enter the name, then press \bigcirc .
- 3. Select the information you want.
- 4. Enter the number, then press 🞯.
- 5. Continue saving the entry as necessary.

Download from Www.Somanuals.com. All Manuals Search And Download.

52

CONTACTS

2. Contact List

Allows you to view your Contacts list.

- 1. Press Left Soft Key 🖸 , 🚺 , 🛛 abc .
- 2. Options from here:
 - Press (to scroll through your Contacts alphabetically.
 - Press Right Soft Key Difference Options to select one of the following:

Send Message/ Delete/ Edit/ Delete All/ Send via Bluetooth

• Press Left Soft Key 🖉 New to store new contact information.

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

- 1. Press Left Soft Key 🥑 , 5 🛤 , 3 🔤 .
- 2. Options from here:
 - Use 🗇 to highlight a group to view, then press 🞯 .
 - Press Left Soft Key Members to add a new member to the group.
 - Use () to highlight a group, then press Right Soft Key () Options to change the name of the group or delete the group.

Delete/ Send Message/ Rename Group/ Set Ringtone/ Delete All

CONTACTS

4. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

- 1. Press Left Soft Key 🖉 , 5 🕅 , 4 🖬 .
- 2. Use (2) to highlight the Speed Dial position (or enter the Speed Dial digit), then press (8).
- 3. Use \bigcirc to highlight the Contact.
- 4. Use \bigcirc to highlight the number, then press \oslash .
 - A confirmation message is displayed.

5. My Name Card

Allows you to view all of your personal Contact information including name, phone numbers, and email address.

- 1. Press Left Soft Key 🧭 , 互 🕅 , 互 🕅 .
- 2. Use \bigcirc to select the feature you want to edit.
- 3. Edit the information as necessary and press .

Note

You cannot edit phone number, but you can add an additional phone number.

RECENT CALLS

Recent Calls

The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note

To view a quick list of all your recent calls, press Send Key $\[ensuremath{\bowtie}\]$ from standby mode.

Access and Options

- 1. Press Left Soft Key 🖉 Menu.
- 2. Press 6mm Recent Calls.
- 3. Select a submenu.



- 1. Missed
- 2. Received
- 3. Dialed
- 4. Data

Recent Calls 1 Missed 2 Received Dialed All Calls Call Timer 🖬 Data Counter I OK

- 5. All Calls
- 6. Call Timer
- 7. Data Counter

1. Missed

Allows you to view the list of missed calls; up to 30 entries.

```
1. Press Left Soft Key 🖉 , 6mm , 1.
```

2. Use 💭 to highlight an entry.

2. Received

Allows you to view the list of incoming calls; up to 30 entries.

1. Press Left Soft Key 🖉 , 6mno , 2abo .

2. Use \bigcirc to highlight an entry.

RECENT CALLS

3. Dialed

Allows you to view the list of outgoing calls; up to 30 entries.

- 1. Press Left Soft Key 🖉 , 6mmo , 3def .
- 2. Use 💭 to highlight an entry.
- Press Send Key way to place a call to the number.
- Press Right Soft Key Delete/ Call/ Delete All/ View Timer.

4. Data

Allows you to view the list of data calls; up to 30 entries.

- 1. Press Left Soft Key 🖉 , 6 mmo , 4 shi .
- 2. Use 🔘 to highlight an entry.

5. All Calls

Allows you to erase selected call list(s).

- 1. Press Left Soft Key 🖉 , 6mm , 5 📧 .
- 2. The history of all calls are displayed.

6. Call Timer

Allows you to view the duration of selected calls.

- 1. Press Left Soft Key 💽 , 6mno , 6mno .
- 2. Use \bigcirc to highlight a call list, then press \bigotimes .

Last Call/ Home Calls/ Roam Calls/ All Calls

7. Data Counter

Allows you to view the list of received and transmitted data calls.

- 1. Press Left Soft Key 💽 , 6mm , 7mm .
- 2. Use \bigcirc to highlight a data call list, then press \bigotimes .

Received Data/ Sent Data/ All Data

RECENT CALLS

MY MEDIA

My Media

This menu allows you to use a wide variety of images, sounds, and more.

Access and Options

- 1. Press Left Soft Key 🖉 Menu.
- 2. Press **7**^{pres} My Media.
- 3. Select a submenu.



My Media
 Image
 Audin

1. Image 2. Audio

1. Image

Allows you to select images to customize your phone's Main Screen, Front Screen, or Picture ID.

- 1. Press Left Soft Key 🥂 , **7**^{Pers} , **1**.
- Select Camera Gallery/ Downloaded/ Default then press (8).
- 3. Select the image you want to display.

2. Audio

Allows you to choose audio clips.

- 1. Press Left Soft Key 🧭 , 🔽 🕫 .
- Select Recorded Audio/ Downloaded/ Default then press (0).

TOOLS

Tools

Your phone tools include a Voice Command, Calendar, Alarm Clock, My Menu, World Clock, Notepad, Calculator, Ez Tip Calc, Stopwatch and Unit Converter.

Access and Options

- 1. Press Left Soft Key 🖉 Menu.
- 2. Press 8 w Tools.
- 3. Select a submenu.



Tools

OK

1 Voice Command 2 Calendar

🕄 Alarm Clock 🚺 My Menu

World Clock
 Notepad

- Voice Command
 Calendar
- 3. Alarm Clock
- 4. My Menu
- 5. World Clock
- 6. Notepad
- 7. Calculator
- 8. Ez Tip Calc
- 9. Stopwatch
- 0. Unit Converter

1. Voice Command

Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu also includes feature for those who are driving or blind. It delivers time information by voice and allows you to check missed calls, messages and voicemails.

- 1. Press Left Soft Key 🖉, 🛚 🗤 , 🗂 🚨 .
- 2. When prompted, say "Call Someone".
- When prompted, say the name of the Contact you want to call. The phone will ask you to confirm the name before dialing.

Call Someone/ Digit Dial/ Voicemail/ Missed Calls/ Messages/ Time & Date

2. Calendar

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

- 1. Press Left Soft Key 🖸 , 🛚 🗤 , 🖢 .
- 2. Use \bigcirc to highlight the scheduled day.
 - Moves cursor to the left.
 - Moves cursor to the right.
 - Moves to the previous week.
 - Moves to the next week.
- 3. Press Left Soft Key 🧷 New.
- 4. Enter your schedule information including:
 - Time

- Topic
- Reminder
- RepeatRingtone
- Set Period
- 5. Press 🞯 Save.

3. Alarm Clock

Allows you to set one of five alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, Alarm 1 (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

- 1. Press Left Soft Key 🕐 , 🛚 🗤 , 🖪 🗤 .
- 2. Use \bigcirc to highlight the alarm number.
- 3. Set the time for alarm.
- 4. Use 💭 to highlight Repeat (recurring setting).
- 5. Press \bigcirc to select one of the following.

Once/ Daily/ Mon - Fri/ Weekends

- Use ♥ to highlight Set Period(ring type setting) and press Left Soft Key
- 7. Use Stock to highlight Ringtone, press Left Soft Key
 Set and select a ringtone.
- 8. Press 🞯 Save.

TOOLS

4. My Menu

Lets you access to favorite menu quickly by customizing my menu. Max 12 items can be stored in My Menu.

- 1. Press Left Soft Key 🧭 , 🛚 🛚 🖉 , 🔒 🗤 , 🖕
- 2. Select the menu of your choice by using (), then press ().
- 3. Select the Menu to add to My Menu with (\$\overline\$), then press (\$\verline\$).

5. World Clock

Allows you to determine the current time in another time zone or country.

- 1. Press Left Soft Key 🖉 , 🛚 🗤 , 🗗 .
- Press Right Soft Key
 Cities to move the time bar across the world map and display the date/time in that location.
- 3. Press Left Soft Key 🖉 Set DST.

6. Notepad

Allows you to add, read, edit, and erase notes to yourself.

- 1. Press Left Soft Key 🥑 , 🛚 🗤 , 🍐 🚥 .
- 2. Press Left Soft Key 🧭 New to write a new note.
- 3. Type the note, then press 🛞.

A confirmation message displays briefly, then displays your list of notes.

Viewing a Notepad Entry

- 1. Access Notepad and highlight the entry.
- 2. To erase, press Right Soft Key 🕥 Options.
 - 1 Delete
 - e 2ªbo Edit
 - 3 or Delete all

To edit highlight the entry, then press **Wiew** and press Left Soft Key **C Edit**. Or press Right Soft Key **D Options** and **Z Edit**.

7. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the fifth decimal place.

1. Press Left Soft Key 🧭 , 🛚 🗤 , 🏹 .

2. Enter data.

- Use keypad to enter numbers.
- Use \star to enter decimals.
- Press Left Soft Key 🖉 to clear the entry.
- Press Right Soft Key

 to enter operator.
- Use Navigation Keys to enter functions.
- Press 🞯 to complete equation.

8. Ez Tip Calc

Allows you to quickly and easily estimate the initial amounts for a bill with the calculated amount of the bill, the amount and percentage of the tip, and the number of people as variables.

1. Press 🧭 , 🛚 🗤 , 🖉 tuv .

9. Stopwatch

Stopwatch is available just as common stopwatches we see and use in daily life.

- 2. Press 🐼 Start to start, and press 🐼 Stop to stop.
- 3. Press Left Soft Key 🥖 Reset to reset.

0. Unit Converter

Allows you to measure Length, Area, Mass, Volume and Temperature.

1. Press Left Soft Key 🖉 , 🛽 🛚 🗤 , 🖉 🚥 .

Settings

The Settings Menu has options to customize your phone.

Access and Options

- 1. Press Left Soft Key 🕑 Menu.
- 2. Press 9 vvvz Settings.
- 3. Select a submenu.



Settings

Sound
 Display

Security Call Settings

5 System

Data Settings OK

- 1. Sound
- 2. Display
- 3. Security
- 4. Call Settings
- 5. System
- 6. Bluetooth®
- 7. Memory
- 8. Phone Info.

1. Sound

Options to customize the phone's sounds.

1.1 Ringers

Allows you to assign ringtones for incoming calls.

- 1. Press Left Soft Key 🧭 , 9***** , 1. , 1. .
- 2. Select All Calls/ Caller ID/ No Caller ID/ Restricted Calls.
- 3. Use \bigcirc to select a ringer, then press \bigotimes .

1.2 Volume

Allows you to set various volume settings.

- 1. Press Left Soft Key 🥑 , 🤊 🗤 , 1 💩 , 2 🗤 .
- 2. Select Master Volume/ Key Tone Volume/ Earpiece Volume/ Specker Volume.
- 3. Use (a) to adjust the volume of the ringer, then press (b) to save the setting.

1.3 Message Alerts

Allows you to select the alert tones type for a new message.

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 12, 3^{def} .
- Select Text Messages/ Picture Messages/ Voicemail/ All Messages/ Message Reminder.
- 3. Use \bigcirc to select a setting, then press \bigotimes .

1.4 Alert Type

Allows you to select the alert types.

- 1. Press Left Soft Key 🥑 , 🤊 🗤 , 1 🍰 , 4 🕬 .
- 2. Select a tone style, then press .

Call Alert/ Message Alert/ Schedule Alert/ Alarm Alert

1.5 Service Alerts

Allows you to set any of the 5 Alert options to On or Off.

1. Press Left Soft Key 🧭 , 9**** , 1. , 5 🕅 .

2. Select an alert option.

1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.5.2 Call Connect

Alerts you when the call is connected.

1.5.3 Back To Top

Alerts you when you scroll to the end of a menu list.

3. Use \bigcirc to set On/ Off, then press \bigotimes .

1.6 Power On/Off Tones

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Press Left Soft Key 💽 , 9^{wxyz} , 1.8 , 6^{mno} .

2. Use \bigcirc to set to On/ Off, then press \bigotimes .

2. Display

Options to customize the phone's display screen.

2.1 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.

- 1. Press Left Soft Key 🗹 , 9^{wxyz} , 2^{abc} , 12.
- 2. Select Main Screen/ Front Screen, then press .
- 3. Select the desired picture, then press 🞯.

4. Press 🞯.

5. Left Soft Key 🖉 Set.

2.2 Banner

Allows you to enter a string of up to 12 characters which will display on the LCD screen.

- 1. Press Left Soft Key 🧭 , 🤊 🛛 , 🛛 2 = bc , 2 = bc , 2 = bc .
- 2. Select Main Screen/ Front Screen.
- 3. Enter your banner text, then press \odot .

2.3 Backlight

Allows you to set the duration for illuminating the backlight.

1. Press Left Soft Key 🧭 , 9 wxyz , 2 abc , 3 def .

2. Choose a submenu, then press **O**8.

Main Screen/ Front Screen/ Keypad

2.4 Menu Styles

Allows you to view the Menu as an Icon or List display.

1. Press Left Soft Key 🥑 , 9^{wxyz} , 2^{sbc} , 4^{shi} .

2. Select Icon or List and press I.

2.5 Languages

Allows you to set the bilingual feature according to your preference. Choose between English and Spanish.

1. Press Left Soft Key 🧭 , 9wxyz , 2abc , 5 jki .

2. Use 🗇 to select English or Spanish, then press .

2.6 Dial fonts

Allows you to set the size and color of the font only for calling digits and text editor.

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 2^{abc} , 6^{mno} .
- 2. Select a submenu.

Normal/ Large

3. Press (2) to choose a setting, then press (3) to save.

2.7 Clocks

Allows you to select the type of clocks displayed on the main LCD or sub LCD.

- 1. Press Left Soft Key 🥑 , 🥊 😗 , 🛛 🖕 , 🖓
- 2. Choose a Clock submenu and press .

Main Screen/ Front Screen

3. Use \bigcirc to set desired clock display.

2.8 Color Schemes

Allows you to choose the color of the background screen.

1. Press Left Soft Key 🥑 , 🦻 wxyz , 🛛 2 abc , 🛚 8 tuv .

2. Select Style 1/ Style 2/ Style 3, then press .

3. Security

The Security menu allows you to secure the phone electronically.

3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.

You can modify the lock code by setting a New Lock code within the Security menu.

- 1. Press Left Soft Key 🥑 , 9^{wxyz} , 3^{def} .
- 2. Enter the four-digit lock code and press \odot .

The default lock code is commonly the last 4 digits of your phone number.

- 3. Press 1. Lock Phone.
- 4. Use \bigcirc to select an option, then press \bigotimes .
 - Unlock The phone is never locked (Lock mode can be used).
 - Lock The phone is always locked. When locked, you can receive incoming calls and make only emergency calls.

Download from Www.Somanuals.com. All Manuals Search And Download.

On Power Up

The phone is locked when it is turned on.

3.2 Restrict Call

Allows you to restrict incoming and/or outgoing calls.

Note

You can receive the incoming calls from saved contacts on your phone.

1. Press Left Soft Key 🖉 , 9^{wxyz} , 3^{def} .

- 2. Enter the four-digit lock code and press .
- 3. Press **2**^{abc} Restrict Call.
- 4. Use 💭 to select 1 On/ 2 Off, then press 🚳.

3.3 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press Left Soft Key 🖉 , 9^{wxyz} , 3^{def} .

- 2. Press **3**^{def} **Emergency #s**.
- 3. Press 🛞 to edit the emergency numbers.

3.4 Change Lock Code

Allows you to enter a new four-digit lock code.

- 1. Press Left Soft Key 🖉 , 9^{wxyz} , 3^{def} .
- 2. Enter the four-digit lock code and press 🞯.
- 3. Press **4** Change Lock Code.
- 4. Enter a new 4-digit lock code and press 🞯.
- 5. For confirmation, it will ask you to enter the new lock code again.

3.5 Reset Default

Allows you to reset your phone to the factory default settings.

- 1. Press Left Soft Key 🧭 , 🦻 🛛 , 3 def .
- 2. Press **5** Reset Default.
- 3. Read the instruction and press or to continue.
- A message pops up that reads all settings will revert to factory default and select Revert/ Cancel.

4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

4.1 Answer Options

Allows you to determine how to handle an answered call.

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 4^{shi} , 1.
- 2. Use \bigcirc to select a setting, then press \bigotimes .

Flip Open/ Any Key/ Send Only/ Auto Answer

4.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

- 1. Press Left Soft Key 🕜 , 9^{wxyz} , 4^{ghi} , 2^{abc} .
- 2. Use \bigcirc to select a setting, then press \odot .

Off/ Every 10 Seconds/ Every 30 Seconds/ Every 60 Seconds

4.3 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press Left Soft Key 🧭 , 9 wxyz , 4 ghi , 3 def .

2. Use \bigcirc to select a setting, then press \bigotimes .

On/ Off

4.4 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Press Left Soft Key 🥑 , 9^{wxyz} , 4^{ghi} , 4^{ghi} .

2. Use \bigcirc to select a setting, then press \bigotimes .

Enhanced/ Standard

4.5 Auto Volume

Provides a better audio experience by enabling the Auto Volume feature to control the dynamic range and volume of the sending and receiving voice across different levels of speaker and environments.

- 1. Press Left Soft Key 💽 , 9^{wxyz} , 4^{ghi} , 5^{jkl} .
- 2. Use \bigcirc to select a setting, then press \bigotimes .

On/ Off

4.6 Application Mode

Allows you to use the general application and restricts the output of RF communication.

- 1. Press Left Soft Key 💽 , 9^{wxyz} , 4^{ghi} , 6^{mno} .
- 2. Read the instruction and press is to continue.
- 3. Use \bigcirc to select a setting, then press \bigotimes .

On/ Off

4.7 TTY Mode

Allows you to attach a TTY (Teletype writer) device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press Left Soft Key 🗹 , 9^{wxyz} , 4^{ghi} , 7^{pqrs} .

- 2. Read the instruction and press is to continue.
- 3. Use \bigcirc to select a setting, then press \bigotimes .

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

5. System

The System menu allows you to designate specific system network settings.

5.1 Network

5.1.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

- 1. Press Left Soft Key 🖉 , 9**** , 5 🛤 , 1 🎂 , 1 🎂 .
- 2. Use (a) to select Home only/ Automatic A/ Automatic B, then press (8).

5.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

- 1. Press Left Soft Key 🧭 , 🦻 🖓 , 5 jkl , 1 🎂 , 2 abc .
- 2. Use (C) to select NAM1 or NAM2, then press (R).

5.1.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

Press Left Soft Key
 , 9^{mm}, 5^{ml}, 1.
 , 3^{eel}.
 Use to select On or Off, then press ^(N).

5.1.4 Serving System

Identifies the channel number of a system that is served as a SID Number. This information should only be used for technical support.

1. Press Left Soft Key	! ,	9 ^{wxyz} ,	5 jki ,	1.8,	4 ^{ghi} .
------------------------	------------	---------------------	---------	------	--------------------

5.2 Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press Left Soft Key 🧭 , 9^{wxyz} , 5^{jkl} , 2^{abc} .

2. Use \bigcirc to select a setting, then press \bigotimes .

Location On/ E911 Only

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

6. Data Settings

This menu allows you to use wireless data communication services. Wireless data communication services refers to the utilization of subscriber terminals for access to the internet with personal computers or laptops at 19.2 Kbps or at a maximum of 230.4 Kbps. The connection speed depends on your carrier's network and other variables. Check that communications information specifications match the network.

6.1 PC Connection

Allows you to select the data port.

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 6^{mno} , 1.
- 2. Use (a setting, then press (b).

USB/ RS-232C(COM Port)/ Bluetooth/ Closed

6.2 Mode (1X/QNC)

This is setting enables you to set the speed for WAP, BREW and Tethered Mode.

- 1. Press Left Soft Key 🥑 , 9^{wxyz} , 6^{mno} , 2^{abc} .
- 2. Use (a setting, then press (b). Auto/ 1x only/ QNC only

6.3 PPP ID

It is the user's ID for PPP Authentication Protocol.

1. Press Left Soft Key 🧭 , 9^{wxyz} , 6^{mno} , 3^{def} .

6.4 PPP Password

It is the user's password for PPP Authentication Protocol.

1. Press Left Soft Key 🥑 , 🤊 🐨 , 🖌 🕯 .

SETTINGS

7. Bluetooth®

The LG245 is compatible with devices that support the *Bluetooth* headset and hands-free profile(s)*. You may create and store 20 pairings within the LG245 and connect to one device at a time. The approximate communication range for *Bluetooth* wireless technology is up to 30 feet (10 meters).

Note

Read user guide of each *Bluetooth* accessory that you are trying to pair with your phone because the instructions may be different.

SETTINGS

Note

The *Bluetooth* features of this handset may not be compatible with all devices which are *Bluetooth* enabled; your service provider or handset manufacturer cannot be responsible for compatibility with devices not sold by the service provider or handset manufacturer.

7.1 Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

For pairing new Bluetooth® device

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 7^{pqrs} , 1.
- 2. Follow the *Bluetooth* accessory instructions to set the device to pairing mode.
- 3. Press **1** for paired Devices and press the Left Soft Key **1** for **Search**. Select New Search and press **1**.
- 4. If *Bluetooth* power is set to off, you will be prompted to turn power on. Select Yes **1**. and press **(R)**.
- The device will appear in the Found Devices menu once it has been located. Highlight the device and press (19).
- The handset will prompt you for the passkey. Consult the *Bluetooth* accessory instructions for the appropriate passkey (typically "0000" - 4

zeroes). Enter the passkey and press 🞯.

- 7. Once pairing is successful, select Yes 1. and press (3) to connect with the device.
- Once connected, you will see the device listed in the Paired Devices menu and the *Bluetooth* connected icon will show up on your idle screen.

7.2 Power

Allows you to set the power On/Off.

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 7^{pqrs} , 2^{abc} .
- Use ⁽♥) to select a setting, then press ⁽𝔅).
 On/ Off

Note

By default, your device's *Bluetooth* functionality is turned off.

7.3 My Visibility

Allows you to set Yes/No.

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 7^{pqrs} , 3^{def} .
- 2. Use (C) to select a setting, then press (R). Visible/ Hidden

Note

If you turn on My Visibility, your device is able to be searched by other in-range *Bluetooth* devices.

7.4 Bluetooth Name

Allows you to edit the name of the Bluetooth device.

- 1. Press Left Soft Key 🧭 , 9^{wxyz} , 7^{pqrs} , 4^{ghi}.
- 2. Hold down **BACK** to clear the existing name.
- 3. Use the numeric keypad to enter a new custom name.
- 4. Press 🞯 to save and exit.

7.5 Bluetooth Info

Allows you to view the information of the Bluetooth.

1. Press Left Soft Key 🧭 , 🦻 wxyz , 🍞 Pars , 5 🗷 .

SETTINGS

8. Memory

Allows you to check out the memory status of your phone.

- 1. Press Left Soft Key 🖉 , 9^{wxyz} , 8^{tuv} .
- Select Memory Status/ Media Status/ User Memory.

9. Phone Info.

The Phone Info. menu provides you with specific information pertaining to your phone model.

- 2. Select a submenu.

My Number/ SW Version/ Icon Glossary

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) * NCRP Report 86 (1986) ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection. Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently: Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment

may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! Violation of the instructions may cause minor or serious damage to the product.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.

- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

 Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.

- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The

magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text

messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.

- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Warning! Important safety information

Avoiding hearing damage Permanent hearing loss may occur if you use your headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

• Limit the amount of time you use headset at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your handset, please refer to the features guide for your handset.

Using headsets safely Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Avoiding hearing damage Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

 Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to handheld wireless phones with built-in antennas, often called "cell", "mobile", or "PCS" phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user's head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly

with increasing distance from the source. The socalled "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancercausing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the

conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one

exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (http://www.fcc.gov/oet/rfsafety) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (http://www.fda.gov/cellphones/)

Federal Communications Commission (FCC) RF Safety Program (http://www.fcc.gov/oet/rfsafety)

International Commission on Non-Ionizing Radiation Protection

(http://www.icnirp.de)

World Health Organization (WHO) International EMF Project

(http://www.who.int/emf)

National Radiological Protection Board (UK) (http://www.hpa.org.uk/radiation/)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.

- 3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- 4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

- 6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
- 7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency.

Remember, it's a free call on your wireless phone!

- 9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
- 10. Call roadside assistance or a special wireless nonemergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you

consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although

SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.27 W/kg and when worn on the body, as described in this user guide, is 0.731 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID BEJVX5300. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at http://www.ctia.org/

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

 
While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National

Standards Institute (ANSI) C63.19 standard.

When you're talking over the cell phone, it's recommended you'd turn the *Bluetooth* mode off for HAC.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/dro/hearing.html

Gallaudet University, RERC

http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm

HLAA (Hearing Loss Association of America)

http://www.hearingloss.org/learn/cellphonetech.asp

The Hearing Aid Compatibility FCC Order http://hraunfoss.fcc.gov/edocs_public/attachmatc

http://hraunfoss.fcc.gov/edocs_public/attachmatc h/FCC-03-168A1.pdf

ACCESSORIES

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Battery Charger

The battery charger allows you to charge your phone.



Battery

Standard battery is available.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



Battery Pack Charger

The battery pack charger allows you to charge the battery pack itself without the phone.



LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.

- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.

- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

LIMITED WARRANTY STATEMENT

3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LGE MOBILECOMM USA INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit http://us.lgservice.com. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

INDEX

123 (Numbers) Mod	e 22	Battery Charge Level Battery Charger	17 95	Changing Letter Case Charger Port	23 13	E Earphone Jack	13
Α		Battery Pack Charger	95	Charging the Battery	16	Earpiece	13
Abc (Multi-tap) Mod Airplane Mode Alarm Clock Alert Type All Calls Alphanumeric Keypad Answer Options Audio	69 59 63 56 13 68 57	Bluetooth Info Bluetooth Name Bluetooth® Bodily Contact During Operation Calculator	73 73 72 12 61	Clear Clocks Color Schemes Contact List Contacts Contacts in Your Phon Memory Correcting Dialing Mis	25	Editive Editing Contacts Entries Emergency #s END/PWR Key Entering and Editing Information Entry Mode Ez Tip Calc	13 43 27 67 13 22 43 61
Auto Delete Auto NAM	43 70	Calendar Call Connect	59 63				01
Auto Retry	70 68	Call Settings	68	D		F	
Auto Save Auto Volume	43 69	Call Timer Call Waiting Caller ID	56 21 21	Data Data Counter Delete All	56 56 44	FCC Part 15 Class B Compliance FCC RF Exposure	9
В		Camera Key	13	Deleting	29	Information	12
BACK Key Back To Top Backlight Banner	13 63 64 64	Camera Lens Caps Lock (T9WORD/ ABC) Caution Change Lock Code	13 23 12 67	Dial fonts Dialed Display Drafts	65 56 64 42	Flash Flip G	13 13
Battery	16, 95	5				Getting Started with Y	our

INDEX

INDEX

Phone	16
Groups	53
Image	57
Important Informatio	n 9
IMPORTANT SAFETY	
PRECAUTIONS	1
Inbox	40
Initial Cap	27
(T9Word/ Abc)	23
Installing the Battery	16
К	
Key Functions	22
L	
Languages	64
LCD Screen	13
Left Soft Key	13, 22
Location	70
Lock Mode	20
Lock Mode Key	13

Lower Case (T9word/ abc)	
М	
Making Calls	
Manner Mode Key	1
Memory	
Menu Access	
Menu Style	
Menus Overview	
Message Alerts	
Messaging	
Microphone	
Minute Beep	
Missed	
Multimedia	
Mute Function	

My Media

My Menu

My Name Card

My Visibility

Lock Phone

N Navigation Key Network New Contact New Picture Message New Text Message Next Notepad One-Touch Dial **Outside Display** Ρ Paired Devices Phone Info. Phone Overview Picture-Auto Receive Power Power On/Off Tones

Q

Quick Access to	
Convenient Features	20
Quick-Text	43

R

Received	55
Receiving Calls	19
Recent Calls	55
Record Voice	51
Redialing Calls	19
Removing the Battery	16
Reset Default	67
Restrict Calls	66
Right Soft Key	13
Ringers	62

S Screen Icons Security Sent Service Alerts Serving System

C -+ NIANA	70	Tesla	г о	W/- I
Set NAM	70	Tools	58	Welcome
Settings	43,62	TTY Mode	69	World Clock
Shift	22	Turning the Phone On		
Side Keys	13	Off	17	
Signal Strength	18			
Sound	62	U		
Space	22	Unit Converter	61	
Speed Dialing	21	Using Phone Menus	34	
Speed Dials	54	8	•	
Symbols Mode	23	V		
System	70	·		
System Select	70	Vehicle Power Charger	95	
		Vehicle-Mounted Extern		
Т		Antenna	12	
		Vibrate mode	20	
T9Word (T9) Mode		Voice Command	58	
Table of Contents	4	Voice Command Key	13	
Take Picture	50	Voice Privacy	68	
Technical Details	10	Voicemail	42	
Text Input	22	Volume	62	
Text Input Examples	23	Volume Quick		
Text Input Modes	22	Adjustment	20	
Text Signature	44			
Text-Auto Play	44	W		
Text-Auto View	43		64	
Text-Callback #	43	Wallpaper	64	

9 60 Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com