



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

LG-A133CH User Guide | ENGLISH

Congratulations on your purchase of the advanced and compact LG-A133CH phone by LG, designed to operate with the latest digital mobile communication technology.

Your new LG-A133CH provides enhanced call quality through LG's voice and sound engine which automatically adjusts listening level and improves speech quality by removing background noise from incoming calls.

Contents

For Your Safety	5	Messaging	62
Safety Guidelines.....	14	Create Message	62
Getting to know your phone.....	43	Inbox	64
Getting started.....	44	My Mailbox	65
Installing the SIM and battery	44	Drafts	66
Installing a memory card	47	Outbox	66
Your Home screen	48	Sent Items.....	66
On-Screen Icons	48	Saved Items	66
General functions	49	Emoticons	66
Making a call	49	Message Settings	66
Making a Call with the Send Key	49	Contacts.....	71
Making International Calls	49	Names	71
Ending a Call	50	Settings.....	71
Making a Call from the Contacts.....	50	Groups	72
Answering a Call.....	50	Speed Dials	72
Adjusting the Volume	51	Service Dial Numbers.....	73
Entering Text.....	51	Own Number	73
During a Call	55	My Business Card.....	73
Conference Calls	57	Call Log.....	74
Menu Tree	60	Call Log.....	74
		Missed Calls.....	74
		Received Calls	74
		Dialed Numbers	74
		Call Duration.....	74
		Packet Data Counter	74
		Call Costs.....	74

Contents

Settings	75	Organizer	94
Profiles.....	75	Alarm Clock.....	94
Display.....	75	Calendar	94
Dialing	75	To-Do List.....	95
Date and Time	76	Notes	96
Connectivity.....	77	Secret Notes.....	96
Call	79	Cash Book.....	96
Phone	83	BMI calculator	96
Network	83	Calculator.....	97
Internet Profiles	84	Stopwatch	97
Access Points.....	84	Date Finder	97
Packet Data Conn.	84	Converter	98
Security.....	85	World Time	98
Memory Info.....	86	Go To	98
Restore Factory Settings.....	87	Settings.....	98
My Memory Card	88	Applications	99
My Images	88	Web	100
My Sounds	88	Home	100
My Videos	88	Google Search.....	101
My games & Apps.....	88	Bookmarks.....	101
Others.....	88	Last Web Address	101
Media	89	Settings.....	102
Camera	89	Go to Address.....	103
Camcorder	90	Saved Pages	103
Music	91	Accessories	104
FM Radio.....	92	Trouble Shooting	105
Voice Recorder	92		
4 Ringtone Creator.....	93		

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

Before You Start

Safety Instructions

WARNING

To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F (0 °C) or greater than 104°F (40 °C), such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone.

For Your Safety

Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 14 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery by fire or with hazardous or flammable materials.
- Make sure that no sharp-edged items come into contact with the battery. There is a risk of this causing a fire.
- Store the battery in a place out of reach of children.
- Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- When riding in a car, do not leave your phone or set up the hands-free kit near

to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.

- Do not use a hand-held phone while driving.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- Never store your phone in temperatures less than -4°F (-20°C) or greater than 122°F (50°C).
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There

is a risk of this causing a fire.

- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- Do not use your phone in high explosive areas as the phone may generate sparks.
- Do not damage the power cord by bending, twisting, pulling, or heating.
- Do not use the plug if it is loose as it may cause a fire or electric shock.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not handle the phone with wet hands while it is being charged. It may

For Your Safety

cause an electric shock or seriously damage your phone.

- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not hold or let the antenna come in contact with your body during a call.
- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Memory card information and care

- Always insert/ remove the memory card while the handset power is off. If you remove it while the power is on, it may be damaged.
- If a damage cannot be fixed, format the memory card.
- The memory card cannot be used for recording copyright protected data.
- Do not write forcefully on the memo area.
- Carry and store the memory card in its case.
- Do not allow the memory card to get wet.
- Do not leave the memory card in extremely hot location.
- Do not disassemble or modify the memory card.

FCC RF Exposure Information



WARNING

Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

For Your Safety

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2cm) from the user's body. To comply with FCC RF exposure requirements, a minimum

separation distance of 0.79 inches (2cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used.

Body-worn accessories that cannot maintain 0.79 inches (2cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

For more information about RF exposure, visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada.

Operation is subject to the following two conditions:

(1) This device and its accessories may not cause

harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed

For Your Safety

and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions for Battery

- Do not disassemble.
- Do not short-circuit.
- Do not expose to high temperature: 60°C (140°F).
- Do not incinerate.

Battery Disposal

- Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- Using the wrong battery charger could damage your phone and void your warranty.
- The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Avoid damage to your hearing

- Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Safety Guidelines

TIA Safety Information

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a lowpower radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure

guidelines with safety levels for handheld wireless phones.

Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Safety Guidelines

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving - driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals.

However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket.

- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Safety Guidelines

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a blasting areas or in areas posted: 'Turn off two-way radio'. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, marked clearly.

Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

Safety Guidelines

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or impact the battery as it may cause electric shock, short-circuit, and fire. Store

the battery in a place out of reach of children.

- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Media Net Browsing, and data connectivity kits affect battery life and talk/standby times.

- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery)

Safety Guidelines

upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Centre to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Centre.

- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it in your ear.

FDA Consumer Update

The U.S. Food and Drug Administration Center for Devices and Radiological Health Consumer Update on Mobile Phones.

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects

Safety Guidelines

(by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2.What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies

that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration (Administración de la seguridad y salud laborales)
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some

Safety Guidelines

interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from

wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3.What kinds of phones are the subject of this update?

The term 'wireless phone' refers here to handheld wireless phones with built-in antennas, often called 'cell', 'mobile', or 'PCS' phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the

phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called 'cordless phones,' which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of

radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under

Safety Guidelines

which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures.

However, none of the studies can answer questions about longterm

exposures, since the average period of phone use in these studies was around three years.

5.What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable

to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer.

This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of

Safety Guidelines

research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and

studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures.

The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC

limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions

for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, 'Recommended Practice for Determining the Spatial-Peak Specific Absorption

Safety Guidelines

Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,' sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is

used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended

conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the

Safety Guidelines

government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was

completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a 'compatible' phone and a 'compatible' hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor

the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

Safety Guidelines

International Commission
on Non-Ionizing Radiation
Protection

(<http://www.icnirp.de>)

World Health Organization
(WHO) International EMF
Project

(<http://www.who.int/emf>)

National Radiological
Protection Board (UK)

(<http://www.nrpb.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility.

When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including

automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

- 2.** When available, use a handsfree device. A number of handsfree wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3.** Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call

at an inconvenient time, if possible, let your voicemail answer it for you.

- 4.** Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5.** Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Don't

Safety Guidelines

get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

- 6.** Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip — dial only a few numbers, check the road and your mirrors, then continue.
- 7.** Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8.** Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations — with your phone at your side, help is only three numbers away. Dial 911 or other local emergency

number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless nonemergency assistance number when necessary. Certain situations you encounter while driving

may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle. You know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website www.wow-com.com

Safety Guidelines

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent

scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can

be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.89 W/kg and when worn on the body,

as described in this user's manual, is 1.00 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.) While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID BEJA133R.

Safety Guidelines

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org>

- * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- * Product meets current FCC & IC Radio Frequency Exposure Guidelines.
FCC ID BEJA133R,
IC ID: 2703C-A133R

Getting to know your phone

Open view



Getting started

Installing the SIM and battery

1 Remove the battery cover

Use your right thumb to press on the bottom centre of the battery cover, then slide the cover upwards (as depicted below). Then, lift the cover to remove it.



2 Remove the battery

Hold the top edge of the phone and use the fingernail cutouts near the bottom of the battery to lift the battery from the phone.



⚠ WARNING: Do not remove the battery when the phone is turned on; this can damage the phone.

3 Install the SIM card

Slide the SIM card into the SIM card slot (as shown below). Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.



4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it snaps into place.



Getting started

5 Charging your phone

Unfasten the cover of the Charger/USB port on the left side of your phone. Insert the charger to the phone (the 'LG' side of the connector has to be facing down when connecting to the phone) and then plug it into the power socket. Your LG-A133CH need to be charged until the Full Battery message appears on the screen.



⚠ WARNING: Use unauthorized accessories could damage your phone and void your warranty.

⚠ Important! You must insert the battery before charging.

Installing a memory card

You can expand the memory available on your phone by using a microSD™ memory card.

TIP A memory card is an optional accessory.

- 1 Locate the microSD™ card slot on the right side of the phone. Then, use your fingernail to gently lift the cover.

The cover will remain attached to the phone to prevent it going missing.

- 2 With the microSD™ card facing up, slide it into the microSD™ card slot (as demonstrated in the following image). Push the memory card in.

- 3 Replace the slot cover on the phone.




Note This device supports a MicroSD memory card up to 16 GB.







Note Perform a backup of any existing content before formatting the memory card.

Your Home screen

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.


ICON/ INDICATOR	DESCRIPTION
	Network signal strength (number of bars will vary)
	No network signal
	Low Battery
	New text message
	New email
	An alarm is set
	Ring profile in use
	Silent All profile in use
	EDGE network available
	Bluetooth® is active


ICON/ INDICATOR	DESCRIPTION
	The browser is active
	Speakerphone
	Call in Progress
	Voicemail
	Battery Full
	Flight Mode On



General functions

Calls



Making a call

- 1 Make sure your phone is powered on.
- 2 Enter a phone number, including the area code.
To delete a number on the display screen, simply press the right soft key  key to erase one digit at a time.



TIP! Press and hold the right soft key  key to erase the entire numbers.

- 3 Press the  [SEND] key to call the number.
- 4 To end the call, press the  [END] key.

Making a Call with the Send Key


- 1 Press the  [SEND] key, and the most recent missed, dialed and received calls will be displayed.
- 2 Highlight the desired number by using the navigation keys.
- 3 Press the  [SEND] key.

Making International Calls

- 1 Press and hold the  key and the international access character '+' will appear.
- 2 Enter the country code, area code, and the phone number.
- 3 Press the  [SEND] key to call the number.


General functions



Ending a Call

To end a call, press the  [END] key.

Making a Call from the Contacts



 






You can store frequently called names and phone numbers in the SIM card as well as in the phone memory known as Contacts.

You can dial a number by simply highlighting a name in the Contacts List and pressing the  [SEND] key.

- 1 Press the  [Down] key to access the Contact List.
- 2 Highlight the Contact and press the  [SEND] key.

Answering a Call

When you receive a call, the phone displays a notification on the screen and rings and/or vibrates. If the caller can be identified, the caller's phone number (or name, if stored in your Address Book) is displayed.

- 1 Press the  [SEND] key to answer an incoming call. If the Answer Mode has been set as Any Key ( Menu >  Settings >  Call >  Answer Mode), any key press will answer a call, except for the  [END] key, the right soft key , or the volume keys .
- 2 End the call by pressing the  [END] key.

 
Note: You can answer a call while using other functions or features.

Adjusting the Volume

Use the side volume keys during a call to adjust the earpiece volume.

While in standby mode, you can adjust the Master Volume using the side volume keys.

Vibrating Mode (Quick)

Vibrating Mode can be activated by pressing and holding down the  key.

 
Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, or scheduling events in the calendar all require text to be entered.

Changing the Text Input Mode

Change the text input mode by holding down  when in a text entry field.

You can check the current text input mode in the upper right corner of the screen.

The following text input modes are available on the phone.

General functions

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter one, two, three, or four times until the letter is displayed.

T9 Mode

 
The T9 mode allows you to enter words easily with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

Note: You can select a different T9 language from the



Options menu

( **Options** > **Input method**).

123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed in the upper right corner.



Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters. To enter a symbol, press the  key. Use the navigation keys to highlight the desired symbol and press the centre key .



Using the T9 Mode


The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses.

 

As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.



1 When you are in the T9 predictive text input mode, begin entering a word by pressing keys  to . Press one key per letter.

- The word changes as letters are typed - ignore what is displayed on the screen until the word is typed completely.
- If the word is still incorrect after typing completely,

press the  key or the right soft key  Next once (or more if needed), to cycle through the other word options.

- If the desired word is missing from the word choices list, press the left soft key  Add to Dictionary to add the word.




- 2** Enter the whole word before editing or deleting any keystrokes.
- 3** Complete each word with a space by pressing the  key or the right navigation key .

To delete letters, press . Press and hold down  to erase all of the entered text.

General functions

Using the ABC Mode

Use the alphanumeric keypad to enter your text.

- 1 Press the key labeled with the required letter:
 - Once for the first letter.
 - Twice for the second letter.
 - And so on.
- 2 To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase all of the entered text.


Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	., '@?!-:/1	., '@?!-:/1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)

Note: Refer to the table below for more information on the characters available using the keys.

 
Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly. Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

T9 Dictionary


 
The T9 Dictionary is a feature that allows the user to add any unique or personal words to the T9 standard language database. The T9 Dictionary function can be found in the **Options** menu ( **Options** > **Add to Dictionary**). With the T9 Dictionary function, the user can add, modify, delete, or reset personal words.

During a Call

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key  **Options**.

Making a Second Call


 
You can select a number you wish to dial from the Address Book to make a second call.

- 1 Press the left soft key  **Options**, then select **Contacts**.
- 2 Highlight the contact, then press the left soft key  **Options** and then select **Make Call** to make a second call.


General functions

Swapping Between Two Calls


Once the second call has been dialed (or answered), you can switch between the calls by using one of the following three methods:

- 1 Press the  [SEND] key.
- 2 Press the left soft key  **Options** and then select “Swap”.
- 3 Press Up/Down on the navigation key.


Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  [SEND] key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece and the display will show that a second call is



waiting. This feature, known as Call Waiting, is only available if your network supports it.

If Call Waiting is turned on, you can put the first call on hold and answer the second call by pressing the  [SEND] key.


Rejecting an Incoming Call


You can reject an incoming call without answering by simply pressing the  [END] key.

Muting the Microphone

You can mute the microphone during a call by pressing the right soft key  **Mute**. The handset can be unmuted by pressing the right soft key  **Unmute**. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the centre key . The loudspeaker is automatically deactivated when you end the call.

 **Warning** Due to increased volume levels, do not place the phone near your ear while the speakerphone is enabled.

Conference Calls



The conference call feature provides you with the ability to have a simultaneous conversation with more than one caller. The conference call feature can be used only if your network service provider supports this feature.

Once a conference call is set up, calls may be added, disconnected (**Exclude Call** option allows you to select a call to disconnect from the conference call), or separated (**Private Call** option allows you to separate a call from the conference call, but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu.

 
The maximum number of callers in a conference call is five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

General functions

Making a Second Call

You can make a second call while currently on a call simply by entering the second number with the keypad and pressing the  [SEND] key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the  [SEND] key.

 
Setting Up a Conference Call

To set up a conference call, place the first call. Once that is connected, follow the steps above to make a second call. You can then join the two separate calls by pressing the left soft key  **Options**, selecting **Conference**.


Place the Conference Call on Hold

To place a conference call on hold, press the  [SEND] key.


Adding an Incoming Call to the Conference Call

To add an incoming call to an existing conference call, press the left soft key  **Accept**, select **Conference**, and then select **Join Calls**.

Private Call in a Conference Call

To have a private call with one of the callers in the conference call, press the left soft key  **Options**, and then **Private Call**. When the numbers of the callers are displayed, select the one with which you wish to speak in private.

Ending a Conference Call

An active conference call can be disconnected by pressing the  [END] key.

Menu Tree

1 Messaging

- 1 Create Message
- 2 Inbox
- 3 My Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent Items
- 7 Saved Items
- 8 Emoticons
- 9 Message Settings

2 Contacts

- 1 Names
- 2 Settings
- 3 Groups
- 4 Speed Dials
- 5 Service Dial Numbers
- 6 Own Number
- 7 My Business Card

3 Call Log

- 1 Call Log
- 2 Missed Calls
- 3 Received Calls
- 4 Dialed Numbers
- 5 Call Duration
- 6 Packet Data Counter
- 7 Call Costs

4 Settings

- 1 Profiles
- 2 Display
- 3 Date and Time
- 4 Connectivity
- 5 Call
- 6 Phone
- 7 Network
- 8 Internet Profiles
- 9 Access Points
- 10 Packet Data Conn.
- 11 Security
- 12 Memory Info
- 13 Restore Factory Settings

5 Gallery

- 1 My Memory Card
- 2 My Images
- 3 My Sounds
- 4 My Videos
- 5 My games & Apps
- 6 Others

6 Media

- 1 Camera
- 2 Camcorder
- 3 Music
- 4 FM Radio
- 5 Voice Recorder
- 6 Ringtone Creator

7 Organizer

- 1 Alarm Clock
- 2 Calendar
- 3 To-Do List
- 4 Notes
- 5 Secret Notes
- 6 Cash Book
- 7 BMI calculator
- 8 Calculator
- 9 Stopwatch
- 10 Date Finder
- 11 Converter
- 12 World Time
- 13 Go To
- 14 Settings

8 Applications

- 1 My games & Apps
- 2 Settings


 
 

9 Web

- 1 Home
- 2 Google Search
- 3 Bookmarks
- 4 Last Web Address
- 5 Settings
- 6 Go to Address
- 7 Saved Pages

Messaging

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Voicemail as well as the network's service messages.

Create Message

 
- 1 Open the flip, press  [Menu].
- 2 Press  **Messaging**.
- 3 Press  **Create Message**.
- 4 Press  **Message**.

Note: If you insert a Picture, Audio, or Video file while writing a multimedia message, the file loading time will take about 5 seconds. You will not be able to activate any key during the file loading time. When the file loading is complete, you will be able to write a multimedia message.

Message

Customizing the Message

- Editing Text

- 1 Press the left soft key  Options.
- 2 Select the options to customize.

Insert: You can insert To Do, Text Template, Image, Video, Sound Clip, Schedule, Business Card, Note or Text Field.

Add Recipient: You can add recipients as To, Cc and Bcc.

Add Subject: You can add the Subject field in the text message.

Clear Field: You can delete in the selected field.

Insert Contact Detail: You can insert the selected contact details from the contact list.

Insert Symbol: You can insert various symbols into your message.

Insert Emoticon: You can insert various emoticons into your message.

Input method: You can set the text input mode to T9, Abc and 123 Mode.

Writing Language: You can change the language Input mode on your phone.

Add to Dictionary: You can add words to the dictionary.

Change to Multimedia: You can change the text message to the multimedia message.

Save Message: You can save the message as a draft message, saved message or a template.

Sending Options: You can set the options of Priority, Request Delivery Report, Save


Sent Message and Validity Period.

Exit: Allows you to exit the text input mode without saving your message.

Email

Mobile Email allows you to access your Yahoo! Mail, Yahoo! Mail, Windows Live Hotmail, accounts on your phone. So, now you can quickly and easily check your email while you are away from your computer.

To Set Up Mobile Email

Open Mobile Email: press the centre key  **Menu**, press  **Messaging**, press  **Create Message**, and press  **Email**.


Select an Email Provider: Select the email provider you wish to use.

Messaging

Read and Accept the Terms of Use

Log In

1. Highlight the ID entry field, select and then type in your existing email ID.
2. Select the Password field, to highlight it, and enter your password.

Quick Tip: Your password is case sensitive. Press the  button on the keypad to change to lower case or upper case.

3. To save your password, scroll down to Save password check the box.
4. Select **Sign In**.

Opening an Email: Scroll down and press on the subject line to highlight the message you want to open, then press again to open the message.

When the email is open, select **Options** to reply, forward or delete.

Deleting an Email: Scroll down to the email you want to delete, select the subject line to highlight it, press **Options**, and then Delete.

Inbox

You will be alerted when you receive new message. New messages are stored in the Inbox. In the Inbox, you can identify message types by their icons. If you are notified that you have received a multimedia message, you can download the media by selecting the message in the Inbox menu.

Reply: You can reply to the recipient of the selected message.

Reply as Template: You can reply with a template message to the recipient of the selected message.

Delete: You can delete the selected message.

Call Sender: you can call the recipient of the selected message

Move: You can move to Saved Message or USIM depending on where the text message is stored.

Use Detail: You can view the following information about received messages: Number, Email Address, and Web Address.

Forward: You can forward the selected message to another person.

Copy as Template: Selected message will be saved as a Text Template.

Message Info.: You can view the following information about received messages: message Type, Subject, From, and message Time.

New Message: You can create directly a new message.

Mark/Unmark: You can mark/ unmark in the message list to delete or move the messages at once.

My Mailbox

Mobile Email allows you to access your Yahoo! Mail, Yahoo! Mail, Windows Live Hotmail, accounts on your phone. So, now you can quickly and easily check your email while you are away from your computer.

Drafts

Allows you to view and edit the messages saved as drafts.

Messaging

Outbox

Outbox stores messages that are being sent or failed to send. When you press the [SEND] key, you can call the recipient of the selected message. If the message is not sent from the Outbox, you will receive a sound alert along with a Message Sending Failure notice on the screen.

Another attempt will be made to send the failed message and after two unsuccessful attempts, the message will no longer be sent automatically.

Sent Items

This is where you can view the lists and contents of sent messages and also verify if transmission was successful.

Saved Items

Allows you to view and edit the messages saved as saved message.

Emoticons

Allows you to view and edit the emoticons.

Message Settings

Text Message

This menu allows you to set preferences for text messages.

The following options are available:

- **Text Message centre:**

Allows you to view and edit the phone number for the Message Centre. Do not edit unless instructed to do so by your service provider.

- **Request Delivery**

Report: Choose to receive confirmation that your message was delivered.

- **Validity Period:** This network service allows you to decide how long your text messages will be stored at the Message Centre.

- **Message Types:** You can choose the message type as Text/ Voice/ Fax/X.400/ Email.

- **Character Encoding:** You can set the Character Encoding.

- **Send Long Text as:** You can set the text length as Multiple SMS or MMS.

Multimedia Message

This menu allows you to set your preferences for multimedia messages.

The following options are available:

- **Retrieval Mode:** You can set to retrieve media contents of the message either automatically or manually. This preference can also be set by the type of network you are currently on.


Note: Data usage charge may be applied by your network operator.

- **Delivery Report:** Choose to receive confirmation that your message was delivered.
- **Read Reply:** Allows you to send a delivery confirmation notification for a Multimedia Message.

Messaging

- **Priority:** Allows you to set the priority of the message.
- **Validity Period:** This network service allows you to decide how long your text messages will be stored at the Message Centre.
- **Slide Duration:** Allows you to set the slide duration from 2 sec to 60 sec.
- **Creation Mode:** In this mode, the MMS Client device only creates and sends messages with content belonging to the Core MM Content Domain.
- **Delivery Time:** Allows you to set the time when the message will be sent. If this option is set to 'After 1 hour', once you choose to send the message after the creation, the message will be kept in outbox for 1 hour and will be sent.
- **Multi Msg Centre:** Allows you to view and edit the phone number for the Message Centre. Do not edit unless instructed to do so by your service provider.

Email

 **WARNING:** In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

- **Email Accounts:** Allows you to select and change the account information. This option is not available for the default account.
- **Allow Reply Email:** Allows you to send confirmation when the sender requests the confirmation.

- **Request Reply Email:** Choose to receive confirmation that your message was delivered.
- **Retrieve Interval:** Allows you to set the time interval for the email retrieval. If this option is set to 1 hour, the phone will check for new emails every hour.
- **Retrieve Amount:** Allows you to set the amount for the email retrieval.
- **Include Message in Fwd & Reply:** If this option is turned off, the original message will not be included when forwarding or replying to an email.
- **Include Attachment:** Allows you to set the option to include an attachment when sending the email.
- **Auto Retrieval in Roaming:** Allows you to set the auto retrieval preference under the roaming network.

Note: Data usage charge may be applied by your network operator.
- **New Email Notification:** Allows you to receive the notification when you receive a new email.
- **Signature:** Allows you to create, edit, and delete your signature, which can be configured to be sent out with your outgoing messages.
- **Priority:** Allows you to set the priority of the message.

Messaging

Voicemail

This menu allows you to set the Voicemail Centre Number if this feature is supported by your operator. Please check with your operator for details of their service in order to configure the handset correctly.

Service Message

This menu allows you to configure your settings to determine if you would like to receive service messages.

Save Sent Message

If this menu is set to **'Yes'**, sent messages will be saved in **'Sent Items'**. When this menu is set to **'No'**, sent messages will not be saved in **'Sent Items'**.

Info. Service


Choose whether to turn Cell broadcast on/off and select your channels and languages.

Backup Text Message

This menu allows you to create a backup file of all text messages in the phone. The location where the backup file will be created can be chosen between phone's memory and external memory. The backup file is created in text file format.


 



Contacts

This menu allows you to store names, phone numbers and other information in your phone's memory.

Note: Pressing the Right Soft Key  is a hot key to Contact List.


Names

Allows you to view your Contact List

- 1 Open the flip, press  **[Menu]**.
 - 2 Press  **Contacts**.
 - 3 Press  **Names**.
 - 4 Use the Navigation Key  to scroll through your Contacts alphabetically.
- Press the Left Soft Key  [Options] to select one of the following:

Search/Send Message (Message/Email)/Send Business Card (Text

Message/Multimedia Msg./Email/Bluetooth®)/ Make Call/Add New Contact/Add new Group/Edit/Add to Group/Mark/Unmark(Mark/Mark All)/Save to SIM(Copy to SIM/Move to SIM)/Delete

- Press  to view the entry details.

Note: Use the Search, for quick access to an entry without scrolling. For example, to go to "Vet", enter the letter V.

Settings

This menu allows you to copy information from your SIM card, e.g. name, handset number, etc. to your handset. If a name is duplicated during the copying operation, the information is also duplicated.



Contacts

You can also copy entries from the SIM card to the phone memory and entries from the handset memory to the SIM card (not all the data will be copied).

From this menu, you are also able to delete entries in the SIM card and the Handset.


 
 





Groups


This menu allows you to manage group information.

You can configure a ring tone for a group so that the group ring tone sounds when a call from a specific contact address belongs to that group is received, if there is no ring tone configured for this contact. Use the Navigation Key  to highlight a group, and then press .

Speed Dials


You can assign a frequently-called contact to a speed dial list. You can select a number from 2 to 9 as a speed dial. You can configure speed dial numbers for any of the 8 numbers for a specific contact address.

- 1 Open the flip and press  **[Menu]**.
- 2 Press  **Contacts**.
- 3 Press  **Speed Dials**.
- 4 Use the Navigation Key  to highlight the Speed Dial position, or enter the Speed Dial digit and press .
- 5 Use the Navigation Key  to highlight the Contact then press . For Contacts with multiple numbers for the Speed Dial, then press .

- 6 Press  Yes to confirm.
A confirmation message is displayed.

Service Dial Numbers

You can view the list of Service Dial Number (SDN) assigned by your network provider. Such numbers could include the emergency services, directory assistance and voice mail numbers.

You may see the names of the available services. Select a service dial number and press the  key.

Please check with your network service provider for details of this service.

Own Number

This displays your own phone numbers stored in your phone/SIM card.


My Business Card

This menu allows you to view all of your personal contact information including name, phone numbers, and email address in one entry.

Call Log

Call Log

This menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note: On the home screen, press the Send Key  to view Call Log.

Missed Calls

You can view a list of calls you have missed.

Received Calls

You can view a list of calls you have received.

Dialed Numbers

You can view a list of numbers you have called.

Call Duration

You can view the duration of all calls including all, dialed, received calls, and the last call.

Packet Data Counter

You can check the amount of data transferred over the network.

Call Costs

You can view the charges applied to your calls.

Settings

The Settings Menu has options to customize your phone.

Profiles


 

You can adjust and customize the phone tones for different events, or environments.

Display



This menu provides options to customize the phone's display screen.

Screen Theme

You can choose the kind of background to be displayed on the phone. The possibilities are endless; in particular, you can select several flash screens for your screen theme.

1. Open the flip and press  **[Menu]**.
2. Press  **Settings**.
3. Press  **Display**.

4. Press  **Screen Theme**.

5. Use the Navigation Key  to choose a submenu and press .

Home screen/Start-up/Shut Down

- **Home screen:** Wallpaper/ Wallpaper Type/Display Items/Clock Type/ Clock Font Colour
- **Start-up/Shut Down:** My Images

Menu Style

You can set the main menu style to **Grid** or **List Style**.

Dialing

You can configure the color of the dial font that your phone uses.

Settings

Font

You can configure the size of the font that your phone uses.

Backlight

You can set the duration and the brightness of the Main screen and the keypad.

Handset Theme

You can set the handset theme to Dark Blue or White theme.

Greeting Message


You can set a greeting message when you turn the phone on.

Date and Time

You can set functions relating to the date and time of your phone.



Time

1. Open the flip and press  **[Menu]**.

2. Press  **Settings**.

3. Press  **Date and Time**.

4. Press  **Time**.

5. Use the Navigation Key  to set a setting and press .

Set Time/ Time Format/Time Zone/Daylight Saving/Hour Indication

Date

You can set the date and choose the format of the date displayed on the clock of your phone.

Auto Update Date/Time

Selecting On will set the phone to automatically update the time and date according to the current local time zone.

Daylight Saving

You can set Daylight Saving Time for 1 Hour, 2 Hours or Off.

Connectivity

This menu allows you to configure your Connection settings.

Bluetooth

Your phone has built-in Bluetooth® wireless technology, which makes it possible for you to connect your phone wirelessly to other Bluetooth® devices such as a hands free device, PC, PDA, or other phones. The devices registered in your phone can only be connected one at a time (To make a connection to the same type of device or change Bluetooth® preferences, disconnect the existing device first).

You can also exchange, for example, business cards, calendar items, and pictures.

Bluetooth® QD ID B016672

Note: Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.





Tips

- **Headset:** Supports use of a compatible bluetooth headset for mono voice.
- **Handsfree:** Supports Bluetooth® headsets, and may also support other installed compatible Bluetooth® devices with speakerphone capabilities, such as car kits or a conference room device.

Settings

- **Phonebook Access:** Allows sharing of your name card, phonebook entries, and call history with a compatible Bluetooth® device.

To access Bluetooth®, from the standby screen:

1. Open the flip and press  **[Menu]**.
2. Press  **Settings**.
3. Press  **Connectivity**.
4. Press  **Bluetooth**.

Turn On/Off






This allows you to turn your Bluetooth® functionality on or off.

Active Devices

This function allows you to search and add new devices.

For pairing with a new Bluetooth® device

1. Open the flip and press  **[Menu]**.

2. Press  **Settings**.
3. Press  **Connectivity**.
4. Press  **Bluetooth**.
5. Press  **Active Devices**.
6. If Bluetooth® turn/off is set to off, you will be prompted to turn Bluetooth® on. Select  **Yes** to search a new device.
7. The handset will prompt you for the passcode.
8. Once connected, you will see the device listed in the Bluetooth® Menu and the Bluetooth® device connected icon will show up on your enunciator when connected to the Bluetooth® device

Paired Devices

You can see the paired devices list.

Settings

- **My phone's Visibility:**

Allows you to manage your phone's availability to other Bluetooth® devices. **Visible/Hidden/Visible for 1 Min**

- **My Phone's Name:** Allows you to change the handset's name which can be seen by other Bluetooth® devices.

- **Supported Services:** Allows you to see all services that the handset supports.

- **My Address:** Allows you to see your Bluetooth® Address.

USB Connection Mode

You can transfer files from a compatible PC to the memory in your phone using the Mass Storage Mode. When you connect the phone to a PC using the USB cable, your phone will be displayed as a removable disk through Windows Explorer.

The USB Connection Mode determines how your phone will communicate with other USB devices when they are connected with a USB cable.

Call

This menu allows you to configure your Call settings.

Call Forward

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider. Select one of the forward options, for example, select If Busy to forward voice calls when your number is busy or when you reject an incoming call.

Settings

The following options are available:

All Voice Calls: Forwards voice calls unconditionally.

When busy: Forwards voice calls when the phone is in use.

No Answer: Forwards voice calls when you do not answer.

Not reachable: Forwards voice calls when the phone is switched off or out of coverage.

Call Barring

Enables you to restrict or bar certain or all types of calls to and from your mobile phone, i.e. outgoing calls, outgoing international calls, incoming calls. Barring is activated with a password.

The following options are available:

All Outgoing: All outgoing voice calls will be barred.

Outgoing International: All outgoing international calls will be barred unconditionally.

Outgoing International Calls except Home Country: All outgoing international calls will be blocked except for long distance calls made in same country.

All Incoming: All incoming voice calls will be barred.

Incoming when abroad: All incoming long distance calls will be barred.

Note: The default password is 0000 and it can be changed in the options menu.

Fixed Dial Numbers

This feature allows you to restrict the outgoing calls and messages to selected phone numbers, included in a fixed dialing list. Once the service is activated you can only call and send messages to the phone numbers from the list.

Call Waiting

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, or select **Deactivate** to request the network to deactivate call waiting or **View Status**, to check if the function is active or not.

Note: Check with your service provider whether you are subscribed to this service or not.

Call Reject

This menu allows you to enable or disable call reject for all numbers or just the numbers on the Call Reject List.

Send My Number

This network service allows you to set your phone number to be displayed or hidden from the person you are calling. You can select **Set by Network** if you prefer to have different settings for different service providers.

Auto Redial

If set to **On**, your phone redials the number you're trying to call up to 10 times after you hear a quick, busy signal.

Press (end key) to stop the call attempts. This feature attempts to redial numbers

Settings

that are engaged due to the wireless network. It does not redial numbers to an engaged party.

Note: There will be no alert indicating the call has been connected. You must stay on the line to hear when the call is connected.

Answer Mode

This allows you to determine how the phone will answer an incoming call.

Free Call Time Tracker

This option will allow you to track how many minutes you have available. Set the minutes that is given by your service provider for your contract and the phone can track the usage.

Note: This is simple tracking program, it cannot keep track of your unlimited plans.

Minute Minder

This option allows you to specify whether the phone will beep every minute during a call to keep you informed of the length of the call.

BT Answer Mode

If the phone is paired with a Bluetooth® hands-free device, this menu should be set accordingly.

Save New Number

If the option is set to **Yes** once you get a call from a number that does not exist in Contacts, the phone will prompt you to save the number.

Phone

My Navi Key

Your phone offers you the option of assigning shortcuts to favorite or often-used functions. Pressing the navigation key to the assigned direction in standby mode will launch your personally designated shortcuts.

Language

This allows you to change the language for the display text on your phone. This change will also affect the Language Input mode.

Power Save

This allows you can activate the power save mode on your phone.

Handset Information

The Phone Information Menu provides you with specific information pertaining to your phone model.

Network

Usually, the network selection is set to Automatic.

Automatic: If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected Automatic, the phone will be set to Automatic even though the power is off and on.

Manual: The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator.

Settings

 
The phone lets you select another network if the phone fails to access the selected network.

Preferred Lists: You can set a list of preferred networks that the phone attempts to register with first, before attempting to register to any other networks. This list is predefined by your network operator's SIM/USIM card.

Internet Profiles

This menu shows the Internet Profiles. You can add, delete, and edit Internet Profiles. However, you cannot delete or edit default configurations provided by your operator.

Access Points

This menu shows the Access Points. You can register, delete, and edit by pressing the left soft key  **Options**. However, you cannot delete or edit default configurations provided by your operator.

Packet Data Conn.

If the option is set to '**When Needed**' the data will be connected only when needed. If it is set to '**When Available**', the data will always be connected when it is available. Please note that this may result data usage from your network provider.

Security

PIN Code Request

When the PIN Code Request feature is turned on, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before setting the PIN Code Request feature off, you must enter your PIN. The default PIN is provided by your service provider. If the PIN is entered incorrectly 3 times, the SIM will be locked and phone will not be usable. Please contact your service provider before using this service.

Handset Lock

You can use a security code to avoid unauthorized use of the phone.

If you set the Handset Lock to on, the phone will lock whenever the flip is closed or the phone is rebooted. The correct Security Code must be entered in order to unlock the phone.

Note: The default Security Code is 0000 and it can be changed in 'Change Codes' menu.

Lock If SIM is Changed

If you set to **On**, your phone will request a security code only when you change your SIM Card.

Settings

Note: The default Security Code is 0000 and it can be changed in 'Change Codes' menu.

Change Codes

The Change Codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one.

Memory Info

This menu allows you to configure your Memory settings.

Handset Common Memory

This function shows the Memory Status of the phone and the memory being used by Audio, Image, Video, Multimedia Message, Java, and Others types of files.

Handset Reserved Memory

This function shows the status of the reserved memory used by Text Messages, Contacts, Calendar items, Tasks, and the Notepad.

SIM Memory

This function shows the status of the SIM Card memory.

External Memory

If your phone has a memory card in the card slot, you can save images, sounds, and videos onto it. You can check the current status of the external memory card in this memory status menu.

Primary Storage Setting

This menu allows you to set the storage default location for Camera internet downloads, Bluetooth® transfers, and voice recordings. You can set each case separately or choose to set all of them at once.

Restore Factory Settings

Resetting the phone resets all settings and erases all data on your phone.

Gallery

My Memory Card

If your phone has a memory card in the card slot, the files saved on your memory card are displayed.

My Images

The picture files saved on your phone are displayed.

My Sounds

The audio files saved on your phone are displayed.

My Videos

The video files saved on your phone are displayed.

My games & Apps

The game and application files saved on your phone are displayed.

Others

When you receive files of an undefined format (such as .vcs, .vcf, etc.) via email, the files are displayed.

Media

Camera

Using the camera module built into your phone, you can take pictures of people or events while on the move. Additionally, you can send photos to other devices as a picture message.



 
Settings Menu

Preview tab



- **Image Size:** The resolution of the image can be captured in 640*480/320*240.
- **Colour Effect:** Includes options of Sepia/Black & White/ Negative.
- **White Balance:** Set the white balance as Auto/Incandescent/Sunny/Fluorescent/Cloudy.

- **Night Mode:** This is useful to take a photo at a dark place.
- **Timer:** Timer can be set to Off/3 Sec/5 Sec/10 Sec.
- **Shot Mode:** Set the shot mode as Normal/Burst Shot.
- **Image Quality:** Set the image quality as Super Fine/Fine/Normal.

Others tab

- **Memory in Use:** Choose to save a photo to Handset Memory or External Memory.
- **Hide Icons:** Set the hide icons as Auto/Manual.
- **Shutter Sound:** Can be set to Tone 1/Tone 2/Tone 3.
 1. Open the flip and press  **[Menu]**.
 2. Press  **Media**.
 3. Press  **Camera**.

Media

- Using the phone's main LCD as a viewfinder, aim the camera lens to your subject.
- Press  key until the shutter sounds.
- Press the left key  **Options** to rename and edit the photo.

Camcorder

When recording a video clip, you have many of the same Settings options as with taking a photo.



 
Settings Menu




Preview tab

- **Colour Effect:** Includes options of Sepia/Black & White/ Negative.
- **White Balance:** Set the white balance as Auto/Incandescent/Sunny/Fluorescent/Cloudy.

- **Quality:** Set the video quality as Super Fine/Fine/Normal.
- **Duration:** Use one of the recording duration presets, made for different purposes as Message/Normal.

Others tab

- **Memory in Use:** Choose to save a photo to Handset Memory or External Memory.
- **Voice:** Set recording voice On or Off.
 - Open the flip and press  **[Menu]**.
 - Press  **Media**.
 - Press  **Camcorder**.
 - Using the phone's main LCD as a viewfinder, aim the camera lens to your subject.

5. Press  key to start recording. To stop recording, press 
Stop. The recording will be saved automatically.
6. Press the left key 
Options to rename the video.

Music

Recently Played

This allows you to view the recently played tracks.

All Tracks

This allows you to view all songs in your music library.

Playlists

This allows you to create your own playlists.

Artists

This shows the list of artists in your music library.

Albums

This shows the list of albums in your music library.

Genres

This shows the list of genres in your music library.

Shuffle Tracks

This allows you to play all songs in your music library in random order.

TIP! The music player plays formats such as MP3, AAC, AAC+, and WMA.

Note: Copyrights of music files may be protected by copyright and intellectual property laws. Please ensure that you adhere to the applicable Terms of Use of materials laws prior to downloading or copying files.

To play songs from or transfer songs to SD card, the SD card should have some empty space.

Media

Up to 512MB card: Require 3MB empty space.

FM Radio

You can receive FM radio with your external earphone. You can listen to your favourite radio station anytime.






Note: You have to insert a headset into Handsfree connector in order to listen to the Radio and maintain a good radio reception.

Voice Recorder

Use the Voice Recorder to record voice memos or other sounds.

Options

- **Duration:** Use one of the recording duration presets, made for different purposes as MMS msg.size/30 secs/1 min/No Limit


- **Quality:** Set the audio's quality to Super Fine, Fine or Normal.
- **Memory in Use:** You can assign the default storage to Phone Memory or Memory Card.
- **Go to Voice Recordings:** You can go directly the recording list.
 1. Open the flip and press  **[Menu]**.
 2. Press  **Media**.
 3. Press  **Voice Recorder**.
 4. Press  **Rec.** to start recoding. To stop recording, press right soft key  **Stop**. The recording will be saved automatically.



 

Ringtone Creator


 
This menu allows you to make ringtones from other audio files in your phone.


Organizer

Alarm Clock

This menu allows you to set up multiple separate alarms. You can also set the time, repetition interval, and alarm tone. If there is no set alarm, press  **Add** to add a new alarm.



- 1 Open the flip, press  **[Menu]**.
- 2 Press  **Organizer**.
- 3 Press  **Alarm Clock**.
- 4 Press  **Edit** to edit a new alarm.
- 5 Enter the alarm information including:
 - Set Time
 - Repeat
 - Ringtones
 - Note
 - Snooze

6 Use the Navigation Key  to scroll to the information you want to set, and then press  **Change** to view your setting choices.


7 Press the right soft key  **Done** after setting all of the Alarm fields as necessary.

Calendar









When you enter this menu, a calendar will be displayed. The red square cursor is used to locate a particular day. The bottom bar on the calendar indicates saved schedules (if any) for that day. This function helps you keep track of your schedule. The phone can sound an alarm tone if it has been set for a specific schedule item.


- 1 Open the flip, press  **[Menu]**.
- 2 Press  **Organizer**.

3 Press  **Calendar**.

4 Use the Navigation Key  to scroll to the scheduled day.

The chart below shows the keys that can be used to navigate the Calendar:

Key	Description
 key /  key	Weekly
 key /  key	Daily
 key /  key	Annually
 key /  key	Monthly


 

5 Press the left soft key  **Options**, you can see the following options:

- **Add New:** Allows you to create a schedule for that day.


 
- **Search:** Allows you to search the saved schedule(s).
- **Set Holiday:** Allows you to set specific days to display as Holidays on your calendar.
- **Weekly/Monthly View:** Allow you to set Monthly/ Weekly view.
- **Go to Date:** Allows you to jump to a specific date.
- **Delete:** Allows you to delete previous entries or all entries.

To-Do List

This feature allows you to save and manage a task.


 



- 1 Open the flip, press  **[Menu]**.
- 2 Press  **Organizer**.
- 3 Press  **To-Do List**.

Organizer

- 4 To add a new task item, press  **Add**.
- 5 Input the Date, Note and priority for the new task.
- 6 Press the right soft key  **Done** to save the To-Do item.

Notes

You can create up to a maximum of 30 notes.

- 1 Open the flip, press  **[Menu]**.
- 2 Press  **Organizer**.
- 3 Press  **Notes**.
- 4 To add a new task item, press  **Add**.
- 5 Input the note and press  to save the note.

Secret Notes

This menu will require you to enter the 'Security Code' in order to create or view notes.

Note: The default Security Code is 0000 and it can be changed in 'Change Codes' menu.

Cash Book

This is a simple program to keep track of your money. It can track your income and your expenses. You can add income and expense by their date and also set their frequency.

BMI calculator





This is a Body Mass Index calculator. Enter your gender, height and weight to determine the BMI.


Calculator




The Calculator function allows you to calculate simple mathematical equations.

Stopwatch

This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 20 laps) and the total time can also be displayed.

- 1 Open the flip, press  [Menu].
- 2 Press  **Organizer**.
- 3 Press  **Stopwatch**.
- 4 To start timing, press  Start. The running time is displayed as HH:MM:SS.hh (hours, minutes, seconds, hundredths of a second).

5 During the timing, you can record an individual lap time by pressing the right soft key  **Lap**. Up to 20 lap times can be recorded.

6 You can stop or restart timing by pressing  again. To reset the stop watch, press  **Stop** to stop the time, and then press the right soft key  **Reset**.

Date Finder

 
You can calculate the target date by entering the start date and the days to be counted.

Organizer

Converter

This function allows you to convert units of measurement.

There are 6 types of units that can be converted: Currency, Surface, Length, Weight, Temperature, Volume, and Velocity.



Note: You can input a decimal point by pressing the  key.

World Time

The World clock function provides time information for major cities worldwide.

Go To

It helps you to go to the menu you search for. You can set the item as Go to.

- 1 Press  **Add** to create your own quick menu.
- 2 Use the Navigation Key  to scroll and select a menu.

Settings

This menu allows you to set preferences for the calendar feature and view the memory information.

Applications

Your LG-A133CH comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Note: And additional cost is incurred when connecting to this service. Check your data charges with your network provider.


Web

Home

You can launch the web browser and access the homepage of the web service provided by your operator.

- You can also directly access Browser by pressing the left soft key in idle mode.

Note: Please note that this service is service provider dependent.



You can access any website page by entering its URL address. To exit the browser at any time, press the  key. The phone will return to the standby mode.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, you can use the following keys.

Key	Description
Up/Down navigation keys	Scrolls each line of the content area.
	Returns to the previous page.
	Selects options and confirms actions.

Using the WAP browser menu

Browser menu is seen once the WAP page is displayed. On selecting Options is the left soft key, various options are provided and these are as follows:

Home: Goes back to the homepage. (configured in current default setting)

Go to Address: A desired URL can be entered here to visit.

Bookmarks: You can add or save the current page to the Bookmark or view the list saved under Bookmark.

Navigation: Lists navigation menus when they are available.

Send Link: You can send a link via message or Email.

Save Items: You can save the page while you browse.

View Pages: You can view the saved page or the last web address you connected to.

Search Text: You can search for the text you want.

Settings: You can set the Browser related options such as Rendering Mode, Navigation Mode, Screen Mode, Cache, Cookies, Appearance Settings, Shortcuts, and Security.

Exit: You can exit the WAP browser menu.

Google Search

You can search using Google.

Bookmarks

You can store frequently accessed or favorite URLs/ Pages. Several preconfigured URLs are stored as bookmarks.

Last Web Address

You can see the recently-browsed pages.

Web

Settings


Profiles

You can create or configure an Internet account.

Adding a new account

1. Press  **Add** to create a new profile.

The following items need to be configured.

- **Title:** Enter the account name you want.
 - **Homepage:** Enter the homepage address.
 - **Internet Profiles:** Select the internet profile.
2. Press the right soft key  **Done** to save any configuration changes.

You can edit and delete a profile by selecting Edit and Delete from the Options menu.

Appearance Settings

Character Encoding: Sets the browser default character set to one of the following: Automatic, English (ASCII), English (ISO), English (LATIN), Unicode (UCS2 BE), Unicode (UCS2 LE), Unicode (UCS2 Auto), Unicode (UTF-16 BE), Unicode (UTF-16 LE), Unicode (UTF-16 Auto), Unicode (UTF-8).

Scrolling Control: Allows you to set the scroll speed by selecting the number of lines. (1 Line, 2 Lines, 3 Lines)

Show Image: Allows you to enable or disable the image display during browsing.

Note: Enabling this function will delay displaying images until the completion of transmission. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

Java Script: Decide whether to allow the “Java Script” function **On** or not **Off**.

Cache

Cache On/Off: Decide whether to allow the “Cache” function **On** or not **Off**.

Clear Cache: Select this to clear all caches.

Cookies

Cookies On/Off: Decide whether to allow the “Cookie” function **On** or not **Off**.

Clear Cookies: Select this to clear all cookies.


 
Security

Certificates List: You can see the list of certificates and view them in detail.

Session Clear: You can remove the secure session.

Go to Address

You can manually enter a URL address and access the associated web page.

- To enter a symbol, press  and select Insert Symbols to display the Symbol table.
- To switch input mode, press .

Saved Pages

The phone can save the page on display as an offline file. Up to 19 pages can be saved.

Accessories

These accessories are available for use with your LG-A133CH.

Charger



Stereo headset



Battery



User Guide

Learn more about your LG-A133CH.



NOTE:

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Trouble Shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak. Outside GSM/WCDMA network area.	Move closer to a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you must confirm the new code by entering it again.	Contact your service provider.
Function cannot be set	Not supported by service provider, or registration required.	Contact your service provider.
Calls not available	Dialing error New SIM card inserted, charge limit reached	New network not authorized. Check for new restrictions. Contact service provider or reset limit with PIN 2.

Trouble Shooting

Message	Possible causes	Possible solutions
Phone cannot be turned on.	On/Off key not pressed long enough.	Press the On/Off key for at least two seconds.
	Battery empty.	Keep charger attached for a longer time.
	Battery contacts dirty.	Clean the contacts.
Charging error	Battery totally empty.	Charge battery.
	Temperature out of range.	Make sure the ambient temperature is right, wait a few moments, then charge again.
	Contact problem.	Check the power supply and connection to the phone.
	No outlet voltage.	Check the battery contacts, and clean them if necessary.
	Charger defective.	Plug in to a different outlet, or check the voltage.
	Wrong charger.	If the charger does not warm up, replace it.
	Battery defective.	Only use original LG accessories. Replace battery.

Message	Possible causes	Possible solutions
Phone loses network	Signal too weak.	Reconnection to another service provider is automatic.
Number not permitted	The Fixed Dial Number function is on.	Check settings.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
2. The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
3. This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
4. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
5. During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
6. LG may use rebuilt, reconditioned or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

2. WHAT THIS WARRANTY DOES NOT COVER:

1. Defects or damages resulting from use of the product in other than its normal and customary manner.
2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
4. The fact that the Customer Service Department at LG was not notified by the original end user of the alleged defect or malfunction of the product, during the warranty period.

5. Products which have had their serial numbers removed or made illegible.
6. Damage resulting from use of non-LG approved accessories.
7. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
8. Products serviced by non-authorized persons or companies.

Notes:

1. This limited warranty supersedes all other warranties, expressed or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
2. Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-LG-Canada (1-888-542-2623)

http://www.lg.com/ca_en (see links to "Support > Mobile Phone Support")



LG Electronics Canada Inc.

Mississauga, Ontario

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>