



UX830

QUICK START GUIDE



Touch
Screen



Transferring
Music



Playing
Music



Bluetooth®
Pairing



Taking a Picture/
Recording a Video



Getting to Know Your Phone




Touch Screen

Touch Protection

The touch screen is automatically locked when the phone is closed or after the phone is inactive for 14 seconds (default).

Unlocking the Touch Screen (3 Ways)





- Press the **HOLD** Key on the left side of the phone twice.
- Touch .
- Open the slider.

Using the Touch Screen

- Use the tip of your finger to touch the center of a touch key.
- It's not necessary to press hard. A light touch will do.
- Press and *drag* your finger **up** or **down** to scroll.
- You can also scroll using the scroll bar on the right side of the screen. Drag your finger directly on the bar or touch a section of the bar to quickly jump to off-screen items.
- Touch **End** at any time to return to the idle screen.





 
Touch Screen Settings

- Touch **Menu**  > **Settings**  > **Sound & Touch**. Then scroll down and select **Touch Key Feedback (8)** to adjust the touch screen's sound and vibration.
- If the touch screen is not responding as you expect, calibrate the screen for touch accuracy. Touch **Menu**  > **Settings**  > **Sound & Touch** > **Touch Calibration (9)**.

Transferring Music

The fun never has to stop when you've got the UX830. Take your tunes with you! With an optional 4GB microSD card, you can store up to approximately 960 songs.

1. Insert your microSD card* (gold contacts facing down) into the memory port underneath the battery cover.
2. Press the **HOLD** Key twice on the left side of the phone to unlock the touch screen.
3. The first time you transfer music, you must format the card. Touch **Menu**  > **Settings**  > **Phone Information** > **Memory (5)**.
4. Touch **Card Memory (3)** > **Format** > **Yes (1)**. Then touch **End** to exit.
5. Connect the included USB cable from the phone to your PC.
6. The PC will recognize the phone as a **Removable Disk** and a screen will appear. Drag and drop music files on your PC into the **My_Music** folder.
7. When done, disconnect the phone.

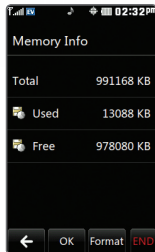


*microSD card sold separately.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Playing Music

 
Enjoy your favorite songs on the go with the UX830. This sophisticated phone features an integrated music player with a customizable equalizer. Turn up the volume and rock out!*

1. Insert a microSD card containing music.
2. Press the **HOLD** Key twice on the left side of the phone to unlock the touch screen.
3. Touch **Quick Menu** , then **Music**.[†]
4. Select a song from one of the categories, then touch **Play**.

*microSD card required. Sold separately.

[†]Based on default Quick Menu.



Note: You can play music in the background while doing other tasks. Once you have exited the music player with background music enabled, touch the song shown at the top of the idle screen to return to the player.

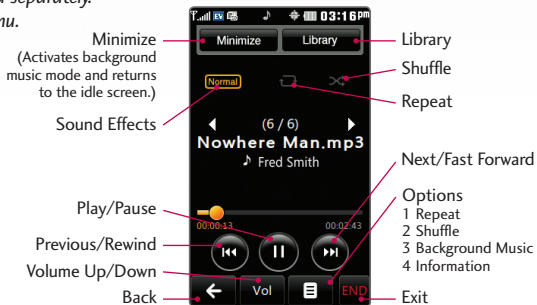

Bluetooth® Pairing

Forget looking around for that lost cable. With the UX830, you can connect wirelessly to headsets, speakers, phones and more.

  1. Set your Bluetooth accessory into pairing mode.*
2. Press the **HOLD** **Key** twice on the left side of the phone to unlock the touch screen.
3. Touch **Menu** **☰** > **Settings** **⚙** > **Bluetooth** > **Add New** **(2)**.
4. When prompted to turn on Bluetooth, touch **Yes** **(1)**.
5. Touch **Search** **(1)** to begin a new search.
6. Once the Bluetooth device has been found, highlight it and touch **Pair**.
7. Enter the PIN code* (typically “0000” – 4 zeroes) and touch **Pair**.
8. Touch **Yes** **(1)** to connect with the device.

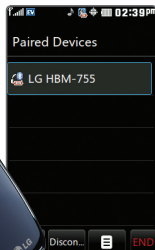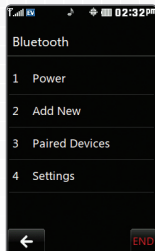

**Refer to your Bluetooth accessory's user manual for information about initiating pairing mode and the PIN code.*

Taking a Picture/Recording a Video

Record the action right as it happens! With the UX830's 2.0 megapixel camera/camcorder, you can capture moments in a flash.

Taking a Picture

1. Press the **HOLD** **Key** twice on the left side of the phone to unlock the touch screen.
2. Rotate the phone horizontally and press and *hold* the side **Key**.
3. Refer to the callouts below for options.
4. Press **Key** to take the picture. Touch **Send** to send it to someone.

Recording a Video

1. Press **HOLD** twice on the left side of the phone to unlock the touch screen.
2. Rotate the phone horizontally and press and *hold* **Key**.
3. Touch **Record Video**, then press the side **Key** to start or stop recording.

Camera setting of 1600x1200 pixels does not support zoom function.



Optional Accessories

Maximize your phone with these cutting-edge accessories at www.LGUSA.com.



Bluetooth Stereo Speakers



Bluetooth Headset (HBM-750)



Bluetooth Headset (HBM-755)



Bluetooth Headset (HBM-770)



Bluetooth Stereo Headset
(HBS-200)



Vehicle Power Charger

©2008 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>