



VX9400

Quick Start Guide



Watching
Mobile TV



How to
Get Music



Playing
Music



Bluetooth®
Pairing



Taking a Picture/
Recording a Video

www.LGUSA.com


Getting to Know Your Phone



*Customizable

 
 
Watching Mobile TV

V CAST Mobile TV delivers real-time television programming from some of the most popular TV channels right to your phone. You can take calls, messages, and when you hang up, go right back to enjoying your program.

1. Press the **Mobile TV**  **Key**.
2. Press **up** or **down** on the Navigation Key to highlight a program that is currently airing.
3. Press the **Left Soft Key** to play.
4. Swivel the LCD to view program in Full Screen.
When in Full Screen mode, you may:
 - Press the **Left/Right Soft Key** for normal viewing mode.
 - Press **OK** to pause program. Press **OK** again to resume.
 - Press the **CLR Key** for the Media Program Guide.
5. Press **Right Soft Key** for options such as subscription info, software upgrades, and parental controls.*

**Options are not available while viewing a program in Full Screen.*

Note: You can extend the retractable antenna for better TV reception.

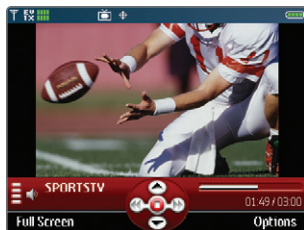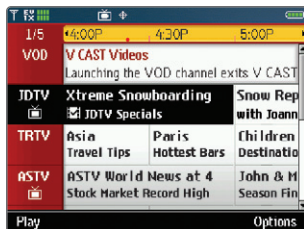

V CAST Mobile TV coming to select markets in 2007. V CAST Mobile TV is only available in the V CAST Mobile TV coverage area. Coverage area maps available at www.verizonwireless.com. Additional fees may apply.

How to Get Music

Walkin', talkin', rockin'. Transform your wireless phone into a portable music player, then expand your collection with the Verizon Wireless music catalog.

 
V CAST Music

1. Press **right** on the Navigation Key, select **Music & Tones (1)**, then **V CAST Music (1)** to download new music.
2. Choose from over 1,000,000 songs! Downloaded songs are stored in **My Music**.

Sync Music from PC to Phone

1. Connect your phone to your PC with an optional USB cable.*
2. Press **right** on the Navigation Key, select **Music & Tones (1)**, then **Sync Music (6)** to sync music from PC to phone. USB cable and Windows Media Player 10 are required.

*Sold separately.

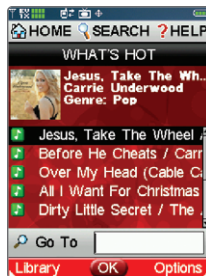



Playing Music

The VX9400 doesn't miss a beat with its built-in music player. You can store tons of music on an optional microSD card* and even listen to them in stereo sound through a Bluetooth headset!

1. Press **right** on the Navigation Key, select **Music & Tones (1)**.
2. Select **My Music (4)**, choose a category, then press **OK** to play.
3. Use the side **Volume Keys** **◀▶** to adjust volume when a song is playing.
4. Press the **End Key** to exit the music player.

*Sold separately.

  Note: To turn on Music Only Mode (RF off except Bluetooth), press **right** on the Navigation Key, select **Music & Tones (1)**, press the **Left Soft Key** for **Mode**, select **On** and press **OK** .

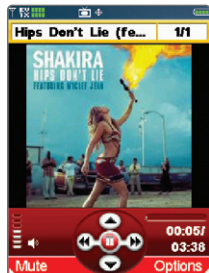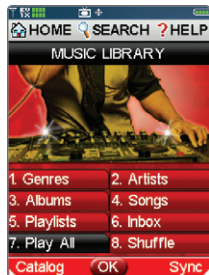


Bluetooth Pairing

 Enjoy hands-free entertainment and communication in the car, office, or at home with Bluetooth accessories, like a Bluetooth stereo headset for listening to music. Get wire-free convenience up to 30 feet away.




 

 


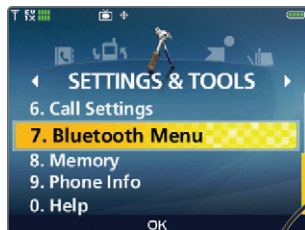
1. Set your Bluetooth accessory into pairing mode.
2. With the swivel open, press **OK** , select **Settings & Tools**.
3. Select **Bluetooth Menu (7)**, then **Add New Device (1)**.
4. If Bluetooth is set to off, you will be prompted to turn power on. Select **Yes (1)**.
5. The phone will now search for the accessory. Once found, highlight it and press **OK** to pair.
6. Enter the passcode (typically "0000" - 4 zeroes) and press **OK** . If you don't know the? passcode, please consult the user manual of the device you are trying to pair.
7. Press **OK** to connect with the device.

Note: Bluetooth accessories sold separately. Phone does not support all Bluetooth OBEX profiles. For vehicle/accessory compatibility, go to www.verizonwireless.com/bluetoothchart.





 Taking a Picture/Recording a Video

Swivel LCD Closed

1. Press and **hold**  for 2 seconds to activate camera mode.
Press and **hold**  again for 2 seconds to activate video mode.
2. Press **left** or **right** on the Navigation Key to zoom. Press **up** or **down** to adjust brightness. Press the **Right Soft Key** to adjust camera/video options. You can use the mirror on the back for self-portraits.
3. Press the side  Key for flash.*
4. Press  or  to take a photo or record a video.
Press  or  to stop recording.
5. Press the **Left Soft Key** or  to save or  to send.

Swivel LCD Open

1. To activate camera mode: press the side **Camera/Video Key** .
2. To activate video mode: press and **hold**  for 2 seconds.

*Only in camera mode.



Note: You can record up to 15 seconds (for message) or 1 hour (for storage) of video depending on available memory. Videos (under 5MB) can be set as wallpapers.

Optional Accessories

Accessories for convenience and fashion are available at www.VerizonWireless.com.



Bluetooth Headset



Bluetooth Stereo Headset



Portable Stereo Speakers



Extended Li-Polymer Battery
(1,500 mAh)



Swivel Holster/Stand



Portable Battery Charger

©2007 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>