



LG



VX6000

1.9 GHZ PCS, 800 MHZ CDMA (ALL DIGITAL)

T R A I N I N G M A N U A L



VX6000

PRODUCT HIGHLIGHTS

- Integrated CMOS Digital Camera with Zoom, Multishot, Resolution Adjustment, and Self-Portrait Timer
- easyedgeSM Service to Access Email and Download Pictures, Ringers and Games*
- Multimedia Messaging Service for Sending Photos with Attached Messages*
- Sleek and Stylish Silver Clamshell Design
- Innovative Rolling External OEL Color Display and Full-Color Internal LCD
- Customizable Caller ID, Wallpaper, Power On/Power Off Images
- Easy-to-Read Blue Backlit Keypad
- Voice-Activated Dialing (30 Entries)
- Speed Dialing (99 Entries)
- Large Phone Book capable of storing up to 499 contacts with up to 5 numbers and 3 email addresses per contact
- 31 Caller ID Ringers plus Vibrate and Silent Alert
- Two-Way Short Messaging Service (SMS)
- *And Much, Much More!!!*

  *US Cellular Service Required



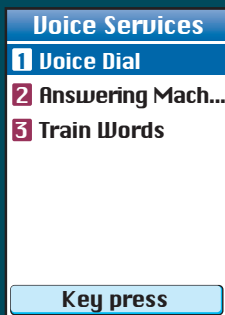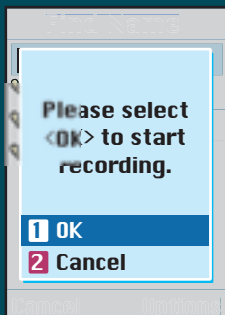

Phone Book

The internal phone book is capable of storing up to 499 contacts with up to 5 numbers and 3 email addresses per contact.

Adding a New Phone Book Entry

1. From the **Contacts (2)** menu, select **New Number (2)**.
2. Enter the telephone number for the entry and press **OK**.
3. Select a label (**Home, Home 2, Office, Office 2, Mobile, Mobile 2, Pager, Fax, Fax 2** or **None**) and press **OK**.
4. Enter a name for the entry and press **OK**.
5. To exit to the phone book press **Left Soft Key** for **Done**.

One-Touch Speed Dialing

One-Touch Speed Dialing: Enables you to dial 9 of your most frequently used numbers using a single key press. These numbers are stored in your phone book in memory locations 1 through 9. For locations 1 through 9, you can use one-touch dialing by pressing and holding the corresponding key to the memory location to be dialed or press a digit, then press **SEND**.

Two-Touch Speed Dialing: Enables you to dial numbers in your phone book through two keys (for locations 10 to 99).

1. From the **Contacts (2)** menu, select **Speed Dials (5)**.
2. Select or enter a slot number and press **OK**.
3. Select a name from the list using the Navigation Key and press **OK**.
4. Select the desired number and press **OK**.

Voice Dials

Allows you to view the list of numbers that have been programmed with voice dialing or add a voice dial tag to a number in the phone book.

 
 
 
1. From the **Contacts (2)** menu, select **Voice Dials (6)**.
2. Press **Left Soft Key** to select a number to add a voice dial tag to and press **OK**.
3. Record the voice dial tag by following the phone's prompts.

Note: Recordings should be made in a quiet place using a clear voice. Hands-free car kits or headsets should be avoided when recording.

Voice Dial Prompt

Allows you to set the command for voice dialing.

1. From the **Settings (9)** menu, select **Voice Services (7)**.
2. Select **Voice Dial Prompt (1)** and press **OK**.
3. Select desired option (**Key press, Flip open,** or **Disable**) and press **OK**.

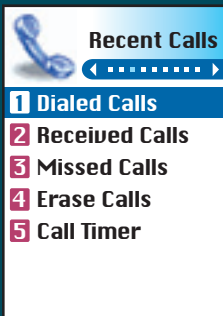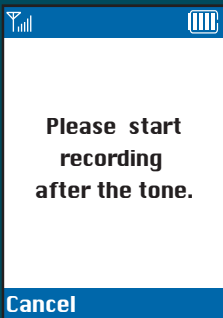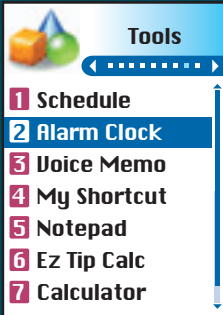

USING PERSONAL INFORMATION MANAGEMENT TOOLS

The Organizer

The Organizer menu allows you to view the calendar, schedule an event, program your handset's alarm clock, view and compose memos on the notepad, as well as record and play back voice memos.

Scheduling an Event

1. From the **Tools (8)** menu, select **Schedule (1)**.
2. Highlight the event date using your Navigation Key and press **Left Soft Key** to add a new event.
3. You may set the appropriate start and end times, content, repeat (if any), alarm and ringer by scrolling to the corresponding field and entering the desired information and pressing **OK**.
4. Press **Left Soft Key** to Save.

Scheduling an Alarm

1. From the **Tools (8)** menu, select **Alarm Clock (2)**.
2. Select from the list of available alarms, **Alarm 1 (1)**, **Alarm 2 (2)**, **Alarm 3 (3)** or **Quick Alarm (4)**.
3. You may set the appropriate time, repeat (if any), and ringer by scrolling to the corresponding field and entering the desired information.
4. Press **Left Soft Key** to Save.

Recording a Voice Memo

1. From the **Tools (8)** menu, select **Voice Memo (3)**.
2. Press **Left Soft Key** for **New**.
3. Start recording at the tone.
4. Press **Left Soft Key** for **Done** to stop recording. By default, your message will be listed by date and time.

Composing a Notepad Memo

1. From the **Tools (8)** menu, select **Notepad (5)**.
2. Press **Left Soft Key** to add.
3. Enter your memo using the keypad and press **OK**.

Call History

Call History automatically logs up to 30 numbers for each category of dialed, received, and missed calls. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Making a Call from Recent Calls



1. From the **Recent Calls (3)** menu, select **Dialed Calls (1)**, **Received Calls (2)** or **Missed Calls (3)** and press **OK**.
2. Place a call by selecting the desired entry and press **SEND** to connect.

Note: To quickly access the list of recent calls press **SEND** from the main menu.



CAMERA FEATURES

Taking a Photo

Self Timer


1. Press **Left Soft Key** and select **Camera (1)** menu.
2. Select **Take Photo (1)**.
3. Press **Right Soft Key** for **Options**.
4. Select **Self Timer (1)**.
5. Select **5 sec** or **10 sec** with the  Navigation Key and press .
6. Press **Left Soft Key** for **Start**.
7. Press **Left Soft Key** for **Save** or press **Right Soft Key** for **Reject**.

Setting the Resolution


1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **Resolution (2)**.
4. Use the  Navigation Key to change the resolution (**Lo 160x120**, **Med 320x240**, or **Hi 640x480**), press .

Note: Regardless of camera resolution, the phone will store a maximum of 20 pictures.



Changing the Brightness

1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **Brightness (3)**.
4. Use the  Navigation Key to change the brightness, press **Left Soft Key** for **Done**.



Changing the White Balance

 
 
1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **White Balance (4)**.
4. Use the  Navigation Key to change the white balance (**Auto**, **Sunny**, **Cloudy**, **Tungsten**, **Fluorescent** or **Darkness**), press **Left Soft Key** for **Done**.

 
 
 
Changing the File Quality

1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **File Quality (5)**.
4. Use the  Navigation Key to change the file quality (**Economy**, **Normal** or **High**), press .

Turning On/Off the Shutter Sound

1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **Shutter Sound (6)**.
4. Use the  Navigation key to change the shutter sound (**Shutter**, **Chime** or **No Sounds**), press .

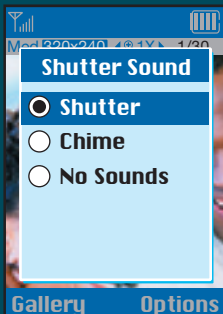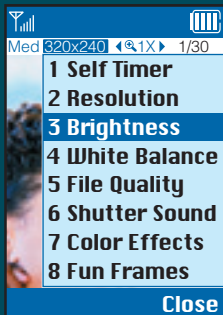

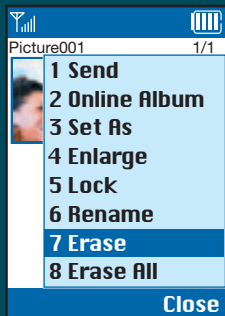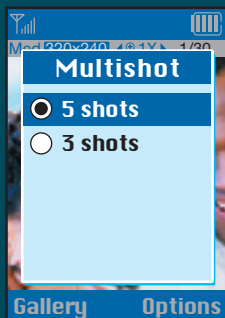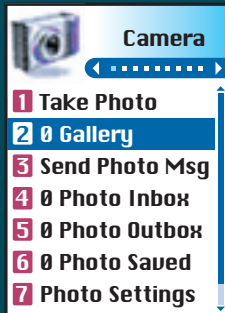

Changing the Color Effects

1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **Color Effects (7)**.
4. Use the **Navigation Key** to change the color effects (**Normal, Antique, Black & White** or **Negative**), press **Left Soft Key** for **Done**.

Fun Frames

1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **Fun Frames (8)**.
4. Use the **Navigation Key** to change the background options and press **OK**.
5. Press **OK** to take a picture.
6. Press **Left Soft Key** for **Save** or press **Right Soft Key** for **Reject**.

Taking Multiple Shots

1. From the **Camera (1)** menu, select **Take Photo (1)**.
2. Press **Right Soft Key** for **Options**.
3. Select **Multishot (9)**.
4. Use the **Navigation Key** to change the multishot options*, press **OK**.
5. Press **Left Soft Key** for **Start**.
6. Use the **Navigation Key** to scroll through the images, press **Left Soft Key** for **Save** or press **Right Soft Key** for **Reject**.

* In low or medium resolution, a series of 5 or 3 shots can be taken. In high resolution, a series of 2 shots can be taken.

Photo Gallery

Setting a Picture Display from Picture Gallery

Allows you to choose the kind of background to be displayed on the phone.

 
 
 
1. From the **Camera (1)** menu, select **Gallery (2)**.
2. Use the **Navigation Key** or **Navigation Key** to select an image, press **OK**.
3. Press **Right Soft Key** for **Options**.
4. Select **Set As (3)**.
5. Use the **Navigation Key** to set picture as **Contacts, Wallpaper, Power On** or **Power Off**, press **OK**.

Renaming a Picture

1. From the **Camera (1)** menu, select **Gallery (2)**.
2. Use the **Navigation Key** or **Navigation Key** to select an image.
3. Press **Right Soft Key** for **Option**.
4. Select **Rename (6)** to rename the image.
5. Erase the previous image name, enter the new image name and press **OK** to save.

Deleting a Picture Message

1. From the **Camera (1)** menu, select **Gallery (2)**.
2. Use the **Navigation Key** or **Navigation Key** to select an image.
3. Press the **Right Soft Key** for **Option**.
4. Select **Erase (7)** to delete the image. A confirmation window will appear stating that the image will be erased from the gallery. Select either **Erase (1)** or **Cancel (2)**.

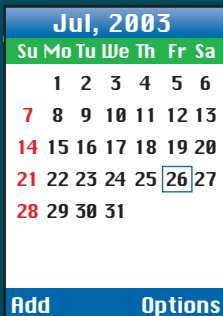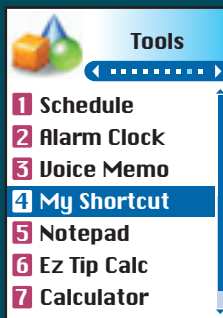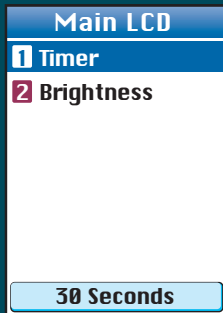

Changing the Backlight Timer

Allows you to select the duration the backlight is on for the displays.

1. From the **Display (2)** menu, select **Backlight (2)**.
2. Select either **Main LCD (1)**, or **Front LCD (2)**.
3. Select **Timer (1)**.
4. Press Navigation Key to select an option (**7 seconds**, **15 seconds**, **30 seconds**, **Always off**, or **On flip open** for Main LCD or **5 seconds**, **1 minute** or **3 minutes** for the Front LCD) and press .

Changing the Font Size and Color

Allows you to choose the size and color of the number and text input font.

1. From the **Display (2)** menu, select **Fonts (7)**.
2. Select **Calling Digits (1)**, or **Text Editor (2)**.
3. Select **Size (1)**, or **Color (2)**.
4. Press Navigation Key to select the size or color of the text and press .

Power Saver

Sets the time duration for keeping LCD turned on.

1. From the **Display (2)** menu, select **Power Saver (9)**.
2. Press Navigation Key to select an option (**2 min**, **10 min**, **30 min**, **Always on**) and press .

Status Light

Notifies you that your phone is working properly. Indicator lamp blinks every 10 minutes if phone operates under normal conditions.

1. From the **Display (2)** menu, select **Status Light (0)**.
2. Press Navigation Key to select an option (**On** or **Off**) and press .

OTHER NOTABLE SETTINGS

Manner Mode

Use Manner Mode in a public place to disable the ringer and activate Vibration Mode.

1. In the standby mode, activate Manner Mode by pressing the key or the Manner Mode Key (for 3 seconds) - the phone will vibrate when activated.
2. When set -Manner Mode- will appear on the screen.
3. To release Manner Mode, press the key again; **Silence All** is activated.
 Press the key again until **-Normal Mode Activated-** is displayed.

Silence All Mode: when activated there are no tones from the keys, and the ringer does not sound but the alert indicator blinks instead.

Programming the Short Cut Key

1. From the **Tools (8)** menu, select **My Shortcut (4)**.
2. Select your most frequently used function from the list provided and press .
3. Shortcut: Pressing the Navigation Key while in standby mode will quickly access this function.

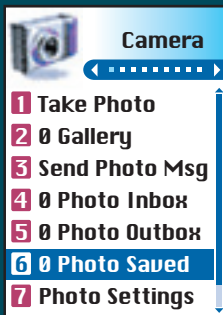 
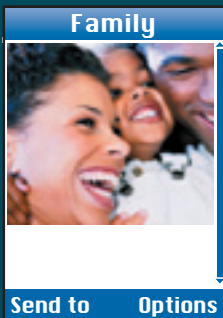 


Photo Outbox

View a Saved Picture Message from Photo Outbox

1. From the **Camera** (1) menu, select **Photo Outbox** (5).
2. To select a picture message, scroll down with the Navigation Key, then press to view the picture message.

Resending from the Photo Outbox to Other Recipients

1. From the **Camera** (1) menu, select **Photo Outbox** (5).
2. Select a picture message from the Outbox list and press **Left Soft Key** for **Send to**.
3. Press **Left Soft Key** for **Contact** (1), **Online Album** (2), or **Recent Call** (3), to select a recipient.
4. Press **Left Soft Key** to send.

Deleting from the Outbox

1. From the **Camera** (1) menu, select **Photo Outbox** (5).
2. Use the Navigation Key to select the desired picture message, then press .
3. To delete a picture message from the outbox, press **Right Soft Key** for **Options**.
4. Select **Erase** (3). **Select Erase** (1) again to confirm.

Resending from Photo Saved

1. From the **Camera** (1) menu, select **Photo Saved** (6).
2. Use the Navigation Key to select the desired message.
3. To view the highlighted saved picture message press .
4. If pix is saved from the Inbox, press **Left Soft Key** for reply, select **Photo Msg** (1) or **Text Only** (2).
5. If pix is saved from the Outbox, press **Left Soft Key** for **Resend**.

Photo Settings

Setting the Photo Msg Alert

Set an alert to indicate a photo msg has been delivered to you.

1. From the **Camera** (1) menu, select **Photo Settings** (7).
2. Select **Photo Msg Alert** (4).
3. Use the Navigation Key to select from **Silent**, **Vibrate Once**, **Vibrate and Sound**, **Custom Ring Tone**, **Low Beep Once**, **Low Beeps**, **Loud Beep Once**, or **Loud Beeps** and press .

Text Entry Mode

Allows you to automatically set the text when sending a pix msg.

1. From the **Camera** (1) menu, select **Photo Settings** (7).
2. Select **Text Entry Mode** (5).
3. Use the Navigation Key to select from **T9 Word**, **Abc**, or **123** and press .

Quick-Text

Allows you to automatically set the text when sending a picture message.

1. From the **Camera** (1) menu, select **Photo Settings** (7).
2. Select **Quick-Text** (7).
3. Select **Left Soft Key** to **Add New**.
4. Enter a custom text message. Press to save message.

CONNECTIVITY FEATURES


Downloading easyedgeSM Content

The new VX6000 by LG can store up to 1.5 Mb of content from easyedge, a service that allows you to access your email and download pictures, ringtones and games to your phone.

Note: 1.5 Mb of memory is allocated for easyedge content. Camera memory is separate and will not affect easyedge memory capacity.

Downloading New Content from easyedge (Instant Messaging, Games, Office Applications, etc.)

Apps

1. Press Soft Key 1.
2. Select **easyedge** (5).
3. Select **Apps** (1). Main display of easyedge will appear, press **OK**.
4. Select  icon and press **OK**.
5. Select either **Start** or **Options** and press **OK**.
Start allows you to download selected applications while displaying the easyedge application list relayed from the easyedge server in connection.
Options allows you to display download log and the current memory capacity of your mobile phone.
 - Information: displays usable capacity for your mobile phone and the memory capacity in use.
 - View Log: displays easyedge version, MSM Chip, and downloading record.
6. Shortcut: Press the ***1** on the navigation key while in standby mode to quickly start easyedge.



Help

1. Press Soft Key 1.
2. Select **easyedge** (5).
3. Select **Help** (2).

This submenu gives you information about the easyedge selection key.

Accessing the Web

The new VX6000 is enabled by the Openwave UP 4.1 Browser to access the Web.

 
 
1. From the **Web** (6) menu, select **Start Browser** (1).
2. A reminder of the charge will appear; select **Yes** (1) to launch MiniBrowser, if required. After a few seconds, you will see the Home Page.
3. You can end a MiniBrowser session by pressing .
4. Shortcut: Press the  on the Navigation Key while in standby mode to quickly launch the Browser.

Messages

Send New

Allows you to send text messages and emails.

1. From the **Messages** (4) menu, select **New Message** (2).
2. Press **Left Soft Key** for **Contacts** to select pre-programmed recipient or select **Address** and enter an email address or phone number and press **OK**.
3. Select **Message** and press **OK**.
4. Enter a custom text message, up to 160 characters. Press **OK** to complete the message.
5. Press **Right Soft Key** and select **Send** from the menu.

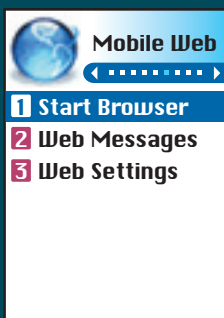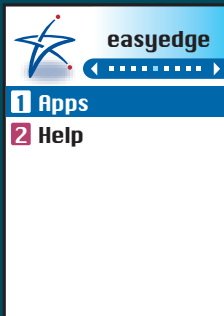

CUSTOMIZABLE FEATURES

Changing the Sound Settings

Selecting a Built-in Ringer

1. From the **Settings** (9) menu, select **Sounds** (1).
2. Select **Ringers** (1).
3. Select **Caller ID** (1), **No Caller ID** (2) or **Restrict** (3).
4. Choose from the list of available default ringers and press **OK**.

Note: The ringer list includes both downloaded and default ring tones. Downloaded ringers will be indicated by all lower case names while default ringers will have the first letter of their name capitalized.

Changing the Display Settings

Changing the Banner

Allows you to enter a string of characters (up to 16) to be displayed on the LCD screen.

1. From the **Settings** (9) menu, select **Display** (2).
2. Select **Banner** (1).
3. For actions, press **Right Soft Key: T9Word** (1), **Abc** (2), **123** (3), **Symbols** (4), or **Smiley** (5).
4. Enter the desired greeting and press **OK**.

Changing the Screen Display Image

Allows you to choose the kind of background to be displayed on the phone.

1. From the **Display** (2) menu, select **Screens** (3).
2. Select **Wallpaper** (1), **Power On** (2) or **Power Off** (3).
3. Select from the list of seven default images, press **OK** to save.
4. For **More images**, press **Right Soft Key: Default** (1), **Graphics** (2), **Gallery** (3).

Changing the Menu Style

Allows you to choose whether you want the menu to show as a list or as icons.

1. From the **Display** (2) menu, select **Menu Style** (4).
2. Select either **Icon** or **List** and press **OK**.

Changing the Theme Color

 
 
 
Allows you to choose the color of the background screen.

 
 
 
 
1. From the **Display** (2) menu, select **Theme Colors** (6).
2. Press **Navigation Key** to select desired option (**Default**, **Green**, **Violet** or **Orange**) and press **OK**.

Changing the External OEL Display Pattern

Allows you to choose different patterns for the external OEL display.

1. From the **Display** (2) menu, select **Backlight** (2).
2. From the **Front LCD** (2) menu select **Patterns** (2).
3. Select **Incoming Calls** (1), **Missed Calls** (2), **New SMS Alert** (3), **Reminders** (4) or **Standby** (5).
4. Press **Navigation Key** to select desired pattern (**Pattern0** (1), **Pattern1** (2), **Pattern2** (3), **Pattern3** (4), **Pattern4** (5)) and press **OK**.

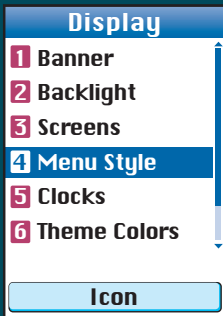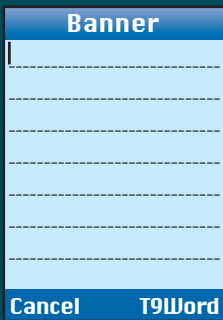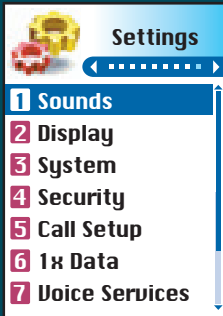

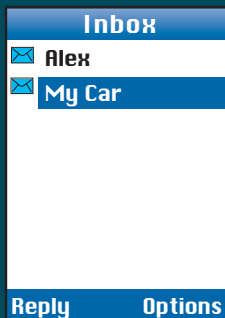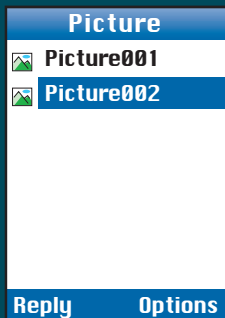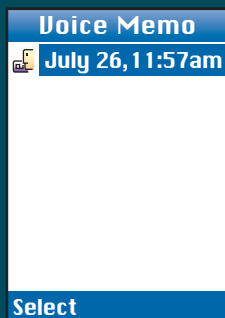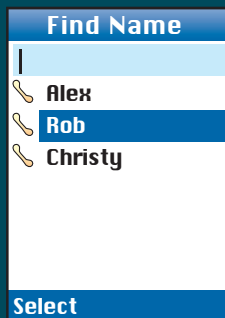

Sending a Photo

Sending a Picture Message from Camera

1. From the **Camera** (1) menu, select **Send Photo Msg** (3).
2. Press **Left Soft Key** for **Contact** (1), **Online Album** (2), or **Recent Call** (3).
3. Use the Navigation Key to select the recipient, press **OK** twice.
Up to 10 recipients can be added to each picture message.
4. Use the Navigation Key, select **picture**, press **OK**.
5. Use the Navigation Key to scroll through the list of pictures, then press **OK** to view the picture.
6. Press **Left Soft Key** to select the image or press the Navigation Key to select a different picture and press **SEND**, or press the **CLR** button to cancel.

Adding Text, Sound, and Voice Memo to a Picture Message

After selecting the picture and who to send it to, custom text, sounds and voice memos can be added to a picture message. On the Send Photo Msg screen:

1. Use the Navigation Key to scroll to **Text**, press **OK**.
2. Enter a custom text message, up to 1000 characters. Press **OK** to complete the message.
3. Use the Navigation Key to scroll to **Sound**, press **OK**.
4. Use the Navigation Key to select sound or voice memo, press **OK**.
5. Press **Right Soft Key** for **Options**, select **Send** (2), or press **SEND**.

Photo Inbox

View a Picture Message

1. From the **Camera** (1) menu, select **Photo Inbox** (4).
2. To select a picture, scroll down with the Navigation key, then press **OK** to view the picture message.

Replying to a Picture Message

1. From the **Camera** (1) menu, select **Photo Msg Inbox** (4).
2. To select a picture message, scroll down with the Navigation Key, then press **OK** to view the picture message.
3. Wait until slide show is over and press **Left Soft Key** for **Reply** select **Photo Msg** (1) or **Text Only** (2).

Forwarding a Picture Message to Another Handset or E-Mail address

1. From the **Camera** (1) menu, select **Photo Msg Inbox** (4).
2. To select a picture message, scroll down with the Navigation Key, then press **OK** to view the picture message.
3. To forward the picture message wait until slide show is over then press **Right Soft Key** for **Options**, select **Forward** (8).
4. Press **Left Soft Key** for **Contacts** (1), **Online Album** (2), or **Recent Calls** (3), to select a recipient.

Save a Picture Message to Saved Photo Msg

1. From the **Camera** (1) menu, select **Photo Msg Inbox** (4).
2. To select a picture message, scroll down with the Navigation Key, then press **OK** to view the picture message.
3. Wait until slide show is over then press **Right Soft Key** for **Options**, select **Save Photo Msg** (7).

PHONE MENU

Press Left Soft Key Menu. Press  to Scroll

Camera	Contacts	Recent Calls	Messages	Easyedge	Mobile Web	My Media
<ol style="list-style-type: none"> Take Photo Gallery Send Photo Msg Photo Inbox Photo Outbox Photo Saved Photo Settings <ol style="list-style-type: none"> Auto Save Auto Delete Auto Download Photo Msg Alert Text Entry Mode Delivery Ack Quick-Text Erase all <ol style="list-style-type: none"> Inbox Outbox Saved All 	<ol style="list-style-type: none"> List Contacts List Number New E-mail Groups Speed Dials Voice Dials My Contact Info 	<ol style="list-style-type: none"> Dialed Calls Received Calls Missed Calls Erase Calls <ol style="list-style-type: none"> Dialed Calls Received Calls Missed Calls All Calls Call Timer <ol style="list-style-type: none"> Last Call Home Calls Roam Calls All Calls 	<ol style="list-style-type: none"> Voice Mail New Message Inbox Outbox Saved Msg Settings <ol style="list-style-type: none"> Auto Save Auto Delete Callback # Msg Alerts Signature Direct View Entry Mode Edit Voice Mailbox # Quick-Text Erase All <ol style="list-style-type: none"> Inbox Outbox Saved All 	<ol style="list-style-type: none"> Apps Help 	<ol style="list-style-type: none"> Start Browser Web Messages Web Settings <ol style="list-style-type: none"> Prompt Alert Beep 	<ol style="list-style-type: none"> Graphics Music
				Tools	Settings	
				<ol style="list-style-type: none"> Schedule Alarm Clock <ol style="list-style-type: none"> Alarm 1 Alarm 2 Alarm 3 Quick Alarm Voice Memo My Shortcut Notepad Ez Tip Calc Calculator World Clock 	<ol style="list-style-type: none"> Sounds <ol style="list-style-type: none"> Ringers Key Tone Volume Alerts Power On/Off Tone Display <ol style="list-style-type: none"> Banner Backlight Screens Menu Style Clocks Theme Colors Fonts Language Power Saver Status light System <ol style="list-style-type: none"> Select System Set NAM Auto NAM Serving System Security <ol style="list-style-type: none"> Lock Phone Restrict Emergency #s Change Code Erase Contacts Reset Default 	<ol style="list-style-type: none"> Call Setup <ol style="list-style-type: none"> Auto Retry Answer Call Auto-Answer One-Touch Dial Voice Privacy Auto Volume TTY Mode 1X Data <ol style="list-style-type: none"> Data/Fax Select Port Port Speed Voice Services <ol style="list-style-type: none"> Voice Dial Prompt Answering Machine Train Words Location Phone Info <ol style="list-style-type: none"> My Phone Number S/W Version Icon Glossary Shortcut Help

Headquartered in San Diego, California, LG Mobile Phones is the North American wireless division of LGE USA, a business unit of LG Electronics of Seoul, Korea. With annual sales of approximately \$16 billion, LGE employs over 55,000 individuals and operates research and development, manufacturing, and sales and marketing facilities around the globe. LG Mobile Phones has expanded its market share to nearly 19 percent of CDMA wireless handsets sold and placed third in the United States at the end of 2002 according to analysts at Strategy Analytics.



LG InfoComm U.S.A., Inc. 10225 Willow Creek Rd., San Diego, CA 92131-1639
www.LGmobilephones.com | Customer Service: (800) 793-8896
 For more information on purchasing LG accessories, please call 1-800-851-6734

Copyright ©2003 LG. All rights reserved. Other products and services are trademarks of their respective owners. Phone features and specifications are subject to change without prior notice. Services and features may vary depending on network service provider, service plan, network conditions, and personal usage.

The use of non-LG approved accessories will void the warranty and may result in damage to the phone, the phone to explode, or other dangerous conditions. Battery talk and standby times are estimates only. Use of certain features and other conditions including, but not limited to, battery age and condition, charging habits, temperatures to which the battery is exposed, and use in digital mode will cause actual standby and talk time to vary. The amount of talk time used will impact the standby time. In the same way, the amount of time that the phone is in standby mode will impact the talk time.

6000TRAINMAN/USC

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>