



User Guide



V CAST MUSIC with RHAPSODY
and MESSAGING PHONE

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

*Copyright©2009 LG Electronics, Inc. All rights reserved.
LG and the LG logo are registered trademarks of LG Group
and its related entities. enV[®] is a trademark of Verizon
Wireless. All other trademarks are the property of their
respective owners.*

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

Warning

Violation of the instructions may cause serious injury or death.



- Never use an unapproved battery since this could damage the phone and/or the battery and could cause the battery to explode.
- Never place your phone in a microwave oven as it will cause the battery to explode.



- Never store your phone in temperatures lower than -4°F or higher than 122°F.
- Do not dispose of your battery near fire or with hazardous or flammable materials.



- When riding in a car, do not leave your phone or set up the hands-free kit near the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.
- Do not use a hand-held phone while driving.



- Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



- Do not use harsh chemicals (such as alcohol, benzene, thinner, etc.) or detergent to clean your phone. This could cause a fire.



- Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.
- Do not use your phone in highly explosive areas as the phone may generate sparks.



- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.



- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not disassemble the phone.



- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Make sure that no sharp-edged items, such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



- Store the battery out of reach of children.
- Be careful that children do not swallow any parts (such as earphone, connection parts of the phone, etc). This could cause asphyxiation or suffocation resulting in serious injury or death.



- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



- Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstance, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions	1	Making Calls	24
Table of Contents	4	Redialing Calls	25
Welcome	9	Receiving Calls	25
Technical Details	10	Quick Access to Convenient Features	26
Important Information	10	Vibrate Mode	26
Phone Overview	14	Mute Function	26
Entering and Editing Information	16	Volume Quick Adjustment	26
Menu Tree on the Internal Screen	17	Call Waiting	26
Getting Started with Your Phone	20	Shortcuts	27
The Battery	20	Voice Commands	27
Installing the Battery	20	Contacts in Your Phone's Memory	28
Removing the Battery	20	Storing Basics	28
Charging the Battery	20	Customizing Individual Entries	29
Charging with USB	21	Speed Dial	29
How to Install Your microSD™ Card	22	Storing a Number with Pauses	30
How to Remove Your microSD™ Card	22	Adding Additional Phone Number(s) to Existing Contact	31
Battery Temperature Protection	23	Changing the Default Number	31
Battery Charge Level	23	Deleting	32
Turning the Phone On and Off	23	Speed Dialing	33
Turning the Phone On	23	MY RINGTONES	34
Turning the Phone Off	23	MESSAGING	35
Signal Strength	24	1. New Message	35
Screen Icons	24	1.1 TXT Message	35

1.2 Picture Message	37
1.3 Video Message	39
1.4 Voice Message	41
2. Messages	42
3. Drafts	45
4. Voicemail	46
5. Visual Voice Mail	46
6. Mobile IM	47
7. Email	47
8. Chat	47
9. Blogs	48
Message Settings	48
Erasing Messages	50

RECENT CALLS51

1. Missed	51
2. Received	51
3. Dialed	52
4. All	52
5. View Timers	53

CONTACTS54

1. New Contact	54
2. Contact List	54
3. Backup Assistant	55
4. Favorites	55
5. Groups	56
6. Speed Dials	57
7. In Case of Emergency (ICE)	57
8. My Name Card	58

MEDIA CENTER59

1. Music & Tones	59
1.1 V CAST Music Rhapsody®	60
1.2 Get New Ringtones	60
1.3 My Ringtones	60
1.4 My Music	61
1.5 My Sounds	63
1.6 Sync Music	64
2. Picture & Video	65
2.1 V CAST Videos	65
2.2 Get New Pictures	67
2.3 My Pictures	68
2.4 My Videos	69
2.5 Take Picture	70
2.6 Record Video	71
2.7 Online Album	72
3. Games	72
4. Dashboard/Mobile Web	72
5. Browse & Download	78
6. Extras	81

EMAIL82

VZ NAVIGATOR82

MOBILE IM82

SETTINGS & TOOLS83

1. My Verizon	83
2. Tools	83
2.1 Voice Commands	83
2.1.1 Call <Name or Number>	84

Table of Contents

2.1.2 Send Msg to <Name or Number>	84	4.4 Alert Sounds	94
2.1.3 Go to <Menu>	84	4.5 Keypad Volume	95
2.1.4 Check <Item>	84	4.6 Digit Dial Readout	95
2.1.5 Contacts <Name>	84	4.7 Service Alerts	95
2.1.6 Redial	85	4.8 Power On/Off	96
2.1.7 Play	85	4.9 Voice Clarity	96
2.1.8 My Verizon	85	5. Display Settings	96
2.1.9 Help	85	5.1 Easy Set-up	96
2.2 Calculator	85	5.2 Banner	97
2.3 Ez Tip Calculator	85	5.2.1 Personal Banner	97
2.4 Calendar	86	5.2.2 ERI Banner	98
2.5 Alarm Clock	87	5.3 Backlight	98
2.6 Stopwatch	87	5.4 Brightness	98
2.7 World Clock	88	5.5 Wallpaper	99
2.8 Notepad	88	5.6 Charging Screen	99
2.9 USB Mass Storage	88	5.7 Display Themes	100
3. Bluetooth® Menu	89	5.8 Main Menu Settings	100
3.1 Add New Device	89	5.8.1 Menu Layout	100
My Phone Name	91	5.8.2 Replace Menu Items	101
Turn On/Off	91	5.8.3 Position Menu Items	101
Discovery Mode	91	5.8.4 Reset Menu Settings	101
Supported Profiles	92	5.9 Font Size	101
4. Sounds Settings	93	5.10 Menu Font Type	102
4.1 Easy Set-up	93	5.11 Clock Format	102
4.2 Master Volume	93	6. Phone Settings	103
4.3 Call Sounds	93	6.1 Airplane Mode	103
4.3.1 Call Ringtone	94	6.2 Set Shortcuts	103
4.3.2 Call Vibrate	94	6.2.1 Set My Shortcuts	103
4.3.3 Call ID Announcement	94	6.2.2 Set Directional Keys	104

6.2.3 Set QwertyShortcut	104
6.3 Voice Commands	104
6.3.1 Confirm Choices	104
6.3.2 Sensitivity	105
6.3.3 Adapt Voice	105
6.3.4 Prompts	105
6.3.5 CLR Key Activation	106
6.4 Language	106
6.5 Location	106
6.6 Current Country	107
6.7 Security	107
6.7.1 Edit Codes	107
6.7.2 Restrictions	108
6.7.3 Phone Lock	108
6.7.4 Lock Phone Now	109
6.7.5 Reset Default	109
6.7.6 Restore Phone	109
6.8 System Select	110
6.9 NAM Select	110
7. Call Settings	110
7.1 Answer Options	110
7.2 End Call Options	111
7.3 Auto Retry	111
7.4 TTY Mode	111
7.5 One Touch Dial	113
7.6 Voice Privacy	113
7.7 DTMF Tones	114
7.8 Assisted Dialing	114
8. USB Mode	114

9. Memory	115
9.1 Save Options	115
9.2 Phone Memory	116
9.3 Card Memory	116
10. Phone Info	117
10.1 My Number	117
10.2 SW/HW Version	117
10.3 Icon Glossary	117
10.4 Software Update	118
11. Set-up Wizard	119

Safety

TIA Safety Information	120
Exposure to Radio Frequency Signal	120
Antenna Care	120
Phone Operation	120
Tips on Efficient Operation	121
Driving	121
Electronic Devices	121
Pacemakers	121
Hearing Aids	122
Other Medical Devices and Health Care Facilities	122
Vehicles	122
Aircraft	122
Blasting Areas	122
Potentially Explosive Atmosphere For Vehicles Equipped with an Air Bag	123
Safety Information	123
Charger and Adapter Safety	124

Table of Contents

Battery Information and Care	124
Explosion, Shock, and Fire Hazards	126
General Notice	127
Caution: Avoid potential hearing loss.	128
FDA Consumer Update	130
10 Driver Safety Tips	137
Consumer Information on SAR	140
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	142
Accessories	145
LIMITED WARRANTY STATEMENT	146
Glossary	149
Terminology	149
Acronyms and Abbreviations .	149
Index	151

Thank you for choosing the enV[®] 3 cellular phone designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- V CAST Music with Rhapsody
- V CAST Video
- Mobile IM.
- VZ Navigator.
- Mobile Email.
- 54-key internal keypad.
- 21-key external keypad and screen with auto screen lock.
- Customizable display themes and screensavers.
- Built-in 3.0 Megapixel digital camera.
- External easy-to-read 5-line LCD screen with status icons.
- Internal, easy-to-read, 8-line backlit LCD with status icons.
- Paging, messaging, voicemail, and caller ID.
- Dashboard with Mobile Web.
- HTML Web Browser
- Media Center.
- Long battery standby and talk time.
- Any key answer, auto answer with hands-free accessories, auto retry, one-touch and speed dialing with 999 memory locations.
- Bilingual (English and Spanish) capability.
- Bluetooth[®] wireless technology.

NOTE The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

TIP

Find the interactive user guide on the web for your convenience where you can freely surf and interactively learn how to use your phone step-by-step.

1. Go to <http://www.verizonwireless.com>
2. Hover over the Support tab, click on Phones & Devices.
3. Select LG from the Phone/Device brand drop-down menu.
4. Click on the Link for this model.
5. Click on Equipment Guide to start the interactive Guide.

Technical Details

Important Information

This user's guide provides important information on the use and operation of your phone. Please read this guide carefully prior to using the phone to be able to use your phone to its greatest advantage and to prevent any accidental damage or misuse. Any unapproved changes or modifications will void your warranty.

Technical Details

The enV® 3 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft/softer handoff, hard

handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible. EV-DO system is optimized for data service and is much faster than 1xRTT system in applicable area.

The table on the following page lists some major CDMA standards.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps Radio Link Protocol and Inter-Band Operations IS-95 Adapted for PCS Frequency Band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem Operations Non-Signaling Data Communications.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO Related Interface	TIA/EIA/IS-856 TIA/EIA/IS-878 TIA/EIA/IS-866 TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface 1x EV-DO Inter-Operability Specification for HRPD Access Network Interfaces Recommended Minimum Performance Standards for HRPD High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or

retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Phone Overview



- 1. Earpiece** Lets you hear the caller.
- 2. CONTACTS Key** Use to access the Contact List.
- 3. Camera Key** Use for quick access to Camera function.
- 4. Volume Keys** Use to adjust the Master Volume in standby mode* and the Earpiece Volume during a call.
- 5. SEND Key** Use to make and answer calls.
- 6. Accessory/ Charger Port** Connects the phone to the battery charger, or other compatible accessory.
- 7. Alphanumeric keypad** Use to enter numbers and characters and select menu items
- 8. Vibrate Mode Key** From standby mode*, press and hold for about 3 seconds to activate Vibrate Mode.
- 9. microSD™ Slot** Accommodates an optional microSD™ card.
- 10. OK Key/ Directional Keys** Use to unlock the screen, access the Menu, and accept entered or highlighted information. Use for quick, convenient navigation. From standby mode, access My Music (by pressing Up), My Pictures (Left), Messaging (Down), and the Bluetooth Menu (Right). You can view more information on page 27. When navigating menus, use the Directional Keys to scroll to choices and settings.

- 11. PWR/END Key** Use to turn the power on/off and to end a call. Also returns to standby mode.*
- 12. CLR Key / Voice Commands Key** Deletes single spaces or characters with a quick touch, but press and hold to delete entire words. Also backs out of menus, one level at a time. In standby mode*, simply press the key to start Voice Commands or press and hold to start recording a new sound.
- 13. Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations. Plug headset into the 2.5mm jack located at the top right corner of the device.
- 14. External LCD Screen** Allows you to view incoming calls, messages and icons indicators as well as a wide variety of content you select for viewing.
- 15. Camera Lens** Used for taking pictures and recording video. Keep it clean for optimal photo quality.

* Standby mode is when the phone is waiting for input from you. No menu is displayed and the phone isn't performing any action. It's the starting point for all of the instruction steps.

Note: This User Manual gives navigation instructions according to the default "Grid" Menu Layout in the Display Settings menu. If other themes or menus are set, navigating the phone's menus may be different.



1. **Left Soft Key** Use to access Message menu when in Standby mode, or other function displayed at the bottom left of the LCD.
2. **FAVORITES Key** Add up to 10 favorite contacts or groups as Favorites, so you can easily make calls, send messages, and review messages.
3. **Message Key** Use for quick access to New TXT Message.
4. **Shift Key** Use to change letter case when typing.
5. **Sym Key** Use to insert symbols (displayed at the top of designated keys) into your text.
6. **Game Directional Keys** Use for game navigation.
7. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
8. **Space/ Voice Commands Key** Use to enter a space while editing. TTS (Text to Speech) function is available with **Space** in Messaging Inbox, and Notepad. Use to activate Voice Commands in standby mode.
9. **Return Key** Moves cursor to the next line.
10. **CLR Key** Press to delete a single space or character, or press and hold to delete a specific word plus its space. Press once in a menu to go back one level.
11. **Speakerphone Key** Use to activate Speakerphone Mode.
12. **Directional Keys** Use for quick, convenient navigation. From standby mode, access Mobile Web, My Account, Calendar, and My Shortcuts (you can change any of these to other menus in the Settings menu). In menus use to scroll to choices and settings.
13. **OK Key** Use to activate a selected screen item.
14. **PWR/END Key** Use to turn the power on/off and to end a call. Use to return to standby mode.
15. **SEND Key** Use to make or answer calls.
16. **Right Soft Key** Use to access the Contact List when in Standby mode, or select the option displayed at the bottom right of the LCD.
17. **LCD Screen** Displays incoming calls, messages and indicator icons as well as a wide variety of content you select to view.
18. **Light Sensor** Automatically adjusts the brightness of the main LCD to disable this sensor and set the brightness to a fixed level, use the Brightness submenu in the Display menu.
19. **Speakers** Lets you hear the caller's voice, music and video in speakerphone mode.


Entering and Editing Information

From the Internal Qwerty Keypad

When creating a Text, Picture or Video message using the inside LCD, use the Qwerty keypad.

Press this key to access your Favorite contacts list. From here you can easily make calls, send and view messages.

Use the arrow keys to go to next field such as recipient address, text, picture and video depending on the message types. Use the **OK** Key to send a message when finished.

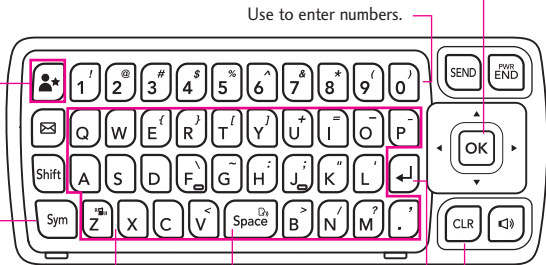

Use to enter letters.

Use to insert a space between a letter, words and sentences.

Use to go to next line editing your message.

Use to delete a letter, words or sentences. Also use it to exit the menu and go back to standby mode.

Press this key first and then any key with a symbol on it to insert that symbol in your message.

Menu Tree on the Internal Screen



My Ringtones



Messaging

1. New Message
 1. TXT message
 2. Picture Message
 3. Video message
 4. Voice message
2. Messages
3. Drafts
4. Voicemail
5. Visual Voice Mail
6. Mobile IM
7. Email
8. Chat
9. Blogs



Recent Calls

1. Missed
2. Received
3. Dialed
4. All
5. View Timers



Contacts

1. New Contact
2. Contact List
3. Backup Assistant
4. Favorites
5. Groups
6. Speed Dials
7. In Case of Emergency
8. My Name Card



Media Center

1. Music & Tones
 1. V CAST Music I Rhapsody
 2. Get New Ringtones
 3. My Ringtones

4. My Music
5. My Sounds
6. Sync Music
2. Picture & Video
 1. V CAST Videos
 2. Get New Pictures
 3. My Pictures
 4. My Videos
 5. Take Picture
 6. Record Video
 7. Online Album
3. Games
 1. Get New Applications
4. Dashboard / Mobile Web
5. Browse & Download
6. Extras



Email



VZ Navigator

Menu Tree on the Internal Screen



Mobile IM



Settings & Tools

1. My Verizon

2. Tools

1. Voice Commands
2. Calculator
3. Ez Tip Calculator
4. Calendar
5. Alarm Clock
6. Stopwatch
7. World Clock
8. Notepad
9. USB Mass Storage

3. Bluetooth Menu

1. Add New Device

4. Sounds Settings

1. Easy Set-up
2. Master Volume
3. Call Sounds
 1. Call Ringtone
 2. Call Vibrate

3. Caller ID Announcement

4. Alert Sounds

1. TXT Message
2. Multimedia Message
3. Voicemail
4. Emergency Tone
5. Missed Call

5. Keypad Volume

6. Digit Dial Readout

7. Service Alerts
 1. ERI
 2. Minute Beep
 3. Call Connect
 4. Charge Complete

8. Power On/Off

1. Power On
2. Power Off

9. Voice Clarity

5. Display Settings

1. Easy Set-up
2. Banner
 1. Personal Banner
 2. ERI Banner
3. Backlight
 1. Internal Backlight

2. External Backlight

3. Keypad Backlight

4. Brightness

1. Auto Brightness
2. Brightness Level

5. Wallpaper

1. Internal Wallpaper
2. External Wallpaper

6. Charging Screen

7. Display Themes

1. Internal Themes
2. External Themes

8. Main Menu Settings

1. Menu Layout
2. Replace Menu Items
3. Position Menu Items
4. Reset Menu Settings

9. Font Size

10. Menu Font Type
11. Clock Format

6. Phone Settings

1. Airplane Mode
2. Set Shortcuts
 1. Set my Shortcuts
 2. Set Directional Keys
 3. Set Qwerty Shortcut
3. Voice Commands
 1. Confirm Choices
 2. Sensitivity
 3. Adapt Voice
 4. Prompts
 5. CLR Key Activation
4. Language
5. Location
6. Current Country
7. Security
 1. Edit Codes
 2. Restrictions
 3. Phone Lock
 4. Lock Phone Now
 5. Reset Default
 6. Restore Phone
8. System Select
9. NAM Select

7. Call Settings

1. Answer Options
2. End Call Options
3. Auto Retry
4. TTY Mode
5. One Touch Dial
6. Voice Privacy
7. DTMF Tones
8. Assisted Dialing

8. USB Mode

9. Memory





1. Save Options
2. Phone Memory
3. Card Memory

10. Phone Info

1. My Number
2. SW/HW Version
3. Icon Glossary
4. Software Update

11. Set-up Wizard

NOTE Keyguard Settings is available on the External display.

1. Press  to unlock
2. Press  MENU
3. Scroll to  KEY GUARD and press 
4. Select Keyguard Timer:
Always Off/ 7 Seconds/
15 Seconds/ 30 Seconds
or Unlock Options:
Press Once/ Press Twice

Getting Started with Your Phone

The Battery

NOTE It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

To install the battery, insert the top edge (opposite the battery terminals) of the battery into the opening on the back of the phone. Push the battery down until it clicks into place.



Removing the Battery

Turn power off. Slide the battery release latch away from the edge of the battery, then lift the edge of the battery to remove it.



 
Charging the Battery

Your enV³ device comes with a cableless travel adapter and a USB data cable which are connected together to charge your phone. To charge your phone:

NOTICE

Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the cableless wall adapter and USB data cable. When connecting as shown below, the LG logo on the USB cable should face toward you.



2. Gently uncover the accessory charging port, then plug the end of the AC adapter into the phone's charger port and the other end into an electrical outlet.



NOTICE

Please make sure that the 'B' Side faces up before inserting a charger or data cable into the charger port of your phone.

3. The charge time varies depending upon the battery level.

Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you need to have the necessary USB drivers installed on your PC first. Connect one end of the USB cable to the charging accessory port on your phone and the other end to a highpower USB port on your PC (commonly located on the front panel of the computer). It is best to use the rear USB port when connecting to a desktop PC. A USB Hub should be powered by an external power source (see Note below).

- NOTE**
- Low-power USB ports are not supported, such as the USB port on your keyboard or bus-powered USB hub.
 - LG USB Driver is downloadable from the following site:
<http://www.lgmobilephones.com>
> Click SUPPORT > Select a Carrier(Verizon) > Select a Model > Click USB Cable Driver to download.

Getting Started with Your Phone

How to Install Your microSD™ Card



1. Locate the microSD™ slot on the right side of the phone and gently uncover the slot opening (microSD™ slot cover stays attached to the phone so you don't lose it).



2. Insert the microSD™ card facing up and push until it clicks into the slot. If you insert the card in the wrong direction, it may damage your phone or your card.

How to Remove Your microSD™ Card

1. Push the card in to release the exposed edge of the microSD™ card to eject it.
2. Remove the microSD™ card from the slot and replace the cover.

NOTE • Do not attempt to remove the microSD™ card while reading or writing to the card.

- Users wishing to transfer or download music onto a MicroSD™ card inserted into this phone (through either MTP Sync or Over the Air) should format the MicroSD™ card on this handset before using it through (Menu -> Settings & Tools -> Memory -> Card Memory -> Options -> Format). Warning: Formatting the MicroSD™ card will erase all contents on the card. In the event the MicroSD™ card is used on this phone without first formatting it, the phone will display a "License acquisition failed" during OTA downloading or MTP Sync. Song files downloaded or otherwise purchased from third party providers and stored on a MicroSD™ card inserted into this device may be protected or encrypted by such provider and cannot be played on this device.

Battery Temperature Protection

Though extremely rare, if the battery becomes overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.


Battery Charge Level

You can find the battery charge level at the top right of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and displays a warning message. As the charge level approaches empty, the phone automatically switches off without saving.


Turning the Phone On and Off

Turning the Phone On

Using the Internal Keypad


1. Install a charged battery or connect the phone to external power source.
2. Open the flip and press  for a few seconds until the LCD screen lights up.

Using the External Power Key



1. Install a charged battery or connect the phone to external power source.
2. Press  for a few seconds until the LCD screen lights up.

Turning the Phone Off

Using the Internal Keypad

1. Press and hold  until the display turns off.

Using the External Power Key

1. Unlock the screen by pressing  once or twice.
2. Press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon: the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving towards a nearby window.

Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons.

Using the Internal Keypad




To see the icon glossary, go to **MENU → Settings & Tools → Phone Info → Icon Glossary** on your phone.

Making Calls



Make sure the phone is turned on. If necessary, enter the lock code.

NOTE To activate the speakerphone during a call, simply open the flip.




Using the External Keypad

1. Unlock the screen by pressing  once or twice.
2. Enter the phone number (include the area code, if needed).
3. Press the  key.
4. Press the  key to end the call.



Using the Internal Keypad

1. Open the flip and enter the phone number (include the area code, if needed).
2. Press the  key.
3. Press the  key to end the call.

Correcting Dialing Mistakes



If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to delete all digits. When using external keypad, use .



Redialing Calls



Press and hold the external  key or the internal  key to redial the last number you dialed, received or missed in call history. The last 270 numbers are stored in the call history list and you can select any of these to redial.

Receiving Calls



Using the External Keypad


1. When the phone rings or vibrates, press the  key.
2. Press the  key to end the call.


NOTE Simply press the  key to immediately silence the ringtone or vibration for that call. Or, you can press the  key twice, then select **Quiet**. (1 = Unlock, 2 = Options, and 3 = Quiet).


NOTE To ignore the incoming call, press the  key twice to immediately end the call. Or, you can press the  key twice, then select **Ignore**.

Using the Internal Keypad

1. There are several ways of answering a call, depending on your selected Answer Options (for instructions on how to set your preferences, see page 110):
 - **Flip Open:** Open the flip.
 - **Any Key:** Press the  key or, with the phone unlocked, press any other key except the  key.
 - **Auto with Handsfree:** The call automatically connects when connected to a handsfree device.
 - **SEND Key only:** If none of the Answer Option boxes are checked, only the SEND Key will answer a call.

NOTE If you press the Left Soft Key  [**Quiet**] while the phone is ringing and the flip is open, the ringing or vibration is muted for that call.

NOTE If you press the Right Soft Key  [**Ignore**] while the phone is ringing and the flip is open, the call will end or go to voicemail.

NOTE If you press  while the phone is ringing and the flip is already open, the call will end and will be able to select a Quick Text to send to the caller.

Quick Access to Convenient Features

Vibrate Mode

Sets the phone to vibrate instead of ring (🔔 is displayed on the Status bar). To set Vibrate Mode, press and hold **[Z]** on the internal keypad, or **[#]** on the external keypad (after unlocking the phone if locked).

To return to Normal Mode, press and hold **[Z]** again on the internal keypad, or **[#]** on the external keypad.

Mute Function

The Mute Function prevents the transmission of your voice to the caller. To quickly activate Mute using the internal keypad, press the Left Soft Key **[Mute]**. To unmute press the Left Soft Key **[Unmute]** again.

When the flip is closed, press **[OK]** **[OPTIONS]**, then press **[OK]** **[Mute]**. To unmute, press **[OK]** **[OPTIONS]**, then press **[OK]** **[Unmute]**.

Volume Quick Adjustment

Quickly adjust ringer and earpiece volumes by pressing the upper volume key to increase and the lower volume key to decrease.

NOTE The earpiece volume can only be adjusted during a call.

Call Waiting

During a call, one beep indicates that you have another incoming call.

Ignoring a Call Waiting

If you don't want to answer the incoming call, press the Right Soft Key **[Ignore]** when the flip is open. When the flip is closed, you can ignore the call by pressing **[OK]** **[OPTIONS]** and selecting Ignore.

Answering a Call Waiting






1. Press the internal **[SEND]** key / the external **[SEND]** key whether the flip is open or closed to automatically put the first call on hold and answer the new call.
2. Press the internal **[SEND]** key / the external **[SEND]** key again to put the second call on hold and return to the first call.

Shortcuts

Your enV[®] 3 device has shortcut keys built in to allow quick and convenient access to phone features.





NOTE The preset shortcuts for the internal keypad can be changed to suit your needs.

External Directional Keys Shortcut Access

1. Unlock the screen by pressing  once or twice.
2. Press the Navigation Key:
 - Up Navigation Key  accesses **My Music**
 - Down Navigation Key  accesses **Messaging**
 - Left Navigation Key  accesses **My Pictures**
 - Right Navigation Key  accesses **Bluetooth Menu**



Internal Directional Keys Shortcut Access

1. Open the flip.
2. Press the Navigation Key:

- Up Navigation Key  accesses **Dashboard**
- Down Navigation Key  accesses **Calendar**
- Left Navigation Key  accesses **My Account**
- Right Navigation Key  accesses **My Shortcuts**

Voice Commands

Voice Commands allow you to do things by verbal command (e.g., make calls, confirm Voicemail, etc.).










1. Access the Voice Commands feature:
 - With the flip open, press .
 - With the flip closed and the screen unlocked, give the  a quick press (an extended press activates the Voice Recorder feature instead).
2. Follow the prompts to use your voice command(s).

NOTE Voice Commands can also be started with the designated key on your Bluetooth[®] device. Please check the manual of the Bluetooth[®] device for further instructions.




Contacts in Your Phone's Memory




Storing Basics

Using the Internal Keypad








1. Open the flip.
2. Enter a number (max. 48 digits), then press the Left Soft Key  [Save].
3. Use the Directional Key  to scroll to **Add New Contact/ Update Existing**, then press .
4. Use the Directional Key  to scroll to **Mobile 1/ Home/ Work/ Mobile 2/ Fax**, then press .
5. Enter a name (max. 32 characters), then press  to save.
6. Press  to exit,  to call, or the Right Soft Key  [Options] for other options.

Using the External Keypad

1. Unlock the screen by pressing  once or twice.
2. Enter a number (max. 48 digits), then press  [OPTIONS].
3. Press  to **Save**.






4. Use the Directional Key  to scroll to **Mobile 1/ Home/ Work/ Mobile 2/ Fax**, then press .
5. Enter a name (max. 32 characters), then press  to save.

Using the External Keypad with the Contacts Menu

1. Unlock the screen by pressing  once or twice.
2. Press  [MENU].
3. Use the Directional Key  to scroll to **Contacts**, then press .
4. Press  **New Contact**.
5. Enter the name, then use the Directional Key  to scroll down to the phone number type you want to enter.
6. Enter the number, then press  to **save**.

Customizing Individual Entries

Using the Internal Keypad




1. Press the Right Soft Key  [Contacts], then use the Directional Key  to scroll to an entry.
2. Press the Left Soft Key  [Edit].
3. Use the Directional Key  to scroll to the information to customize.
4. Change the entry as you want, then press  to save your changes.










NOTE The external keypad cannot be used to customize an existing Contact entry.

Speed Dial

Allows you to set up your Speed Dials.


Using the Internal Keypad

1. Press the Right Soft Key  [Contacts], then use the Directional Key  to scroll to an entry.
2. Press the Left Soft Key  [Edit].





3. Use the Directional Key  to scroll to a phone number, then press the Right Soft Key  [Options].
4. Use the Directional Key  to scroll to **Set Speed Dial**, then press .
5. Enter a Speed Dial digit.
 - Use the keypad, then press  to set.
 - You can also use the Directional Key  to scroll to the Speed Dial digit, then press  to set.
6. Screen prompt appears **Assign Speed Dial to Contact?** Press  to select **Yes**, then press  to select **Save**.

Contacts in Your Phone's Memory






Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voicemail or credit billing numbers. Pause types are: **Wait (W)** The phone stops dialing until you press the Left Soft Key  **[Release]** to advance to the next number. **2-Sec Pause (P)** The phone waits two seconds before sending the next string of digits.

Using the Internal Keypad








1. Enter a number, then press the Right Soft Key  **[Options]**.
2. Use the Directional Key  to scroll to **Add 2-Sec Pause** or **Add Wait**, then press .
3. Enter additional number(s) (e.g., pin number, credit card number, etc.).
4. Press the Left Soft Key  **[Save]**.
5. Complete the Contact entry as necessary.

Using the External Keypad




1. Unlock the screen by pressing  once or twice.
2. Enter a number, then press  **[OPTIONS]**.
3. Use the Directional Key  to scroll to **Add 2-Sec Pause** or **Add Wait**, then press .
4. Enter additional number(s) (e.g., pin number, credit card number, etc.).
5. Press  **[OPTIONS]** and select **Save**.
6. Complete the Contact entry as necessary.



Adding Additional Phone Number(s) to Existing Contact

From Standby Mode Using the Internal Keypad






1. Enter a phone number, then press the Left Soft Key  [Save].
2. Use the Directional Key  to scroll to **Update Existing**, then press .
3. Use the Directional Key  to scroll to an existing entry, then press .
4. Use the Directional Key  to scroll to **Mobile 1/ Home/ Work/ Mobile 2/ Fax**, then press  to save.

From the Contact List Screen Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry, then press the Left Soft Key  [Edit].

3. Use the Directional Key  to scroll to the phone number field to add, then enter the number and press  to save.

Changing Saved Information Using the Internal Keypad










1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to a Contact entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to scroll to the field you want to change.
4. Make the changes, then press  to save.

Changing the Default Number

The Default Number is the first phone number you entered when you created the Contact. Another number can be saved as the Default Number.



Contacts in Your Phone's Memory





Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry.
3. Press the Left Soft Key  [Edit].
4. Use the Directional Key  to highlight a phone number, then press the Right Soft Key  [Options].
5. Use the Directional Key  to highlight **Set As Default**, then press .
6. A confirmation message is displayed. Press  to set the new number as the default.
7. Press  again to save.

Deleting






Deleting a Phone Number Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry.




3. Press the Left Soft Key  [Edit].
4. Use the Directional Key  to scroll to a phone number.
5. Press and hold  to delete it.
6. Press .






NOTE This will only work when you have more than one number listed per contact.

Deleting a Contact Entry Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry.
3. Press the Right Soft Key  [Options], then press  Erase.
4. Press  [Yes].

Deleting a Speed Dial Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry to edit and press  [VIEW].

3. Select the phone number with the Speed Dial, then press  [EDIT].
4. Press the Right Soft Key  [Options].
5. Press  Remove Speed Dial.
6. Press  [Yes].
7. Press  to save.

Speed Dialing



Allows you to make phone calls quickly and easily to numbers stored in Contacts. You need to set Speed Dials in your Contacts before using this feature.



NOTE Speed Dial 1 is for Voicemail.

Single Digit Speed Dials

From the Standby screen, press and hold the Speed Dial digit. Your phone recalls the phone number from your Contacts, displays it, and dials it for you.

Multiple Digit Speed Dials

When you press and hold a number key, it signals the phone to attempt a Speed Dial transmission. To dial Speed Dials with multiple digits, press the first digit(s) as necessary, then press and hold the last digit. For example, to Speed Dial 25, press , then press and hold .

NOTE You can also enter the Speed Dial digit(s), then press the internal  key / external  key.

Account Information Speed Dials

Speed Dials 95-99 are preset to access certain phone account information for your convenience: 95 (Warranty Center), 96 (#DATA), 97 (#BAL), 98 (#MIN), and 99 (#PMT).










Unlike Speed Dial 1, you can delete and/or change these.

MY RINGTONES

MY RINGTONES

Allows you to select a desired ringtone, or download a new ringtone.

Using the Internal Keypad







1. Open the flip and press  [MENU].
 2. Press  Media Center.
 3. Press  Music & Tones.
 4. Press  My Ringtones.
 5. Use  to scroll to a ringtone and press the Left Soft Key  [Set As].
-  **Ringtone:** The selected Ringtone will be used for all incoming calls.
 -  **Contact ID:** Scroll and select the Contact to be identified by the ringtone you selected.
 -  **Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following:

All Messages/ TXT Message/
Multimedia Message/
Voicemail

Get New Applications

Allows you to download new ringtones through applications.


Using the Internal Keypad




1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Press  My Ringtones.
5. Press  Get New Applications.
6. Press  Get New Applications to connect and download ringtone applications.

MESSAGING

The phone can store over 690 messages. The information stored in the message is determined by phone model and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.



SHORTCUT

From standby mode with the flip open, pressing the Message Key  is a shortcut key to a new NEW TEXT MESSAGE.

- When in Standby mode, with the flip open, you can open the Messaging Menu by pressing the Left Soft Key  [Message].
- You can call the person that sent you a message by simply pressing the internal Send key  or the external Send key  when the message is highlighted.

New Message Alert

Your phone will alert you when you have new messages.





1. The phone displays a message on the screen and the message alert ringtone sounds.
2. The message icon () is displayed on the display screen. In the case of a high priority message, the icon () is displayed on the screen.



1. New Message

Allows you to send messages (Text, Picture, Video, and Voice). Each message has a destination (Address) and information (Message). These are dependent upon the type of message you want to send.



1.1 TXT Message

The Basics of Sending a Message Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  New Message.
4. Press  TXT Message.

5. Enter the phone number of the recipient or the email address for an email message. You can enter up to 10 addresses for a single message.
6. Press .
7. Type your message.
8. Press  [SEND].
A sending screen is displayed.

Customizing the Message Using Options

1. Create a new Text Message.
 - **Editing the To: field**
2. With the flip open, press the Right Soft Key  [Add].
3. Select the option(s) to customize.
From Contacts/ From Recent Calls/ Favorites/ Groups
- **Editing Text**
2. With the flip open, press the Right Soft Key  [Options].
3. Select the option(s) to customize.

Insert Quick Text Allows you to insert a Quick Text saved on the phone.

Save As Draft Saves the message into the Drafts folder.

Add Allows you to add Graphic, Animation, Sound, Signature, Name Card, or Contact Number/Email.

Copy Text Allows you to copy text you highlight to paste it into a text field.

Paste Will paste the copied text.



Format Text Allows you to change the look of the text.
Alignment/ Font Size/ Font Style/ Text Color/ Background

Priority Level Gives priority to the message.
High/ Normal






Callback # Inserts a pre-programmed callback number with your message.
On/ Off/ Edit


Save Quick Text Allows you to save your message as Quick Text for future use.



Cancel Message Cancels message editing and goes to Message menu.

4. Complete and send by pressing , or .

Using the External Keypad

1. Unlock the screen by pressing  once or twice.
2. Press  [MENU].
3. Use the Directional Key  to scroll to **Messaging**, then press .
4. Press  **New TXT Message**.
5. Enter the phone number of the recipient or the email address for an email message. You can only enter to 1 address for a single message.













NOTE Press  [OPTIONS] to change the entry mode or enter the address from your Contacts or group.







6. Press .
7. Type your message (text or email).
8. Press  [OPTIONS] and select **Send**.
A sending screen is displayed.

1.2 Picture Message

The Basics of Sending a Message

Using the Internal Keypad


1. Press the Left Soft Key  [Message].
2. Press  **New Message**.
3. Press  **Picture Message**.
4. Enter the cellular phone number or email address of the recipient.
5. Press .
6. Type your message.
7. Use the Directional Key  to highlight **Picture** and press the Left Soft Key  [My Pics]. Use the Directional Key  to scroll to the image you want to send, then press .
8. Use the Directional Key  to highlight **Sound**, then press the Left Soft Key  [Sounds]. Use the Directional Key  to scroll to the audio file you want to send then press .

9. Use the Directional Key  to highlight **Name Card**, then press the Left Soft Key  [**Contacts**]. Use the Directional Key  to choose **My Name Card/ From Contacts**, and press .
10. Use the Directional Key  to highlight **Subject** and enter the subject.
11. Press  [**SEND**].
A confirmation message is displayed.


Customizing the Message Using Options

1. Create a new Picture Message.

• Editing the To: field

2. With the To: field highlighted, press the Right Soft Key  [**Add**].
3. Select the option(s) to customize.
From Contacts/ From Recent Calls/ Favorites/ Groups/ To Online Album/ To Blog

• Editing Text or Subject

2. With the Text: field highlighted, press the Right Soft Key  [**Options**].
3. Select the option(s) to customize.

Preview Displays the Picture message as it would be seen by the recipient.

Save As Draft Saves the message into the Drafts folder.

Insert Quick Text Allows you to insert quick text customized on phone.

Copy Text Allows you to copy text you highlight to paste it into a text field.


 
Paste Will paste the copied text.

Add Slide Insert multiple pictures into a picture message.

Priority Level Gives priority to the message.

High/ Normal


Cancel Message Cancels message editing and goes to Message menu.






- **Editing Picture, Sounds, and Name Card**
2. With the Picture:, Sounds: or Name Card: field highlighted, press the Right Soft Key  [Options].
 3. Select the options to customize.
Preview/ Save As Draft/ Add Slide*/ Priority Level/ Remove Picture(Sound, or Name Card)/ Cancel Message
 4. Complete and send by pressing , or save the message.

* Add Slides to Your Picture Message

When you want to send multiple pictures, use the Add Slide option. This allows you to create one picture message with multiple pictures attached to it.





Using the Internal Screen











1. Create a picture message.
2. Add a picture to your message.
3. Press the Right Soft Key  [Options].

4. Press  Add Slide (numbers at the top left of the screen indicate the current slide / total number of slides).
5. Enter text (if necessary), then press  to edit the slide.
6. Continue adding slides and text as desired. Use the Directional Key  to scroll through the attached slides.
7. Complete and send by pressing , or .

1.3 Video Message

The Basics of Sending a Message Using the Internal Keypad


1. Press the Left Soft Key  [Message].
2. Press  New Message.
3. Press  Video Message.
4. Enter the cellular phone number or email address of the recipient.
5. Press the Directional Key  downward.
6. Type your message.

- Use the Directional Key  to highlight **Video** and press the Left Soft Key  [**Videos**].
Use the Directional Key  to scroll to the video file you want to send, then press .
- Use the Directional Key  to highlight **Name Card** and press the Left Soft Key  [**Contacts**].
Use the Directional Key  to choose **My Name Card/ From Contacts**, and press .
- Use the Directional Key  to highlight **Subject** and enter the subject.
- Press  [**SEND**].
A confirmation message is displayed.

Customizing the Message Using Options

- Create a new video message.


• Editing the To: field

- With the To: field highlighted, press the Right Soft Key  [**Add**].

- Select the option(s) to customize.

From Contacts/ From Recent Calls/ Favorites/ Groups/ To Online Album/ To Blog/ To Contacts

• Editing Text

- With the Text: field highlighted, press the Right Soft Key  [**Options**].
- Select the option(s) to customize.

Preview Displays the Video message as it would be seen by the recipient.

Save As Draft Saves the message into the Drafts folder.

Insert Quick Text Allows you to insert quick text customized on phone.

Copy Text Allows you to copy text you highlight to paste it into a text field.


Paste Will paste the copied text.

Priority Level Gives priority to the message.

High/ Normal


Cancel Message Cancels message editing and goes to Message menu.

• **Editing Video and Name Card**



2. With the Video: field highlighted, press the Right Soft Key  [Options].

3. Select the option(s) to customize.
Preview/ Save As Draft/
Priority Level/ Remove
Video(Name Card)/ Cancel
Message

• **Editing Subject**


2. With the Subject: field highlighted, press the Right Soft Key  [Options].

3. Select the option(s) to customize.
Preview/ Save As Draft/ Insert
Quick Text/ Copy Text/ Paste/
Add Signature/ Priority Level/
Cancel Message

4. Complete and send by pressing , or .

1.4 Voice Message

The Basics of Sending a Message Using the Internal Keypad


1. Press the Left Soft Key  [Message].

2. Press  New Message.


3. Press  Voice Message.

4. Press  to start recording.





5. Record your voice message.



6. Press  to end recording.

7. Enter the cellular phone number or email address of the recipient.

8. Press the Directional Key downward , and highlight the Text field.

9. Type your message (text or email).

10. Use the Directional Key  to highlight Name Card, then press the Left Soft Key  [Contacts]. Use the Directional Key  to choose My Name Card/ From Contacts, and press .

11. Use the Directional Key  to highlight **Subject** and enter the subject.
12. Press  [SEND].
A confirmation message is displayed.

2. Messages

The phone can store over 650 messages. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.




When your phone receives a message, you are alerted by:

- a notification message on the screen.
- an alert tone or vibration, depending on your personal settings.

Sorting Your Messages








You can choose to view your messages by Time (sorted into Inbox and Sent folders) or by Contact (all messages in one folder sorted by address).

To change the message view:

1. Open the flip, then press the Left Soft Key  [Message].
2. Press the Left Soft Key  [Settings].
3. Press  Messages View, then choose:
 - TIME - to view messages separated into Inbox and Sent folders.
 - CONTACT - to view all messages in a single messages folder. Sent and received messages are displayed alphabetically by address.

Viewing Your Messages

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Messages.
4. Use the Directional Key  to scroll to a message entry.
5. Options from here:
Press the Left Soft Key  [Reply].
 - Press  [OPEN] to open the message.
 - Press the Right Soft Key  [Options].

Erase/ Add to Contacts/
Manage Messages/
Messages View

Inbox folder Options:

Reply Replies to the message sender.

Reply With Copy Replies to the message sender with a copy of their message included.

Forward Forwards a received message to other destination address(es).

Add To Contacts Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

Extract Addresses Allows the address(es) included in the message to be extracted for viewing.

Sort By Sender Sorts Inbox messages by sender.

Sort By Time Sorts Inbox messages by Time received.

Messages View Allows you to switch message view from Time to Contact.

Manage Inbox Allows you to erase, lock, or unlock your Inbox messages.

Message Info Displays information about the selected Inbox message.

Sent folder Options:

Forward Forwards a sent message to other destination address(es).

Send/Resend Allows you to retransmit the selected message. For multimedia messages, 'Resend' is displayed.

Add To Contacts Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

Sort By Recipient Sorts Sent messages by recipient.

Sort By Time Sorts Sent messages by Time received.

Messages View Allows you to switch message view from Time to Contact.

Manage Sent Allows you to erase, lock, or unlock your Sent messages.

Message Info Displays information about the selected Sent message.

NOTE Options may vary depending on the type of message.

Message Icon Reference



New TXT Message



TXT Message Read



High Priority



Lock











Multimedia Message Unread



Multimedia Message Read








Message Icon Reference

-  Message Sent
-  Message delivered
-  Message Failed
-  Pending Message
-  Multiple Messages sent
-  Multiple Messages delivered
-  Multiple Messages failed
-  Multiple Messages Delivery Incomplete

3. Drafts

Displays messages started, but not yet sent.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Drafts.
4. Use the Directional Key  to scroll to a message entry.
5. Options from here:
 - Press the Left Soft Key  [Erase].
 - Press  [EDIT].
 - Press the Right Soft Key  [Options].

Send Sends the selected message to the recipient.

Add To Contacts Stores the callback number, email address, and numbers from the address included in the Draft message into your Contacts.

Manage Drafts Allows you to erase, lock, or unlock your Draft messages.

Message Icon Reference



TXT Message Draft










Multimedia Message Draft


4. Voicemail

Allows you to view the number of new voice messages recorded in the Voicemail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.

Checking Your Voicemail Box Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **Voicemail**.
4. Options from here:
 - Press the Left Soft Key  [Clear] to clear the Voicemail counter, and then press  [Yes].
 - Press  or  [CALL] to listen to the message(s).




OR

1. Dial *86 (*VM) then press  from your phone or dial your wireless phone number from any touch-tone phone.
2. When the recorded announcement begins, press # to interrupt the recorded message.
3. Enter your password. Once entered, you will be able to access your voicemail box.

5. Visual Voice Mail

Visual Voice Mail allows the management of voicemail directly from the device rather than accessing voice mail via traditional method(s). Visual Voice Mail displays a list of messages and allows the user to choose which message to listen to or delete, without having to dial into their mailbox, listen to voice instructions, or prior messages.






Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Visual Voice Mail.

6. Mobile IM

Allows you to send and receive Instant Messages at any time.







Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Mobile IM.
4. Use the Directional Key  to highlight your IM service provider, then press .

7. Email

Allows you to send and receive emails at any time.





Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Email.
4. Select **Mobile Email**, **Corporate Mail**, or **Mobile Web Mail** then press .
5. Use the Directional Key  to highlight your email service provider, then press .

8. Chat

Allows you to chat with Internet Messenger users.





Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Chat.
4. Use the Directional Key to highlight your Chat service provider, then press .

9. Blogs

Allows you to chat and post pictures to sites frequented by your social circle.






Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **Blogs**.
4. Press the Left Soft Key  [New] to add new blog.

Message Settings

Allows you to configure settings for your messages.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press the Left Soft Key  [Settings].
4. Use the Directional Key  to scroll to one of the settings and press  to select it.

Message Settings Sub-Menu Descriptions

1. Messages View

Select **Time** to display messages chronologically in Inbox and Outbox. Select **Contact** to sort all messages alphabetically in one folder.

2. Entry Mode

Select **T9Word**, **Abc**, **ABC** or **123** to be your default input method.

3. Auto Save Sent

Select **On** to automatically save your transmitted messages. Select **Off** if you don't want to save them. Select **Prompt** to be asked to save.

4. Auto Erase Inbox

Select **On** to automatically delete read messages when you exceed the storage limit. Or, select **Off**.

5. Messaging Font Size

Select **Normal** or **Large** for the size of the screen characters.

6. TXT Auto View

Select **On** to automatically display message content on the screen.

Select **On+Readout** to automatically display content and read it aloud.

Select **Off** for more privacy by requiring the message to be opened to view it.

7. TXT Instant Reply

Select **On** to automatically start a reply message when you read a message. Or, select **Off**.

8. TXT Auto Scroll

Select **On** to automatically scroll text down while viewing messages. Or, select **Off**.

9. Multimedia Auto Receive

Select **On** to automatically download attachments to Picture/Video messages. Or, select **Off**.

10. Quick Text

Displays your list of text phrases to help you to reduce manual input into messages. Use this setting to edit and add text.

11. Voicemail

Allows you to manually enter the access number for Voicemail Service. This number should be only used when a VMS (Voicemail Service) access number is not provided from the network.

12. Callback

Select **On** to automatically send a designated callback number with your messages. Or, select **Off**.







13. Signature


Select **Custom** to create/edit a signature to automatically send with your messages. Select **None** for no signature.

Erasing Messages

You can erase messages stored in your Inbox, Sent, or Drafts folders. You can also erase all messages at the same time.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press the Right Soft Key  [Options].
 - Press  **Erase Received Messages** to erase All (read and unread) Messages or Only read Messages in the Inbox.
 - Press  **Erase Sent Messages** to erase all unlocked messages stored in the Sent folder.
 - Press  **Erase Drafts** to erase all unlocked messages stored in the Drafts folder.

- Press  **Erase All** to erase all messages from the Inbox, Sent, and Drafts folders (except locked messages). You can choose whether or not unread messages will be erased.

NOTE Message View setting (**Time** or **Contact**), affects the Erase Message submenu names, but nonetheless they function the same.

4. Select **Yes** to erase the messages selected.

A confirmation message is displayed.







RECENT CALLS



The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It's continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Missed

Allows you to view the list of missed calls; up to 90 entries.

Using the Internal Keypad







1. Open the flip and press  [MENU].
2. Press  Recent Calls.
3. Press  Missed.
4. Use the Directional Key  to scroll to an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.

- Press the Right Soft Key  [Options] to select: Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following: TXT Message/ Picture Message/ Video Message/ Voice Message





2. Received

Allows you to view the list of incoming calls; up to 90 entries.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Recent Calls.
3. Press  Received.
4. Use the Directional Key  to scroll to an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.







RECENT CALLS

- Press the Right Soft Key  [Options] to select: Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following: TXT Message/ Picture Message/ Video Message/ Voice Message
- Press the Right Soft Key  [Options] to select: Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following: TXT Message/ Picture Message/ Video Message/ Voice Message

3. Dialed

Allows you to view the list of outgoing calls; up to 90 entries.







Using the Internal Keypad



1. Open the flip and press  [MENU].
2. Press  Recent Calls.
3. Press  Dialed.
4. Use the Directional Key  to scroll to an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.

4. All



Allows you to view the list of all calls; up to 270 entries.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Recent Calls.
3. Press  All.
4. Use the Directional Key  to scroll to an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.

- Press the Right Soft Key  [Options] to select: Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following: TXT Message/ Picture Message/ Video Message/ Voice Message




SHORTCUT




To view a quick list of all your recent calls, press the internal  key or the external  key from standby mode.

5. View Timers

Allows you to view the duration of selected calls.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Recent Calls.
3. Press  View Timers.



4. Use the Directional Key  to scroll to a call list. Last Call/ All Calls/ Received Calls/ Dialed Calls/ Roaming Calls/ Transmit Data/ Received Data/ Total Data/ Last Reset/ Lifetime Calls/ Lifetime Data Counter
5. Reset the selected call list timer by pressing the Left Soft Key  [Reset], or reset all the timers by pressing the Right Soft Key  [Reset All] if you want to reset all the timers at once.

NOTE Last Reset, Lifetime Calls, and Lifetime Data Counter cannot be reset.

CONTACTS

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

SHORTCUT






With the flip open, the Right Soft Key  is a shortcut key to the Contact List. Pressing the Favorites Key  a shortcut key to the Favorites menu.

1. New Contact

Allows you to add a new entry to your Contact List.

NOTE Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

Using the Internal Keypad








1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  New Contact.
4. Enter the name.
5. Use the Directional Key  to scroll to the phone number type.
6. Enter the number and press  to save.

NOTE For more detailed information, see page 28.







2. Contact List

Allows you to view your Contact List.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  Contact List.
4. Press the Directional Key  to scroll through your Contacts alphabetically.
 - Press the Right Soft Key  [Options] to select one of the following:
New Contact/ Erase/
New TXT Message/
New Picture Message/
New Video Message/
New Voice Message/ Set As ICE Contact/ Call/ Manage Contacts/ Set As Favorite/
Send Name Card
 - Press the Left Soft Key  [Edit] to edit the entry.
 - Press  [VIEW] to view the entry.

NOTE You can also use the External Keypad to access your Contacts List:

First, unlock the screen by pressing  [MENU] once or twice --> press  --> press  to scroll to  [CONTACTS] --> press  --> press  Contact List.





3. Backup Assistant

Backup Assistant safeguards your mobile phone's address book and automatically saves a copy of the names, phone numbers, and email addresses stored in your phone. You can also view, print, add, delete, and edit your contacts online. If you lose, damage, or upgrade your phone, Backup Assistant will restore your contact list to a new or replacement phone.

Additional fees may apply. See brochure for details.

NOTE To use the Backup Assistant service, you are required to activate the service from your phone.


Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  Backup Assistant.
4. Press the Directional Key  to scroll through your Contacts alphabetically.




4. Favorites

Allows you to create and view your Favorites contact list.

SHORTCUT

From standby mode with the flip open, pressing  is a hot key to the Favorites menu.





Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  Favorites.

TIP

You can add up to 10 contacts and/or contact groups as Favorites to easily make calls, send messages, and view messages.

CONTACTS







4. With the ADD square selected, press  to add a Favorite.
5. Select whether you want to add a favorite from your **Contacts / Group**.
6. Use the Directional Key  to scroll through your Contacts or Groups alphabetically and press  [MARK].
7. Press the Left Soft Key  [Done]. Once you have added Contacts to the Favorites list, the following options will become available in the Favorites menu:

Left Soft Key  : View

OK Key  : MESSAGES

Right Soft Key  : Options








Move Position/ Remove/
Remove All/ Set As ICE
Contact

NOTE You can also use the External Keypad to access your Favorites: First, unlock the screen by pressing  [MENU] once or twice --> press  --> press  to scroll to  [CONTACTS] --> press  --> press  Favorites.

5. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  Groups.
4. Use the Directional Key  to highlight a group.
 - Press the Left Soft Key  [New] to add a new group to the list.
 - Press the Right Soft Key  [Options] to select one of the following:
New TXT Message/ New Picture Message/ New Video Message/ New Voice Message/ Edit/ Erase Group / Add/ Set As Favorite / Send Name Card
 - Press  [VIEW] to view the Group information.

NOTE You can also use the External Keypad to access your Groups: First, unlock the screen by pressing [MENU] once or twice --> press --> press to scroll to [CONTACTS] --> press --> press Groups.

6. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

Using the Internal Keypad

1. Open the flip and press [MENU].
2. Press Contacts.
3. Press Speed Dials.
4. Use the Directional Key to scroll to a Speed Dial position, or enter the Speed Dial digit and press [SET].
5. Use the Directional Key to scroll to a Contact entry, then press . If the contact has more than one phone number saved, you will need to highlight the number you want to set as a Speed Dial and press .

6. Press [Yes].

A confirmation message is displayed.

7. In Case of Emergency (ICE)

This menu allows you to store names, phone numbers and other information, which could be very helpful in an emergency situation. It also allows you to read, add, edit, and erase notes that provide important information about yourself in case an emergency situation arises.

Using the Internal Keypad

1. Open the flip and press [MENU].
2. Press Contacts.
3. Press In Case of Emergency.
4. Use the Directional Key to scroll to Contact 1, 2, or 3, then press [ADD].
5. Press to add a Contact from your Contact List.

OR

Press to add a Contact from your Favorites.

OR

Press **3** to enter information not stored in your Contact List.

6. Scroll to the Contact or enter the New Contact information, then press **OK**.

A confirmation message is displayed.

7. The generic Contact label changes to the specified name.

Entering Your ICE Personal Info Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **4** **Contacts**.
3. Press **7** **In Case of Emergency**.
4. Scroll to **Personal Info**, then press **OK** [VIEW].
5. Scroll to one of the Note entries, then press **OK** [ADD].
6. Enter information that would be helpful in an emergency (e.g., your medical record number), then press **OK**.

TIP

When you've assigned ICE Contacts and your phone is locked for security, the Left Soft Key **☰** appears as **[ICE]** allowing the emergency information to be viewed without unlocking the phone.

8. My Name Card

Allows you to view and edit your own Contact information including name, phone numbers, and email address.

Edit Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **4** **Contacts**.
3. Press **8** **My Name Card**.
4. Press **OK** [EDIT].
5. Use the Directional Key **⬆** to scroll to information fields, enter your information as necessary, then press **OK** [SAVE].

TIP

You may send your name card using the Right Soft Key **☰** **[Options]**.


MEDIA CENTER

Media Center allows you to do more than just talk on your phone. Media Center is a technology and service that allows you to download and use applications on your phone.

With Media Center, it's quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones and wallpapers, to games and productivity tools, you can be assured that you will find something useful, practical, or entertaining.

NOTE Do not insert or remove the microSD card while playing, deleting or downloading Pictures/ Videos/ Music/ Sounds.

Anything Unclear?






From the Media Center menu, press the Right Soft Key  [Info] to see your memory status, activity log, and help and about text. Use the Help option to view information on how to use Media Center, everything from buying new applications to expired applications.

1. Music & Tones

Personalize your phone with ringtones. A wide variety of choices are available, such as current hits, pop, hip-hop, and more.

Access and Options

Using the Internal Keypad





 
 
1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Use the Directional Key  to highlight an option and press , or press the corresponding number key.

TIP

Your enV® 3 device can be used as an MP3 player when you use your Bluetooth headset and set Music Only Mode On. Listen exclusively to your music without being interrupted by calls.

MUSIC ONLY MODE

Using the Internal Keypad

Open the flip --> press  [MENU]. --> press  [Media Center]. --> press  [Music & Tones]. --> press  [My Music]. --> press  [Music Settings]. --> press  [Music Only]. --> select **On**.

Using the External Keypad

Unlock the screen by pressing **OK** once or twice --> press **5** [My Music] --> press **6** [Music Settings] --> press **3** [Music Only] --> Select On.

1.1 V CAST Music | Rhapsody®

Transform your wireless device into a portable music player. Download new songs from the Media Center music catalog right onto your wireless device or a PC. Then you can sync your music between your PC and phone.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **5** Media Center.
3. Press **1** Music & Tones.
4. Press **1** V CAST Music | Rhapsody.

NOTE Additional charges for music may apply. V CAST Music | Rhapsody service is not available in all areas. Check www.verizonwireless.com/music website for details.

1.2 Get New Ringtones

Allows you to connect to Media Center and download various ringtones.

Using the Internal Keypad



1. Open the flip and press **OK** [MENU].
2. Press **5** Media Center.
3. Press **1** Music & Tones.
4. Press **2** Get New Ringtones.
5. Press **1** Get New Applications to shop for ringtones and ringtone applications.




1.3 My Ringtones

Allows you to set a ringtone as your phone's ringer or alert sound, and download new ringtones.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **5** Media Center.
3. Press **1** Music & Tones.
4. Press **3** My Ringtones.

5. Use  to scroll to a ringtone and press  [PLAY] to preview the ringtone. Press the Left Soft Key [Set As] to set the ringtone as one of the following:



-  **Ringtone:** Sets the selected ringtone as your phone's default ringtone.
-  **Contact ID:** Scroll and select the Contact to be identified by the ringtone you selected.
-  **Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following:

All Messages/ TXT Message/
Multimedia Message/
Voicemail

Get New Applications


Allows you to download applications from where you can download new ringtones.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  **Media Center.**

3. Press  **Music & Tones.**



4. Press  **My Ringtones.**

5. Press  **Get New Applications** to connect and download ringtone.

1.4 My Music





Allows you to listen to music stored on your phone. Connect to V CAST to download a variety of music, transfer music between your phone and your PC, manage and organize your music files, and more.



SHORTCUT

Unlock the exterior screen by pressing  then press the Music shortcut key .

NOTE File storage varies according to the size of each file as well as memory allocation of other applications.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  **Media Center.**
3. Press  **Music & Tones.**
4. Press  **My Music.**








5. Use the Directional Key  to scroll to a category, then press .

Playing Your Music


It's easy to find and play the music you've stored in your phone.


Access My Music


Using the External Keypad

1. Unlock the exterior screen by pressing , press  [MENU], scroll to MY MUSIC with  then press .
2. Press the Directional Key  to select **Play All Songs/ All Songs/ Playlists/ Artists/ Genres/ Albums** and press .
3. Use the Directional Key  to scroll through the songs and press  to play a song.







While playing music

Press Right on the Directional Key  to skip to the next song or press and hold the same Directional Key to fast forward.

Press Left on the Directional Key  to go back to previous songs or press and hold the same Directional Key to rewind.









4. Press  to pause the song.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  **Media Center**.
3. Press  **Music & Tones**.
4. Press  **My Music**.
5. Scroll to one of the following options, then press .
Play All Songs/ All Songs/ Playlists/ Artists/ Genres/ Albums
6. Scroll to a song and press  to start the Music Player.

Controlling the Music Player


If you keep the flip open while listening to your music, use the following to control the Music Player:






- Left Soft Key  [Mute/Unmute] Mute or unmute the song.
- Right Soft Key  [Options] Allows you to choose: Home Screen/ Exit Player/ Go to My Music/ Repeat/ Shuffle/ Sound Effect/ Add Song to Playlist/ Music Only/ Get V Cast MUSIC/Rhapsody/ Song Info
- Side Volume Keys : Adjust the volume.
-  /  Scroll through the song list.
-  Play / Pause the current song.
-  Play the previous song.
-  Play the next song.

1.5 My Sounds




Allows you to select a desired sound or record a new sound.

Using the Internal Keypad

1. Open the flip and press  [MENU].

2. Press  Media Center.
3. Press  Music & Tones.
4. Press  My Sounds.
5. Press  Record New or scroll and select a sound using the Directional Key .

Options with a sound file highlighted:

- Press the Left Soft Key  [Set As].
1. **Ringtone:** Sets the selected ringtone as your phone's default ringtone.
 2. **Contact ID:** Scroll and select the Contact to be identified by the ringtone you selected.
 3. **Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following: All Messages/ TXT Message/ Multimedia Message/ Voicemail
- Press  [PLAY].
 - Press the Right Soft Key  [Options] to scroll to: Send/ To Online Album/ Rename/ Move/ Lock(Unlock)/ Erase/ Erase All/ File Info

1.6 Sync Music

V CAST Music with Rhapsody is a digital music service that lets you listen to millions of songs from thousands of artists. Discover new and old favorites in an extensive music catalog. Download V CAST Music with Rhapsody to sync tracks, albums, and playlists to your new compatible phone, while managing your existing PC music library all in one place.

Purchase songs on your wireless device* When you purchase music from your wireless device, you also get a second copy that can be downloaded to your PC from the V CAST with Rhapsody software.

*Per-song charges apply.

System Requirements: Windows Vista, or XP

V CAST Music with Rhapsody will work with Windows Vista, XP, or 2000 (Only 32-bit versions of Windows are supported.) Not available for Mac or Linux.

Download music to your PC

1. Open V CAST Music with Rhapsody. Don't have V CAST Music with Rhapsody? Download it for free at verizonwireless.com/music.

2. Log in.
3. Once logged in you can perform anyone of the following actions:

- Download a PC copy of an over the air purchased track
- Purchase songs or albums
- Add subscription music to your library To download PC copy:

NOTE For each V CAST Music with Rhapsody track you've downloaded to your phone, you can download a copy to your computer at no additional charge.

- a. Song tracks available for download will pop-up upon log in completion.
- b. Check the boxes of songs you wish to download.
- c. Select "Download Tracks".

To purchase music:

- a. Browse the catalog and select the track or album you wish to purchase.
- b. Re-enter your password.
- c. Confirm the purchase and the download will begin shortly. To add subscription music:

NOTE V CAST Music with Rhapsody monthly subscription required.






- a. Add music to your collection by simply dragging and dropping it to My Library or, if connected, your V CAST Music with Rhapsody subscription capable device (both found under Sources). This can also easily be done by clicking on the Add button next to each song.
4. To play the song or album, you can find it by selecting the My Library tab.

2. Picture & Video

View, take, and trade your digital pictures and videos right from your wireless phone.

Access and Options








Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Use the Directional Key  to highlight an option and press , or press the corresponding number key.


2.1 V CAST Videos








V CAST brings the world to your mobile phone with full-motion video and sound. Catch up with what's happening with video clips from various Categories, including: Entertainment, Kids, Music, Sports, Comedy, News, Pop Culture, Information, Women, Latino, Home&Leisure, Multicultural, Cutting Edge, and Hollywood. (Must be in V CAST coverage area. Additional fees may apply.)

Using the Internal Keypad


1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  V CAST Videos.
5. Press the Directional Key  to view video clip categories and press  to select a category.
6. Select the video clip you want to view by pressing .

Browsing, Selecting, and Playing Video Clips

1. Open the flip and press  [MENU].

2. Press **5*** **Media Center**.
3. Press **2*** **Picture & Video**.
4. Press **1'** **V CAST Videos** to open the Video Clips Catalog.
5. Use the Directional Key  to browse the various Video Clip categories.
6. Select a category, then press .
7. Select the clip you want to view (depending on the clips available, you may need to select a sub-category first), then press .
6. Use the Directional Key to find the video clip you want, then read the description of the video clip and press the Right Soft Key  **[Options]**.
7. Press **2*** **Save Video**, and press .
8. Select **Yes** to accept charges, press  and the video clip will begin downloading.
9. Once the video is finished downloading, a message will appear on your phone.
10. Select **Yes** and press  to view video.









To download a Video Clip Using the Internal Keypad

1. Open the flip and press  **[MENU]**.
2. Press **5*** **Media Center**.
3. Press **2*** **Picture & Video**.
4. Press **1'** **V CAST Videos**.
5. Navigate thru the sub-categories and find a video you can download.





11. The video clip will be automatically saved in My Videos.





NOTE Not all videos are downloadable. Only videos that have the option to save can be downloaded. Additional charges for each video clip viewed may apply. Video Clips service is not available in all areas. Check the www.verizonwireless.com website for details.

Deleting Video Clips Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  V CAST Videos.
5. Press the Left Soft Key  [My Videos].
6. Select the video to delete using the Directional Key.
7. Press the Right Soft Key  [Options] and press  Erase.
8. Press  [Yes] to erase the video.

Configure Alerts for New Video Clips Using the Internal Keypad






1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  V CAST Videos.
5. From Video Clips Catalog, select a category.

6. Select Content Provider.
7. Press the Right Soft Key  [Options].
8. Select Alerts and press .
9. Select Configure Alerts and press .
10. Select content for alerts desired and press  to save.

2.2 Get New Pictures

Allows you to connect to Media Center and download a variety of images for My Pictures.









Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  Get New Pictures.
5. Press  Get New Applications.
6. Select the Application you wish to use to download new pictures.

2.3 My Pictures

Allows you to view and manage the pictures stored in your phone. You can also take new photos and download new pictures.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  My Pictures.
5. Use the Directional Key  to highlight a picture and press the Left Soft Key  [Erase] to erase the selected picture. Press  [VIEW] to view the selected picture. Press the Right Soft Key  [Options] to access additional options.
6. Select the option(s) to customize.

Send Picture Message/ To Online Album/ To Blog/ Via Bluetooth

Set As Internal Wallpaper/ External Wallpaper/ Picture ID

Take Picture Turns on the camera function.

Get New Pictures Download new pictures.

Slide Show Allows you to play all your pictures.

Edit Allows you to edit the picture.

Manage My Pics Allows you to erase, move, lock and unlock pictures.


Print Print via Bluetooth/ Print Preferences

Rename Allows you to rename the selected picture.

Lock(Unlock)

Erase All Allows you to erase all pictures at once.

File Info Name/ Date/ Time/ Resolution/ Size

NOTE You can still access Options by pressing the Right Soft Key  [Options] while viewing a picture in full screen.







NOTE The option 'Via Bluetooth' is not displayed when you select pictures protected by DRM (Digital Rights Management).

Also, the option is available only when you select a Bluetooth device that supports receiving pictures.

2.4 My Videos

Allows you to view and manage the videos stored in your phone. You can also record and download new videos.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  My Videos.
5. Select a video with the Directional Key  and press the Right Soft Key  [Options].

Select one of the following options (Options are dependent on file types):

Send Send a Video Message, To Online Album, To Blog or Via Bluetooth.

Record Video Turns on the video camera function.

V CAST Videos Accesses V CAST Videos feature.

Manage My Videos Allows you to erase, lock and unlock your selected videos.







Set As Wallpaper Displays the selected video file as the background for your phone.


Rename Allows you to rename the selected video.

File Info Name/ Date/ Time/ Duration/ Size

6. Press  to play.

NOTE File storage varies according to the size of each file as well as memory allocation of other applications.

-  : Adjust the volume.
- Left Soft Key  : Mute/ Unmute.
-  : Pause/ Play.
- Up Directional Key  : Shows the full screen.
- Down Directional Key  : Stop
- Right Directional Key  : FF

- Left Directional Key  :
Rewind

2.5 Take Picture








Take pictures straight from your phone.



TIPS

- To take a clear picture, use the Up/Down Directional Keys to set the proper brightness level before taking the picture.
- To set the zoom level before taking a picture, open the flip completely to reveal the volume keys and use them to zoom. Keep in mind that **Zoom is not available when the camera is set to the highest resolution**. You can also use the Left/Right Directional Key to zoom.
- Avoid jolting the camera.
- Wipe the camera lens with a soft cloth.
- Do not cover the lens with your finger.

Using the Internal Keypad

1. Open the flip and press  [MENU].
 2. Press  Media Center.
 3. Press  Picture & Video.
 4. Press  Take Picture.
 5. Hold the phone horizontally to take pictures.
 6. Set the brightness by pressing the Directional Key , zoom by pressing the Directional Key , and press the Right Soft Key  [Options] to change other settings.
- Customize using the option(s) available:

RESOLUTION 2048X1536/
1600X1200/ 1280X960/
640X480/ 320X240

FLASH On/ Off

SELF TIMER Off/ 3 Seconds/
5 Seconds/ 10 Seconds

SHOT MODE Off/ Smile Shot/
Panorama/ Intelligent Shot/
Dual Display







WHITE BALANCE Auto/ Sunny/
Cloudy/ Fluorescent/ Glow

COLOR EFFECTS Normal/
Negative/ Aqua/ Sepia/
Black&White

SHUTTER SOUND Shutter/ No
Sound /Say "Cheese"/ Ready! 1
2 3

SAVE OPTION Internal/
External








CAPTURE Camera/ Video

7. Take a picture by pressing 
or  located above the Right
Soft Key .
8. Save, send, or erase the picture.
 - Press the Left Soft Key 
[Save] to store it in My Pictures.
 - Press  [SEND] to send a
picture message.
 - Press the Right Soft Key 
[Erase] to delete it.

2.6 Record Video

Lets you record a video message
with sound.

Using the Internal Keypad

1. Open the flip and press 
[MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  Record Video.
5. Hold the phone horizontally to
record videos.
6. Set the brightness by pressing
the Directional Key , zoom
by pressing the Directional Key
 or press the Right Soft
Key  [Options] to change
other settings.
- Customize using the option(s)
available:

RECORDING TIME For Send/
For Save

RESOLUTION 320X240/
176X144





FLASH On/ Off

SAVE OPTION Internal/
External

COLOR EFFECTS Normal/
Negative/ Aqua/ Sepia/
Black&White

WHITE BALANCE Auto/
Sunny/ Cloudy/ Fluorescent/
Glow



CAPTURE Camera/ Video

7. Press  [REC] to begin recording, and again to stop.
 8. Save, send, or erase the video.
- Press the Left Soft Key  [Save] to store it in My Videos.
 - Press  [SEND] to send a video message.
 - Press the Right Soft Key  [Erase] to delete it.

2.7 Online Album

You can access your Online Album, and upload your pictures and videos.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.





3. Press  Picture & Video.

4. Press  Online Album.

3. Games

Allows you to download games and applications from the Media Center server. Choose the software you want from the list displayed on the screen.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Games.
4. Press  Get New Applications.

4. Dashboard/Mobile Web

Dashboard

Dashboard is an easy to use application, which acts as the primary platform for discovering, buying, & personalizing multimedia content and services on your device. It provides access to personalized channels like VCAST Music & Video, Mobile Web, ringtones, games and more!




Mobile Web

Allows you to access news, sports, weather, and email from your Verizon Wireless device.




Accessibility and selections within this feature are dependent upon your service provider. For specific information on Mobile Web access through your phone, contact your service provider.

SHORTCUTS

Pressing the Directional Key  UP is the shortcut to accessing Browser when the flip is open.

Launching the Browser

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  5^s Media Center.
3. Press  4^s Dashboard/Mobile Web.



4. Select Mobile Web.

Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Keys.


- **Links embedded in content**

Select items or links by connecting it on the screen.


- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Soft Keys.


Scrolling

Use  to scroll through the content if the current page does not fit on the screen. Currently selected item is indicated by the cursor on the screen.

Scrolling by Page

Use  to scroll through the page. Make sure that the flip is all the way open.

Browser Navigating

Open the flip and press the Left Soft Key  [Navigate] to access the following navigation options:

TIP

You can customize optimized view of current web.

Menu-> Optimized View (On/ Off)

1. WWW

Takes you to the VZW Go To Site where you can enter the Web address you wish to visit.

2. Back to go back to the previous page.

3. Forward to go to the next page.

4. Home Returns to Home Page.

5. View Favorites

Allows you to view your bookmarked Favorites.

6. Add Favorites

Allows you to bookmark the current page as a Favorites.

7. Find on Page

Allows you to search for text on the current page.

8. Search Allows you to move to VZW portal search page.


9. Refresh

Allows you to reload the current Web page.


0. History


Allows you to see a list of recently viewed web pages.

Home Page

To go to the Home Page, press and hold .

Browser Menu Items

To go to the Browser Menu, press the Right Soft Key  [Menu].

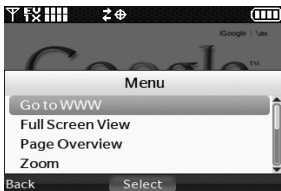

- **Full Screen View**

Use the whole Full Screen View screen including the annunciator and command bar area to view pages.

- **Page Overview**

Enables user to Page Overview view the web page in large scale. Select page overview to see the overall web page layout. The red box in the page overview indicates the area of the screen viewed before you selected page overview. If you move the red box and select it, the browser returns to normal mode with the new area displayed.

- **Zoom**

Allows you to zoom the screen in or out.

- **Optimized View**

Takes you to the page where you can select to have Webpages optimized for your phone.

- **Display Mode**

Allows mode selection that changes content layout.

-> Standard : Displays a standard Browser screen with vertical and horizontal page navigation.

-> Fixed Width : Displays vertically aligned contents of the Web page which fit the size of the screen. Allows vertical navigation only.

-> Text Only : Displays only text and excludes images used in the Web page.

- **Send URL**

Allows you to send the link of the current page via a text message.

- **Settings**

-> Homepage : This menu allows you to configure your Homepage.

-> JavaScript : On / Off



-> Security : Cookies/ Send Referrer/ Enable Authentication Caching/ Enable SSL 3.0/ Enable TLS 1.0/ Root Certificates/ Current Certificate

- > Manage Memory : Manages memory used by browser.
- > Connection timer :Timer Set the duration of each keypress or connection.
(Key Press Time Out/
Connection Time Out)
- > Restore Defaults : Restore default settings of Home Page, Display Mode, Security, or Restore All.


• RSS Feeds

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

To add an RSS feed, you must first be on a website that supports RSS. When there are supported sites, Available Feeds menu bar is activated.

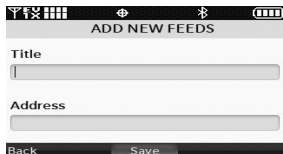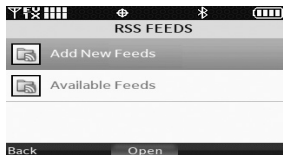

[ADD NEW FEEDS]


After entering title and address, press  [Save].



[RSS FEEDS]

After adding the Bookmark, registered FEEDS are displayed.


View Browser Menu

Press the Right Soft Key  to use the Browser menu. Make sure that the flip is all the way open.

Soft Keys

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.



Left Soft Key

Left Soft Key  is used primarily for the Navigate menu or selecting an item, but its function may change, depending on the content displayed.



Right Soft Key

Right Soft Key  is used primarily for the Browser menu.


Entering Text, Numbers, or Symbols

To input Symbols, press the Sym key  then press the key that has the desired symbol on it. To create an upper case character, use the Shift key .


Deleting Text/Number Entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

Initiating a Phone Call from the Browser

You can make a phone call from the Browser if the site you are using supports the feature (the phone number may be highlighted and press ). The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.





Ending a Browser Session

End a Browser session by pressing .

5. Browse & Download

Browse & Download allows you to use Mobile Email, VZ NavigatorSM, and any other downloaded applications.

Using the Internal Keypad




1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Browse & Download.
4. Select one of the applications already on your phone.
OR
Press  Get New Applications.
5. Select from various Browse & Download menu choices.

Visual Voice Mail





Visual Voice Mail allows the management of voice mail directly from the device rather than accessing voice mail via traditional method(s). Visual Voice Mail displays a list of messages and allows the user to choose which message to listen to or delete, without having to dial into their mailbox, listen to voice instructions, or prior messages.

How to access Visual Voice Mail from your wireless device

Visual Voice Mail can be found within the Messaging Menu on the device.

1. Open the flip, then press  [MENU].
2. Press  Messaging
3. Press  to access the Visual Voice Mail application for download, and future use.

How to set up Visual Voice Mail

1. If you are an existing Verizon Wireless subscriber, skip to step 2. If you are new Verizon Wireless subscriber, first dial *86 to set-up your voice mail service.
2. Open the flip, then press  [MENU].
3. Press  Messaging.
4. Press  Visual Voice Mail.
5. Upon opening the link to Visual Voice Mail, a message will be played promoting the benefits of Visual Voice Mail.
6. Press  to accept the Terms and Conditions.
7. Select "Download" to download the application.
8. When prompted, enter your basic voice mail password that was previously established.*
9. Continue to follow the prompts and instructions to complete the download and activation of Visual Voice Mail.

10. Once the activation steps are completed, exit the application and return after 5 minutes to begin using Visual Voice Mail.

* Please note that storing a voice mail password is required to use Visual Voice Mail. This application may store voice mail messages in electronic format on this device.

Anyone in possession of this device can access the voice mail. To limit unauthorized access to the voice mail, consider locking the phone when not in use. Cancellation of Visual Voice Mail cannot be completed via the device. Please contact Customer Service or go to My Verizon at verizonwireless.com if you need to cancel your Visual Voice mail service. Visual Voice Mail and traditional Voice Mail may not always be synchronized and if you cancel Visual Voice Mail you may lose all stored voice mails and information. To avoid losing all stored voice mails and information, save the Voice Mail in an audio format onto phone's internal memory, removable memory or send the audio file as a message using picture messaging or email.

Once you have registered for My Verizon, you will have the ability to reset your Voice Mail password online or via your Web capable wireless device. For more information on how to register for My Verizon, refer to page 31 of the Quick Reference Guide.

NOTE Voice Mail may not be available in some areas. Voice Mailboxes not set up within 45 days will be cancelled. Your Verizon Wireless Voice Mailbox is not password protected until you create a password by following the setup tutorial. Airtime and other charges will be incurred when using Voice Mail from your wireless phone. IN Calling minutes do not apply to Voice Mail retrievals; you will be charged to maintain your connection to Voice Mail. Verizon Wireless is not liable for missed messages, or deletions of messages from your Voice Mailbox, even if you have saved them.

Corporate mail

The Corporate Mail Service is a pre-paid service provided by RemoSync, offering convenience and flexibility to customers who frequently deal in bulk mail. Additional fees may apply. See brochure for details or visit www.verizonwireless.com.

Mobile Email

Mobile Email is an application downloadable from the Browse & Download Menu. Don't miss an important email. Thanks to Mobile Email, you can get your emails on your phone, while you're on the go. Mobile Email works with many providers, including Yahoo!®, AOL®, and Verizon.net. Get alerts from your enV® 3 when new email has arrived.

Additional fees may apply. See brochure for details or visit www.verizonwireless.com.

VZ NavigatorSM

VZ NavigatorSM is an application downloadable from the Browse & Download menu. Now you can find the address of a great restaurant or the nearest ATM. Check movie times. Discover the latest hot spots. And know exactly how to get to where you're going. VZ NavigatorSM puts all the advanced features of the latest GPS devices and systems on your wireless device — at a fraction of the price.





NOTES

- To use VZ NavigatorSM, you must turn location on. (See page 106)
- Download and subscription required for use only in National Enhanced Service Coverage Area: accuracy and completeness of information is not guaranteed; information about location of device will be used to deliver service. Additional fees may apply. See brochure for details or visit www.verizonwireless.com.

6. Extras



Allows you to access extra applications.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Media Center.
3. Press  Extras.
4. Press  Get New Applications.



EMAIL

The Email Menu allows you to set up your email account and conveniently exchange emails wirelessly using your device. To use this feature, download appropriate applications first; read the instructions on your device and follow them.

1. Open the flip and press  [MENU].
2. Press  Email.



VZ NAVIGATOR

The VZ Navigator Menu allows you to get directions to locations when you're out and about.

- Voice-prompted turn-by-turn directions with auto-rerouting if you miss a turn
 - View detailed color maps that can be panned and zoomed
 - Find points of interest
1. Open the flip and press  [MENU].
 2. Press  VZ Navigator.

MOBILE IM

The Mobile IM Menu allows you to talk to your friends without actually talking. AIM®, Windows Live™ Messenger, Yahoo! Instant Messenger are just a few of the available Mobile IM applications you can use with your enV® 3.




1. Open the flip and press  [MENU].
2. Press  Mobile IM.

SETTINGS & TOOLS

1. My Verizon

Check your subscription information, ranging from your payment plan to other available services.


Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  My Verizon.

2. Tools






Your phone tools include Voice Commands, Calculator, Ez Tip Calculator, Calendar, Alarm Clock, Stopwatch, World Clock, Notepad, and USB Mass Storage.

2.1 Voice Commands

This feature provides you with the following options equipped with AVC (Advanced Voice Commands) technology. Each option has its detailed information on the phone and you can check it out by pressing the Left Soft Key  [Info].

Access and Options

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Voice Commands.
5. Press the Right Soft Key  [Settings].

Confirm Choice Automatic/ Always Confirm/ Never Confirm

Sensitivity Adjust the sensitivity as **More Sensitive / Automatic/ Less Sensitive**.

Adapt Voice If the phone asks you to repeat your voice command too often, train the phone to recognize your voice patterns. **Train Words/ Train Digits**

Prompts Mode/ Audio Playback/ Timeout

For Mode, set to **Prompts/ Readout + Alerts/ Readout/ Tones Only**.

For Audio Playback, set to **Speakerphone** or **Earpiece**.

For Timeout, set to **5 seconds** or **10 seconds**.

CLR Key Activation If set to On, this setting allows you to activate Voice Command feature with CLR key from external screen. **On/ Off**

2.1.1 Call <Name or Number>

Say "Call" and then call someone simply by saying the phone number or name. Please speak clearly and exactly as in your Contacts list. When you have more than one contact number, you can state the name and the number type of the contact (for example, 'Call John Work').

2.1.2 Send Msg to <Name or Number>

Say 'Send Message' and the voice command will prompt you for the type of message. After choosing the message type, you will be asked for the contact name, number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Picture Message to Bob', it will automatically start a picture message. When using 'Send Message' command, speak clearly and say the number, group

name, or name exactly as it is entered in your Contacts list.

2.1.3 Go to <Menu>

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided. Please note that the options available with the Flip closed are different from those available with the Flip open.

2.1.4 Check <Item>

The "Check" command allows you to check out a wide range of items such as Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume, Balance, Minutes, Payment and My Number.

2.1.5 Contacts <Name>

You can look up names in your Contacts (for example, 'Contacts John') as well as manage your Contact List by calling, creating, erasing or modifying.

Call/ Read out/ Create New/
Modify/ Erase

2.1.6 Redial

To make a call to the last number that you called, say, 'redial'.

2.1.7 Play

State the title of music which you want to play.

2.1.8 My Verizon

The 'My Verizon' command provides you with direct access to your Verizon Wireless account information.

2.1.9 Help

Provides a general guideline for using Voice Commands.







NOTE When saying phone numbers in a Voice Command, say the numbers continuously (e.g., avoid pausing between numbers).

2.2 Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to eight digits and the sixth decimal place.

Calculations can be made with up to 4 lines of input at one time.



Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Calculator.
5. Enter numbers and appropriate operation key(s) to perform desired calculations. To cancel a calculation, press the Left Soft Key  [Clear].
6. Press the Right Soft Key  [Operators] to add parenthesis or power for exponential numbers.




2.3 Ez Tip Calculator

Allows you to quickly and easily calculate bill amount(s) using the bill total, tip % and number of people as variables.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.

SETTINGS & TOOLS


3. Press  **Tools**.
4. Press  **Ez Tip Calculator**.
5. Enter values for all variable fields (Total bill, Tip (%), Split) and the corresponding calculation fields (tip and total for each person) are updated automatically.
6. Press the Left Soft Key  **[Reset]** for another calculation.




 
2.4 Calendar






Allows you to keep your agenda convenient and easy to access. Simply store your appointments, and your phone will alert you with reminders.




Using the Internal Keypad

SHORTCUT

With the flip open, the Directional Key  is a Shortcut to Calendar in standby mode by default.

1. Open the flip and press  **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Tools**.
4. Press  **Calendar**.









5. Use the Directional Key  to scroll to the scheduled day.
Left  Moves cursor to the previous day.
Right  Moves cursor to the next day.
Up  Moves to the previous week.
Down  Moves to the next week.


6. Press the Left Soft Key  **[Add]**.
7. Enter a Subject.
8. Scroll to a Calendar setting field, then press the Left Soft Key  **[Set]**. For each Calendar event you can set:
 - Start Time
 - End Time
 - Repeat
 - Until
 - Alerts
 - Tones
 - Vibrate
9. Press  **[SAVE]** when Calendar information is complete.

2.5 Alarm Clock

Allows you to set up to ten alarms. At the alarm time, alarm notification will be displayed on the LCD screen and the alarm will sound (depending on your Master Sound settings).

Using the Internal Keypad









1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Alarm Clock.
5. Press the Left Soft Key  [Add].
6. Enter the alarm information including:
 - Turn On/Off
 - Set Time
 - Repeat
 - RingtoneUse the Directional Key  to scroll to the information you want to set, then press the Left Soft Key  [Set] to view settings and enter your choices.
7. Press  [SAVE] after setting all of the Alarm fields as necessary.

When the alarm sounds, the alarm notification includes the option to "snooze" or "dismiss" the alarm, but you can quickly turn it off by pressing , the volume keys, any of the alphanumeric keys, or the vibrate mode key. Opening and closing the flip will also end the alarm.

2.6 Stopwatch

Allows you to use your phone as a stopwatch.








Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Stopwatch.
5. Press  [START], then options from here:
 - Press the Left Soft Key  [Lap].
 - Press  [STOP] to stop.
6. Press the Right Soft Key  [Reset] to reset the stopwatch.

2.7 World Clock

Allows you to determine the current time in another time zone or country by navigating with the left or right Directional Key.

Using the Internal Keypad






 
1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  World Clock.
5. Press the Right Soft Key  [Cities] to choose from a list of available cities.
6. Select a city from the list, then press . The display shows the position of the city on a global map.
7. Press  again to zoom in on the city and view its date and time information.

NOTE With the Left Soft Key  [Set DST] set to daylight saving time.

2.8 Notepad

Allows you to add, read, edit, and erase notes to yourself.

Using the Internal Keypad





1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Notepad.
5. Press the Left Soft Key  [Add] to write a new note.
6. After filling in the note, press  to save it.

2.9 USB Mass Storage

This menu allows you to transfer content from your phone to your Windows® XP or Windows Vista™ PC (or vice versa) when your phone is connected to your Windows® XP or Windows Vista™ PC with a compatible USB cable. Mac OS operating system is not supported. You can only access this menu when a microSD™ card is inserted in your phone (see page 21 for more information).

NOTE Do not insert or remove the microSD™ card while playing, deleting or downloading Pictures/Videos/Music/Sounds.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  USB Mass Storage.

3. Bluetooth® Menu

The enV® 3 is compatible with devices that support the Bluetooth® Headset, Handsfree, Dial Up Networking, Stereo, Phonebook Access, Basic Printing, Object Push, File Transfer, Basic Imaging and Human Interface profiles.

You may create and store 20 pairings within the enV® 3 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B015118




NOTE Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.


NOTE Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology. Phone does not support ALL Bluetooth® OBEX Profiles.
* For vehicle/accessory compatibility go to www.verizonwireless.com/bluetoothchart

3.1 Add New Device

Pairing is the process that allows a handset to locate, establish, and register 1-to-1 connection with a target device.

To Pair with a New Bluetooth® Device Using the Internal Keypad









1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
2. Press  [MENU].
3. Press  Settings & Tools.
4. Press  Bluetooth Menu.

5. Press **1** **Add New Device**.
Set the desired device to pairing.
6. If Bluetooth® power is set to off, you will be prompted to turn power on. Select **Yes** and press **OK** then press **OK** again.
7. The device will appear in **Add New Device** menu once it has been located. Highlight the device and press **OK**.
8. The handset will prompt you for the passkey in BT. Consult the Bluetooth® accessory instructions for the appropriate passkey in BT (typically "0000" - 4 zeroes). Enter the passkey in BT and press **OK**.
9. Once pairing is successful, select either **Always Ask** or **Always Connect** (except for audio devices) and press **OK**.
10. Once connected, you will see the device listed in the Bluetooth® Menu and the Bluetooth® device connected icon  will show up on your enunciator when connected to the Bluetooth® device.





Icon Reference in Adding New Device

When the Bluetooth® wireless connection is started and paired devices are found, the following icons will display to demonstrate the type of device found (see below).

- **Icon References When a Bluetooth® Wireless Connection is Found** (neither connected nor paired).

	When an audio device is found by your enV® 3 device
	When a PC is found by your enV® 3 device
	When a PDA is found by your enV® 3 device
	When another phone device is found by your enV® 3 device
	When a printer is found by your enV® 3 device
	When other undefined devices are found by your enV® 3 device
	When a keyboard is found by your enV® 3 device
	When Car kit or Handsfree device is searched by your enV® 3 device

• Icon References When Successfully Connected

	When an only mono headset is connected with your enV ³ device
	When an only stereo headset is connected with your enV ³ device
	When stereo headsets and mono headsets are all connected with your enV ³ device
	When Car kit or Handsfree device is connected with your enV ³ device

My Phone Name

Allows you to edit the name of the Bluetooth® device when **Add New Device** menu is highlighted.

Using the Internal Keypad

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[3]** **Bluetooth Menu**.
4. Press the Right Soft Key **[=]** **[Options]**.
5. Press **[1]** **My Device Info**.
6. Press **[CLR]** to clear the existing name or edit it.

7. Use the keypad to enter a new custom name.

8. Press **[OK]** to save and exit.

TIP

Bluetooth® wireless connection is dependent on your Bluetooth® stereo device. Even though you want to connect with a headset that supports both HFP and A2DP, you may only be able to connect with one.

Turn On/Off

Allows you to set the phone's Bluetooth® power On/Off.

Using the Internal Keypad








1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[3]** **Bluetooth Menu**.
4. Press the Left Soft Key **[=]** **[Turn On]/ [Turn Off]**.

NOTE By default, your device's Bluetooth® functionality is turned off.

Discovery Mode

Allows you to set whether your device is able to be found when searched by other Bluetooth® devices in the area.






Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Discovery Mode.
6. If your Bluetooth is Off, you will be prompted to turn it On. Select Yes. Then use the Directional Key  to scroll to a setting, then press  On/Off.

Supported Profiles

Allows you to see profiles that your enV³ phone can support.








Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Supported Profiles.

TIPS

- The Human Interface Design (HID) profile is supported only for keyboard input and available when the flip is open or closed.
- Headset and handsfree profiles support voice calls with a compatible Bluetooth[®] headset or car kit. Bluetooth[®] Stereo profiles supported by enV³ provides you with the ability to use the integrated music player (and optional Bluetooth[®] stereo headset) to listen to WMA, MP3, AAC, AAC+, etc. music providing you with lots of listening enjoyment.
- Object Push Profile allows you to transfer a contact entry (vCard) and/or transfer a calendar event (vCal) to another OPP-enabled Bluetooth[®] device.
- Image transfer of user generated content is available via the Basic Imaging Profile. This profile allows sending of non-protected images to a compatible device for storing and printing.
- Phonebook Access Profile allows your car kit and your phone to share information. By pairing the devices and connecting with this profile, you can access and use your phone book data while in your vehicle.
- File Transfer allows sending or receiving non-protected data files to a compatible Bluetooth[®] device.

- Basic Print Profile is a profile to transfer user-generated images to a printer and print them out.

The steps are: Open the flip and press  [MENU] → press  MEDIA CENTER menu → press  Picture & Video → press  My Pictures → highlight the picture you want to print and press the Right Soft Key [Options] → use the Directional Key  to scroll to **Print** then press , and press  **Print via Bluetooth** to select a Bluetooth® device and print the selected file.





4. Sounds Settings

Provides options to customize the phone's sounds.

4.1 Easy Set-up

Allows you quickly set the main Sounds Settings.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Easy Set-up.
5. Quickly and easily set your phone sounds settings for keypad volume as well as incoming calls and messages








(text, multimedia, and voicemail).

NOTE Set each alert separately with Ring Only, Vibrate Only, Ring and Vibrate, Be Silent, and ringtone as necessary.

4.2 Master Volume

Allows you to set volume settings.

Using the Internal Keypad








1. Open the flip and press  [MENU].
 2. Press  Settings & Tools.
 3. Press  Sounds Settings.
 4. Press  Master Volume.
 5. Adjust the volume with the Directional Key  then press  to save the setting.
- You can test the volume at each master volume level with the Left Soft Key  [Play].

4.3 Call Sounds

Allows you to set how the phone alerts you for various types of incoming calls. The **Call Sounds** menu has three submenus that are set independently.








4.3.1 Call Ringtone

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Call Ringtone.
6. Use the Directional Key  to scroll to a ringtone then press  to save the sound.








4.3.2 Call Vibrate

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Call Vibrate.
6. Use the Directional Key  to scroll to a setting, then press  On/ Off.

4.3.3 Call ID Announcement

Using the Internal Keypad





1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Call ID Announcement.
6. Use the Directional Key  to scroll to a setting, then press .

Ring Only/ Caller ID + Ring/
Name Repeat

4.4 Alert Sounds

Allows you to select the alert type for a new message.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Alert Sounds.

5. Select **TXT Message/ Multimedia Message/ Voicemail/Emergency Tone/ Missed Call**.
6. Set how you want to be alerted. For **TXT Message, Multimedia Message, Voicemail and Missed Call** choose:
Tone / Vibrate / Reminder
For **Emergency Tone** choose:
Alert / Vibrate / Off

4.5 Keypad Volume

Allows you to set the keypad volume.

Using the Internal Keypad

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[4]** **Sounds Settings**.
4. Press **[5]** **Keypad Volume**.
5. Adjust the volume with the Directional Key **[▲]** then press **[OK]** to save the setting.

4.6 Digit Dial Readout

Allows you to set the Digit Dial Readout.

Using the Internal Keypad

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[4]** **Sounds Settings**.
4. Press **[6]** **Digit Dial Readout**.
5. Use the Directional Key **[▲]** to scroll to a setting, then press **[OK]** **On/Off**.

4.7 Service Alerts

Allows you to set any of the four Alert options to either On or Off.

Using the Internal Keypad

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[4]** **Sounds Settings**.
4. Press **[7]** **Service Alerts**.
5. Select an alert option.



ERI Alerts you for the current status of cellular service.

(ERI: Enhanced Roaming Indicator)

Minute Beep Alerts you 10 seconds before every minute during a call.

Call Connect Alerts you when the call is connected.

Charge Complete Alerts you when the battery is completely charged.





6. Use the Directional Key  to scroll to a setting, then press .



On/Off.

4.8 Power On/Off

Allows you to set the phone to sound a tone when the phone is powered on/off.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Power On/Off.
5. Select Power On/Power Off.







6. Use the Directional Key  to scroll to a setting, then press .

On/Off.

4.9 Voice Clarity

Allows you to set the voice clarity.

Using the Internal Keypad

1. Open the flip and press  [MENU].
 2. Press  Settings & Tools.
 3. Press  Sounds Settings.
 4. Press  Voice Clarity.
 5. Use the Directional Key  to scroll to a setting, then press .
- On/Off


5. Display Settings

Provides options to customize the phone's display screen.

5.1 Easy Set-up

Allows you quickly set the main Display Settings.

Using the Internal Keypad

1. Open the flip and press  [MENU].

2. Press **[9']** **Settings & Tools**.
3. Press **[5^o]** **Sounds Settings**.
4. Press **[1']** **Easy Set-up**.
5. Customize the following display settings:
 - Enter the Banner text to be displayed on your screen.
 - Set the Backlight duration for internal display, external display and keypad.
 - Set the internal & external wallpaper.
 - Set Internal themes.
 - Select your Main Menu Layout.
 - Choose a menu type for the selected layout.
 - Select your device External Display Theme.
 - Set the dial fonts.
 - Select the format of the internal clock.
 - Select the format of the external clock.

5.2 Banner

Allows you to enter text to display on the inner LCD and outside LCD.

5.2.1 Personal Banner








Using the Internal Keypad

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9']** **Settings & Tools**.
3. Press **[5^o]** **Display Settings**.
4. Press **[2^o]** **Banner**.
5. Press **[1']** **Personal Banner**.
6. Enter up to 23 characters for the banner text you want to display on the inside LCD, then press **[OK]** to save it.
7. Scroll down to Select Color and select the color for the banner text, then press **[OK]** or press the Right Soft Key **[Options]** to preview the banner.

5.2.2 ERI Banner

If set as On, ERI Text is shown on the sub banner.





Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Banner.
5. Press  ERI Banner.
6. Use the Directional Key  to scroll to a setting, then press  On/ Off.

5.3 Backlight

Allows you to set the duration for illuminating the backlight. Screens and Keypad are set separately.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Backlight.

5. Choose a Backlight submenu and press  .

Internal Backlight/ External Backlight/ Keypad Backlight.

Display

- Internal Backlight: 7 Seconds/15 Seconds/30 Seconds/Always On/ Always Off
- External Backlight: 7 Seconds/ 15 Seconds/30 Seconds
- Keypad: 7 Seconds/15 Seconds/30 Seconds/Always On/ Always Off





TIP

When the phone's internal backlight is set to Always On, the battery may deplete more quickly and shorten battery life because it deactivates power save mode.

5.4 Brightness

Allows you to set the backlight levels.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Brightness.

5. Choose a Brightness submenu and press **OK** .

Auto Brightness/ Brightness Level

NOTE Brightness level cannot be adjusted when Auto Brightness is activated.
Brightness level can be 1 to 7.

5.5 Wallpaper

Allows you to choose the type of background wallpaper displayed on the phone. The possibilities are endless; Fun Animations, in particular, provides you with flash screens for your background wallpaper.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9'** Settings & Tools.
3. Press **5"** Display Settings.
4. Press **5"** Wallpaper.

5. Select the wallpaper location.

Internal Wallpaper/ External Wallpaper

6. For Internal Wallpaper select a submenu.

My Pictures / My Videos / Fun Animations

NOTE External Wallpaper can only be selected from My Pictures.


7. Select from the available options then press **OK**.

5.6 Charging Screen

Allows you to set the screen displayed when you are charging the battery.

Using the Internal Keypad







1. Open the flip and press **OK** [MENU].
2. Press **9'** Settings & Tools.
3. Press **5"** Display Settings.
4. Press **6^** Charging Screen.
5. Scroll to a setting and press **OK**.
Off/ Desk Clock/ Calendar


NOTE Press the Left Soft Key  **[Preview]** to view the options before setting it.

5.7 Display Themes

Allows you to choose the color and style of the background screen.

Using the Internal Keypad

1. Open the flip and press  **[MENU]**.
 2. Press  **Settings & Tools**.
 3. Press  **Display Settings**.
 4. Press  **Display Themes**.
 5. Select **Internal Themes/ External Themes**.
 6. Use the Directional Key  to scroll to a setting, then press .
- **Internal Themes:** Slick Black/ White/ Spotlight(Burgundy*)/ Blue Sky
 - **External Themes:** Sapphire(Burgundy*)/ Snow
- * In case of **maroon** color variation option.

NOTE Press the Left Soft Key  **[Preview]** to preview the selected display theme.








5.8 Main Menu Settings

Allows you to customize the main menu layout.


5.8.1 Menu Layout

Allows you to set how the menu items are positioned for access.

Using the Internal Keypad

1. Open the flip and press  **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Display Settings**.
4. Press  **Main Menu Settings**.
5. Press  **Menu Layout**.
6. Use the Directional Key  to scroll to a setting, then press .

Tab/ List/ Grid

NOTE Press the Left Soft Key  **[Preview]** to preview the selected display layout.

5.8.2 Replace Menu Items

Allows you to replace main menu items with menu items you access more often.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9'** Settings & Tools.
3. Press **5"** Display Settings.
4. Press **8^** Main Menu Settings.
5. Press **2^** Replace Menu Items.

5.8.3 Position Menu Items

Allows you to reposition main menu items within the main screen.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9'** Settings & Tools.
3. Press **5"** Display Settings.
4. Press **8^** Main Menu Settings.
5. Press **3"** Position Menu Items.

5.8.4 Reset Menu Settings

Allows you to undo any changes you made to the menu settings.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9'** Settings & Tools.
3. Press **5"** Display Settings.
4. Press **8^** Main Menu Settings.
5. Press **4^** Reset Menu Settings.
6. Use the Directional Key **▲▼** to scroll to a setting, then press **OK**.

Menu Layout/ Menu Items/ Item Positions/ All

5.9 Font Size

Allows you to set the font size. This setting is helpful for those who need the text to display a little bit larger.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9'** Settings & Tools.
3. Press **5"** Display Settings.

4. Press **[9]** **Font Size**.
5. Use the Directional Key **[↕]** to scroll to **Dial Digits/ Menu & Lists/ Message**.
6. Press the Left Soft Key **[≡]** **[Set]**.
7. Use the Directional Key **[↕]** to scroll to a setting, then press **[OK]**.

Dial Digits: Normal/ Large
Menu & Lists: Small/ Normal
Message: Normal/ Large

5.10 Menu Font Type

Allows you to set the Menu Fonts.

Using the Internal Keypad

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[5]** **Display Settings**.
4. Press **[0]** **Menu Font Type**.
5. Use the Directional Key **[↕]** to scroll to a setting, then press **[OK]**.

VZW Font/ LG Secret/ LG Mint

NOTE Press the Left Soft Key **[≡]** **[Preview]** to preview the Menu Font Type.

5.11 Clock Format

Allows you to choose the kind of clock to be displayed on the LCD screen.

Using the Internal Keypad

1. Open the flip and press **[OK]** **[MENU]**.
2. Press **[9]** **Settings & Tools**.
3. Press **[5]** **Display Settings**.
4. Use the Directional Key **[↕]** to scroll to **Clock Format**.
5. Press **[1]** **Internal Clock** or **[2]** **External Clock**.
6. Use the Directional Key **[↕]** to scroll to a setting, then press **[OK]**.

Internal Clock : Small Digital
12/ Small Analog/ Large
Analog/ Large Digital 12/ Large
Digital 24/ Dual City/ Off

External Clock : Large Digital
12(Time Only)/Large Digital
12/ Small Digital 12 / Off

NOTE Press the Left Soft Key **[≡]** **[Preview]** to preview the selected clock format.







6. Phone Settings

The Phone Settings Menu allows you to designate specific settings to customize how you use your phone.

6.1 Airplane Mode

Allows you to use the non-wireless handset functions when radio transmission is restricted. Activating Airplane Mode will disable all wireless communications. When in Airplane Mode, services supporting Location On functionality (such as Chaperone) will be suspended.

Using the Internal Keypad


1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Airplane mode.
5. Use the Directional Key  to scroll to a setting, then press .








On/Off

6.2 Set Shortcuts



Allows you to set shortcuts to the phone menus using the down, up, left and right Directional Keys.

6.2.1 Set My Shortcuts

To access and use My Shortcuts, press the Directional Key  from Standby mode with the flip open. To configure My Shortcuts, follow the instructions below:

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Set Shortcuts.
5. Press  Set My Shortcuts.
6. Use the Directional Key  to scroll to a shortcut key you want to set and press .








Shortcut 1/ Shortcut 2/
Shortcut 3/ Shortcut 4

7. Use the Directional Key  to scroll to the new shortcut, then press .


6.2.2 Set Directional Keys

To access and use these shortcuts, press the corresponding Directional Key while in Standby mode.

To configure these Directional Key shortcuts, follow the instructions below:

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Set Shortcuts.
5. Press  Set Directional Keys.
6. Use the Directional Key  to scroll to a shortcut key you want to set and press .

Up Directional key/ Left Directional key/ Down Directional key







 
7. Set the menu you want to be accessed by the selected Directional Key and press .

6.2.3 Set QwertyShortcut

This Shortcut allows you to initiate either a Contact Search, New TXT Message or New Note by simply

pressing any key on the internal Qwerty keypad.

To configure the desired Qwerty shortcut function, follow the instructions below:



1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Set Shortcuts.
5. Press  Set QwertyShortcut.
6. Use the Directional Key  to scroll to a setting, then press .

Off/ Search Contact/ New TXT Message/ New Note

6.3 Voice Commands

This feature provides you with the following options equipped with AVR(Advanced Voice Recognition) technology.

6.3.1 Confirm Choices

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.

3. Press **6** Phone Settings.
4. Press **3** Voice Commands.
5. Press **1** Confirm Choices.
6. Use the Directional Key **↓** to scroll to a setting, then press **OK**.
Automatic/ Always Confirm/
Never Confirm

6.3.2 Sensitivity

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **6** Phone Settings.
4. Press **3** Voice Commands.
5. Press **2** Sensitivity.
6. Use the Directional Key **↓** to scroll to a setting, then press **OK**.
More Sensitive/ Automatic/
Less Sensitive

6.3.3 Adapt Voice








1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.

3. Press **6** Phone Settings.
4. Press **3** Voice Commands.
5. Press **3** Adapt Voice.
6. Use the Directional Key **↓** to scroll to a setting, then press **OK**.
Train Words/ Train Digits

6.3.4 Prompts

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **6** Phone Settings.
4. Press **3** Voice Commands.
5. Press **4** Prompts.
6. Use the Directional Key **↓** to scroll to a setting, then press **OK**.
 - **Mode:** Prompts/ Readout + Alerts/ Readout/ Tones Only
 - **Audio Playback:** Speakerphone/ Earpiece
 - **Timeout:** 5 seconds/ 10 seconds







6.3.5 CLR Key Activation

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Voice Commands.
5. Press  CLR Key Activation.
6. Use the Directional Key  to scroll to a setting, then press .
On/ Off

6.4 Language

Allows you to set the language mode (English or Spanish) according to your preference.







Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Language.
5. Use the Directional Key  to scroll to a setting, then press .
English/ Español

6.5 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Location.
5. Use the Directional Key  to scroll to a setting, then press .

Location On/ E911 Only

NOTES







- GPS satellite signals are not always received by the phone under bad atmospheric and environmental conditions, indoors, etc.
- When a location lock mode is activated in the Security Menu, the lock code is required to access the location menu. The lock code is the same 4 digits you use as your device lock code; initially the last 4 digits of your phone number.
- When in Airplane Mode, services supporting Location On functionality (such as Chaperone) will be suspended.

6.6 Current Country

Allows you to set the Current Country.

NOTE Current country setting cannot be changed after it's set for the first time unless real location changes to another country.





Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Current Country.
5. Use the Directional Key  to scroll to a setting, then press .

6.7 Security

The Security menu allows you to secure the phone electronically.

Using the Internal Keypad






1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.

5. Enter the four-digit lock code.
The lock code is the last 4 digits of your mobile phone number if it is set. The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

6.7.1 Edit Codes

Allows you to enter a new four-digit lock code.









Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Edit Codes.
7. Select **Phone Only** or **Calls & Services**.
8. Enter your new lock code, then enter it again to confirm.

6.7.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls, Messages, and Dial-up Modem.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Restrictions.
7. Enter the four-digit service lock code.
8. Scroll to a Restrictions submenu then press .
Location Setting/ Calls/
Messages/ Dial-up Modem
9. Use the Directional Key  to set the restriction then press .

Location Setting Lock Setting/
Unlock Setting

Calls Incoming Calls/ Outgoing
Calls







Messages Incoming Messages/
Outgoing Messages

Dial-up Modem Allow All/
Block All

6.7.3 Phone Lock

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code using the Edit Codes submenu within the Security menu.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Phone Lock.
7. Scroll to an option then press .

Unlocked The phone is not locked.

On Power Up The phone locks when it is turned on.

6.7.4 Lock Phone Now

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **6** Phone Settings.
4. Press **7** Security.
5. Enter the four-digit lock code.
6. Press **4** Lock Phone Now.

6.7.5 Reset Default

Allows you to reset your phone to the factory default settings.

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **6** Phone Settings.
4. Press **7** Security.
5. Enter the four-digit lock code.

6. Press **5** Reset Default.

7. Press **OK** after reading the warning message.

8. Press **OK** to select Revert.

A confirmation message is displayed briefly before the phone resets itself.

6.7.6 Restore Phone

Allows you to erase all user data and Contact information you've entered in the phone's memory so it's as if it just left the factory.







Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **6** Phone Settings.
4. Press **7** Security.
5. Enter the four-digit lock code.
6. Press **6** Restore Phone.
7. Press **OK** after reading the warning message.
8. Enter the four-digit lock code.

6.8 System Select

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

Using the Internal Keypad


1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  System Select.
5. Use the Directional Key  to scroll to a setting, then press .






Home Only/ Automatic

6.9 NAM Select

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

Using the Internal Keypad

1. Open the flip and press  [MENU].

2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  NAM Select.
5. Use the Directional Key  to scroll to a setting, then press .

NAM1/ NAM2





7. Call Settings



The Call Settings Menu allows you to designate how the phone handles both incoming and outgoing calls.

7.1 Answer Options

Allows you to determine how the phone will answer an incoming call.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  Answer Options.

5. Use the Directional Key  to scroll to a setting, then press  to place a checkmark next to each setting you want to activate (choose as many as you want).







Flip Open(speakerphone)/Any Key/Auto with Handsfree

NOTE Auto with Handsfree is available only when an external device is connected to your phone.

7.2 End Call Options

Allows you to determine how the phone will end a call.

Using the Internal Keypad







1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  End Call Options.
5. Use the Directional Key  to scroll to a setting, then press .

Flip Close/ End Key Only

7.3 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  Auto Retry.
5. Use the Directional Key  to scroll to a setting, then press .
Off/ Every 10 Seconds/ Every 30 Seconds/ Every 60 Seconds

7.4 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

SETTINGS & TOOLS

Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **7** Call Settings.
4. Press **4** TTY Mode.
An notification message is displayed.
5. Press **OK** to continue.
6. Use the Directional Key **↕** to scroll to a setting, then press **OK**.

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

TTY Full:

- Users who cannot talk and hear send and receive a text message through TTY equipment.

TTY + Talk:

- Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

TTY + Hear:

- Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

TTY Mode (Tele Type writer)

Menu	User	Feature	Transmission/ Receiving Mode	When making communications with a normal terminal
TTY Full	For hearing-/ verbally- impaired		text message transmission, text message receiving	Operator required
TTY + Talk	For hearing- impaired	able to talk	voice transmission, text message receiving	Operator required
TTY + Hear	For verbally- impaired	audible	text message transmission, voice receiving	Operator required
TTY Off	For regular users		voice transmission, voice receiving	

TTY Off:

- Users send and receive voice without TTY equipment.

Connecting TTY Equipment to a Terminal

1. Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
2. Enter the phone menu and set the desired TTY mode.
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver displays on the TTY equipment display.

7.5 One Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, designated Speed Dial numbers will not function.







Using the Internal Keypad

1. Open the flip and press **OK** [MENU].
2. Press **9** Settings & Tools.
3. Press **7** Call Settings.
4. Press **5** One Touch Dial.
5. Use the Directional Key **▲** to scroll to a setting, then press **OK**.
On/ Off

7.6 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls. CDMA already offers inherent voice privacy. Check with your service provider for availability.

Using the Internal Keypad







1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  Voice Privacy.
5. Use the Directional Key  to scroll to a setting, then press .

On/ Off

7.7 DTMF Tones

Allows you to set the DTMF tone length.

Using the Internal Keypad






1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  DTMF Tones.
5. Use the Directional Key  to scroll to a setting, then press .

Normal/ Long

7.8 Assisted Dialing

Allows you to set the phone to assist in dialing numbers when you are outside your home country.






Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings.
4. Press  Assisted Dialing.
5. Use the Directional Key  to scroll to Assisted Dialing/ Reference Country.

8. USB Mode

Your phone automatically detects a USB device when it is connected to your phone for Sync Music or Sync Data operation. If the option is set to Ask On Plug, you are asked to confirm whenever a connection is made.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  USB Mode.
4. Use the Directional Key  to scroll to a setting, then press .

Media Sync Mode/ Modem
Mode/ Ask On Plug

9. Memory

Allows you to check your enV[®] 3 internal phone memory as well as the microSD™ external memory.

The enV[®] 3 can access the following file types stored on the removable microSD™ card.

My Pictures: png, jpg, bmp, gif, wbmp, pmd, svg

My Sounds: mid, qcp, midi, aac, mp3, wav, amr (used for MMS cannot be set as ringtones)







My Videos: 3g2, 3gp, mp4, wmv

My Music: mp3, wma, m4a

9.1 Save Options

Allows you to select which memory (phone or memory card) to use to save your files.




Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Memory.
4. Press  Save Options.
5. Scroll to Pictures/ Videos/ Sounds then press .
6. Scroll to Phone Memory/ Card Memory then press .

9.2 Phone Memory

Shows the memory information saved in your phone.






Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Memory.
4. Press  Phone Memory.
5. Scroll to Memory Usage/ My Pictures/ My Videos/ My Music/ My Sounds then press .

9.3 Card Memory

Shows the memory information saved in the card.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Memory.
4. Press  Card Memory.
5. Scroll to Memory Usage/ My Pictures/ My Videos/ My Music/ My Sounds then press .




NOTE The option Card Memory Usage shows the total used memory and memory space remaining.

	Store on enV ³	Store on microSD Card	Transfer Phone to PC via Card	Transfer PC to Phone via Card
V CAST Music/WMA Songs	◆	◆	◆	◆
Ringtones	◆			
Sound	◆	◆	◆	◆
V CAST Video Clips	◆			
Downloaded Picture/Video	◆			
Picture/Video (User-generated or received via MMS)	◆	◆	◆	◆

10. Phone Info





Allows you to view the information specific to your phone and software.

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Info.

10.1 My Number





Allows you to view your phone number.

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Info.
4. Press  My Number.

10.2 SW/HW Version

Allows you to view the versions of various applications such as SW, PRL, ERI, Browser, Media Center, AVC, MMS, Bluetooth Version, OTADM, MSUI, HW, MEID Version, and Warranty Date Code.





Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Info.
4. Press  SW/HW Version.

10.3 Icon Glossary

Allows you to view all the icons and their meanings.


Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Info.
4. Press  Icon Glossary.

10.4 Software Update





This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features without visiting a Verizon Wireless Communications Store for the upgrade. You can either be notified automatically that there is an updated version of software available for your phone, or you can manually check to see if there are any updates available for you to download.

Automatic Update


Your phone will receive a notification that there is an updated version of software available to be downloaded. You can press  when notified that a download is available or it can happen automatically. Once the download is complete you may, depending on the nature of the update, have three options available: Accept the update, Defer the update, or Reject the update.



NOTE During the update you cannot make or receive phone calls, including 911 calls, or text messages.

Manual Update

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Press  Phone Info.
4. Press  Software Update.

The two options shown will be **Status** and **Check New**.







Press  **Status** to see the status of a download or update and see information on the last successful update. If updates have not yet been performed, status information will be unavailable.


Or press  **Check New** to check if any new software updates are available to download. If a newer software version is available, it will automatically begin downloading after 30 seconds or you can begin the download immediately by pressing . To stop the software download press the

 / .

11. Set-up Wizard

Using the Internal Keypad

1. Open the flip and press  [MENU].
2. Press  Settings & Tools.
3. Use the Directional Key  to scroll to **Set-up Wizard** and press .
4. Use the Directional Key  to scroll to a setting, then press  [SET].

NOTE If you don't want to change the setting, press the Right Soft Key  [Skip] to go to the next setting.

1. CALL SOUNDS

Ring Only/ Vibrate Only/ Ring and Vibrate/ Be Silent

2. INTERNAL THEMES

Slick Black/ White/ Spotlight/ Blue Sky

3. MENU LAYOUT

Tab/ List/ Grid

4. MAIN MENU TYPE

Messaging/ Personalizing

5. EXTERNAL THEME

Sapphire/ Snow

6. INTERNAL CLOCK

Small Digital 12/ Small Analog/
Large Analog/ Large Digital 12/
Large Digital 24/ Dual City/ Off

7. EXTERNAL CLOCK

Large Digital 12 (Time Only)/
Large Digital 12/ Small Digital 12/
Off

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing

Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment

is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF

immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices and Health Care Facilities

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from the external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to the external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even

death.


Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

 **Caution** Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or

- allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.
- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Please read the manual for proper installation and removal of the battery.
- Please read the manual for specified charger and charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause electric shock or fire. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean

Charger and Adapter Safety

the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.
- Never store your phone in temperatures less than -4°F or greater than 122°F .
- Charging temperature range is 32°F and 113°F . Do not charge the battery outside this range. Doing so may generate excessive heat causing serious damage to

the battery deteriorating battery life and/or other battery characteristics.

- Do not use or leave the battery in direct sunlight or inside a hot car. The battery may generate heat, smoke or flame, as well as deteriorating battery life and/or other battery characteristics.
- The battery pack has a protection circuit. Do not use near places that can generate more than 100V static electricity which could damage the protection circuit. Damaged protection circuits may rupture, smoke, or ignite.
- When using the battery for the first time, if it emits a bad smell, you see rust on it, or anything else abnormal, do not use the equipment. Return it to the place where it was bought.
- If children are allowed to use the device battery, an adult is responsible for teaching about the safe handling and use of batteries, as well as supervising their proper use and care.
- Keep the battery away from young children. Safeguard so that small children do not

remove the battery from the charger or device.

- If liquid from the battery rubs against skin or clothing, rinse with clean water. The battery liquid could cause skin irritation.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire. Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen

in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.

- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and - terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone

numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.

- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Caution: Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise induced hearing loss. This includes the use of

headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your

portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology
11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet:

<http://www.nidcd.nih.gov/health/hearing>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

Internet:

<http://www.cdc.gov/niosh/topics/noise/default.html>

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and

Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had

difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless

phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency

working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable

Radio Frequency (RF) energy because of the short distance between the phone and the user's head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones

have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless

phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect, if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do —

may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around

the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission

(FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to

measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is

measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote

antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no

evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety

Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO)
International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of

valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your Voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and

driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do

for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of

measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF

exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.31 W/kg and when worn on the body, as described in this user's manual, is 1.07 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the

number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their

hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.



The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing

device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

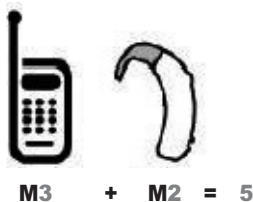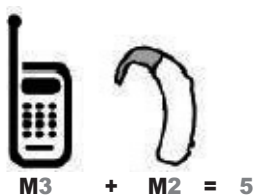

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with

“normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark.

The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To enter that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN (this phone does not have WLAN) components must be disabled during a call. See Page 91 for instructions to disable these components.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>

HLAA (Hearing Loss Association of America)

<http://www.hearingloss.org/learn/cel/phonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

There are a variety of accessories available for your phone and three easy ways to purchase them: shop online anytime at www.verizonwireless.com, call us at 1866 VZ GOT IT (894 6848) or visit one of our Verizon Wireless Communication Stores.



Wall/USB
Charger



USB Cable



Batteries



Charger



Holster



Bluetooth
Headset

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.

- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized

- connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
 - (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
 - (5) Products which have had the serial number removed or made illegible.
 - (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
 - (7) Damage resulting from use of non LG approved accessories.
 - (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
 - (9) Products operated outside published maximum ratings.
 - (10) Products used or obtained in a rental program.
 - (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

LIMITED WARRANTY STATEMENT

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Terminology

Ez Tip Calculator

Feature for easy bill calculation using the total cost, tip, and number of people as variables.

Advanced Voice Commands

Feature that allows you to perform a wide range of verbal commands by training the phone to recognize your individual speech patterns.

Bluetooth® wireless technology

Technology used to allow mobile phones, computers, and other personal devices to be easily coordinated and interconnected using a short-range wireless connection.

Media Center

Feature that accesses the Internet to provide the ability to access and even download a wide variety of software, information, music, video, and more right on your LG Verizon wireless phone.

microSD™

Additional external memory for your mobile phone.

V CAST™

Feature that is the next generation in wireless technology which transforms your wireless phone into a portable music player and delivers an amazing streaming mobile video experience.

V CAST uses technology that significantly increases download capabilities to deliver better graphics, sound and depth and uses the power of broadband so that you can download the hottest entertainment, sports highlights, news and breaking weather to your Verizon Wireless V CAST phone. The new V CAST phones provide better imaging capabilities, mega pixel cameras and video cameras, improved audio and expandable memory storage.

Acronyms and Abbreviations

DTMF

Dual-Tone Multi Frequency (or “touch-tone”) is a method used to communicate keys pressed on the phone. Pressing a key generates two simultaneous tones, one for

Glossary

the row and one for the column to determine which key was pressed.

ERI

Enhanced Roaming Indicator is a feature to indicate whether a mobile phone is on its home system, a partner network, or a roaming network. Many phones indicate home vs. roaming as an icon, but ERI capable phones can clearly indicate third “partner network” status.

EVDO

Evolution Data Only or **Evolution Data Optimized** (abbreviated as EVDO, EV-DO, EvDO, 1xEV-DO or 1xEvDO) provides fast wireless broadband access (3G) anywhere, without needing a WiFi hotspot.

GPS

Global Positioning System is a system of satellites, computers, and receivers able to determine the latitude and longitude of a specific receiver on Earth. Position is calculated using time and distance.

IS 2000

Type of digital signaling. It's the second generation of CDMA digital cellular, an extension of IS-95. Differences between signaling types have to do with pilot signal and links to provide more traffic channels, and control protocols.

NAM

Number Assignment Module is how the phone stores the phone number and its electronic serial number.

SSL

Secure Sockets Layer Protocol used to encrypt data sent over the air.

TTY

Teletypewriter. An electromechanical typewriter that either transmits or receives messages coded in electrical signals. A phone with TTY support is able to translate typed characters to voice or translate voice into characters to display on the TTY.

I

10 Driver Safety Tips 137

A

Accessories 145
 Acronyms and Abbreviations 149
 Adapt Voice 105
 Add New Device 89
 Adding Additional Phone Number(s) to Existing Contact 31
 Airplane Mode 103
 Alarm Clock 87
 Alert Sounds 94
 All 52
 Answer Options 110
 Assisted Dialing 114
 Auto Retry 111

B

Backlight 98
 Backup Assistant 55
 Banner 97
 Battery Charge Level 23
 Battery Temperature Protection 23
 Blogs 48
 Bluetooth Menu 89
 Brightness 98
 Browse & Download 78

C

Calculator 85
 Calendar 86
 Call <Name or Number> 84
 Call ID Announcement 94

Call Ringtone 94
 Call Settings 110
 Call Sounds 93
 Call Vibrate 94
 Call Waiting 26
 Card Memory 116
 Caution: Avoid potential hearing loss. 128
 Changing the Default Number 31
 Charging Screen 99
 Charging the Battery 20
 Charging with USB 21
 Chat 47
 Check <Item> 84
 Clock Format 102
 CLR Key Activation 106
 Confirm Choices 104
 Consumer Information on SAR 140
 Contact List 54
 CONTACTS 54
 Contacts <Name> 84
 Contacts in Your Phone's Memory 28
 Current Country 107
 Customizing Individual Entries 29

D

Dashboard/Mobile Web 72
 Deleting 32
 Dialed 52
 Digit Dial Readout 95
 Discovery Mode 91
 Display Settings 96
 Display Themes 100

Drafts 45
 DTMF Tones 114

E

Easy Set-up 93, 96
 Edit Codes 107
 Email 47, 82
 End Call Options 111
 Entering and Editing Information 16
 Erasing Messages 50
 ERI Banner 98
 Extras 81
 Ez Tip Calculator 85

F

Favorites 55
 FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 142
 FDA Consumer Update 130
 Font Size 101
 From the Internal Qwerty Keypad 16

G

Games 72
 Get New Pictures 67
 Get New Ringtones 60
 Getting Started with Your Phone 20
 Glossary 149
 Go to <Menu> 84
 Groups 56

H

Help 85

Index

How to Install Your
microSD™ Card 22
How to Remove Your
microSD™ Card 22

I

Icon Glossary 117
Important Information 10
Important Safety Precautions
1
In Case of Emergency (ICE)
57

K

Keypad Volume 95

L

Language 106
LIMITED WARRANTY
STATEMENT 146
Location 106
Lock Phone Now 109

M

Main Menu Settings 100
Making Calls 24
Master Volume 93
MEDIA CENTER 59
Memory 115
Menu Font Type 102
Menu Layout 100
Menu Tree on the Internal
Screen 17
Message Settings 48
Messages 42
MESSAGING 35
Missed 51

Mobile IM 47, 82
Music & Tones 59
Mute Function 26
My Music 61
My Name Card 58
My Number 117
My Phone Name 91
My Pictures 68
My Ringtones 34, 60
My Sounds 63
My Verizon 83, 85
My Videos 69

N

NAM Select 110
New Contact 54
New Message 35
Notepad 88

O

One Touch Dial 113
Online Album 72

P

Personal Banner 97
Phone Info 117
Phone Lock 108
Phone Memory 116
Phone Overview 14
Phone Settings 103
Picture & Video 65
Picture Message 37
Play 85
Position Menu Items 101
Power On/Off 96
Prompts 105

Q

Quick Access to Convenient
Features 26

R

Received 51
Receiving Calls 25
RECENT CALLS 51
Record Video 71
Redial 85
Redialing Calls 25
Removing the Battery 20
Replace Menu Items 101
Reset Default 109
Reset Menu Settings 101
Restore Phone 109
Restrictions 108

S

Safety 120
Safety Information 123
Save Options 115
Screen Icons 24
Security 107
Send Msg to <Name or
Number> 84
Sensitivity 105
Service Alerts 95
Set Directional Keys 104
Set My Shortcuts 103
Set QwertyShortcut 104
Set Shortcuts 103
Set-up Wizard 119
SETTINGS & TOOLS 83
Shortcuts 27
Signal Strength 24
Software Update 118

Sounds Settings 93
Speed Dial 29
Speed Dialing 33
Speed Dials 57
Stopwatch 87
Storing a Number with
Pauses 30
Storing Basics 28
Supported Profiles 92
SW/HW Version 117
Sync Music 64
System Select 110

T

Table of Contents 4
Take Picture 70
Technical Details 10
Terminology 149
The Battery 20
TIA Safety Information 120
Tools 83
TTY Mode 111
Turn On 91
Turning the Phone On and
Off 23
TXT Message 35

U

USB Mass Storage 88
USB Mode 114

V

V CAST Music | Rhapsody
60
V CAST Videos 65
Vibrate Mode 26
Video Message 39
View Timers 53

Visual Voice Mail 46
Voice Clarity 96
Voice Commands 27, 83,
104
Voice Message 41
Voice Privacy 113
Voicemail 46
Volume Quick Adjustment
26
VZ NAVIGATOR 82

W

Wallpaper 99
Welcome 9
World Clock 88

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>