

| Z525i | USER GUIDE

Please read this manual carefully before operating your set.
Retain it for future reference.



Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

CAUTION

Violation of the instructions may cause serious injury or death.

- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode. Do not dispose of your battery by fire or with hazardous or flammable materials.
- ▶ Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire. Store the battery in a place out of reach of children.
- ▶ Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not use a hand-held phone while driving.
- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- ▶ Never store your phone in temperatures less than - 20 Celsius or greater than +50 Celsius.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- ▶ Do not use your phone in high explosive areas as the phone may generate sparks.

Important Safety Precautions

- ▶ Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- ▶ Do not disassemble the phone.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- ▶ Only use the batteries, antennas, and chargers provided and approved by LG. The warranty will not be applied to products provided by other suppliers.
- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not hold or let the antenna come in contact with your body during a call.
- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

Contents

Before You Start	5	Using Phone Menus	21
Guidelines for Safe and Efficient Use	6	1 Names	21
Phone Overview	9	2 Messages	24
Phone Components	9	3 Call History	28
		4 Organizer	30
Menus Overview	10	5 Sounds	32
Using the Battery and Charger	11	6 Display	34
Onscreen Icons	11	7 Settings	36
Installing and Removing the Battery	12	8 Fun&Util	41
Charging the Battery	12	9 Favorites	43
Battery Charge Level	12		
Caring for the Battery	13	Accessories	44
		SPEC	45
Basic Phone Operation	14		
Entering and Editing Information	18		
Entering Information Using T9 Text Input	18		
Key Mapping For Arabic Entry	20		

Before You Start

Congratulations on your purchase of the Z525i cellular phone that has been designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). The CDMA system has greatly enhanced voice clarity and can provide various types of advanced features. This is an advanced and compact phone which has diverse features as follows :

- ▶ Large, easy-to-read, 5 lines display + 1 line icon + 1 line menu, backlight LCD with status icons.
- ▶ Paging, Messaging, Voice mail, and Caller ID. 22-key keypad(10 number keys / 2 function keys / 2 Soft keys / 1 clear key / 4 way navigation key / 1 Call key / 1 End key / 1 OK key).
- ▶ Long battery stand-by and talk time.
- ▶ Choice of 22 ring sounds.
- ▶ Menu-driven interface with prompt for easy operation and configuration.
- ▶ Voice privacy inherent with CDMA encoding. (Not available in Zapp network)
- ▶ Any key answer, auto redialing, one touch and speed dialing with 99 memory locations.

- ▶ Optional accessories with greater convenience and enhanced functionality.
- ▶ You can hear the recipient's voice louder with Speaker Mode On during a call.
- ▶ Rhythmic Backlighting.

Check Accessories

Your mobile phone comes with a AC Adaptor, Handstrap and a rechargeable battery. Please verify that these accessories are included.

Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV, radio or personal computer.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.

- ▶ Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously.

Electronics devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Guidelines for Safe and Efficient Use

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as car stereo or safety equipment.
- ▶ When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Guidelines for Safe and Efficient Use

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.

- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Phone Components

The following shows key components of your mobile phone.



Phone Overview

LCD Screen	Displays messages & indicator icons.
① Soft Key 1 (the names of the functions of these keys appear at the bottom of the screen)	Soft Key 1 Used to Display the Menu. Soft Key 2 Use to select an action within a menu.
② CALL Key	Allows user to place or answer calls.
③ END/PWR Key	Used to turn power on/off and to end a call. Using this, you can return to the Idle screen.
④ Alphanumeric Keypad	These keys enable you to enter numbers and characters and choose menu items.
⑤ Navigation Key	This Navigation key allows quick access to Messages, My menu, Modes, Scheduler.
⑥ OK/Speaker On/Off Key	Accepts the highlighted choice when navigating through a menu. During a call, activate speaker mode on/off.
⑦ Clear Key	Press to delete a single space or character. Press and hold to delete entire words. Press this key once in any menu to go back to the previous menu.
⑧ Keypad Lock	In standby mode, set the Key Guard to be enabled by pressing and holding the key about 2 seconds.
⑨ Vibrate Mode Key	In standby mode, set the vibrate mode by pressing and holding the key about 2 seconds.








Menus Overview

Names <ol style="list-style-type: none">1. Add New2. Search3. Group Settings4. Group Member5. Speed Dials6. Call Reject List7. Capacity8. Delete Names	Call History <ol style="list-style-type: none">1. Dialed Calls2. Received Calls3. Missed Calls4. In Call Memo5. All Calls6. Call Timer7. Delete History	Sounds <ol style="list-style-type: none">1. Ring Tones2. Message Tones3. Alerts4. Volume5. System Tones	Settings <ol style="list-style-type: none">1. Call2. Security3. Phone
Messages <ol style="list-style-type: none">1. Create Message2. Inbox3. Outbox4. Archive5. Drafts6. Template7. Delete Msg8. Msg Settings	Organizer <ol style="list-style-type: none">1. Reminder2. Alarm3. Scheduler4. To Do5. Anniversary6. Memo	Display <ol style="list-style-type: none">1. Screens2. Clock3. Banner4. Menu Color5. Language6. Dialing Font7. Backlight8. Contrast	Fun&Util <ol style="list-style-type: none">1. ZappMe2. Game3. Calculator4. Stop Watch5. World Time
			Favorites <ol style="list-style-type: none">1. My Stuff

Using the Battery and Charger

Onscreen Icons

The phone screen displays several onscreen icons which appear when the phone is powered on.

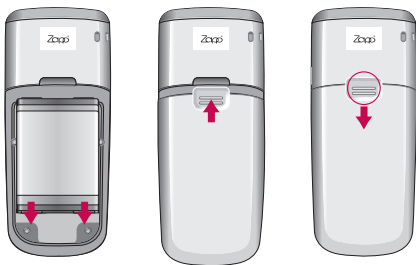 
Icons	Descriptions
	Displays the strength of the signal received by the phone and current signal strength is indicated by the number of bars displayed on the screen.
	No service The phone is not receiving a system signal.
	In use/A call is in progress. * No icon indicates the phone is in standby mode.
	Roaming indicator
	In Alarm mode.
	In Vibration mode.
	Indicates battery charge level.

Using the Battery and Charger

Installing and Removing the Battery

Charge the battery fully before the initial use of the phone. The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time when using the phone.

- ▶ To install, insert the battery into the opening on the back of the phone, and insert the bottom of battery into groove at the bottom of the handset. Gently press down the cover until the latch snaps into place.
- ▶ To remove, push the back cover down. Push the tab with one hand and lift the top of the battery to separate.



Charging the Battery

To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the ones approved by LG may damage your phone or battery.

1. Plug the round end of the adapter into the phone's charger jack and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level. The maximum charge time for a fully discharged battery is 3.5 hours.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen.



When the battery charge level becomes low, the low battery sensor will alert you in three ways: sounding an audible tone, blinking the battery icon outline, and displaying Low battery. Recharge soon. If the battery

Using the Battery and Charger

charge level becomes exceedingly low, the phone will automatically switch off and any function in progress will not be saved.


Caring for the Battery

- 1) If you use an unauthorized battery, it may cause damage to or explosion of the battery. Therefore, please refrain from using unauthorized ones.
- 2) You do not need to wait until the battery completely runs down to recharge the battery.
- 3) Use only LG batteries and chargers specific to your model of phone. LG's chargers are designed to maximize battery life.
- 4) Do not disassemble or short-circuit the battery.
- 5) Keep the battery's metal contacts clean.
- 6) Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before it needs replacing.
- 7) Recharge the battery if it has not been used for a long time to maximize battery life.
- 8) Do not expose the battery charger to direct sunlight or use it in areas of high humidity, such as the bathroom.
- 9) Do not leave the battery in hot or cold places as it may deteriorate battery performance.
- 10) Long backlight settings, searching for service, data connectivity, and synchronization all may affect battery life, talk, and standby times.

Basic Phone Operation

Turning the Phone On and Off




Turning the Phone On

- 1) Install a charged battery pack or connect the phone to an external power source such as the car kit or AC Adaptor.
- 2) Hold down the Key  for 2 seconds until the LCD screen flashes.

Note As any other communication device, avoid any unnecessary contact with the antenna while your phone is turned on.

Making a Call





Every time you make a call, follow these steps:



- 1) Make sure that the phone is turned on. If not, hold down  for 2 seconds.
- 2) Type the phone number and then press  .
 - ▶ If the phone is locked, type the lock code
- 3) To end the call press  .

Note In no service area,  appears from the screen. When trying voice call in no service area,

 
“Out of Service area” is displayed. It means you are in no service area.

Receiving Calls

- 1) When the phone rings or vibrate (if the Vibrate Mode is enabled), press any key (except ) or  depending on the Call settings.
 - ▶ When you press  once, when a call is received, the phone stops ringing or vibrating depending on the mode it is in.
- 2) To end an answered call press  .

On pressing the  key for the first time, when the call is received, the phone stops ringing or vibrating depending on the mode it is in. Pressing  key after that will disconnect the call.

Signal Strength

If you're inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator () on your phone's display screen.

About the antenna


Your phone has a built-in antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than needed. Not touching the antenna during a call optimizes the antenna performance and the talk-time of your phone. Normal position: Hold the phone as you would any other telephone.



Quick Adjust

Adjusting Vibrate Mode




Use Vibrate Mode in a public place.

- 1) In standby mode, activate Vibrate Mode quickly by pressing the  . (for 2 seconds) instead of using the Menu function.
 - ▶ When Vibrate Mode is set, Key tone does not sound.

 
Basic Phone Operation

Note To cancel Vibrate Mode, press for 2 seconds.

Select Profiles


- 1) In standby mode, press  .
- 2) Select one of four Profiles Silent Mode, Vibrate Mode, User Mode and Power Mode with  .
- 3) Press  .

Adjusting Speaker Mode On

During a call, to activate or cancel Speaker quickly, press  .

Adjusting Keypad Lock Function

Used to lock the keypad and prevent accidental pressing of the keys. There are two ways to enable the Keypad Lock Function - with one key and by using the Menu.



- 1) In standby mode, set the Key Guard to be enabled by pressing and holding the key  about 2 seconds.

Note To cancel the Keypad Lock Mode, Press Soft Key 1, then press the star (*) key.

Basic Phone Operation



Call Waiting

Your cellular service may offer a call waiting function. While a call is in progress, you may hear two beeps indicating another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your service provider for information about this function.


- 1) Press  to receive a waiting call.
- 2) Press  again to switch between calls.

Mute

The mute function prevents the other party from hearing your voice, but allows you to hear the other party.

- 1) Press Soft Key 1 Menu and  during a call.
- 2) To cancel Mute, press Soft Key 1 Menu and  again.


Redialing Calls

- 1) Press  twice to redial the last number in Recent Calls.

- ▶ You can also dial any of the last 120 (Missed + Received + Dialed) numbers stored in the Recent Calls. (See the Call History List on page 28~30)

Speed Dialing

Speed dialing is a convenient feature, which allows you to make phone calls quickly and easily. Your phone recalls the phone number from your personal directory, displays it briefly and then dials it. Memory locations 1 through 9 should be used for onetouch dialing for your most frequently used phone numbers.

- 1) Enter memory location number 1 to 9.
- 2) Press .

Dialing Speed Dials from 10 to 99

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press .

Basic Operations

Caller ID

Caller ID lets you know who is calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your phone book, the corresponding name appears with the number. You should check with **your service provider** to ensure they offer this feature.

Entering and Editing Information


Entering Information Using T9 Text Input



Entering Information Using T9 Text Input You can edit the Banner, Scheduler, long Message and Phone Book using T9 Text Input. T9 Text is an easy way to write. In this input method, you only need to press a key once for each letter.



Key Functions


Soft Key 2 : Press to select mode.


- You can select the modes using Soft Key 2: T9En, Abc, 123, T9Rom, Rom


- Shift Key  : Used to change the letter case.

 ~  (Type Text): In T9 mode, press one key per letter to enter text.


 ~  (Type Numbers): In 123 (Numbers) mode, press once to enter numbers.

 (Next): In T9 mode, press to display other matching words.

 (Punctuation): In T9 mode, press to insert punctuation in a word and complete a sentence.

 (Space): Press to complete a word or insert a space.

Note In number mode, inserting a space is not available.

 (Clear): Press to delete a single space or character. Press and hold to delete entire words.

Input mode

T9 Text Input provides five modes for entering text, numbers, special characters, and punctuation.

T9En/T9Rom (T9) Mode

Type text using one keystroke per letter. The default is T9 mode.

Abc/Rom (Multi-tap) Mode

Type text by selecting the desired character with keypad pressed some times.


123(Number) Mode

Type numbers using one keystroke per number. To change to Number Mode in a text entry field, press

Entering and Editing Information

Soft Key 2 until Number Mode is displayed.

Symbol/Imoticon(^.^) Mode

Insert special characters, punctuation, or smileys. You may use any of the special characters. When the cursor is located where you want the special character, switch to Symbol/Smileys mode. If you want to add a smiley, switch to the smileys mode. Press the Navigation Key  to cycle through the desired characters : To select Character, Press the assigned number key.

Initial Cap (T9En/Abc)

Only the first letter is capitalized.

Caps Lock (T9EN/ABC)

All subsequent letters are capitalized.

Lowercase (T9en/abc)

















All subsequent letters are lowercase.

Examples Using T9 Text Input

Typing In T9 Mode

When you want to use T9 Mode, check that T9En is shown at the right bottom of the display. To write the desired word, press each key once for one letter.

For example, to write "Call the office", follow these steps:

1. Press the Soft Key 2  to change T9En mode. Press the Soft Key 2 repeatedly to change T9En mode.
2. Press:     .
3. Press:  to complete the word and add a space.
4. Press:        .
   .
5. Display: Call the office.

As you can see, the word changes after each key press. Therefore you don't need to pay much attention to what happens on the display before you have keyed in the whole word.

Entering and Editing Information

Using the NEXT Key

After you have finished typing a word, if the word displayed is not the word you want, press **0** to display additional choices.

For example, follow these steps:

1. Press: **4** **6** **6** **3** .
2. Display: **Good**.
3. Press: **0** .
4. Display: **Home, Gone, Hood.....**

Examples Using Abc (Multi-tap) Text input Typing In Abc (Multi-tap) Mode

For example, to type "LG", follow these steps:

1. Press: Soft Key 2 to change letter case to Abc mode.
2. Press: to change to ABC Caps Lock mode.
3. Press: **5** **5** **5** **4** .
4. Display: **LG**.

Key Mapping For Romanian Entry

The Keys are mapped as follows:

Keyped	1 time	2 times	3 times	4 times	5times	6 times	7 times	8 times	9 times
1	.	.	-	?	!	'	@	:	1
2	A	B	C	Ă	Â	2			
3	D	E	F	3					
4	G	H	I	Î	4				
5	J	K	L	5					
6	M	N	O	6					
7	P	Q	R	S	Ş	7			
8	T	U	V	Ț	8				
9	W	X	Y	Z	9				
0	(Next)								

General Guidelines to Menu Access and Settings

1. Press Soft Key 1 Menu. Nine menu items will appear on the display screen.
2. Press to go through the list of menu features.
3. Press the corresponding number to the menu item that you want to select. Then the sub-menu list will appear on the screen.
4. Press the appropriate key to select the sub-menu you want to access.
5. Select preferred settings, using the . Press to go one step backward while accessing menu or selecting settings.
6. Press to save the settings or to cancel without saving.

1 Names

Personal Phone Book Memory

The phone has 500 personal phone book memory where you can store up to 4 phone numbers with 32 digit capacity for each phone number.

Using Phone Menus

1.1 Add New

You can save phone numbers, mobile numbers and so on, up to 500 entries.

1. Press Soft Key 1 **Menu** .
 2. Select **1** **Names** .
 3. Select **1** **Add New** .
- **How to save in the Phone**
4. Select **Phone**. (Phone is set as default.)
 5. If Phone is selected as a place to be saved in, go down one step using .
 6. Enter the name of person to save.
 7. Using , select an item to enter. icon sets security for each **Name, Group, Mobile No., Home No., Office No., E-mail, Ringtones, Message Tones, PmdFileName, ImageFileName, Memo, Birthday, Etc No., Fax No.,** and **Secret** .
 8. After entering of information is finished, press to save.

Using Phone Menus

1.2 Search

To find phone numbers you have stored in the Names.

1. Press Soft Key 1 **Menu** .
2. Select **1** **Names** .
3. Press **2** **Search** and Soft Key 1 **Option** .
4. The display prompts you to enter the entry name on the display screen. You can select **Send Msg**, **Assign Dial(Change Dial)**, **By Name**, **By Number**, **By Group** or **Delete** by using **↵** .
5. Press Soft Key 2 **SMS** to send a message.

▶ Enter the contents, and select **Save/Priority** using **↵** , then press **OK** .

Note At any entry, you may move to another entry by pressing the **↵** . If you press **OK** **Edit** or Soft Key 1 **Option** (**6 Delete**) you can save or erase or edit.

1.3 Group Settings

This is a function for changing Group Name and setting Ring tones by Group.

1. Press Soft Key 1 **Menu** .
2. Select **1** **Names** .
3. Select **3** **Group Settings** .
4. Select your desired Group using **↵** .
Press Soft Key 1 **Options** :
Initialize / Initialize All .
5. Press **OK** to edit.
Group Name : Edit the group name.
Group Bell : Set the group ring tone.
Message Tones : Set the group message tone.

1.4 Group Member

1. Press Soft Key 1 **Menu** .
2. Select **1** **Names** .
3. Select **4** **Group Member** .
4. Select your desired Group using **↵** .
5. Press **OK** to view.

1.5 Speed Dials

Speed Dial allows you to make a call faster by just pressing a corresponding number.

1. Press Soft Key 1 **Menu** .
2. Select **1** **Names** .
3. Select **5** **Speed Dials** .
4. To register, press **OK** **Add** to find information you want, then press **OK** .

Note Speed Dials may be set up to 99.

1.6 Call Reject List

Assign the number and group which you want to reject and cancel the reject list.

1. Press Soft Key 1 **Menu** .
2. Press **1** **Names** .
3. Press **6** **Call Reject List** .
4. Enter the four-digit Lock code. (Default value is "0000")

Using Phone Menus

5. Select **Assign Number** or **Assign Group** by using **↵** , then press **OK** .

1.7 Capacity

Capacity indicates quantity of phone book presently saved in the card and the phone. It is indicated as used quantity/available quantity.

1. Press Soft Key 1 **Menu** .
2. Press **1** **Names** .
3. Press **7** **Capacity** .




1.8 Delete Names

To erase all the entries stored in the Names.





1. Press Soft Key 1 **Menu** .
2. Press **1** **Names** .
3. Press **8** **Delete Names** .
4. Press **OK** to select the name, then press Soft Key 2 **Delete** .
5. Select **Yes** , then press **OK** .

Using Phone Menus

2 Messages

Text messages, become available as soon as the power is on. You can access the above types of messages using the message Key . In addition, you can make a call to the call back number by pressing  during a message check. The phone can store up to 50 messages with 160 characters per message. Users may read and edit messages, saved in the Outbox during transmission and send them. However you should check whether your service provider provides the above features. Character limits: The Z525i supports up to 160 characters per message sending and receiving. Limits to available byte per message may exist; please check with your service provider for system capabilities. The information that is stored in the message is determined by phone mode and service capability. You can check types of messages by pressing the message Key .


2.1 Create Message


1. Press Soft Key 1 **Menu**, **2 ABC** or .
2. Select **1** **Create Message**.
4. Enter message.
5. Use  to select Save/Priority for saving message.
6. Select type of message by using , then press .
- ▶ **Normal / Urgent / Emergency**
7. Enter destination number or find saved number in the phone book.
- ▶ Allows you to be certain the message has gone through. When the message has gone through, a confirming message is displayed on the display screen.

2.2 Inbox



Received Text messages and Page messages may be searched and the contents may be viewed. Received messages are sorted in an order of urgent messages, unread messages and read messages. Up to 50 message can be stored.

To view the list of the received messages.

1. Press Soft Key 1 **Menu**, **2 ABC** or .
2. Select **2 ABC** **Inbox**.

▶ Messages are saved in order of Unread/Read. For example, if a New message is read it goes into Read messages. You can initiate a call to any number (greater than 2 digits) in the received message by pressing  from message view screen.

 : Unread SMS  : Read SMS




3. After selecting the desired message with ; press .
4. After viewing the message press Soft Key 1 **Options**.

Using Phone Menus

- ▶ **Reply** Replies to the SMS with your new text.
- ▶ **Forward** Forwards a received message to others destination address(es).
- ▶ **Delete** Deletes the selected message from the Inbox.
- ▶ **To Archive** Save messages in Inbox move to Archive folder.
- ▶ **Delete All** Deletes the all message from the Inbox.

2.3 Outbox

Up to 30 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press Soft Key 1 **Menu**, **2 ABC** or .
2. Select **3** **Outbox**.
3. After selecting the desired message with ; press .



Using Phone Menus

4. After viewing the message press Soft Key 1 **Options** .
- ▶ **Forward** You can modify the message you've got. Then follow the process for Write (see page 24).
- ▶ **Delete** Delete a selected message in the Outbox.
- ▶ **Delete All** Deletes the all message from the Outbox.

2.4 Archive

Archive stores what is preferred to save among messages received. Up to 20 message can be stored.


To view the list of the received messages.

1. Press Soft Key 1 **Menu** , **2 ARC** or  .
2. Select **4 ON** Archive.
- ▶ Messages are saved in order of Unread/Read like the Inbox.
3. After selecting the desired message with  ; press **OK** .
4. After viewing the message press Soft Key 1 **Options** .

- ▶ **Reply** Replies to the SMS with the original message attached.
- ▶ **Forward** Forwards a received message to others destination address(es).
- ▶ **Delete** Deletes the selected message from the Archive.
- ▶ **Delete All** Deletes the all message from the Archive.



2.5 Drafts

The text message is saved in Drafts. A total of upto 5 messages can be saved in Drafts. When you failed to send message, you can save to draft by selecting save button.

1. Press Soft Key 1 **Menu** , **2 ARC** or  .
2. Select **5 ALL** **Drafts** .
3. Then follow the process for Create Message.


2.6 Template

There are 10 predefined phrases included in the Templates.



1. Press Soft Key 1 **Menu** , **2 ARC** or  .
2. Select **6 MSG** **Template** .
3. Select the message to view with  .
- ▶ Press **OK** : To check the contents entered.
- ▶ Press Soft Key 1 **Edit** : To edit the contents entered.
- ▶ Press Soft Key 2 **Fwd** : To forward the contents selected.

2.7 Delete Msg

Text messages and page messages are deleted when you select **7 DEL** **Delete Msg** from the Message Menu screen.


 
1. Press Soft Key 1 **Menu** , **2 ARC** or  .
2. Select **7 DEL** **Delete Msg** .

Using Phone Menus

3. Select the item of choice with  then press **OK** .
- ▶ **Delete Inbox / Delete Outbox / Delete Archive**
4. Select **Yes/No** with  , then press **OK** .

2.8 Msg Settings

Allows you to configure six settings for messages.



1. Press Soft Key 1 **Menu** , **2 ARC** or  .
2. Select **8 SV** **Msg Settings** .
3. Use  to highlight one of the settings and press **OK** to select it.
- ▶ **Priority - (Normal / Urgent / Emergency)**
- ▶ **Save Sent Msg - (Yes / No)**
- ▶ **Text Color - (16 colors)**
- ▶ **Writing Paper - (Winter / City / Sea / White Paper)**
- ▶ **Message Display - (Only Arrived / All Contents)**
- ▶ **Acknowledge - (Yes / No)**

Using Phone Menus



3 Call History

The Call History Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note You can view Call History in two ways.


 



- ▶ The  key in idle mode, upto 120 most recent calls including Dialed, Received, Missed and In Call Memo are displayed.
- ▶ From the Call History menu, select Dialed, Received, Missed, In Call Memo or All Calls and press .

Making a Call from Call History

1. From the Call History menu, select Dialed, Received, Missed, In Call Memo or All Calls and press .
2. Place a call by selecting the desired entry and press  to connect.






3.1 Dialed Calls

Allows you to view list of all Dialed Calls.

1. Press Soft Key 1 **Menu**, , .
2. Use  to highlight an entry, then
 - ▶ Press  to view the entry.
 - ▶ Press  to place a call to the number.
 - ▶ Press Soft Key 1 **Option** to select: Call / Send Msg / Save Number / Call Reject / Delete / Delete All






3.2 Received Calls

Allows you to view list of all Received Calls.

1. Press Soft Key 1 **Menu**, , .
2. Use  to highlight an entry, then
 - ▶ Press  to view the entry.
 - ▶ Press  to place a call to the number.
 - ▶ Press Soft Key 1 **Option** to select: Call / Send Msg / Save Number / Call Reject / Delete / Delete All






3.3 Missed Calls

Allows you to view list of all Missed Calls.

1. Press Soft Key 1 **Menu**, , .
2. Use  to highlight an entry, then
 - ▶ Press  to view the entry.
 - ▶ Press  to place a call to the number.
 - ▶ Press Soft Key 1 **Option** to select: Call / Send Msg / Save Number / Call Reject / Delete / Delete All

3.4 In Call Memo






Save the phone numbers taken while talking and can view the list of numbers present in In Call Memo.

1. Press Soft Key 1 **Menu**, , .
2. Use  to highlight an entry, then
 - ▶ Press  to view the entry.
 - ▶ Press  to place a call to the number.
 - ▶ Press Soft Key 1 **Option** to select: Call / Send Msg / Save Number / Call Reject / Delete / Delete All

Using Phone Menus






3.5 All Calls

Allows you to view list of all Calls.

1. Press Soft Key 1 **Menu**, , .
2. Use  to highlight an entry, then
 - ▶ Press  to view the entry.
 - ▶ Press  to place a call to the number.
 - ▶ Press Soft Key 1 **Option** to select: Call / Send Msg / Save Number / Call Reject / Delete / Delete All

3.6 Call Timer

You may erase all history from three options (1. Erase Missed 2. Erase Received 3. Erase Dialed)

1. Press Soft Key 1 **Menu**, , .
2. Use  to highlight a call list.
 - ▶ All Calls / Dialed Calls / Received Calls / Sent Msgs
3. Press Soft Key 1 **Delete** to delete.
4. Select **Yes/No** with , then press .

Using Phone Menus

3.7 Delete History

1. Press Soft Key 1 **Menu**, **3**, **7**.
2. Select the item which it will erase with **←**.
 - ▶ Delete Dialed / Delete Received / Delete Missed / Delete In-Call / Delete All
3. Press **OK**.
4. Select **Yes** using **←** and then press **OK**.

4 Organizer

4.1 Reminder

Allows you to set one alarm. The current time is displayed at the top of the screen when you select an alarm to set. At the Reminder time, Alarm! will be displayed on the LCD screen and the alarm will sound.

1. Press Soft Key 1 **Menu**, **4**, **1**.
2. You can change the alarm mode using **←**.
 - ▶ AlarmOff / +10min / +30min / +1 hour / Set time / Daily

3. Use **↓** to set alarm time, and select ringer.
 - ▶ Press **←** to select AM/PM, and enter the number for Hour/Minute.
 - ▶ Use **←** to select one of the available alarm ring types.
 - ▶ Using Type(Soft Key 1), select various ring type.
4. Set the alarm mode for alarm and press **OK** Save.

4.2 Alarm

Allows you to set five alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, "Morning Call" will be displayed on the LCD screen and the alarm will sound.

1. Press Soft Key 1 **Menu**, **4**, **2**.
2. Select Alarm1, Alarm2, Alarm3, Alarm4, Alarm5.
3. You can change the alarm mode using **←**.
 - ▶ AlarmOff / Once / Mon~Fri / Mon~Sat / Daily
4. Use **↓** to set alarm time, and select ringer.
 - ▶ Press **←** to select AM/PM, and enter the number for Hour/Minute.

- ▶ Use **←** to select one of the available alarm ring types.
- ▶ Using Type(Soft Key 1), select various ring type.
5. Set the alarm mode for alarm and press **OK** Save.

Note Alarm is disabled when the mobile is switched off. Any alarms that have passed the set limits will automatically expire.

How to Set Snooze

Snooze defaults when it is set to morning call. When no key is input when alarm sounds, snooze function is set automatically one minute later, and the alarm sound again five minutes after the set alarm time. Snooze alarm repeats 9 times. To deactivate snooze alarm, press **OK** when morning call rings.

4.3 Scheduler

Scheduler Functions

Scheduler keeps your agenda convenient and easy to access. Simply store your appointments and your phone alerts you with a reminder of your appointment.

Using Phone Menus

Note If transmitting message or during a call or using internet applications, at the preset time, it does not ring. After exiting, it will ring the reminder.

Note Handset time is taken from Network time settings.

How to use buttons

- ←** Moves cursor to the left.
- Moves cursor to the right.
- ↑** Moves to the previous week.
- ↓** Moves to the next week.
- 1** Moves to the previous year.
- 3** Moves to the next year.
- 7** Moves to the previous month.
- 9** Moves to the next month.
- 5** or **→** Moves to today.

1. Press Soft Key 1 **Menu**, **4**, **3**.
2. Select the date using your keypad, then press **OK**.
3. Press Soft key 1 **Option** to select.

Using Phone Menus

- ▶ View Schedule / View To Do / View Anniv. / Search / Go to Date / Delete All
- In scheduler view mode, press Soft key 2 Add to add schedule.
 - Edit the contents and press \odot to select From / To / Alarm / Rept / Options / Stop Repeat.
 - Press \odot .

4.4 To Do

- Press Soft Key 1 **Menu** , **4** , **4** .
- Press the Soft Key 2 **Add** .
- Edit the contents and press \odot to select Prior / Done / Due.
- Press \odot Save.

4.5 Anniversary

- Press Soft Key 1 **Menu** , **4** , **5** .
- Press Soft Key 1 **Option** to select:
 - ▶ View Anniv. / View Schedule / View To Do / Search / Go to Date / Delete All

- Press \odot .

4.6 Memo

- Press Soft Key 1 **Menu** , **4** , **6** .
 - ▶ Press the Soft Key 1 **Option** .
Delete / Search / Writing Paper / Delete All
 - ▶ Press the Soft Key 2 **Add** .
Enter a Memo and press \odot .

5 Sounds

Options to customize the phone's sounds.

5.1 Ring Tones

- Press Soft Key 1 **Menu** , **5** , **1** .
- Select the item of choice with \odot , then press \odot .
 - ▶ Press Soft Key 1 **Option** to select: Incoming Bell / Power On Bell / Power Off Bell /

Reminder Bell / Alarm Bell

- Use \odot to select the melody of choice, then press \odot .

5.2 Message Tones

- Press Soft Key 1 **Menu** , **5** , **2** .
- Use \odot , to select the Message Tone, then press \odot .
 - ▶ Sound 1 ~ Sound 5

5.3 Alerts

Allows you to set alert settings.

- Press Soft Key 1 **Menu** , **5** , **3** .
- Select the item of choice with \odot , then press \odot .
 - ▶ Call+Msg Alerts / Msg Alerts Cycle
- Select the item of choice with \odot , then press \odot .

Using Phone Menus

5.4 Volume

Allows you to set various volume settings.

- Press Soft Key 1 **Menu** , **5** , **4** .
- Select the item of choice with \odot , then press \odot .
 - ▶ Ring Tone / Key Tone / Voice In Call / Keylock Sound / Menu Sound / Power On / Off / Game
- Adjust the volume with \odot , then press \odot .

5.5 System Tones

Allows you to set any of the 3 alert options to Enable or Disable.

- Press Soft Key 1 **Menu** , **5** , **5** .
- Select the item of choice with \odot , then press \odot .
 - ▶ Call Connect / No Service / Auto Voice Volume / 1 Min Alert
- Select **Enable** / **Disable** by using \odot , then press \odot .

Using Phone Menus

6 Display

Lets you personalise your phone's display by selecting different graphics.

6.1 Screens

Allows you to choose the kind of background to be displayed on the phone.

1. Press Soft Key 1 **Menu**, **6**, **1**.
2. Select the item of choice with **↵**, then press **OK**.
 - ▶ Press Soft Key 1 **Option** to select: Idle Screen / Incoming Call / Power On / Power Off

6.2 Clock

Allows you to select a clock on your mobile phone display.

1. Press Soft Key 1 **Menu**, **6**, **2**.
2. Select the item of choice with **↵**, then press **OK**.

- ▶ Theme & Clock / Theme Only / Analog Clock / Digital Clock

6.3 Banner

Allows you to enter a string of up to 12 characters displayed on the LCD screen.

1. Press Soft Key 1 **Menu**, **6**, **3**.
2. Enter a Banner name and then press **↵**.
3. Press **↵** to select your desired option(s), then select **Align / Font / Text / Box** for the letters you entered by using **↵**.
4. Press **OK**.

6.4 Menu Color

Allows you to choose the color of the background screen.

1. Press Soft Key 1 **Menu**, **6**, **4**.
2. Select the item of choice with **↵**, then press **OK**.

6.5 Language

Allows you to set the bilingual feature according to your preference. Choose between English and Romanian, Hungarian.

1. Press Soft Key 1 **Menu**, **6**, **5**.
2. Set **English / Romanian / Hungarian** with **↵** then press **OK**.

6.6 Dialing Font

Dialing Font is a function that sets the size, color and font of number displayed on screen when entering phone number.

1. Press Soft Key 1 **Menu**, **6**, **6**.
2. Select the item of choice with **↵**, then press **OK**.
 - ▶ Dial Size / Dial Color/ Dial Font

6.7 Backlight

Display and buttons are lighted for a designated length of time, allowing you to use your mobile phone in the dark with convenience.

Using Phone Menus

1. Press Soft Key 1 **Menu**, **6**, **7**.
2. Select the item of your choice by using **↵**.
 - ▶ Normal / Manual
3. Select the item of your choice by using **↵**, then select **Light / LCD / Keypad** for the letters you entered by using **↵**.
4. Press **OK**.

6.8 Contrast

Using left/right navigation key, select the contrast setting using the scale of lightest to darkest.

1. Press Soft Key 1 **Menu**, **6**, **8**.
2. Adjust the contrast with **↵**.
3. Then press **OK** to save the contrast setting.

Using Phone Menus

7 Settings

7.1 Call

The Call settings menu allows you to designate how the phone handles both incoming and outgoing calls.

7.1.1 Call Divert

Call Divert lets you forward all your incoming calls to another number or Voice Mail connection.

1. Press Soft key **Menu**, **7 FGS**, **1**, **1**.
2. Select the item of choice with **⏴**, then press **OK**.
 - ▶ All Voice Calls / If Busy / If Not Answered / Busy/Not Ans.
After selecting **Enable**, press 1 To Num and enter number to be diverted.
3. Select **Enable / Disable** by using **⏴**, then press **OK**.

7.1.2 Call Waiting

Request the network to notify you when you receive a new call during a call. (network service)

1. Press Soft key **Menu**, **7 FGS**, **1**, **2 ARC**.
2. Select **Enable / Disable** by using **⏴**, then press **OK**.

7.1.3 Voice Privacy

Use Enhanced when you make a security call. (Function not available in Zapp network)

1. Press Soft key **Menu**, **7 FGS**, **1**, **3 DR**.
2. Select **Standard / Enhanced** by using **⏴**, then press **OK**.

7.2 Security

Prevents unauthorized use of your phone.

Note The lock code/password on your phone is 0000 by default.

7.2.1 Calling Lock

Limits outgoing calls, and you have the following three options.

1. Press Soft key 1 **Menu**, **7 FGS**, **2 ARC**.
2. Enter the four-digit Lock Code.
3. Press **1** **Calling Lock**.
4. Select **All Calls/Int'l. Calls/Disable** by using **⏴**, then press **OK**.

7.2.2 ZappMe Lock

Limits using ZappMe services.

1. Press Soft key 1 **Menu**, **7 FGS**, **2 ARC**.
2. Enter the four-digit Lock Code.
3. Press **2 ARC** **ZappMe Lock**.
4. Select **Enable/Disable** by using **⏴**, then press **OK**.

Using Phone Menus

7.2.3 Phonebook Lock

Allows you to protect your phonebook list against unauthorized use.

1. Press Soft key 1 **Menu**, **7 FGS**, **2 ARC**.
2. Enter the four-digit Lock Code.
3. Press **3 DR** **Phonebook Lock**.
4. Select **Enable/Disable** by using **⏴**, then press **OK**.

7.2.4 Message Lock

Allows you to protect your messages against unauthorized use.

1. Press Soft key 1 **Menu**, **7 FGS**, **2 ARC**.
2. Enter the four-digit Lock Code.
3. Press **4 DR** **Message Lock**.
4. Select **Enable/Disable** by using **⏴**, then press **OK**.

Using Phone Menus

7.2.5 Call Log Lock

Allows you to protect your call log against unauthorized use.

1. Press Soft key 1 **Menu** , **7 FOR** , **2 ABC** .
2. Enter the four-digit Lock Code.
3. Press **5 ALL** **Call Log Lock** .
4. Select **Enable/Disable** by using **↻** , then press **OK** .

7.2.6 Phone Lock

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode, until the lock code is entered. This will allow you to receive phone calls and still make emergency calls. If you need to modify the lock code, you may modify it using the new lock code within the security set menu.

1. Press Soft key 1 **Menu** , **7 FOR** , **2 ABC** .
2. Enter the four-digit Lock Code.

3. Press **6 INV** **Phone Lock** .
4. Select **Enable/Disable** by using **↻** , then press **OK** .

7.2.7 Emergency No

You can call emergency numbers, even the phone is locked or restricted.

To enter 1 fixed numbers and 2 available numbers:

1. Press Soft key 1 **Menu** , **7 FOR** , **2 ABC** .
2. Enter the four-digit Lock Code.
3. Press **7 FOR** **Emergency No** .
4. Press Soft Key 1 **Edit** .
5. Enter an Emergency number.
6. Press **OK** .

7.2.8 New Lock Code

New Lock Code allows you to enter a new four-digit lock code number.

1. Press Soft key 1 **Menu** , **7 FOR** , **2 ABC** .
2. Enter the four-digit Lock Code.
3. Press **8 INV** **New Lock Code** .
4. Enter the New Lock Code(four-digit), then press **OK** .
5. For confirmation, it will ask you to enter the New Lock Code again, then press **OK** .

7.2.9 Lock Code Hint

Allows you to inform you of lock code hint.

1. Press Soft key 1 **Menu** , **7 FOR** , **2 ABC** .
2. Enter the four-digit Lock Code.
3. Press **9 MAX** **Lock Code Hint** .
5. Enter the Lock Code Hint, then press **OK** .

Using Phone Menus

7.3 Phone

The Phone menu provides you with specific information pertaining to your phone model.

7.3.1 Auto Key Lock

1. Press Soft key 1 **Menu** , **7 FOR** , **3 DEF** , **1** .
2. Select **Disable / Enable** by using **↻** , then press **OK** to save.
When selecting **Enable**, set the time for waiting time to be keyguard.

7.3.2 Any Key Answer

1. Press Soft key 1 **Menu** , **7 FOR** , **3 DEF** , **2 ABC** .
2. Select **Disable / Enable** by using **↻** , then press **OK** .

Using Phone Menus

7.3.3 Entry Mode

1. Press Soft key 1 **Menu**, **7**, **3**.
2. Select T9Rom / Rom / T9En / Abc by using **↓**, then press **OK**.

7.3.4 Memory Mgt.

Allows you to initialize the memory of phonebook, message, ringtone and image.

1. Press Soft key 1 **Menu**, **7**, **3**, **4**.
2. Select Memory Info/Initialize by using **↓**, then press **OK**.

7.3.4.1 Memory Info.

1. Press Soft key 1 **Menu**, **7**, **3**, **4**, **1**.
2. You can check the memory contents using the up/down key

7.3.4.2 Initialize

1. Press Soft key 1 **Menu**, **7**, **3**, **4**, **2**.
2. Enter the four-digit Lock Code, then press **OK**.
3. Select **Reset phonebook / Reset message / Reset ringtone / Reset image / Reset All** by using **↓**, then press Soft Key 1 **Select**.
4. Press **OK**.
And then memory is initialized and reset.

7.3.5 Line Speed

Allows you to set the port speed. Set the port speed based on your carrier's network. Contact your carrier to determine the maximum available speed.

1. Press Soft key 1 **Menu**, **7**, **3**, **5**.
2. Select the item of your choice by using **↓**, then press **OK**.
▶ USB / Serial / Modem/Fax

7.3.6 Modem/Fax In

Sets the phone mode to receive the data from the other party.

1. Press Soft key 1 **Menu**, **7**, **3**, **6**.
2. Select the item of your choice by using **↓**, then press **OK**.
▶ Disable / Modem In / Fax In

7.3.7 My Phone Number

Allows you to save and view your phone number and contact information.

1. Press Soft key 1 **Menu**, **7**, **3**, **7**.
▶ My Number / Contact Address / E-Mail

7.3.8 Version Info

The Phone Info menu provides you with specific information pertaining to your phone model.

1. Press Soft key 1 **Menu**, **7**, **3**, **8**.
▶ VER / Date / Time

Using Phone Menus

8 Fun&Util

8.1 ZappMe

ZappMe services enables you experience various applications.

1. Press Soft key 1 **Menu**, **8**, **1**.
▶ Zapp Me / Settings / Help

8.2 Game

8.2.1 Sudoku

- ▶ Press key: **Menu**, **8**, **2**, **1**.
- ▶ Key map
- Input digits: **1** ~ **9**
- Cursor move: right, left, up, down
- Confirm: **OK**
- Delete: soft1
- Pause: Soft2, CLR

Using Phone Menus

8.2.2 Halloween Fever

- ▶ Press key: **Menu**, **8**, **2**, **2**.
- ▶ Key map
 - Cursor move: right(**6**), left(**4**), up(**2**), down(**8**).
 - Select: OK(**5**)
 - Retry: '*'
 - Undo: '#'
 - Pause: CLR
 - Back: Soft2

8.3 Calculator

Calculate simple mathematical computations.
(Can get result upto second decimal place.)

1. Press Soft key 1 **Menu**, **8**, **3**.
2. Select (multiplication) using **↻** keys.
3. Press **1**, **0** in order.

4. Press **OK**.

You will see the result of the calculation.

Note Calculations can be made with up to 30 characters at one time (e.g., 73+10-30 would be 8 characters).

8.4 Stop Watch

Stopwatch is available.

1. Press Soft key 1 **Menu**, **8**, **4**.
2. Press Soft Key 1 **Start** to start, and press Soft Key 1 **Stop** to stop.
 - ▶ You can use the Lap function using Soft Key 2 **Lap**. Max. 10 lap time is available. And lap time can be recorded.
3. Press Soft Key 2 **Reset** to reset.

Using Phone Menus

8.5 World Time

Is useful if you need to make a call to another country, and you are not sure about the time difference.

1. Press Soft key 1 **Menu**, **8**, **5**.
2. Select the city you desire by using **↻**.
3. Press **OK**.

Note Use Right soft key 2 to activate DST. (DST - Daylight Saving Time - plus or minus 1 hour depending on season)

9 Favorites

9.1 My Stuff

Show you the list of download graphics and melody. you can see graphics and play melodys.

1. Press soft key 1 **Menu**, **9**, **1**.
2. Select the GRAPHIC or MELODY.
3. Press **OK**.

There are a variety of accessories available for your mobile phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

AC Adapter

This adaptor supports AC 100~240 Volts, 50~60Hz outlets.



Headset

The headset connects to your phone allowing hands-free operation. It includes earpiece and microphone.



Battery

Standard batteries is available.



USB Cable

Connect your phone to your PC's USB port.



ITEM	Specification
RF Freq. Range	TX: 453 ~ 457.5MHz(CDMA) RX: 463 ~ 467.5MHz(CDMA)
Preferred set Channel Number	160, 210, 260
Frequency Bandwidth	1.25 MHz
Maximum RF Output Power	23 ~ 27 dBm
Minimum RF Output Power	- 50 dBm/1.23 below
Rx Sensitivity	- 104dBm below (at FER=0.5%)
SAR max: 0.383 W/kg (measured for the entire body, also for head and members)	
SAR max value accepted in Romania by MCTI rules : 2 W/kg	

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>