

CU500

Quick Start Guide



Cingular Music



Transferring & Playing Music



Cingular Video



Taking Pictures



Multitasking



Instant Messaging (IM)

Getting to Know Your Phone



Cingular Music

Your phone is a complete music experience from an integrated music player to music news, chat, and live radio. Even use your phone to identify recorded music when you're out and about.


MobiRadio

1. Press the  Key, then select **Radio (4)**.

Billboard Mobile

1. Press the  Key, then select **The Buzz (6)**.

MusicID

1. Press the  Key, then select **MusicID (3)**.
2. Select **ID song!**, then hold the phone up to the music source. MusicID will then analyze the tune and give you the song title.



Transferring Music

Listen to music on your phone.
Transfer your favorite tunes today!

1. You must convert your music to either .MP3, .AAC, or .AAC+ format using the media player of your choice.
2. Remove the battery and insert the microSD™ card* (gold contacts facing down) into the slot at the top of the phone.
3. Power on the phone and connect it to your PC using a USB data cable.*
4. When the Hardware Wizard pops up, click **Cancel**.
5. The PC recognizes the phone as a **Removable Disk** under **My Computer**. Open the folder where your music is stored and transfer your files by dragging and dropping them onto the **Removable Disk** icon.
6. When finished, press the **Right Soft Key** on the phone for **Exit** and disconnect the USB cable.

Note: The number of files you can store depends on the size and format options of the memory card.



*microSD card and USB data cable sold separately.

Requirement: Windows 2000 or later. Not compatible with Mac OS.





Warning! Do not disconnect phone while file transfer is in progress.


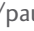
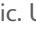


Playing Music

To listen to music that you have transferred to your phone, follow these quick easy steps:

Playing Music with the Flip Open

1. Press the  **Key**, select **Music Player (1)**, then **All Songs (1)** or **Playlists (2)**. Select a song or playlist.
2. Press  to play/pause. Press **up** or **down** on the Navigation Key to change the volume, and **left** or **right** to go to the previous or next song.
3. Press the **Left Soft Key** for **Minimize** to access other phone functionality while music is playing.




Playing Music with the Flip Closed

1. Press and **hold** the  **Key**. Select **All Songs** or a playlist. Use the left side volume keys to scroll.
2. Press  to play/pause the music. Use the  or  keys to go to the previous or next song.
3. Press and **hold** the  **Key** to exit the music player.



Cingular Video

Cingular Video brings your phone to life. Watch news, sports, weather, and entertainment clips via Cingular's high-speed data network while on the go.

1. From standby mode, press the **Left Soft Key** for **Menu**.
2. Select **Cingular Video (6)**, then press  to connect.
3. Once connected, select the program options you wish to view and press .
4. Select the clip you want to play and press .







Parental controls available.

The Sopranos
brought to you by **HBOmobile**

Taking Pictures

Capture everything around you in vivid detail via the 1.3 megapixel camera with video. Then share it instantly with friends via multimedia messaging.

1. To take a picture, press the  **Key**.
2. Rotate the camera lens toward your subject. Press the volume keys to flip the viewfinder image.
3. Press **left** or **right** on the Navigation Key to adjust brightness and **up** or **down** for zoom*. Press the **Right Soft Key** to adjust image resolution, quality, self timer, or other options.
4. Press  to take the picture.
5. To send your picture, press the **Left Soft Key**. Add text, then press  to enter recipients. To choose a contact from the address book, press . Press the **Left Soft Key** to send.



Note: To take a photo with the flip closed, press the **Task Key**. Scroll down with the volume keys to **Take Photo** and press **►/||**.

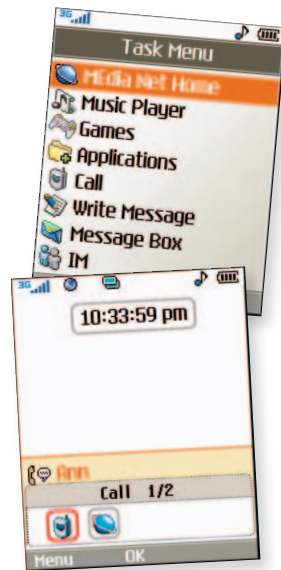


* Camera resolution of 1280 x 960 does not support zoom function.

Multitasking




Multitask simultaneously with voice and data—browse the web, make calls, play games, send and receive messages, and listen to music. All at once.

1. If you're involved in one task and want to launch another, press the **Task Key** (lower left side of phone), then press the **Left Soft Key for Menu**, select the task you want to launch, and press .
2. To switch among multiple open tasks, just press the **Task Key** to display the task icon bar on the bottom of the screen, press **left** or **right** on the Navigation Key to select another task icon, and press .
3. If you get a call while in another task (except playing music), you can accept the call, then return to the task while you're talking.



Instant Messaging

If you subscribe to an instant messaging (IM) service such as AOL®, MSN, Yahoo!®, or ICQ®, you can take the convenience and fun of IM on the go with your mobile phone.

1. From standby mode, press **right** on the Navigation Key to access IM.
2. Highlight the IM community you want to enter, select **Sign In/On**, and press .
3. The first time you enter a community, enter your **Screen Name/ID** or **Email** and your **Password**. Check the **Auto Sign On/In** box to be automatically connected in the future. Press the **Left Soft Key** to **Sign In/On**.
4. Select a contact that is currently online and press .
5. Enter your message and press  twice to send. To end a chat, select **Option**, then **End Conversation**.

Note: When you receive an incoming instant message, a “new message” icon similar to this one  will appear on the screen.



Optional Accessories

Accessories for productivity, convenience and fashion are available at www.LGUSA.com.



USB Data Cable



Bluetooth Headset



Portable Stereo Speakers



Stereo Headset



Bluetooth Speakerphone



Mobile Charger

©2006 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated.

Download from www.Somanuals.com. All Manuals Search And Download.

CU500QSG/CINGULAR

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>