




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for LG RT-32LZ50. You'll find the answers to all your questions on the LG RT-32LZ50 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG RT-32LZ50
User guide LG RT-32LZ50
Operating instructions LG RT-32LZ50
Instructions for use LG RT-32LZ50
Instruction manual LG RT-32LZ50

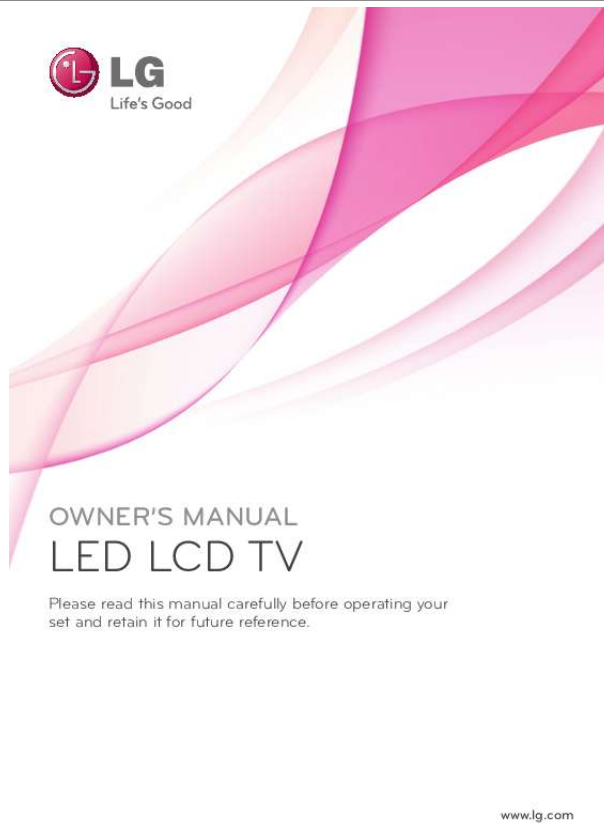

[Your user manual](#)
[LG RT-32LZ50](#)

Manual abstract:

Put your TV on a pedestal stand and mount the TV on a table. CAUTION y Avoid touching the screen at all times, as this may result in damage on the screen or some of the pixels used to create images. Attaching the stand (Only 26LV25**) 1 Lay the TV with the screen side down on a flat surface. CAUTION y It is recommended to move the TV in the box or packing material that the TV originally came in. y Before moving or lifting the TV, disconnect the power cord and all cables. y When holding the TV, the screen should face away from you to prevent the screen from scratches. y Lay a foam mat or soft protective cloth on the surface to protect the screen from damage. 2 Assemble the parts of the Stand Body with the Stand Base of the TV. ENGLISH ENG y Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

(M4x6) Stand Base y When transporting a large TV, there should be at least 2 people. y When transporting the TV by hand, hold the TV as shown in the following illustration. (M4x16) Stand Body 3 Secure the TV and the stand with the 2 screws. CAUTION y When transporting the TV, do not expose the TV to jolts or excessive vibration. y When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.

y Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten. ASSEMBLING AND PREPARING 11 (Only 32/37/42/47LV35**) Mounting on a table y Image shown may differ from your TV. 1 Lay the TV with the screen side down on a flat surface. 1 Lift and tilt the TV into its upright position on a table.

- Leave a 10 cm (minimum) space from the wall for proper ventilation. CAUTION y Lay a foam mat or soft protective cloth on the surface to protect the screen from damage. 2 Assemble the parts of the Stand Body with the Stand Base of the TV. 10 cm 10 cm 10 cm 10 cm Stand Body Stand Base 2 Connect the power cord to a wall outlet. ENGLISH ENG CAUTION 3 Secure the TV and the stand with the 4 screws. y Do not place the TV near or on sources of heat, as this may result in fire. NOTE y Swivel 20 degrees to the left or right and adjust the angle of the TV to suit your view.(Except for 26LV25**) CAUTION y Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten. 12 ASSEMBLING AND PREPARING Securing the TV to a table y Image shown may differ from your TV.

(Only 32/37/42/47LV35**) Fix the TV to a table to prevent from tilting forward, damage, and potential injury. Mount the TV on a table, and then insert and tighten the supplied screw on the rear of the stand. Securing the TV to a wall y Image shown may differ from your TV. 4-Screws (not provided as parts of the product) Stand 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV. - If there are bolts inserted at the eye-bolts position, remove the bolts first. 2 Mount the wall brackets with the bolts to the wall. ENGLISH ENG NOTE Desk Match the location of the wall bracket and the eye-bolts on the rear of the TV. y Screws: M5 x L (*L: Table depth + 8-10 mm) ex) Table depth: 15mm, Screw: M5 x 25 (Only 32/37LV35**) AC IN 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface. CAUTION CABLE MANAGEMENT y Make sure that children do not climb on or hang on the TV.

1-Screw (provided as parts of the product) Stand NOTE y Use a platform or cabinet that is strong and large enough to support the TV securely. Desk WARNING y To prevent TV from falling over, the TV should be securely attached to the floor/ wall per installation instructions. Tipping, shaking, or rocking the TV may cause injury. ASSEMBLING AND PREPARING 13 Using the Kensington security system (This feature is not available for all models.) y Image shown may differ from your TV.

The Kensington security system connector is located at the rear of the TV. For more information of installation and using, refer to the manual provided with the Kensington security system or visit <http://www.kensington.com>. Connect the Kensington security system cable between the TV and a table.



[Your user manual](#)
[LG RT-32LZ50](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>