




chocolate™
by LG

 **verizon**wireless

Quick Start Guide

P/N: MCDD0007801 (1.2) 

Getting to Know Your Phone



*Speakerphone can only be activated during a call. **Key unlocks the touch keypad in the closed position.

Download from www.Somanuals.com. All Manuals Search And Download.

Using the Touch Keypad

TOUCH KEYPAD

- Touch the exact key with your fingertip.
- It is not necessary to press hard. A light tap will do.
- To navigate, tap the **up**, **down**, **left** or **right** key.

TOUCH SENSOR LEVEL

The touch keypad's sensitivity level is set at **medium** by default and can be adjusted by going to: **Settings & Tools** menu > **Touch Keypad (7)** > **Sensor Level (1)**.

TOUCH PROTECTION

The touch keypad is automatically locked when:

- The slide is closed.
- The touch keypad is inactive for a set time (3 sec. when slide is closed; 20 sec. after the LCD backlight has turned off when slide is open).

To unlock the touch keypad:

- Slide Closed: open the slide or press any side key (other than End Key).
- Slide Open: press any key.



How to Get Music

1. Shop the Catalog Using V CAST Music

 
 
Tap **OK** twice, select **Get V CAST Music (7)** to download new music. Choose from over 1,000,000 songs!

2. Sync Music from Your PC to Your Phone

Whether you're purchasing music from the online V CAST Music Store or copying music from your personal library, it's easy to sync from your PC.

Connect your phone to your PC with an optional USB cable*. Tap **OK** twice, select **Sync Music (8)** to sync music from PC to phone. USB cable and Windows Media Player 10 are required.


*Refer to the Music Essentials Kit (sold separately) and Quick Reference Guide (pages 22-28) for more details.

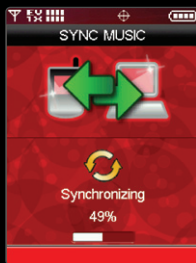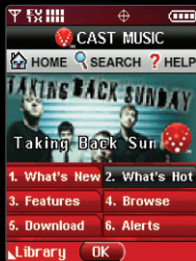

Playing Music

Transform your wireless phone into a portable music player. Expand your collection with the Verizon Wireless music catalog. Even set a music alarm using your favorite song.

 1. Tap **OK** twice, select **All Songs (1)** and tap **OK** to play.
2. Use the side **Volume Keys** to adjust volume when a song is playing. Tap the **Right Soft Key** for **Options** to try different music effects.
3. Press the **End Key** twice to exit the music player.


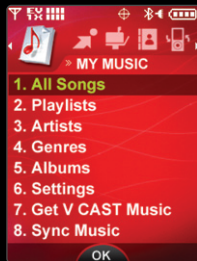


Shortcut: To quickly access your music playlists, press the side **Music Key**. If music has been played at least once, press and *hold* the side **Music Key** to launch the music player.

Note: You can play music in the background in **Standby**, **Music Only**, and **Standalone** modes. In some cases, the music will pause and then resume when you finish the activity.

Creating Playlists

  1. Tap **OK** twice, select **Playlists (2)**.
2. Tap the **Right Soft Key** to create a playlist.
3. Enter a playlist name and tap **OK**.
4. Tap the **Right Soft Key**, and select **Add Songs to Playlist (4)**
5. Tap **OK** to mark all the songs you want to add to the playlist.
6. Tap the **Left Soft Key** for **Done**.

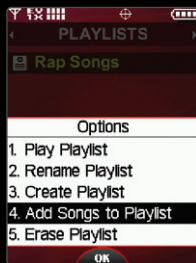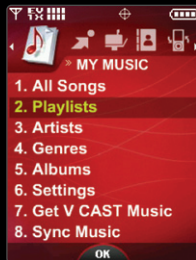

Optional Accessories



Bluetooth
Stereo Headset



Portable
Stereo Speakers



Headset Adapter
with Charging Port



Music Essentials Kit



Extended Li-Ion Battery
(1,200 mAh)


 

- Bluetooth Style-i
- microSD Card
(256MB/512MB/1GB/2GB)
- Vehicle Power Charger
- Carrying Case

©2006 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.





Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Making & Answering Calls

 
 
MAKING CALLS

1. Press and *hold* the side **End Key**  for 3 seconds to turn the phone on.
2. Slide phone open to reveal keypad, then enter phone number and tap **Send** .
3. Press the side **End Key**  to end the call or close the slide.*

ANSWERING CALLS

- Slide Closed: open the slide or press the **Voice Command/Memo Key**  or **Music Key** , then tap **Send*** .
- Slide Open and with Touch Keypad Lit: Tap **Send** .

*Default settings. You can change your **Answer/End Call Options** by going to: **Settings & Tools** menu > **Call Settings (6)**, then **Answer Options (1)** or **End Call Options (2)**.

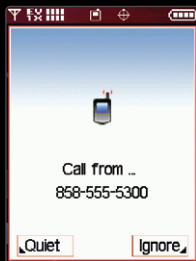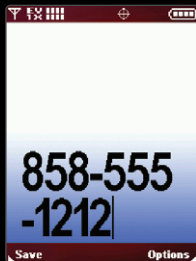


Note: If the phone is ringing or vibrating, tap **Left Soft Key** to mute the ringing/vibration or tap the **Right Soft Key** to ignore the call.

Bluetooth® Pairing

Enjoy hands-free entertainment and communication in the car, office, or at home with Bluetooth accessories, like a Bluetooth stereo headset* for listening to music. Get wire-free convenience up to 30 feet away.

1. Set your Bluetooth accessory into pairing mode.
2. Tap **OK**, tap **left** on the Navigation Key, then tap **OK** to access the **SETTINGS & TOOLS** menu.
3. Select **Bluetooth (8)**, then **Add New Device (1)**.
4. If Bluetooth is set to off, you will be prompted to turn power on. Select **Yes (1)** and tap **OK**.
5. The phone will now search for the accessory. Once found, highlight it and tap **OK** for **Pair**.
6. Enter the passcode (typically "0000" - 4 zeroes) and tap **OK**. If you don't know the passcode, please consult the user manual of the device you are trying to pair.
7. Tap **OK** to connect with the device.

 *Streaming audio not supported.

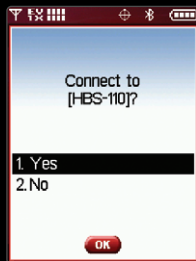








Note: You can save up to 20 Bluetooth pairings


Bluetooth accessories sold separately. Phone does not support all Bluetooth OBEX profiles. For vehicle/accessory compatibility, go to www.verizonwireless.com/bluetoothchart.

Taking a PIX / Recording a FLIX

Shooting photos on-the-fly has never been easier with the slide out 1.3 megapixel camera. When you need to capture all the action, get it with live video and share it all instantly with PIX-FLIX Messaging.

1. To activate camera mode: With the slide open, press the side **Camera/Video Key** .
2. To activate video mode: With the slide open, press and *hold* the side **Camera/Video Key**  for 2 seconds.
3. Tap **left** or **right** on the Navigation Key to zoom. Tap **up** (or **down**) to adjust brightness. Tap the **Right Soft Key** to adjust camera/video options.
4. Tap  or press  to take a photo or record a video. Tap  or press  to stop recording.
5. Tap the **Left Soft Key** for **Save** or  for **SEND**.



 
Note: To take a self-portrait, use the mirror on the back of the phone and press .

You can record up to 1 hour of video using available memory.


Customizable Features

CHANGING THE DISPLAY THEME

1. Tap **OK**, tap **left** on the Navigation Key, then tap **OK** to access the **SETTINGS & TOOLS** menu.
2. Select **Display Settings (4)**, then **Display Themes (4)**.
3. Select **VZW (1)**, **Rock'n Roll (2)**, **Jazz (3)**, **Business (4)**, **Tropical (5)**, or **Blue (6)**.

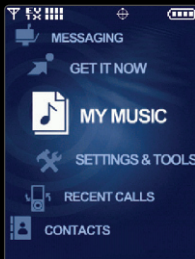


Jazz

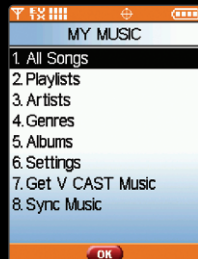 


Tropical

CHANGING THE MUSIC PLAYER THEME

 1. Tap **OK** twice.
2. Select **Settings (6)**, then **Player Theme (1)**.
3. Select **Rock'n Roll** or **Jazz**.

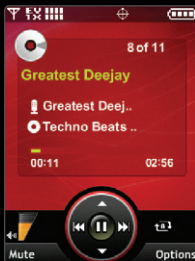

Rock'n Roll

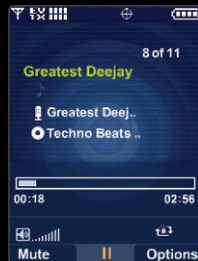 

Jazz



chocolate™
by LG

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>