



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for LG MS-1927C. You'll find the answers to all your questions on the LG MS-1927C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG MS-1927C
User guide LG MS-1927C
Operating instructions LG MS-1927C
Instructions for use LG MS-1927C
Instruction manual LG MS-1927C



Instruction Manual

GB F



MS-1927C • MB-3927C



[Your user manual](#)
[LG MS-1927C](#)

Manual abstract:

They may burn. · Do not use wooden containers. They may heat up and char. · Do not use recycled paper products since they may contain impurities which may cause sparks and/or fires when used in cooking. · Allow the turntable to cool before cleaning. · Small amounts of food require shorter cooking or heating time. If normal times are allowed they may overheat and burn. · Before cooking, pierce the skin of fruit and vegetables. · Do not cook eggs in their shell.

Pressure will build up inside the egg which will burst.

· Do not attempt deep fat frying in your oven. · Remove the plastic wrapping from food before cooking or defrosting. Note though that in some cases food should be covered with plastic film, for heating or cooking, as detailed in microwave cook books. · If smoke is observed, switch off or disconnect the oven from the power supply and keep the oven door closed in order to stifle any flames. · When food is heated or cooked in disposable containers of plastic, paper or other combustible materials, check the oven frequently due to the possibility of ignition.

GB - WARNING : Liquids or other foods must not be heated in sealed containers since they are liable to explode. - WARNING : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. - WARNING : If the oven door and door seal are damaged, the oven must not be operated until it has been repaired by a qualified service technician. - WARNING : Do not attempt to tamper with, or make any adjustments or repairs to the door, control panel, safety interlock switches or any other part of the oven. It is hazardous for anyone to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.

Repair should only be undertaken by a qualified service technician. 6 Cooking Utensils COOKING UTENSILS Utensils should be checked to ensure that they are suitable for use in the microwave oven. The following chart summarises the proper use of cooking utensils in your oven: Cooking utensils Heat resistant glass, glass ceramic Ceramic, china Microwave yes yes (Do not use china with gold or silver trim.) no no yes yes yes no Grill yes yes GB yes no no no no no Metal cookware Non-heat resistant glass Microwave plastic Plastic wrap Paper (cup, plates, towels) Straw, wicker and wood Microwave 1. Most glass, glass ceramic, and heat resistant glassware utensils are excellent. Those with metal trim should not be used in a microwave oven. 2. Paper napkins, towels, plates, cups, cartons, and cardboard can be used in the microwave oven. Do not use recycled paper products since they may contain impurities which may cause sparks and/or fires when used in cooking. (Consult your cookbook for correct use of these products.

) 3. Plastic dishes, cups, freezer bags, and plastic wraps may be used in the microwave oven. Follow the manufacturer's instructions or the information given in the cookbook when using plastics in the microwave oven. 4. Metal utensils and utensils with metallic trim should not be used in the microwave oven. For more information on the proper use of metal in your oven, please read the introduction section in the cookbook. If the use of aluminum foil, skewers, or utensils containing metal in the oven is specified in the recipe, allow at least 2.5cm clearance between the metal object and the interior oven wall. If arcing (sparks) occurs, remove immediately. 7 Note: Consult your cookbook, individual recipes, and charts for correct use of cooking containers, products, and other useful information.

Grill 1. Heat resistant glassware, ceramic and metal cookware can be used. 2. Paper napkins, towels, and plastics should not be used. Notes: · Care should be taken when removing utensils or the glass turntable, as they may become hot during cooking.

· Only use a thermometer that is designed or recommended for use in the microwave oven. · Ensure the turntable is in place when you operate the oven. Other Helpful Instructions For best results and more enjoyable cooking, please read these comments thoroughly. For Best Results: 1. When determining the time for a particular food, begin by using minimum time and checking condition occasionally.



[Your user manual](#)
[LG MS-1927C](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>