

# Massaging Bath Pillow

Cat.No. 63-1523

Thank you for buying the RadioShack Massaging Bath Pillow. This ergonomic contoured pillow not only provides you a great support for neck and shoulders but also a vibrating massage with high and low speeds to relieve stress while you soak in the bathtub. The cordless and waterproof design is safe for bathtub use. The supplied suction cups let you mount the water-resistant pillow securely to any bathtub surface. You also can use the pillow outside the bathtub to ease tension in the lower back or behind your leg.



## Using the Suction Cups

The three suction cups let you fix the bath pillow on the bath tub stably.

Insert three suction cups' stem into the holes on the bottom of the pillow.

Wipe the mounting location dry then press the pillow down so the suction cups tightly suck on.



To dismount the pillow from the bath tub, flip each suction cup's edge up to detach each suction cup from the mounting surface.



## Batteries

Your Massaging Bath Pillow requires two C type batteries (not supplied) for power. For optimum performance, we recommend alkaline batteries, available at your RadioShack store.

1. Press down the sponge next to the vibrator cap at the pillow's right side to emerge the vibrator cap's edge. Then grasp the edge and pull the vibrator out of the pillow.
2. To remove the vibrator cap, use one hand to hold the vibrator stem, and the other hand to turn the vibrator cap counterclockwise until its line marker aligns with the "Unlock" line on the vibrator stem, then lift up the vibrator cap.
3. Insert two C type batteries with the negative (-) ends facing battery holder's opening.
4. Replace the vibrator cap and align the cap's line marker with the **Unlock** line, then secure it by turning the cap clockwise until the line marker aligns with the **Lock** line.
5. Insert the vibrator back into the pillow with the **HI/OFF/LOW** label in its original position.

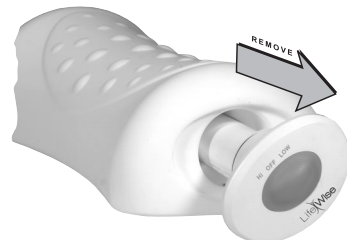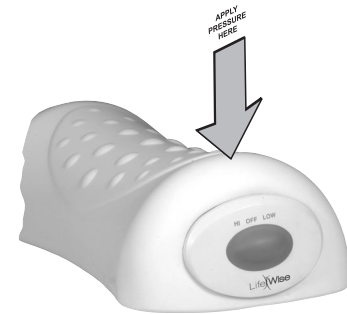

If the pillow's vibration weakens, replace the batteries.

## Battery Notes:

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the pillow for several weeks, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

## Operation

1. Place your head, neck, thigh, or lower back over the pillow.
2. Press **LOW** or **HI** to turn on the vibrator and select the desired massage speed.
3. When you finish, press **OFF** to turn off the vibrator.

## Hints and Tips:

- Do not massage for more than 15 minutes at a time.
- Do not use the pillow if you are pregnant, have a pacemaker implanted in your body, or suffer from diabetes, hemorrhages, skin inflammation, bruises, open wounds, broken skin or illness. Consult your doctor for more information about using the pillow.
- The pillow is not for medical attention. Stop using the pillow if you feel uncomfortable or your symptoms become worse.
- Never use the pillow after taking painkillers, sedatives, or alcohol.
- Do not use the pillow when you are sleeping or drowsy.
- For added comfort, place a folded towel over the pillow.
- To save battery power, be sure to turn off the pillow when not in use.

## Care

- Use and store the massaging bath pillow in normal temperature environments.
- Keep the pillow away from direct sunlight, heater, dust and dirt.
- Handle the pillow carefully. Do not drop or step on it.
- Do not pour water or other liquids into the pillow or vibrator.
- Wipe the pillow occasionally with a damp cloth to keep it looking new. Do not use an abrasive cleanser, alcohol or detergent. Be sure to seal the vibrator cap before cleaning the pillow.

## Service and Repair

If your Massaging Bath Pillow is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website ([www.radioshack.com](http://www.radioshack.com)), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the pillow's internal components can cause a malfunction and might invalidate its warranty.

### Limited 1 Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for [one (1) year] from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>