

Zephyr 2000

Quick Reference Guide

Sleek. Dynamic. Stylish. The Lincoln Zephyr awaits you. From the luxurious amenities to the quiet interior, Lincoln's classic touch ensures that every drive is a unique and comforting one. Experience your own sanctuary as the spirited engine carries you effortlessly through the next curve, the MP3 sound system sets the pace with your favorite music, and the luxurious leather seats unfold you. You may never want to leave.

Take a few minutes to use this Quick Reference Guide to acquaint you with many of the features you'll use most. For more detailed information, consult your Owner's Guide.



1 2 3 4 5

Cockpit

Quick Reference Guide

1 Headlamps, Fog Lamps and Panel Dimmer Control

Turn the control one position to the right (R) to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control



to the second position on the right (O) to turn on the headlamps. Turn the control one position to the left (L) to activate the autolamp feature, which automatically turns the exterior lamps on and off, based on available daylight. The system also keeps the lights on for a short time after the ignition switch is turned to the LOCK (OFF) position. Pull the control out to activate the fog lamps. The fog lamp indicator light (F) will illuminate. The fog lamps will not operate when the control is turned off (O) or when the high beams are on. Use the panel dimmer control to adjust the level of brightness on the instrument panel during parking lamp and headlamp operation. Move the control to the full upright

position, past the detent, to turn on the interior lamps.

2 Steering Wheel Controls

Your steering wheel controls allow you to set and adjust vehicle speed, as well as make adjustments in your audio and climate control systems. To set the speed



control, ensure that the vehicle speed is at least 30 mph (48 km/h). Press and release ON. Accelerate to the desired speed. Press and release SET (+). The speed control indicator light (S) will illuminate in the cluster. Remove your foot from the accelerator. Once set, press and release SET (-) or (+) to decrease or increase the speed in small increments. Or, press and hold until you reach the desired speed. To disengage speed control but not erase the previous set speed, press the brake pedal. To disengage and erase the speed, press OFF.

Press - VOL + to decrease/increase audio volume. Press - to access the previous/next preset radio station or CD track. Press MEDIA to select AM, FMI, FM2 or CD. Press - TEMP + to decrease/increase the cabin temperature.

3 Tilt/Telescopic Steering Wheel

Push the lever down to unlock the steering column. Move the steering wheel up or down and in or out to find the desired



position. While holding the steering wheel in place, pull the lever up to lock the steering column.

4 Message Center

The message center displays important vehicle information through a constant monitoring of vehicle systems. The message center displays features such as trip odometer, compass, distance to empty, average

fuel economy, and a language selector. The message center also provides vehicle system checks and will notify you of potential vehicle problems with a display of system warnings.



INFO - Press to scroll through the following displays: Odometer, Trip Odometer A or B, Distance to Empty, Average Fuel Economy, Average Speed, Compass, and Trip Elapsed Time 1 or 2.

RESET - Press to select and reset functions shown in the Info and Set Up Menu.

SET UP - Press to scroll through: System Check, Units (English/Metric), Language (English, Spanish, or French), and Easy Entry/Exit Seat. For more information, please see your Owner's Guide.

5 In-Dash Clock

Press + to advance the time. Press - to reverse the time.

6 Traction Assist Light

This icon illuminates when the Traction Assist is active. If the light remains on, have the system serviced immediately by an authorized dealer.



7 Throttle Control/Transmission Light

This icon illuminates when a powertrain fault has been detected. Contact an authorized dealer as soon as possible to have your vehicle serviced.



8 Check Engine Light

The Check Engine light illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction.



6 7 8 9

Drive in a moderate fashion and have your vehicle serviced immediately by an authorized dealer.

9 Airbag Readiness Light

The Airbag Readiness light illuminates briefly when the ignition is turned on.



If this light remains on or continues to flash after the engine is started, have the system serviced immediately by your authorized dealer. A chime will sound if a malfunction in the supplemental restraint system is detected as well.

10 Anti-Lock Brake System (ABS)

The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or flashes after the engine is started, have the system serviced immediately by your authorized dealer. Normal braking (less ABS) will still

be functional unless the brake warning light is also illuminated. Note: It is normal to feel a pedal pulsation or hear a slight noise when the ABS system is activated.

11 Brake System Warning Light

The brake system warning light illuminates briefly when the ignition is turned on.



This light will remain on when the parking brake is applied and the ignition is on. If this light remains on after releasing the parking brake, this indicates a low brake fluid level or a brake system malfunction. Have the brake system inspected immediately by an authorized dealer.

12 Check Fuel Cap Light

This icon illuminates when the fuel cap may not be properly installed. If you continue to drive with this light

illuminated, the Check Engine Indicator light may come on.

Auxiliary Power Point

The auxiliary power point is located in the utility compartment in the center console.



Note: Do not use the power point over the capacity of 12VDC/150W.

Universal Garage Door Opener

Located on the driver's floor, the Universal Garage Door



Opener System is a convenient way to replace up to three hand-held transmitters with a single built-in device. This system learns the radio frequency codes of most transmitters to operate garage doors, entry gates, security systems, entry door locks, and home or office lighting. Refer to the Driver Controls chapter in your Owner's Guide for more information, including programming instructions.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>