

Wireless Digital Security Camera

Instruction Manual

English Version 3.0



 **LIVE**

LW2110 Series

www.lorextechnology.com

Thank you for purchasing this Lorex product.

This manual refers to the following products::

- LW2110 Series
- LW2110PK2

Please visit us on the web for the most current Manuals and Quick Start Guides. Additional Language Manuals may also be available at:

www.lorextechnology.com



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER. NO USER SERVICABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products' enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF THE PLUG TO THE WIDE SLOT AND FULLY INSERT.

 
BEFORE YOU START

THIS PRODUCT MAY REQUIRE PROFESSIONAL INSTALLATION

LOREX IS COMMITTED TO FULFILLING YOUR SECURITY NEEDS



- We have developed user friendly products and documentation. Please read the Quick Start Guide and User Manual before you install this product.

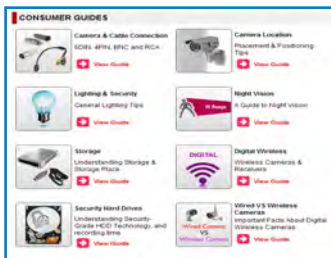

- Consumer Guides and Video Tutorials are available on our web site at www.lorexttechnology.com/support



- If you require further installation assistance, please visit www.lorexttechnology.com/installation or contact a professional installer.



- Please refer to the "Need Help" insert for technical support and customer care information.



- Please note that once the components of this product have been unsealed, you cannot return this product directly to the store without the original packaging.



AVANT DE COMMENCER

ANTES DE EMPEZAR

CE PRODUIT POURRAIT EXIGER UNE INSTALLATION PROFESSIONNELLE

LOREX S'ENGAGE À SATISFAIRE VOS BESOINS SÉCURITAIRES

- Veuillez lire le guide de démarrage rapide et le mode d'emploi avant d'installer ce produit
- Les guides du consommateur et les séances de tutorat vidéo sont disponibles sur l'Internet en visitant www.lorextechnology.com/support
- Si vous avez besoin de l'aide pour l'installation, veuillez visiter www.lorextechnology.com/installation ou contactez un spécialiste en installation
- Veuillez référer à l'insert "Need Help" pour obtenir de l'information sur le service à la clientèle et le support technique
- Veuillez constater qu'une fois que les composants de ce produit ont été retirés de l'emballage, vous ne pourrez plus retourner ce produit directement au magasin

ESTE PRODUCTO PUEDE EXIGIR UNA INSTALACIÓN PROFESIONAL

LOREX SE COMPROMETE A SATISFACER SUS NECESIDADES EN SEGURIDAD

- Favor de leer la guía de instalación rápida y la guía del usuario antes de instalar este producto.
- Puede conseguir las guías del consumidor y los cursos en enseñanza video sobre el Internet visitando www.lorexctv.com/support
- Si necesita ayuda para la instalación, visite www.lorextechnology.com/installation o contacte un especialista en instalaciones
- Favor de referir al documento "Need Help" para obtener información acerca del servicio al cliente y al soporte técnico
- Favor de notar que una vez que los componentes de este producto han sido removidos del embalaje, no podrá devolver este producto directamente a la tienda



www.lorextechnology.com

 **LOREX**[®]
VIEW YOUR WORLD™
VOIR VOTRE MONDE™
VER SUMUNDO™

VANTAGE
ALWAYS AWARE™
TOUJOURS AU COURANT™
SIEMPRE CONSCIENTE™

Need Help?

CONTACT US FIRST

DO NOT RETURN THIS PRODUCT TO THE STORE

Please make sure to register your product at www.lorextechnology.com to receive product updates and information

3 Easy Ways to Contact Us:



Online:

Product Support is available 24/7 including product information, user manuals, quick start up guides and FAQ's at **www.lorextechnology.com/support**

To order accessories, visit **www.lorextechnology.com**



By Email:

Technical Support (for technical/installation issues) **support@lorexcorp.com**

Customer Care (for warranty and accessory sales) **customerservice@lorexcorp.com**

Customer Feedback **info@lorexcorp.com**



By Phone:

North America:

Customer Service: **1-888-425-6739** (1-888-42-LOREX)

Tech Support: **1-877-755-6739** (1-877-75-LOREX)

Mexico: **1-800-514-6739**

International: **+800-425-6739-0**

(Example: From the UK, dial 00 instead of +)

Necesita Ayuda

COMUNÍQUESE PRIMERO CON NOSOTROS

Vous Avez Besoin D'aide?

CONTACTEZ-NOUS D'ABORD

NO DEVUELVA ESTE PRODUCTO A LA TIENDA

Cerciórese de por favor colocar su producto en www.lorexcctv.com/registration para recibir actualizaciones y la información del producto

3 MANERAS SENCILLAS DE COMUNICARSE CON NOSOTROS:

En línea:

apoyo al producto disponible 24/7 incluyendo información del producto, manuales para el usuario, guías de inicio rápido y preguntas más frecuentes en

www.lorexttechnology.com/support

Para colocar pedidos de accesorios, visite www.lorexttechnology.com

Por Correo Electrónico:

soporte técnico (para asuntos técnicos/la instalación)
support@lorexcorp.com

○
servicio al cliente (respecto a la garantía y a la venta de accesorios)
customerservice@lorexcorp.com

Comentarios de cliente
info@lorexcorp.com

Por Teléfono:

Norte América:
Atención al cliente: **1-888-425-6739** (1-888-42-LOREX)
Soporte técnico: **1-877-755-6739** (1-877-75-LOREX)
Mexico: **1-800-514-6739**

Internacional: **+800-425-6739-0**

(Ejemplo: Desde el Reino Unido, marque el 00 en lugar del +)

NE RETOURNEZ PAS CE PRODUIT AU MAGASIN

Veuillez veiller à enregistrer votre produit à www.lorexcctv.com/registration pour recevoir des mises à jour et l'information de produit

3 FAÇONS FACILES DE NOUS CONTACTER:

En ligne:

le support des produits est disponible 24 heures sur 24, 7 jours sur 7, y compris les informations sur les produits, les guides de l'utilisateur, les guides de démarrage rapide et les foires à questions

www.lorexttechnology.com/support

Pour commander des accessoires, visitez www.lorexttechnology.com

Par Courriel:

support technique (pour les questions techniques et l'installation) support@lorexcorp.com

OU
service à la clientèle (pour les questions de garantie et les ventes d'accessoires)
customerservice@lorexcorp.com

Commentaires des clients
info@lorexcorp.com

Par Téléphone:

L'Amérique du Nord:
Service à la clientèle: **1-888-425-6739** (1-888-42-LOREX)
Support technique: **1-877-755-6739** (1-877-75-LOREX)
Mexico: **1-800-514-6739**

International: **+800-425-6739-0**

(Exemple: À partir du Royaume-Uni, composez 00 au lieu de +)

 
Important Safeguards

In addition to the careful attention devoted to quality standards in the manufacture process of your video product, safety is a major factor in the design of every instrument. However, safety is your responsibility too. This sheet lists important information that will help to assure your enjoyment and proper use of the video product and accessory equipment. Please read them carefully before operating and using your video product.


Installation

1. **Read and Follow Instructions** - All the safety and operating instructions should be read before the video product is operated. Follow all operating instructions.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - Comply with all warnings on the video product and in the operating instructions.
4. **Polarization** - Do not defeat the safety purpose of the polarized or grounding-type plug.

A polarized plug has two blades with one wider than the other.

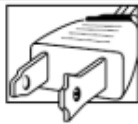

 A grounding type plug has two blades and a third grounding prong.



The wide blade or the third prong are provided for your safety.

If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

5. **Power Sources** - This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your location, consult your video dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.
6. **Overloading** - Do not overload wall outlets of extension cords as this can result in the risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicates damage or deteriorated insulation, have it replaced by your service technician.
7. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the video product.

8. **Ventilation** - Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video equipment on a bed, sofa, rug, or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the video product manufacturer's instructions have been followed.

9. **Attachments** - Do not use attachments unless recommended by the video product manufacturer as they may cause a hazard.

10. **Camera Extension Cables** - Check the rating of your extension cable(s) to verify compliance with your local authority regulations prior to installation.

11. **Water and Moisture** - Do not use this video product near water. For example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, near a swimming pool and the like.

Caution: Maintain electrical safety. Power line operated equipment or accessories connected to this unit should bear the UL listing mark of CSA certification mark on the accessory itself and should not be modified so as to defeat the safety features. This will help avoid any potential hazard from electrical shock or fire. If in doubt, contact qualified service personnel.

12. **Accessories** - Do not place this video equipment on an unstable cart, stand, tripod, or table. The video equipment may fall, causing serious damage to the video product. Use this video product only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the video product. Any mounting of the product should follow the manufacturer's instructions and use a mounting accessory recommended by the manufacturer.



Service

13. **Servicing** - Do not attempt to service this video equipment yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
14. **Conditions Requiring Service** - Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.
 - A. When the power supply cord or plug is damaged.
 - B. If liquid has been spilled or objects have fallen into the video product.
 - C. If the video product has been exposed to rain or water.
 - D. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
 - E. If the video product has been dropped or the cabinet has been damaged.
 - F. When the video product exhibits a distinct change in performance. This indicates a need for service.
15. **Replacement Parts** - When replacement parts are required, have the service technician verify that the replacements used have the same safety characteristics as the original parts. Use of replacements specified by the video product manufacturer can prevent fire, electric shock or other hazards.
16. **Safety Check** - Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the video product is in safe operating condition.
17. **Wall or Ceiling Mounting** - The cameras provided with this system should be mounted to a wall or ceiling only as instructed in this guide, using the provided mounting brackets.
18. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Use

19. **Cleaning** - Unplug the video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
20. **Product and Cart Combination** - Video and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the video product and car combination to overturn.
21. **Object and Liquid Entry** - Never push objects for any kind into this video product through openings as they may touch dangerous voltage points or "short-out" parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.
22. **Lightning** - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.

General Precautions

1. All warnings and instructions in this manual should be followed.
2. Remove the plug from the outlet before cleaning. Do not use liquid aerosol detergents. Use a water dampened cloth for cleaning.
3. Do not use the receiver in a humid or wet place.
4. Keep enough space around the unit for ventilation. Slots and openings in the storage cabinet should not be blocked.



WARNING

STRANGULATION HAZARD:

Infants have STRANGLED in power cords. Keep power cords more than 3 feet away from cribs, bassinets, play yards and other safe sleep environments for infants.

TRANSMITTER FCC/IC NOTICE

FCC Transmitter Notice

This equipment has been certified and found to comply with the limits regulated by the FCC part 15, subpart C.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Transmitter Notice

- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

RECEIVER FCC/IC NOTICE

FCC Receiver Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

IC Receiver Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesirable operation.

Son Fonctionnement est soumis aux deux conditions suivantes:

- 1) Le matériel ne peut être source d'interférences et
- 2) Doit accepter toutes les interférences reçues, y compris celles pouvant provoquer un fonctionnement indésirable.

CANADIAN CLASS B STATEMENT: This digital device does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictés par la ministère des Communications.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Toute modification non approuvée explicitement par le fournisseur de licence de l'appareil peut entraîner l'annulation du droit de l'utilisateur à utiliser l'appareil.

Features



- FHSS Digital Wireless Technology provides excellent image quality and clarity
- Simple installation. No video cable required (1)
- Connect multiple receivers to your surveillance recorder (DVR) to create a wireless surveillance solution (2)
- Easily connects to a TV/Monitor (RCA) or DVR (BNC)
- Night viewing up to 60ft (18m) (3)
- Install camera indoors or outdoors (4)
- Up to 150ft (46m) indoor / 450ft (137m) outdoor wireless range (5)

Receiver Features

- Compact receiver is easy to install and operate
- VGA (640x480) & QVGA (320x240) Resolution Supported (6)
- Convenient Signal Strength Indicator
- Plug directly into a TV (RCA adapter included) or surveillance recorder or use a BNC extension cable (included) to position the wireless receiver in a more convenient location

Camera Features

- VGA Resolution Camera
- 60ft (18m) IR Night Vision (3)
- Auto infrared light filter ensures accurate color reproduction under any lighting condition
- Weather Proof Housing (IP66 rated) (4)

1. Camera requires a wired connection to a power outlet. Power adapter included.
2. Using multiple receivers in close proximity to each other may cause a slight slowdown in frame rate performance. Try to maintain at least a few inches of space between each receiver. 3ft. extension cable included.
3. Stated IR illumination range is based on ideal conditions. Actual range and image clarity depends on installation location, viewing area and light reflection/ absorption level of object.
4. Not intended for submersion in water. Installation in a sheltered area recommended.
5. Maximum wireless transmission range. Actual range dependant upon building materials and other obstructions in path of wireless signal.
6. VGA mode has a resolution of 640 X 480 pixels; QVGA mode has a resolution of 320 X 240 pixels. Use VGA mode for best video performance. Use QVGA mode for a higher video frame rate.

Table of Contents

Getting Started	1
Wireless Receiver & Camera	2
Connecting The Camera	3
Camera Setup	3
Wireless Receiver Setup	5
Installing Multiple Wireless Cameras	6
Powering Multiple Receivers Using The Power Splitter Cable (LW2110PK2 only) ...	7
On-Screen Display	7
Pairing Cameras	8
Appendix A: System Specifications	9
Appendix B: About Digital Wireless Technology	10
Appendix C: Facts About Digital Wireless Cameras	11
Appendix D: Troubleshooting	13
Appendix E: Frequently Asked Questions	14
Appendix F: Extending Wireless Range	15

Getting Started

The system comes with the following components:



1 X WIRELESS CAMERA*



1 X CAMERA MOUNTING STAND



1 X WIRELESS RECEIVER*



1 X MOUNTING SCREW KIT



1 X BNC/RCA ADAPTER



2 X POWER ADAPTERS* (FOR RECEIVER & CAMERA)

 


**3FT/1M BNC FEMALE/BNC MALE
EXTENSION CABLE**

*Number of cameras and receivers may vary by model.

CHECK YOUR PACKAGE TO CONFIRM THAT YOU HAVE RECEIVED THE COMPLETE SYSTEM, INCLUDING ALL COMPONENTS SHOWN ABOVE.

Wireless Receiver & Camera

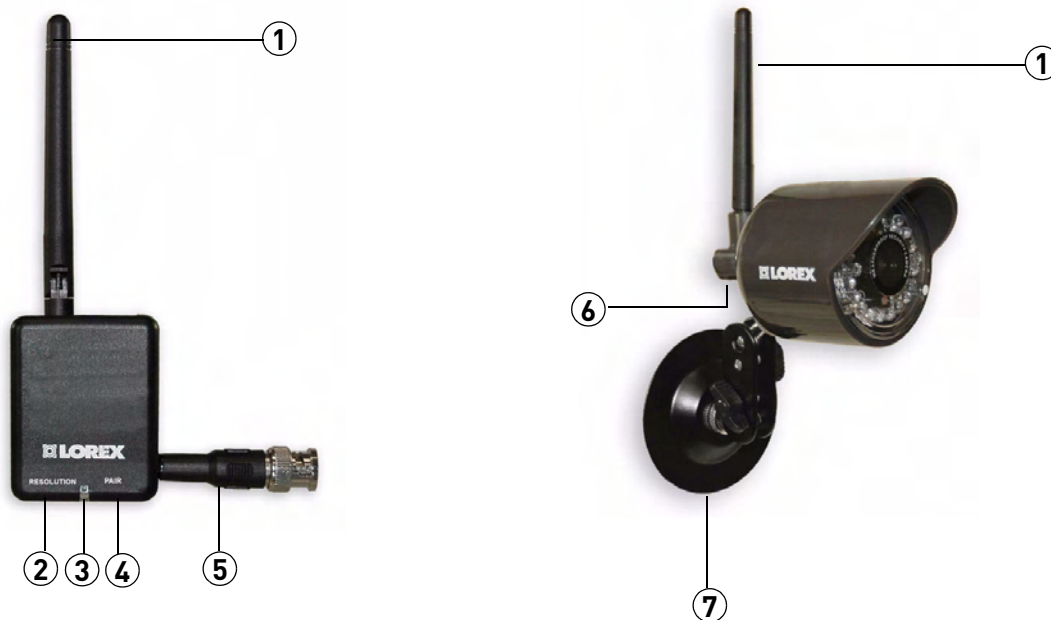

- 1 Wireless Antenna**
- 2 Resolution button:** Press to switch between VGA* and QVGA video resolutions.
- 3 Front LED:** Glows green to indicate receiver is powered up.
- 4 Pairing Button:** For details, see “Pairing Cameras” on page 8.
- 5 BNC Connector:** Connect the BNC connector to the DVR or BNC extension cable.
- 6 Pairing Button:** For details, see “Pairing Cameras” on page 8.
- 7 Camera Stand**

*VGA mode has a resolution of 640 X 480 pixels; QVGA mode has a resolution of 320 X 240 pixels. Use VGA mode for best video performance. Use QVGA mode for a higher video frame rate.

Connecting The Camera



- Before you install the camera, carefully plan where and how it will be positioned, and where you will route the cable that connects the camera to the power adapter.
- Before starting permanent installation, verify its performance by observing the image on a monitor when camera is positioned in the same location/position where it will be permanently installed.

Installation Warnings

- Aim the Cameras to best optimize the viewing area: Select a location for the camera that provides a clear view of the area you want to monitor, which is free from dust, and is not in line-of-sight to a strong light source or direct sunlight.
- Avoid installing the cameras where there are thick walls or obstructions between the Cameras and the Receiver*.
- Select a location for the camera that has an ambient temperature between 14°F~122°F (-10°C~50°C)
- For outdoor use, installation under a shelter is recommended.

 
*Avoid installing in a location which requires the wireless signal to pass through cement, concrete, and metal structures. This will reduce the range of transmission.

For details, see "Appendix C: Facts About Digital Wireless Cameras" on page 11.

Camera Setup

To install the camera:

- 1 Use the included mounting screws to mount the stand to the mounting surface:
 - Mark the position of the screw holes on the wall
 - Drill holes and insert the drywall plugs as needed
 - Firmly attach the stand to the wall using the provided screws

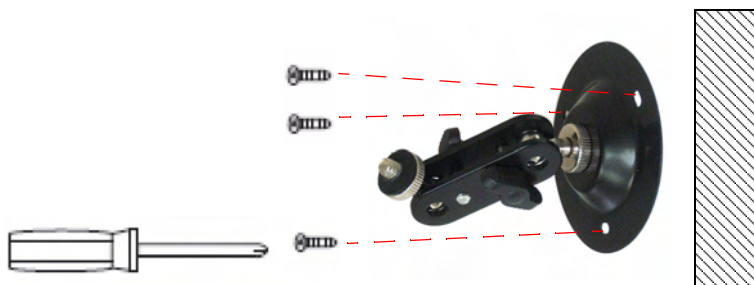


- 2 Twist the camera into the head of the stand **(1)**.

Adjust the angle of the camera until the desired view is set. Tighten the thumbscrews to secure the desired camera position **(2)**.



 - 3 Connect the power cable from the camera to the Power Adapter. Plug the power adapter to an outlet or surge protector.

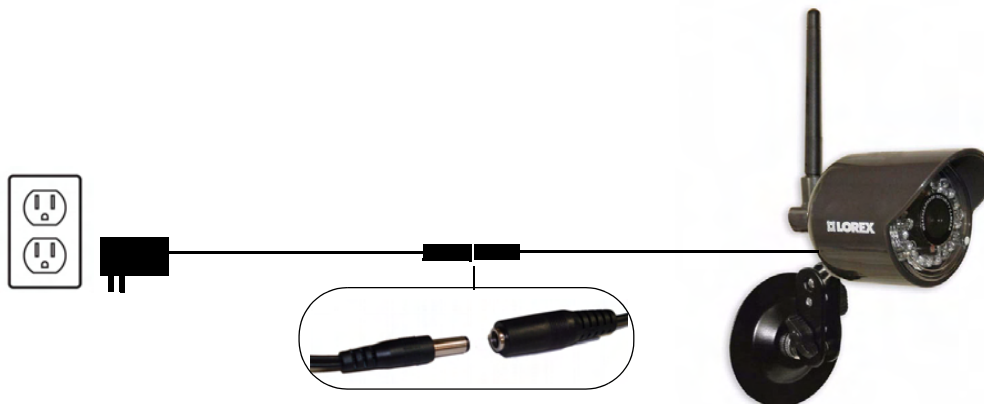

Wireless Receiver Setup

To connect a wireless receiver to a surveillance recorder (DVR):

- 1 Connect the BNC connector on the receiver directly into an available video input.



Make sure to first connect and power on the camera(s) before powering on the receiver; this will ensure a proper connection.

 
NOTE: If necessary, attach the 3ft (1m) BNC/BNC extension cable at one end to the receiver and at the other end to the surveillance recorder.

- 2 Connect the power cable from the receiver to the power adapter. Plug the power adapter into an outlet or surge protector.


NOTE: For instructions on powering multiple receivers, see “Powering Multiple Receivers Using The Power Splitter Cable (LW2110PK2 only)” on page 7.

To connect the wireless receiver to a TV or VCR:


- 1 Attach the included BNC/RCA adapter to the BNC connector on the receiver and plug the receiver directly into an available video input on the TV or VCR.

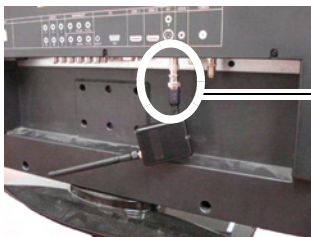

Rear panel of TV.

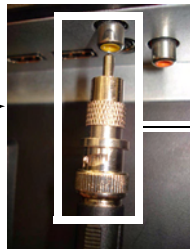 

 Connect the BNC connector to the BNC to RCA adapter (included).

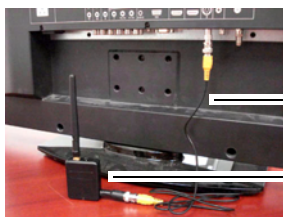

BNC extension cable

Receiver



Make sure to first connect and power on the camera(s) before powering on the receiver; this will ensure a proper connection.

NOTE: If necessary, attach one end of the 3ft (1m) BNC/BNC extension cable to the receiver and at the other end attach the BNC/RCA adapter, then connect the BNC/RCA adapter to the viewing/recording device.

 
- 2 Connect the power cable from the receiver to the cable of the power adapter. Plug the power adapter into a local AC power outlet or surge protector.

Installing Multiple Wireless Cameras

When installing multiple digital wireless security cameras in the same environment (e.g. LW2110PK2 - 2 pack wireless cameras) maintain as much space as possible between the receivers using the included 3ft BNC extension cables, to optimize camera performance. See illustrations below for examples of recommended 2 and 4 receiver installations.


Scenario A: Two Wireless Cameras


- Plug one receiver directly into the back of the Digital Video Recorder. Connect the other receiver to the included 3ft BNC extension cable and plug into the Digital Video Recorder.

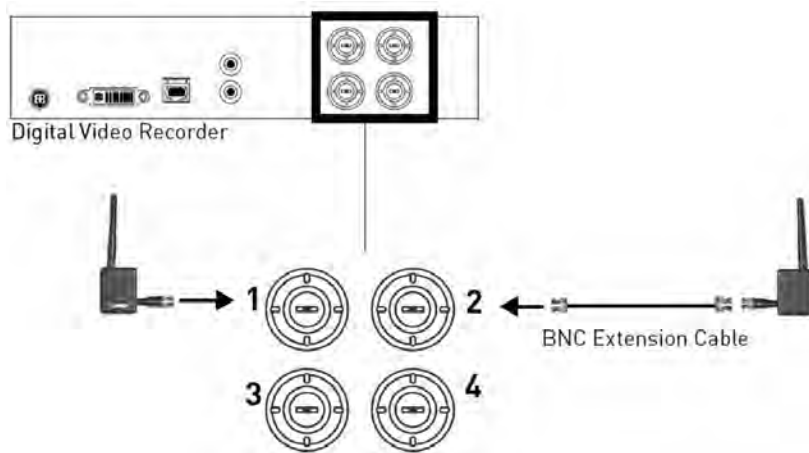

Scenario B: Four Wireless Cameras

 - Plug one receiver directly into the back of the Digital Video Recorder. Connect the other receivers to the included 3ft BNC extension cables and plug them into the Digital Video Recorder.

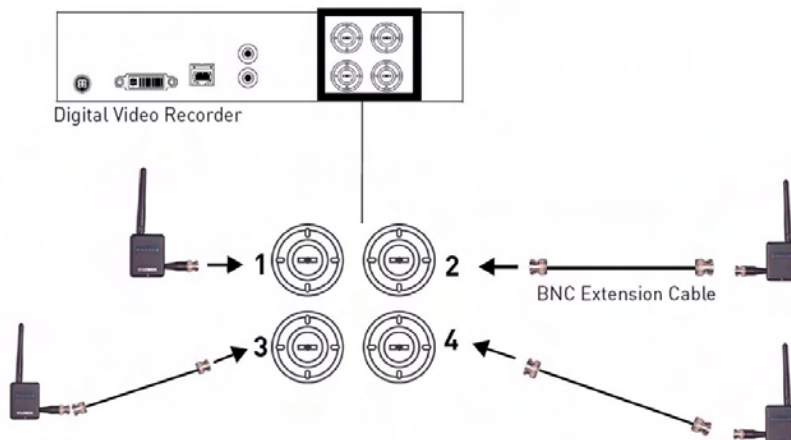


It is not recommended to install more than 4 digital wireless security cameras in the same environment to maintain optimal video frame rate performance.

 
NOTE: The receiver included does not support an extension to a range extender antenna. Should you require a wireless range extension, an accessory kit including an extendable receiver and wireless antenna is available at www.lorextechnology.com. For details, see "Appendix F: Extending Wireless Range" on page 15.

Powering Multiple Receivers Using The Power Splitter Cable (LW2110PK2 only)

The power splitter cable allows you to connect two receivers to one power adapter.

To connect the power splitter cable to the receivers:

- 1 Connect the power adapter to the power splitter cable (see Figure A below).
- 2 Connect the ends of the power splitter cable to each of the receivers.
- 3 Connect the power adapter to a 120V power outlet.

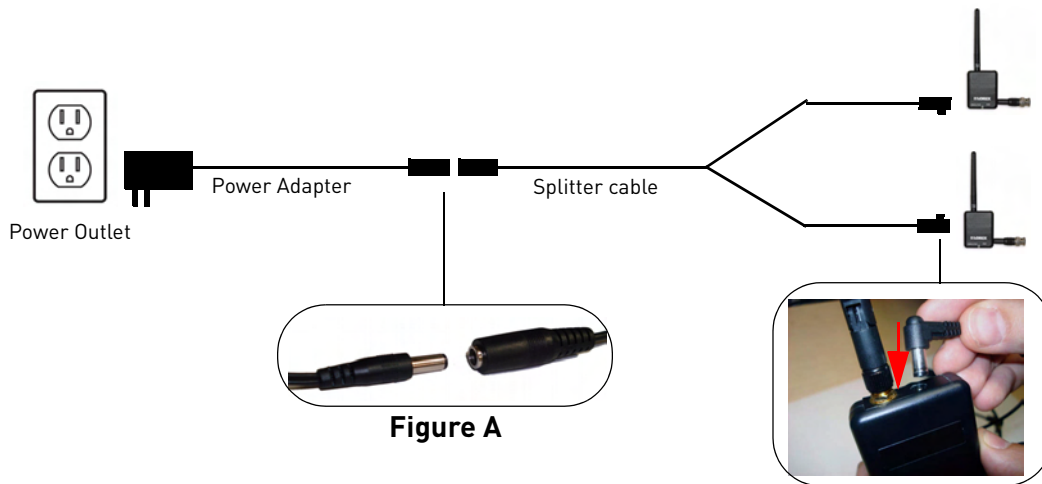

On-Screen Display



Signal Indicator



Status Indicator

- 1 **Signal Indicator:** The signal indicator shows the strength of the signal being received from the camera. The number of bars in the signal indicator shows the strength of the signal. One or no bars indicates the signal is poor. Four bars indicate a very strong signal.
- 2 **Status Indicator:** The status indicator message "Connecting" appears when the receiver is trying to locate a camera.

ATTENTION: If the signal is low (e.g. 1 or 2 bars) adjust the antennas, or reposition the camera or receiver to improve signal strength.

 
Pairing Cameras

IMPORTANT


The camera and receiver have already been pre-paired at the factory, which means that they are exclusively communicating with each other. If for some reason the pairing is lost, follow these steps to pair up the camera and receiver.

To pair the camera to the receiver:

- 1 Make sure that the camera and receiver are both powered up.
- 2 On the receiver, press and hold the **Pairing** button for 5 seconds to activate pairing function.
 - The on-screen displays informs you that you have 30 seconds to press the pair button on the camera.

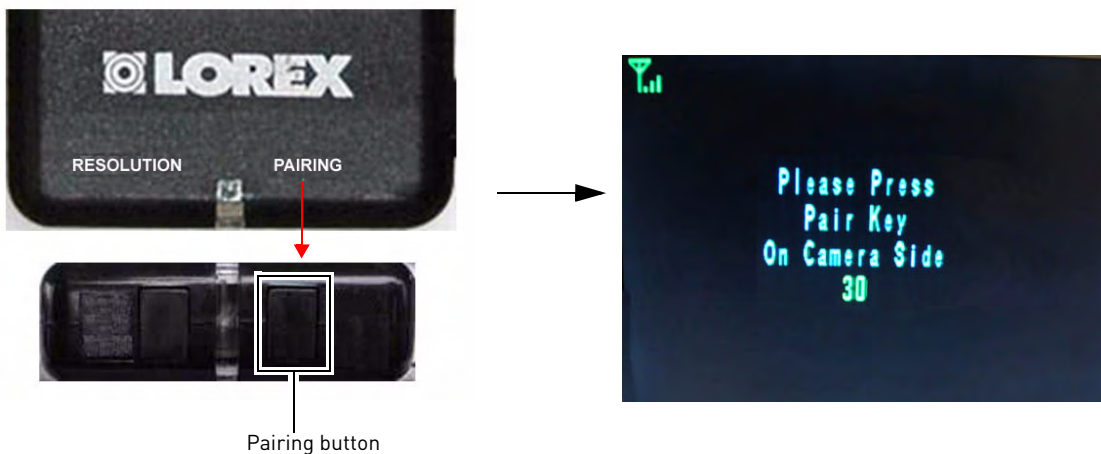

 - 3 Press and hold the **Pair** button underneath the antenna on the back of the camera. You must press the Pair button on the camera within 30 seconds of pressing the Pair button on the Wireless Receiver. If pairing is successful, live video from the camera will immediately appear on the monitor.

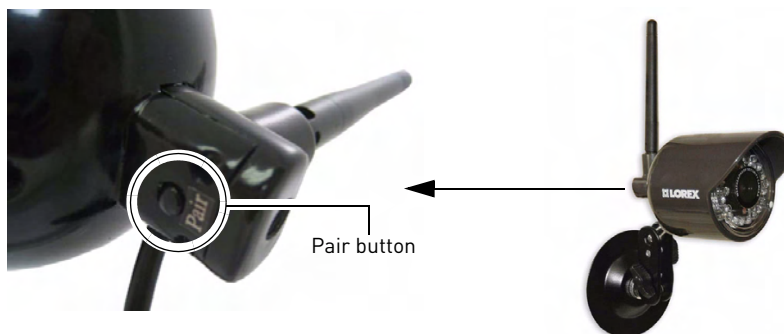

Appendix A: System Specifications

Receiver Specifications

Receiver	
Receiving Frequency Range	2.400GHz-2.480GHz
RX Sensitivity	-81dBm
Demodulation	GFSK
Data Rate	160 Kb/s
Supported Resolutions	VGA [640x480] up to 12 FPS or QVGA [320x240] up to 25 FPS
Power Requirement	12Vdc +/-10%
Power Consumption	200mA Max
Operating Temp Range	14°F - 122°F -10° - 50° C

FPS = Frames Per Second

Camera Specifications

Camera	
Transmitting Frequency Range	2.400GHz-2.480GHz
TX Power	16dBm
Data Rate	160 Kb/s
Modulation	GFSK
TX Range	150ft [46m] indoor / 450ft [137m] outdoor
Image Sensor Type	1/4" Color CMOS Image Sensor
Effective Pixel	H: 640, V: 480
Image Processing	Motion JPEG
Image Resolution	Up to 640 x 480 [VGA]
Lens	5.1mm F2.8
Viewing Angle	50° [H]
AGC	0n
AES	1/60-1/62500 Sec.
Power Requirement	12Vdc +/-10%.
Power Consumption	200mA Max with IR LED, 100mA Max without IR LED.
Operating Temp Range	14°F - 122°F -10° - 50° C
Environment Rating	IP66
Built-in IR LED	18 Units of IR LED [850nm type] for Night Vision
Built-in Auto IR Turn On/Off	CdS Drive Auto IR LED turn On/Off Circuit

Appendix B: About Digital Wireless Technology

The Digital Wireless signal transmission type used by the Lorex LW2110 is also known as **FHSS -Frequency Hopping Spread Spectrum**. This type of signal results in a private, interference-free signal.

The 2.4GHz (2.400-2.480Ghz) band is being divided into sections or paths of 2MHz per section, and each second the transmission signal hops hundreds of times in a specified sequence within this frequency range. The overall bandwidth required for frequency hopping is much wider than 2MHz however because transmission occurs only on a small section of this bandwidth at any given time, the signal being transmitted does not suffer from greatly reduced signal degradation and also avoids blocked paths other devices who act as sources of competing signals. The strength of the signal being transmitted is set to be from 13.5-16dBm, which is much higher than the analog transmission signal allowed by authorities around the globe.

When an image is captured by the camera it is instantly converted from an analog to digital signal and packaged into small packets. With each successful transmission via the 2 MHz paths discussed above, the packets of information containing images are delivered to the receiver and decoded into analog information. The information can then be displayed on devices that are connected to the wireless receiver (RX).

A device pairing process is required to synchronize the transmitter (TX, Camera) and the receiver (RX). This allows the transmitter and receiver to be on the same frequency and use the same algorithm for frequency hopping. This ensures that only the paired transmitter and receiver can maintain communication signal by hopping to the same frequency paths at the exact same time. As a result, the chance that other devices within the same frequency range are on the same frequency, at the same time and in the same order is vastly reduced. Note that the pairing process is already done at the factory for products that ship within the same packaging. Only when add-on devices are purchased is a pairing process required.

Appendix C: Facts About Digital Wireless Cameras

Wired VS Wireless Cameras

A **wired camera** has a video cable that transmits the video signal from the camera to a recording or viewing device.

A **wireless camera** does not use a video cable. Instead, it wirelessly transmits the video signal to a wireless receiver that is connected to your recording or viewing device. Although the typical digital wireless camera is priced slightly higher than a wired camera, wireless cameras can provide cost savings compared to standard wired setups. For example, wireless cameras do not require cabling to be run between the camera and the viewing / recording device, which reduces installation time and cost.

Does a wireless camera require power?

Yes. Wireless cameras require two power sources: one connected to the camera, and the other to the receiver.

 
How far can a wireless camera transmit a video signal?

In an open field (with line of sight), a typical wireless camera has a range between 250 to 450 feet. In a closed environment---such as an interior of a house---the wireless camera range is between 100 to 150 feet. The signal range varies depending on the type of building materials and/or objects the wireless signal must pass through.

Cubical walls, drywall, glass, and windows generally do not degrade wireless signal strength. Brick, concrete floors and walls degrade signal strength¹. Trees that are in the line of sight of the wireless camera and receiver may impact signal strength.

The signal range also depends on whether there are competing signals using the same frequency as the camera. For example, signals from cordless phones, routers may affect signal strength.

Range Limiting Factors¹

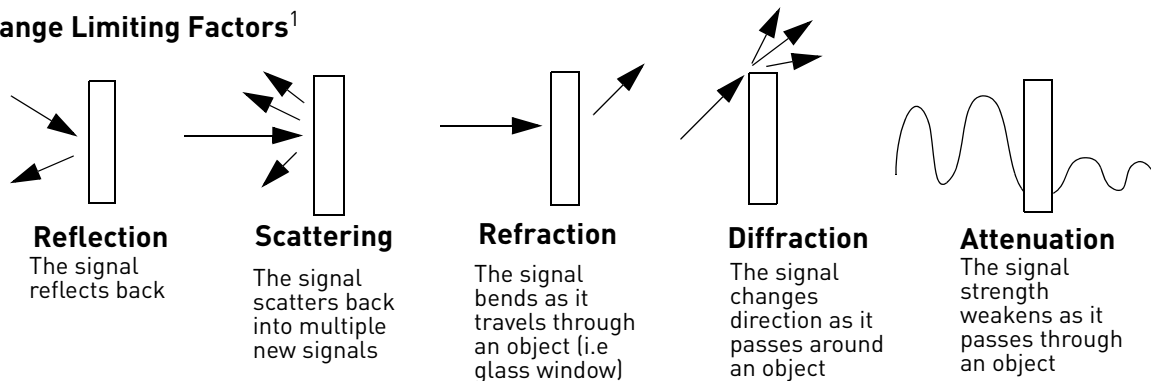

¹Source: Xirrus (2010). "Wi-Fi Range Dynamics". Retrieved online at http://xirrus.gcsmarket.com/pdfs/Xirrus_Wi-Fi_Range.pdf


Signal Reduction Through Materials

Signal strength decreases as it passes through different types of material. Try to position your wireless camera and receiver in a location that does not pass through metal, or concrete blocks, which can significantly reduce signal strength (as shown in the table below).

Material	Signal Reduction (%)
Plaster & Wood	10 - 30%
Brick	30 - 50%
Concrete Cinder Blocks	50 - 70%
Metal & Metal Cladding	70 - 90%

NOTE: Signals that must pass through wet or moist materials (i.e. shrubs and trees) may be significantly reduced.

 The stronger the signal strength, the higher the video frame rate. The lower the signal strength, the lower the video frame rate.

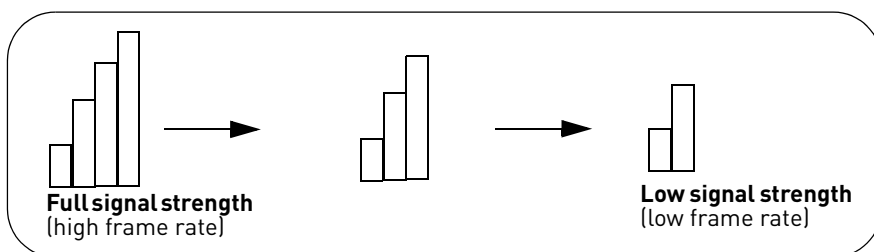

Are Digital Wireless Camera Signals Secure?

Yes. Lorex digital wireless products feature a wireless transmission method called FHSS –Frequency Hopping Spread Spectrum.

This type of signal is highly resistant to eavesdropping as it generates a channel hopping sequence using an algorithm generated by the receiver, which only the camera can follow through the "pairing" function. FHSS makes digital wireless signals secure, private, and interference free.

How many frames per second should I expect from a digital wireless camera?

Current Lorex digital wireless cameras offer 10 - 30 FPS (Frames Per Second) performance. Actual frame rate depends mainly on signal strength and resolution (see the chart above). Most digital wireless cameras support one or both of the following resolutions: QVGA, and VGA.

QVGA produces video at up to 30 FPS at 320x240 resolution.

VGA produces video at up to 10-12 FPS at 640x480 resolution.

How many wireless cameras can I install?

It is recommended to install a maximum of 4 (four) wireless cameras per system.

Appendix D: Troubleshooting

If you have problems with your System, there is often a quick and simple solution. Please try the following:

Problem	Solution
There is no picture from a camera	<ul style="list-style-type: none"> • Check power to the camera. Make sure the adapter is plugged in properly. • Move the camera closer to the receiver.
The picture is dropping	<ul style="list-style-type: none"> • Move the camera closer to the receiver. • Try repositioning the camera, receiver, or both to improve the reception.
The picture is or has become choppy	<ul style="list-style-type: none"> • The picture may become choppy when experiencing a lower frame rate (e.g. 6 frames per second vs. a higher 12 frames per second). <ul style="list-style-type: none"> • Try moving the camera closer to the receiver. • Remove obstructions between the receiver and camera. • Try switching to QVGA mode. Resolution will be reduced but video frame rate will increase.
The picture appears to be unsharp	<ul style="list-style-type: none"> • When viewing on a large screen TV or monitor (especially high-definition televisions), the picture might seem unsharp as the camera is limited to VGA resolution (640x480 pixels), while the TV or monitor supports a much higher resolution. • For best performance, use with TV/monitor PIP (Picture in Picture) function. Check your TV/Monitor product manual to see if this feature is available on your TV/Monitor.
The picture is white	<ul style="list-style-type: none"> • Common situation known as "washout" or "white wash" where a strong light source is pointed at the camera lens. The camera lens is not harmed during a white wash. • Do not point your camera towards a light source.
The picture is pixelated	<ul style="list-style-type: none"> • You may be in QVGA mode. Try switching to VGA mode by pressing the Resolution button on the receiver.

Appendix E: Frequently Asked Questions

Q: What is the maximum distance I can have between the camera and the receiver?

A: Typically 450 feet (137 m) with a clear line of sight in open space, or approximately 150 feet (46 m) in a house. Walls, studs, furniture will interfere with the range of wireless transmission.

Q: Why does my "wireless camera" have a power cable?

A: The term "wireless" refers to the lack of a video cable between the camera and the receiver. The camera still requires a power source.

Q: What does 'line-of-sight' mean?

A: 'Line-of-sight' means that there are no obstructions between the camera and receiver. Obstructions include walls, buildings, trees, and certain electronic devices. Materials containing moisture (i.e wet leaves) may also act as an obstruction.

Q: What is pairing?

A: Pairing is an electronic handshake between digital wireless devices. Pairing allows the devices to communicate exclusively with each other.

Q: Can digital wireless cameras be paired to more than one receiver?

A: No. Digital Wireless cameras can only be paired to one receiver. This is to prevent interception by 3rd parties, and prevents any other device from picking up the signal - this also means that you cannot pair one camera to multiple receivers.

Q: How can I extend the wireless range?

A: A range extender kit is available on www.lorexcctv.com. For details, see "Appendix F: Extending Wireless Range" on page 15.


Appendix F: Extending Wireless Range

The receiver included with the LW2110 series does not support range extender antennas. Should you require a wireless range extension, a range extender accessory kit is available.


Wireless range extension should be considered if you experience a low signal strength (1 or 2 signal bars) due to an extended distance between the receiver and camera, or because of objects preventing line of sight between the receiver and camera.

The range extender accessory kit includes a 20ft cable and a higher power indoor/outdoor antenna which allows you to reposition the antenna outdoors for direct line of sight with the camera OR simply to get around objects which are blocking the wireless signal (e.g. metal walls). Find an example below of a typical situation in which a range extender kit is used to achieve line of sight to improve signal strength.

 Example 1: No line of sight

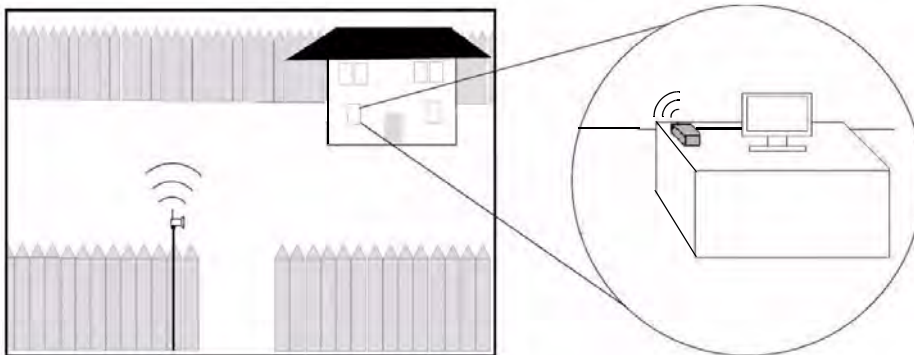

Example 2: Line of sight achieved through use of range extender

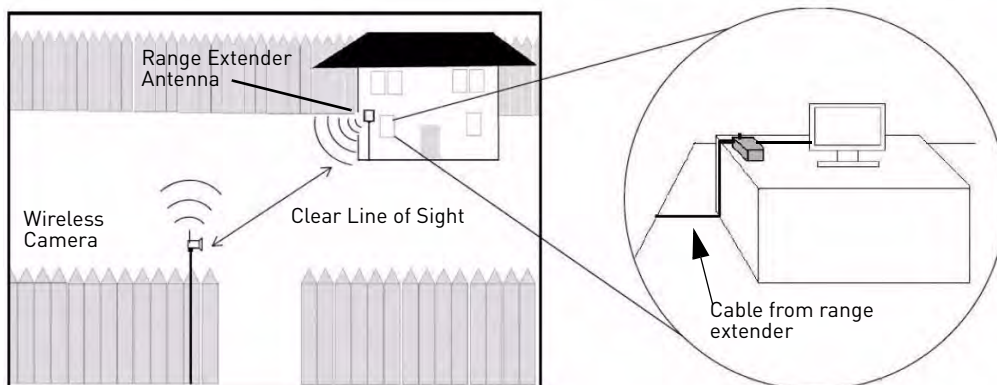 

To order a range extender accessory kit, or to get more information, visit www.lorexcctv.com, and search for **LW2110 Kit**.



LOREX PRODUCT LIMITED WARRANTY

LOREX warrants, to the original retail purchaser only (the "Purchaser"), that this item (the "Product") if properly used and installed, and where applicable, the CD-ROM on which the accompanying software is provided, is free from manufacturing defects in material and workmanship, provided the Product is used in normal conditions and is installed and used in strict accordance with the instructions contained.

This warranty shall be for the following warranty periods (the "Warranty Period"), commencing on the date the Purchaser buys the Product at retail in an unused condition.

Parts and Labor: 1 year (Warranted parts do not include Bulbs, LED's and Batteries)

LOREX's obligations under this warranty shall be limited to

- The repair and/or replacement of the product by means of hardware and/or software (at option of LOREX);
 - The replacement of any warranted parts found by LOREX to be defective in the Product or, in LOREX's sole discretion, the replacement of the Product found by LOREX to be defective.
 - If LOREX is unable to repair or replace the Product or CD-ROM, refund the then-current value of the Product.
- Any replacement parts furnished by LOREX in connection with this warranty shall be warranted to the Purchaser for a period equal to the unexpired portion of Warranty Period for the Product.

Warranty Exclusions

This warranty does not apply to Bulbs, LED's and Batteries supplied with or forming part of the product. This warranty is invalidated if other than LOREX accessories are or have been used in or in connection with the Product or in any modification or repair is made to the Product by other than a service depot authorized by LOREX.

This warranty does not apply to defects or damages arising by use of the Product in other than normal (including normal atmospheric, moisture and humidity) conditions or by installation or use of the Product other than in strict accordance with the instructions contained in the Product's Owner's Manual.

This warranty does not apply to defects in or damages to the Product caused by (i) negligent use of the Product, (ii) misuse, abuse, neglect, alteration, repair or improper installation of the Product, (iii) electrical short circuits or transients, (iv) Purchaser usage not in accordance with product installation, (v) use of replacement parts not supplied by LOREX (vi) improper Product maintenance, or (vii) accident, fire, flood or other Acts of God.

This warranty does not cover the performance or functionality of any computer software included in the package with the Product. This warranty only covers defects in the CD-ROM media such as a broken or a defect in the CD-ROM that would prevent the CD-ROM from being read by your personal computer's CD-ROM drive. LOREX makes no warranty that the software provided with the Product will function without interruption or otherwise be free of anomalies, errors or 'Bugs'. LOREX makes no warranty with regard to any software provided with the Product unless specifically set forth otherwise in a license agreement accompanying such software. This warranty does not cover any costs relating to removal or replacement of any Product, CD-ROM, or software installed on your computer.

LOREX reserves the right to make changes in design or to make additions to or improvements in its products without incurring any obligation to modify any product which has already been manufactured. LOREX will make every effort to provide updates and fixes to its software via its website. This warranty does not cover any alteration or damage to any other software that may be or may become resident on the users system as a result of installing the software provided. This warranty is in lieu of other warranties, express or implied, and LOREX neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale or service of the Product. In no event shall LOREX be liable for any special or consequential damages arising from the use of the Product or arising from the malfunctioning or non-functioning of the Product, or for any delay in the performance of this warranty due to any cause beyond its control.

This warranty shall not apply to the appearance or accessory items including, but not limited to cabinets, cabinet parts, knobs etc., and the uncrating, setup, installation or the removal and reinstallation of products after repair.

LOREX does not make any claims or warranties of any kind whatsoever regarding the Product's potential, ability or effectiveness to prevent minimize, or in any way affect personal or property damage or injury. LOREX is not responsible for any personal damage, loss or theft related to the Product or to its use for any harm, whether physical or mental related thereto. Any and all claims or statements, whether written or verbal, by salespeople, retailers, dealers or distributors to the contrary are not authorized by LOREX, and do not affect this provision of this warranty.

LOREX's responsibility under this, or any other warranty, implied or expressed, is limited to repair, replacement or refund, as set forth above. These remedies are the sole and exclusive remedies for any breach of warranty. LOREX is not responsible for direct, special, incidental, or consequential damages resulting from any breach of warranty or under any other legal theory including but not limited to, loss profits, downtime, goodwill, damage to or replacement of equipment and property and any costs of recovering, reprogramming or reproducing any program or data stored in or used with a system containing the Product CD-ROM or accompanying software.

LOREX does not warrant that the software will operate with any other software except that which is indicated. LOREX cannot be responsible for characteristics of third party hardware or software which may effect the operation of the software included.

The purchaser may have other rights under state, provincial, or federal laws and where the whole or part of any item of this warranty is prohibited by such laws, it shall be deemed null and void, but the remainder of the warranty shall remain in effect.

All expressed and implied warranties are limited in duration to the limited warranty period. No warranties apply after that period. Some states do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above warranty may not apply to you. This limited warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Obtaining Service

In order to obtain service, please make sure that you have registered your product on-line (www.lorexctv.com) in the warranty registration section. Should the Product require service under this warranty, the Purchaser must provide LOREX with a copy of his/ her original, dated bill of sale; receipt or invoice, failing which LOREX will not perform any of its obligations under this warranty. If you return the Product and/or CD-ROM to LOREX, you must assume the risk of damage or loss during shipment. You must use the original packaging or the equivalent, and you must pay postage.

To claim on this warranty, proceed with the following steps.

- 1 Pack the Product in a well-padded sturdy carton.
 2. If the unit was purchased in the United States proceed as follows:
 - a. Please contact our customer service department to obtain a return authorization number.
 - b. Return the unit to:

LOREX Returns
Schenker Logistics
2363 E. Perry Road, Suite 171, Dock Door 44
Plainsfield, IN 46168
 - ii). If the unit was purchased in Canada proceed as follows:
 - a. Please contact our customer service department to obtain a return authorization number.
 - b. Return the unit to:

LOREX Service Center.
250 Royal Crest Court, Markham, Ont. L3R 3S1
 - iii) If the unit was purchased in Europe please visit:

www.lorexinternational.com for return instructions.
- TOLL FREE CUSTOMER SUPPORT**
North America: 1-888-42-LOREX (1-888-425-6739)
Local: 905-940-5355
International: 800-42-LOREX 0 (800-425-67390)
www.lorexctv.com

Always use discretion when installing video and/or audio surveillance equipment especially when there is perceived privacy. Inquire regarding federal, state and/or local regulations applicable to the lawful installation of video and or audio recording or surveillance. Party consent may be required.

GARANTIE LIMITÉE DES PRODUITS LOREX

LOREX garantit à l'acheteur original (ci-après désigné comme étant "l'acheteur") dans un magasin au détail seulement, et que ce produit (ci-après désigné comme étant le "produit"), s'il est installé correctement et - s'il y a lieu - utilisé conformément aux instructions ci-inclues, et le disque CD-ROM qui comporte le logiciel, seront libres de tout défaut de fabrication, tant dans les pièces que la main-d'oeuvre, pourvu que le produit soit utilisé dans des conditions normales et installé et utilisé strictement selon les instructions incluses dans le guide qui l'accompagne.

Cette garantie couvrira la période mentionnée ci-dessous (ci-après désignée comme étant la "période de garantie"), commençant le jour où l'acheteur se procure le produit à l'état neuf dans un magasin au détail.

Pièces et main-d'oeuvre :

1 année (les pièces couvertes n'incluent pas les ampoules, voyants à DEL ni les piles).

Les obligations de LOREX selon les termes de cette garantie se limitent exclusivement aux points suivants :

- LOREX se réserve le droit de réparer ou de remplacer, sa seule discrétion, le logiciel et/ou le matériel.
 - Le remplacement des pièces sous garantie que LOREX estime être défectueuses dans le produit ou le disque CD-ROM ou, à sa seule discrétion, le remplacement du produit jugé défectueux.
 - Si LOREX ne peut réparer ni remplacer le produit ou le disque CD-ROM, rembourser la valeur monétaire du produit ou du disque CD-ROM en cours au moment de l'achat.
- Toutes les pièces remplacées par LOREX seront couvertes pendant la période résiduelle de la garantie dudit produit.

Exclusions de la garantie

Pour obtenir du service, veuillez vous assurer que vous avez inscrit votre produit en ligne (www.lorexctv.com) dans la section d'abonnement à la garantie. Cette garantie ne couvre pas les ampoules, voyants à DEL ni les piles incluses avec le produit ou faisant partie de celui-ci. Cette garantie deviendra nulle si des accessoires autres que ceux vendus ou distribués par LOREX sont utilisés ou ont été utilisés conjointement avec le produit ou si des modifications ou des réparations ont été effectuées au produit par une entité autre qu'un centre de service autorisé par LOREX.

Cette garantie ne s'applique pas aux défauts ni aux dommages survenus suite à une utilisation anormale du produit (incluant des conditions atmosphériques et des taux d'humidité anormaux) ou suite à une installation ou une utilisation du produit autre que celle décrite dans le guide accompagnant le produit.

Cette garantie ne s'applique pas aux défauts ni aux dommages causés au produit suite à (i) une utilisation insouciante du produit, (ii) mauvaise utilisation, abus, négligence, modification ou mauvaise installation du produit, (iii) court-circuits ou transitoires électriques, (iv) tout usage de l'acheteur qui ne correspond pas à l'installation prescrite du produit, (v) l'utilisation de pièces non fournies par LOREX, (vi) un entretien inadéquat du produit, ou (vii) tout accident, incendie, inondation ou autres désastres naturels.

Cette garantie ne couvre pas la performance ni la fonctionnalité de tout logiciel informatique inclus avec le produit. Cette garantie ne couvre pas les défauts que pourrait contenir le support optique (disque CD-ROM) ou magnétique (disquette) tel qu'un CD-ROM brisé ou comportant un défaut qui empêcherait d'être lu adéquatement par le lecteur de disque de votre ordinateur. LOREX ne garantit pas que le logiciel fourni avec le produit fonctionnera sans interruption ni qu'il sera libre de tout défaut, d'erreurs ou de bogues. LOREX ne garantit pas le logiciel inclus à moins que cela ne le soit mentionné spécifiquement dans l'entente de la licence incluse avec le produit. Cette garantie ne couvre pas les frais se rapportant à l'enlèvement ni à la réinsertion de tout produit, logiciel, périphérique ou disque CD-ROM installé sur votre ordinateur.

LOREX se réserve le droit de modifier la conception ou d'apporter des ajouts ou des améliorations à ses produits, sans obligation de sa part de modifier les produits déjà fabriqués. LOREX fera tout en son pouvoir pour fournir des améliorations et des réparations à son logiciel via son site web. Cette garantie ne couvre pas les altérations ni les dommages effectués tout autre logiciel, ni les bogues pouvant résider de façon permanente sur le système de l'utilisateur suite l'installation du logiciel ci-inclus.



Cette garantie a présance sur toutes les autres garanties tacites ou explicites, incluant la garantie en qualité loyale et marchande et les aptitudes visant toute autre obligation ou responsabilité de la part de Lorex, et par les présentes, Lorex n'autorise aucune personne ni entité à assumer pour elle nulle autre responsabilité en rapport avec la vente de ce produit. Lorex ne sera pas tenue responsable, en aucune circonstance, des dommages-intérêts directs ou indirects survenant de l'utilisation du produit ou suite au mauvais fonctionnement ou à l'absence de fonctionnement dudit produit, ainsi que pour tout délai dans l'exécution de cette garantie suite à des circonstances hors du contrôle de Lorex.

Lorex ne garantit d'aucune manière l'apparence extérieure du produit, ni les pièces ou accessoires incluant, mais ne s'y limitant pas, le boîtier, les pièces du boîtier, les boutons, etc., ainsi que le déballage, l'installation, l'enlèvement et la réinstallation du produit après une réparation.

Lorex ne garantit pas et ne fait aucune revendication en ce qui a trait au potentiel, à la capacité ou l'efficacité de prévenir, réduire ou d'une façon quelconque, d'influer sur les dommages à la propriété privée ou sur les blessures corporelles. Lorex ne sera pas tenue responsable des blessures corporelles, dommages à la propriété personnelle, perte ni au vol se rapportant de près ou de loin au produit ou son usage dans un cadre malveillant, qu'il soit physique ou mental. Lorex n'autorise aucunement les représentants, détaillants ou grossistes, à faire des revendications ou des énoncés de la part de Lorex, tant par voie écrite que verbale et ces énoncés n'influent d'aucune manière sur les clauses de cette garantie.

La seule responsabilité de Lorex, selon les termes de cette garantie, qu'ils soient tacites ou explicites, se limite à une réparation, un remplacement ou un remboursement, selon les clauses décrites dans les présentes. Ces recours constitueront les seuls auxquelx a droit l'acheteur pour les bris des clauses de la garantie. Lorex ne sera pas responsable des dommages-intérêts spéciaux, directs ou indirects, qui résulteraient d'un bris des clauses de cette garantie ou de toute autre convention législative, incluant mais ne s'y limitant pas, les pertes de profits, pertes de courant immobilisant des équipements, la valeur ajoutée des biens incorporels, les dommages effectués au produit et à la propriété ou les coûts reliés à leur remplacement, ainsi que les frais de recouvrement, programmation ou reproduction d'un programme ou de données stockées dans un système contenant le disque CD-ROM du produit ou le logiciel qui accompagne celui-ci.

L'acheteur peut bénéficier de certains droits provinciaux ou fédéraux additionnels et toute clause de cette garantie qui soit prohibée par de telles lois sera jugée nulle et sans effet mais les autres clauses demeureront en vigueur.

Lorex ne garantit pas que ce logiciel fonctionnera conjointement avec tout autre logiciel ou suite logicielle, moins que cela ne soit indiqué. Lorex ne sera pas tenue responsable des caractéristiques ni des fonctions du matériel ou des logiciels d'un tiers pouvant entrer en conflit avec le fonctionnement du logiciel ci-inclus.

Toutes les garanties tacites ou explicites se limitent à la durée de la garantie limitée. Aucune garantie ne sera applicable après cette période de temps. Certains états ou provinces ne permettent pas de restrictions en ce qui a trait aux termes d'une garantie tacite, ni d'exclusions aux dommages-intérêts directs ou indirects et il se peut que ces restrictions ne s'appliquent pas à vous. Cette garantie donne à l'acheteur original des droits spécifiques et il se peut que d'autres droits, variant d'un état ou d'une province à l'autre, puissent lui être conférés.

Obtention du service

L'acheteur a besoin de services pour son produit, selon les termes de cette garantie limitée, il doit fournir à Lorex une copie de la facture d'achat affranchi clairement la date et l'endroit où le produit a été acheté. Sans cette preuve d'achat, Lorex ne sera pas dans l'obligation de remplir ses obligations envers l'acheteur. Si vous retournez le produit et/ou le disque CD-ROM à Lorex, vous devez assumer le risque que ceux-ci soient endommagés ou perdus au cours de l'expédition. Vous devez emballer le produit dans sa boîte originale ou un emballage adéquat et vous devez défrayer les coûts d'expédition à l'une des adresses mentionnées ci-dessous.

Pour bénéficier du service sous garantie, vous devez suivre les étapes ci-dessous :

1. Emballez le produit dans une boîte solide et remplie de matériau d'expédition.
2. i) Si l'appareil a été acheté aux États-Unis, suivez ces étapes-ci :
 - a. Veuillez contacter notre département de service à la clientèle pour obtenir un numéro d'autorisation pour le retour.
 - b. Retournez le produit à :
Lorex Returns
Schenker Logistics
2363 E. Perry Road, Suite 171, Dock Door 44
Plainsfield, IN 46168

ii) Si l'appareil a été acheté en Canada, suivez ces étapes-ci :

- a. Veuillez contacter notre département de service à la clientèle pour obtenir un numéro d'autorisation pour le retour.
 - b. Retournez le produit à :
Lorex Customer Service
250 Royal Crest Court, Markham, ON L3R 3S1
- iii) Si l'unité a été achetée dans Europe veuillez visiter : www.lorexinternational.com pour les instructions de retour

COMPOSEZ LA LIGNE D'ASSISTANCE SANS FRAIS AUS CONOMMATEURS:

L'Amérique du nord: 1-888-42-LOREX (1-888-425-6739)

Local : 905-940-5355

International : 800-42-LOREX 0 (800-425-67390)

www.lorexctv.com

Soyez toujours très discret lorsque vous installez des systèmes de surveillance, surtout dans les endroits plus retirés. Informez-vous au sujet des lois et règlements municipaux, provinciaux, fédéraux qui s'appliquent à l'installation d'appareils de surveillance audio et vidéo. Il se peut que le consentement de la partie surveillée soit exigé.

GARANTIE LIMITADA DEL PRODUCTO LOREX

Lorex garantiza, sólo al comprador original al por menor (el "Comprador") que este artículo (el "Producto"), si se usa e instala debidamente, y – si hay lugar - el CD-ROM en el que se proporciona el software asociado, está libre de defectos de fabricación en materiales y mano de obra, sujeto a que el Producto sea usado en condiciones normales y que sea instalado y usado estrictamente de acuerdo con las instrucciones contenidas.

Esta garantía será para los siguientes períodos de garantía (el "Período de Garantía"), a partir de la fecha en que el Comprador adquiere el Producto al por menor en la condición de no haber sido usado previamente.

Repuestos y Mano de Obra: 1 año (Las piezas garantizadas no incluyen bombillas, LEDs y baterías)
Las obligaciones de Lorex bajo esta garantía estarán limitadas a:

- la reparación o el reemplazo del producto por medio de software y/o software (a opción de Lorex).
- el reemplazo de cualquier parte garantizada que Lorex determine que está defectuosa en el Producto o CD-ROM o, por decisión única de Lorex, al reemplazo del Producto que Lorex encuentre defectuoso.
- Si a Lorex no le es posible reparar o reemplazar el Producto o el CD-ROM, se devolverá el valor vigente en ese momento del Producto o CD-ROM.

Se garantizará al Comprador cualquier pieza de repuesto provista por Lorex en conexión con esta garantía por un período igual a la garantía no vencida del Período de Garantía del Producto.

Exclusiones de la garantía

Esta garantía no se aplica a las bombillas, LEDs y baterías suministradas con el producto o que formen parte del mismo.

Esta garantía quedará nula si se han usado accesorios que no son Lorex en el Producto o en relación con el mismo o si se hace alguna modificación o reparación al Producto en algún taller que no sea un local de servicio autorizado por Lorex.

Esta garantía no se aplica a defectos o daños resultantes del uso del producto en condiciones diferentes a las normales (incluyendo condiciones atmosféricas o de humedad normales) o por la instalación o uso del Producto en forma distinta a seguir estrictamente las instrucciones contenidas en el Manual del Propietario del Producto.

Exclusiones de la garantía

Esta garantía no se aplica a las bombillas, LEDs y baterías suministradas con el producto o que formen parte del mismo.

Esta garantía quedará nula si se han usado accesorios que no son Lorex en el Producto o en relación con el mismo o si se hace alguna modificación o reparación al Producto en algún taller que no sea un local de servicio autorizado por Lorex.

Esta garantía no se aplica a defectos o daños resultantes del uso del producto en condiciones diferentes a las normales (incluyendo condiciones atmosféricas o de humedad normales) o por la instalación o uso del Producto en forma distinta a seguir estrictamente las instrucciones contenidas en el Manual del Propietario del Producto.

Esta garantía no se aplica a defectos o daños al Producto causados por (i) uso negligente del Producto, (ii) mal uso, abuso, negligencia, alteración, reparación o instalación incorrecta del Producto, (iii) cortocircuitos o corrientes eléctricas transitorias, (iv) uso por el Comprador que no está de acuerdo con la instalación del producto, (v) uso de piezas de repuesto no suplidas por Lorex (vi) inadecuado mantenimiento del Producto, o (vii) accidente, incendio, inundación u otros accidentes naturales.

Esta garantía no cubre el rendimiento o funcionalidad de ningún software de computadora incluido en el paquete con el Producto. Esta garantía sólo cubre defectos en el material de CD-ROM, tal como roturas o defectos en el CD-ROM que impida que sea leído por la unidad de CD-ROM de su computadora personal. Lorex no garantiza que el software provisto con el Producto funcione sin interrupción o que de otra forma esté libre de anomalías, errores o "bugs". Lorex no ofrece ninguna garantía con respecto a algún software provisto con el equipo a menos que específicamente se establezca de otra forma en un acuerdo de licencia que acompañe a dicho software.

Esta garantía no cubre ningún costo relativo a la remoción o reemplazo de algún Producto, CD-ROM, o software instalado en su computadora.

Lorex se reserva el derecho de hacer cambios en el diseño o hacer adiciones o mejoras a sus productos sin incurrir en ninguna obligación de modificar algún producto que ya haya sido fabricado.

Lorex tratará en lo posible de proporcionar actualizaciones y arreglos a su software por medio de su página en la red.

Esta garantía no cubre ninguna alteración ni daño a algún otro software que pueda ser instalado o pueda quedar instalado en el sistema del usuario como resultado de la instalación del software provisto.

Esta garantía es el reemplazo de otras garantías, expresas o implícitas, y Lorex no asume ni autoriza a ninguna persona a asumir por ella ninguna obligación en relación con la venta o servicio del producto. En ningún caso Lorex será responsable por ningún daño o perjuicio especial o consecuente resultante del uso del Producto o de su mal funcionamiento o incapacidad de funcionar, o por cualquier demora en la atención de esta garantía debida a causas fuera de su control.

Esta garantía no se aplicará a la apariencia o artículos accesorios incluyendo, sin estar limitado a ellos, gabinetes, piezas de gabinetes, perillas, etc., y el desembalaje, instalación, configuración, o remoción y reinstalación del producto después de ser reparado.

Lorex no hace ninguna de cada declaración ni garantía de ninguna clase con respecto al potencial, capacidad o eficacia del Producto para evitar, minimizar o en alguna forma afectar a los daños o lesiones personales o a la propiedad. Lorex no es responsable por ningún daño personal, siniestro o robo relacionado con el Producto o a su uso para cualquier daño, sea físico o mental, relacionado con el mismo. Cualquier afirmación o declaración, sea escrita o verbal, hecha por vendedores, minoristas o distribuidores en sentido contrario no es autorizada por Lorex y no afecta esta disposición de esta garantía.

La responsabilidad de Lorex según esta o cualquier otra garantía, implícita o explícita, está limitada a la reparación, reemplazo o reembolso, como se establece anteriormente. Estas compensaciones son el único y exclusivo remedio por cualquier incumplimiento de garantía. Lorex no es responsable por daños y perjuicios directos, especiales, incidentes, o consecuentes resultantes de algún incumplimiento de garantía o bajo cualquier otra teoría legal, incluyendo pero sin estar limitada a: pérdida de utilidades, paralización, plusvalía, daños o reemplazo de equipos y propiedad y cualquier costo de recuperar, reprogramar o reproducir cualquier programa o datos almacenados o usados con un sistema que contenga el CD-ROM del Producto o el software que lo acompaña.

Lorex no garantiza que el software operará con ningún otro software excepto con el que se indica. Lorex no puede ser responsable de las características de hardware o software de terceras personas que puedan afectar la operación del software incluido.

El comprador puede tener otros derechos de acuerdo con las leyes federales, provinciales o estatales y cuando toda esta garantía o parte de la misma sea prohibida por dichas leyes, será considerada nula, pero el resto de la garantía permanecerá vigente.

Todas las garantías expresadas e implícitas están limitadas en duración al período de garantía limitada. Ninguna garantía se aplicará después de dicho período. Algunos estados no permiten limitación a la duración de una garantía implícita, de modo que esta limitación puede no ser de aplicación. Algunos estados no permiten la exclusión o limitación de daños y perjuicios incidentes o consecuentes, por lo que la garantía anterior puede no ser de aplicación. Esta garantía limitada le otorga derechos legales específicos y usted puede también tener otros derechos que varía de un estado a otro. Cómo obtener servicio

Con el fin de obtener servicio, por favor asegúrese de registrar haber registrado su producto en nuestra página web www.lorexctv.com en la sección de registro de garantía. Si el Producto necesitase servicio bajo esta garantía, el Comprador debe hacer llegar a Lorex una copia del recibo o factura de compra, con su fecha respectiva, sin lo cual Lorex no estará obligada a cumplir con ninguna de sus obligaciones bajo esta garantía. Si devuelve el Producto y/o el CD-ROM a Lorex, debe usted asumir el riesgo de daño o pérdida durante el envío. Debe usar el envase original o equivalente y debe pagar el flete.

Para hacer un reclamo bajo esta garantía, proceda con los siguientes pasos.

1. Empaque el Producto en una caja robusta bien acopiada.
2. i). Si la unidad fue comprada en Estados Unidos proceda en la siguiente forma:
 - a. Para devoluciones por favor contacte nuestro departamento de servicio para obtener un número de autorización
Lorex Returns
Schenker Logistics
2363 E. Perry Road, Suite 171, Dock Door 44
Plainsfield, IN 46168
 - b. Devuelva la unidad a:
Lorex Customer Service
250 Royal Crest Court, Markham, Ont. L3R 3S1
- ii). Si la unidad fue comprada en Canadá proceda en la siguiente forma:
 - a. Para devoluciones por favor contacte nuestro departamento de servicio para obtener un número de autorización.
 - b. Devuelva la unidad a:
Lorex Customer Service
250 Royal Crest Court, Markham, Ont. L3R 3S1
- iii) Si la unidad fue adquirida en Europa y desea devolver el producto por favor visite:
www.lorexinternational.com para obtener instrucciones.

NUMERO GRATUITO DE SERVICIO A CLIENTES:

Norteamérica: 1-888-42-LOREX (1-888-425-6739)

Internacional: 800-42-LOREX 0 (800-425-67390)

Local : 905-940-5355

www.lorexctv.com

Use siempre discreción cuando instale equipo de vigilancia por video y/o audio especialmente cuando se percibe privacidad. Consulte acerca de las regulaciones federales, estatales y/o locales aplicables a la instalación legal de equipos de grabación o vigilancia por video y/o audio. Puede requerirse el consentimiento de las partes.



Enhance your security with genuine Lorex products and accessories.
Order whatever you need at www.lorextechnology.com
or call 1-888-42-LOREX (1-888-425-6739)

Special offer Coupon: **MLLLDCG-CM-OOJICORN**

Parking Lot



LBC6050

Office



LN24001

Restaurant



LDC6050

Drive Way



CVC6950B

Home



LW2702

PROTECT EVERYTHING THAT MATTERS

Add wired or wireless cameras to expand the "Envelope of Protection" for your business, your home and your family

Home Office



LW2902

Convenience Store



LW2110

Front Door



LW2301

Nursery



LW2003

Backyard



LW2201

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>