

MAGELLAN™

MG32WK - User's Quick Reference Guide

KEYPAD OVERVIEW

Indicator Lights

Arm LED (red):

- On = Full armed
- Flash = System in alarm

Stay LED (orange):


- On = Stay armed
- Flash = System in alarm

Ready LED (green):

- On = All zones are closed
- Flash = Exit delay

Rx/Tx LED (orange):

- On = Power of console
- Flash = Transmission/reception in progress

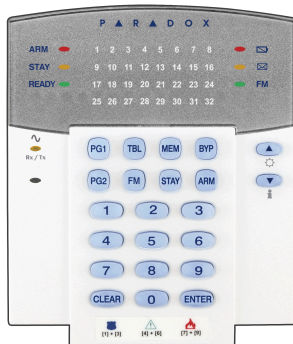

MG32WK

Indicator Lights

LED (red):

- On = Keypad battery charging
- Flash = Keypad battery low

LED (orange):

- Flash = Message waiting


FM LED (green):


- On = FM tuner on

Zone Display:

The numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

Keys

 **key:** Press to refresh the display.

 **key:** Press and hold (3 sec.) to adjust the backlight.

[PG1] key: Press and hold (3 sec.) to control _____

[PG2] key: Press and hold (3 sec.) to control _____

[FM] key: Press to turn the FM tuner on/off.

ARMING AND DISARMING

**TO ARM
WHEN LEAVING...**



**TO ARM
WHEN STAYING...**



To Regular Arm:

1. Close all zones.
2. Enter your [USER CODE].

To Stay Arm:

1. Press the [STAY] key.
2. Enter your [USER CODE].

PANIC ALARMS

To send a silent or audible alarm to your Security Company, press and hold one of the button combinations listed for 3 seconds.

Panic Alarm Type	Button Combinations
Non-medical emergency	Press [1] & [3]
Auxiliary	Press [4] & [6]
Fire	Press [7] & [9]

TROUBLE DISPLAY

When a trouble condition occurs, the [TBL] key will illuminate.

1. Press the [TBL] key. The key will flash and number(s) corresponding to the trouble(s) will illuminate.
2. Read the corresponding explanation of the trouble from the trouble list on the keypad door label.
3. Press the [CLEAR] key to exit.

BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the [BYP] key.
2. Enter your [ACCESS CODE].
3. The corresponding LED of all bypassed zones will illuminate. Select the zone(s) you want to bypass/unbypass by entering the two-digit zone number (i.e. zone 3 = 03).
4. Press the [ENTER] key to save and exit.

ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the [MEM] key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will illuminate.
4. Press the [CLEAR] key to exit.

KEYPAD SETTINGS

To mute the keypad:

Press and hold the [CLEAR] key for 10 seconds to enable or disable Keypad Muting.

To modify the backlight:

1. Press and hold the [☉] key for 3 seconds.
2. Press the [☉] key to set the desired backlight level.
3. Press [CLEAR] or [ENTER] to exit.

© Paradox Security Systems Ltd., 2005-2007. Magellan is a trademark or registered trademark of Paradox Security Systems Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.



paradox.com

PRINTED IN CANADA 03/2007

MG32WK-EQ01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>