 




## 12-CUP COFFEE MAKER

**EWCM11TS12**

**-HOUSEHOLD USE ONLY-**

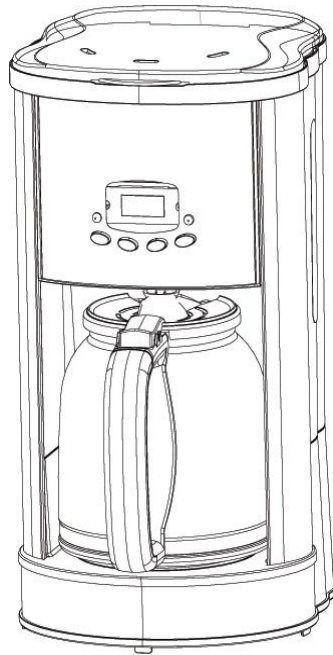

**⚠ CAUTION:**

**BEFORE USE, PLEASE READ AND FOLLOW ALL IMPORTANT SAFEGUARDS, PRECAUTIONS AND OPERATING INSTRUCTIONS.**

## Table of Contents

<b>Safety Instructions</b> .....	<b>3-5</b>
<b>Parts and Features</b> .....	<b>6</b>
<b>Operating Instructions</b> .....	<b>7-9</b>
<b>Cleaning and Maintenance</b> .....	<b>9</b>
<b>Mineral Deposit and Decalcifying</b> .....	<b>9-10</b>
<b>Warranty</b> .....	<b>11</b>

## What You Need to Know About Safety Instructions

Warnings and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining, or operating appliance.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.

### Recognize Safety Symbols, Words, Labels

#### **⚠ WARNING**

**WARNING**-Hazards or unsafe practices which **COULD** result in severe personal injury or death.

#### **⚠ CAUTION**

**CAUTION**-Hazards or unsafe practices which **COULD** result in minor personal injury.

## **IMPORTANT SAFEGUARDS**

#### **⚠ WARNING**

When using electrical appliances, basic safety precaution should always be followed, including the following:

## **IMPORTANT SAFEGUARDS**

- 1) Read all instructions.**
- 2) This appliance is for household use only. Do not use outdoors.
- 3) Do not use this appliance for other than its intended use.
- 4) Before using for the first time, check if voltage indicated on the base of the appliance corresponds to the voltage in your home.
- 5) Do not turn the power on unless this appliance is properly assembled.
- 6) Close supervision is necessary when any appliance is used by or near children.
- 7) Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

Return appliance to authorized service center for examination, repair or adjustment.

- 8) The use of attachments or accessories not recommended or sold by the manufacturer may result in fire, electric shock or injury.
- 9) Unplug the appliance from the outlet when not in use, assembling and disassembling, and before cleaning. Make sure the appliance cools down completely before assembling, disassembling and cleaning.
- 10) Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 11) Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- 12) Do not touch hot surfaces. Use handles or knobs.
- 13) Place the product on a flat, steady, stable, heat-resistant surface.
- 14) Unplug the unit from an outlet when not in use and before cleaning. Allow the unit to cool down before putting on or taking off parts, and before cleaning.
- 15) Never operate the coffee maker without any water in the tank.
- 16) Never use the carafe on a range top or in a conventional microwave oven.
- 17) Never use warm or hot water to fill the water tank. Use cold water only.
- 18) Snap the lid securely to the carafe before serving.
- 19) Do not open the filter lid while coffee is brewing.
- 20) Scalding may occur if the cover is lifted or removed during the brewing cycle.
- 21) Do not set a hot carafe on a wet or cold surface.
- 22) Do not use a cracked carafe, or a carafe that has a loose or weakened handle.
- 23) Do not clean the coffee maker with scouring powders, steel wool pads, or other abrasive materials.



**WARNING:**

**To protect against electric shock, fire, and injury to persons, do not immerse main cord, plug or unit in water or any other liquid.**

**⚠ CAUTION:**

This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician.

 
Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the appliance or any extension cord used with this appliance. Do not attempt to defeat the safety purpose of the polarized plug.

## **IMPORTANT INSTRUCTIONS ABOUT POWER CORD**

1. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
3. If a longer detachable power-supply cord or extension cord is used:
  - A. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
  - B. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

**SAVE THESE INSTRUCTIONS**

## Parts and Features

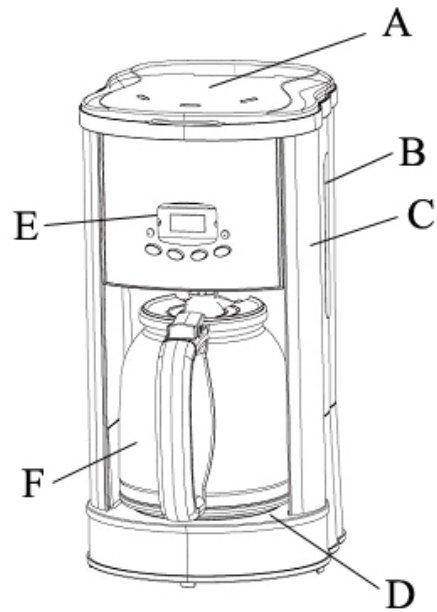

- A. Filter Basket/Water Tank Lid
- B. Visible Water Gauge
- C. Water Tank
- D. Warming Plate
- E. Control Panel with LED
- F. Glass Carafe

### SPECIFICATIONS:

- Voltage Rating: 120V 60Hz
- Power Rating: 1000-Watts
- Maximum Capacity: 12-Cups
- Removable & Washable Filter
- Push Button Control & Timer with LCD

## Before Your First Use

Carefully unpack the coffee maker and remove all packaging materials. Wipe the heating stand with a clean, damp cloth. Do not immerse the heating stand in water or other liquid. To remove any dust that may have accumulated on the removable parts during packaging, wash the carafe, lid and filter basket with warm soapy water. Rinse and dry. We recommend that prior to brewing your first pot of coffee, you "brew" just the cold water without ground coffee or a filter. This will remove any dust that may have settled inside the coffee maker.

## Operating Instructions

### GROUND COFFEE USAGE CHART

<b>Amount of Water</b>	<b>Amount of Ground Coffee <i>Regular Brewed</i></b>	<b>Amount of Ground Coffee <i>Strong Brewed</i></b>
1 serving (6 oz)	1 tablespoon	2 tablespoons
5 servings	1/4 cup	1/2 cup
10-12 servings	1/2 cup	1 cup

### INSTANT COFFEE CRYSTALS USAGE CHART

<b>Amount of Water</b>	<b>Amount of Instant Coffee Crystals <i>Regular Brewed</i></b>	<b>Amount of Instant Coffee Crystals <i>Strong Brewed</i></b>
1 cup (6 oz)	1 rounded teaspoon	2 rounded teaspoons
2 cups	2 rounded teaspoons	4 rounded teaspoons

### IMPORTANT CARAFE USE & CARE

Breakage may occur if the following instructions are not followed:

1. Do not set a hot carafe on a wet or cold surface.
2. Do not use a cracked carafe or a carafe with loose or weakened handle.
3. Do not clean the carafe with cleansers, steel wool pads or other abrasive materials.
4. Discard carafe immediately if it is ever boiled dry.
5. Avoid sharp blows, scratches or rough handling.

### BREWING THE COFFEE

1. Place the coffee maker on a flat, level surface such as a countertop. Plug the coffee maker into an outlet.
2. Push the filter/water tank lid handspike forward to open the water tank lid and fill the water tank with the correct amount of water as indicated on the water gauge.

3. Ensure that the filter basket is properly seated and place the filter into the filter basket.
4. Add coffee ground into the filter. Gently tap the filter basket to distribute the ground coffee evenly.
5. Close the lid and place the carafe on the warming plate.
6. Plug the power cord and press the "ON/OFF" button once. The "RUN" indicator will be illuminated in blue and the appliance will begin the brewing cycle.

**NOTE: This product has pause 'n serve feature. The user may take out the carafe at any time during brewing to stop dripping automatically. However, the time cannot exceed 30 seconds and it is recommended to place the carafe back in position after serving.**

7. Do not open the water tank lid while the coffee maker is operating. The flow back of hot water will damage the appliance.
8. When coffee stops dripping, the brewing cycle is complete. Carefully remove the filter basket and discard the used ground coffee. Rinse the filter basket and replace.

**NOTE: The amount of coffee brewed will be little less than the amount of water put into the tank as some water will be absorbed by the coffee ground.**

9. To keep the coffee warm, return the carafe to the warming place after pouring the coffee.
10. Press the "ON/OFF" button twice to turn the appliance off. The "RUN" indicator will be extinguished. Unplug the power cord from the outlet when the appliance is not in use, left unattended, or when the carafe is empty.

#### TIMER PROGRAMMING

The programming feature allows the users to pre-set the time that the coffee maker will start brewing. A user may set up the programming at night time for a coffee maker to start brewing at certain time in the morning.

1. Follow the instruction #1 ~ 5 from above.
2. Press the "ON/OFF" button twice and the "AUTO" indicator will illuminate in green.
3. Press the "PROG" button and the LCD will display "CLOCK".
4. Set the current time by pressing the "HOUR" and "MIN" buttons. (See Figure 2)

 


Fig. 2

**NOTE: The time cycle is 12 hrs and "AM" & "PM" will transform once it goes beyond 12 hrs setting.**

5. Press the "PROG" button and the LCD will display "TIMER". Set the automatic start time by pressing the "HOUR" and "MIN" buttons. (See Figure 3)



Fig. 3

From the example shown, "AUTO" indicator will be extinguished at 8:15PM and the "RUN" indicator will be illuminated in blue. The appliance will start



automatically. After brewing, the user can replace the carafe on the warming plate.

**NOTE: If the coffee maker is left unattended for two hours after brewing, it will be shut off automatically.**

## **Cleaning and Maintenance**

COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE.

Be sure to unplug the appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or other liquid.

The glass carafe, carafe lid, and filter basket may be washed with warm soapy water, or placed in the top rack of the dishwasher. Do not place any other part or parts of your coffee maker in the dishwasher. The heating plate may be wiped with a clean, damp cloth when necessary. Never use harsh or abrasive cleaners on any part or parts of your coffee maker.

Wipe the appliance's exterior surface with a soft, damp cloth to remove stains.

Never immerse the heating plate or main housing in water or any other liquid. Do not try to clean the inside of the water chamber with a cloth, this will leave a residue of lint and may clog your coffee maker. Just rinse with cold water periodically.

## **Mineral Deposits and Decalcifying**

Mineral deposit build-up frequently occurs in coffee makers. This build-up is quite normal and is caused by minerals commonly found in drinking water. Periodically, your coffee maker will need cleaning to remove any mineral deposits that may form. Excessive steaming or prolonged brewing cycle is a sign that your coffee maker needs decalcifying. During decalcifying, more steaming will occur than while brewing coffee.

1. Lift carafe lid. Pour two tablespoons of white vinegar in the carafe and add cold water and fill up carafe.
2. Pour vinegar/water solution into water tank.
3. Place the glass carafe on the warming plate.
4. Open the filter basket holder and place a coffee filter into the filter basket.
5. Press power button to turn the coffee maker on.
6. Let half of the cleaning solution brew into the carafe, and then press the power button again to turn the coffee maker "Off".
7. Let the coffee maker cool for 15 minutes to soften the mineral deposits.

8. Pour the liquid that brewed into the carafe back into the water tank.
9. Turn the coffee maker on and let all the cleaning solution brew into the carafe.
10. Turn the coffee maker off. Discard the cleaning solution and used coffee filter.
11. Fill the coffee maker with fresh water and follow the steps in the “Before Your First Use” to flush out remaining cleaning solution.
12. Hand wash carafe and lid with hot soapy water. Do not place in dishwasher.

## **SAVE THESE INSTRUCTIONS**

# **EWAVE**

## **Limited Warranty**

This **Ewave** product is warranted, to the original purchaser or gift recipient, to be free from any manufacturing defects under normal use and conditions for a period of one (1) year from the date of purchase as shown on retailer's receipt.

The obligation of **MC Appliance** under this warranty shall be limited to repair or replacement (at our option) during the warranty period, of any part that proves to be defective in material or workmanship under normal installation and use. The product is to be returned to **MC Appliance** or an Authorized Service Center **POSTAGE PREPAID**. A copy of the original receipt along with your name, address and phone number must accompany products returned. Include a description of the defect along with the date you purchased the product.

This warranty shall be invalid if the product is damaged as a result of misuse, abuse, negligence, defacement, destruction, accident, fire or other casualties or alterations in any manner. Improper repair, improper use of electrical voltages or currents, alteration of serial number, maintenance by any person or entity other than our own Service Facility or Center, or any use not in conformity with product instruction, shall render this warranty invalid.

**MC Appliance** assumes no responsibility for damage resulting from the use of this product in a manner or location other than that for which it was intended.  
**WARRANTY CONDITIONAL TO NORMAL AND NON-COMMERCIAL USE OF THIS APPLIANCE FOR DOMESTIC USE ONLY.**

For the nearest Authorized Service Center, contact:  
**Ewave** Customer Service: 1-888-775-0202  
Or visit our website at [www.mcappliance.com](http://www.mcappliance.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>