



GRILL

INSTRUCTION MANUAL

Model: MCSGL14ST



THANK YOU FOR PURCHASING A MAGIC CHEF PRODUCT. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

CONTENTS

SAFETY INSTRUCTIONS	3
IMPORTANT SAFEGUARDS	4
PARTS AND FEATURES	6
BEFORE USE	7
OPERATING INSTRUCTIONS	8
CARE AND MAINTENANCE	9
WARRANTY	10

What You Need to Know About Safety Instructions

Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining, or operating appliance.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.

Recognize Safety Symbols, Words, Labels

WARNING

WARNING-Hazards or unsafe practices which **COULD** result in severe personal injury or death.

CAUTION

CAUTION-Hazards or unsafe practices which **COULD** result in minor personal injury.

IMPORTANT SAFEGUARDS

WARNING

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE ALL INSTRUCTIONS BEFORE USING THE GRILL. When using an electrical appliance, basic safety precautions should also be observed, including the following:

- 1. READ ALL INSTRUCTIONS BEFORE USING.**
2. Close supervision is necessary when any appliance is used by or near children.
3. Do not use this appliance other than its intended use. Do not use outdoors.
4. Always ensure the product is unplugged from the electrical outlet and that all parts are stopped before assembling, disassembling, relocating, or cleaning.
5. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquids.
6. Never move the appliance by pulling the power cord. Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break. **DO NOT** let the electrical cord hang over the edge of a table or counter or touch hot surfaces. Do not use the appliance with a damaged outlet.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not plug or unplug the product into or from the electrical outlet with a wet hand. Do not place the base or power cord of this product in or expose to water or other liquids.
9. The cover must be securely locked and in place before operating the appliance. Never, under any circumstances, try to remove or force open the cover while the appliance is operating.
10. Stand the appliance on a surface that is flat, stable, and heat resistant.
11. Do not touch hot surfaces. Use handles or knobs and use protective oven mitts or gloves. Use only heat resistant wooden or plastic utensils to add or remove food.
12. Do not place the product on or near a hot gas or electric burner, or inside or on top of a heated or microwave oven. Never use the appliance near hot surfaces.
13. Keep at least 4 to 6 inches of open space on all sides in well ventilated area.
14. Take proper precautions to prevent the risk of burns, fire, or other personal or property damage. This appliance generates heat and/or steam during use.
15. Do not leave the appliance unattended while it is in use. Always unplug the appliance from the electrical outlet when not in use.
16. Do not operate the product if it has a damaged or cut power cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the motor housing is dropped in or exposed to water. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing.

Notes on the cord plug

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only in one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Notes on the cord:

- A. A shorter power-supply cord (or detached power-supply cord) is provided to reduce the risk resulting from being entangled in or tripping over.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cords or extension cord is used:
 - 1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least equal or greater than the electrical rating of the appliance.
 - 2. If the appliance is a grounded type, the extension cord should be a grounding-type 3-wire cord.
 - 3. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

WARNING:

To protect against electric shock, fire, and injury to person(s), do not immerse main cord, plug, or unit in water or any other liquid.

CAUTION:

Do not use an extension cord with this appliance. If necessary, an extension cord must have compatible rating for power and voltage. Do not modify the plug and extension cord with this appliance; including 3 prong grounded plug.

PARTS AND FEATURES



SPECIFICATIONS:

- Voltage Rating: 120V 60 Hz
- Power Rating: 1300 Watts
- Cooking Surface: 14" Diameter

BEFORE USE

1. Carefully unpack the Grill making sure that all packaging materials are removed.
2. Wash the Grill (pan, outer housing, drip tray and lid) in warm soapy water, rinse, and allow to dry thoroughly to remove any dust that may have accumulated during packaging.
3. Do not use harsh or abrasive cleansers
4. Spread 2 tablespoons of vegetable oil with a soft cloth or paper towel over cooking surface to condition the nonstick surface.
5. Turn the temperature to “Low”.
6. When the Grill has reached its temperature, turn off the unit and allow it to cool completely.

CAUTION: Do not use abrasive or harsh cleaners on any part or parts of the Grill. Do not allow temperature control probe or plug to contact water or other liquids.

OPERATING INSTRUCTIONS

CAUTION: Touch only the outer portion of the lid handle.

The Knob on the Lid:

1. Position the knob over the hole on the lid.
2. Place plastic washer on the screw and tightly screw through the hole on the bottom side of the lid.
3. Periodically make sure that the screw is tight.

The Grill Pan:

1. Place Grill pan into the housing making sure that the power receptacle fits into the opening on the outer housing.
2. Push the Grill pan down until it locks (snap sound is an indication that the Grill pan is locked in)

The Thermostat Control:

1. Be sure that the control is in an "Off" position.
2. Insert the Thermostat Control into the unit and plug the power cord into a wall outlet.

Grease Tray

1. Place grease tray in its appropriate position.

NOTE: Use only heat-resistant, non-metal utensils to add or remove food. Do not use a metal utensil as it may scratch the surface of the cooking plates. During the initial use, this item may emit some light smoke. This is normal and will subside with further use. For best result, defrost food or allow warming of the refrigerated food to room temperature before cooking.

1. Position the grill on a flat, stable, and heat –resistant surface. Make sure the location provides 4 to 6 inches of air circulation around the grill.
2. Insert the drip tray into the slot under the lower cooking plate.
3. If desired, lightly coat the surfaces of the cooking plates with cooking oil, shortening, or cooking spray.
4. Place the lid securely on the unit.
5. Plug the power cord into the electrical outlet; the power indicator light will illuminate on the control
6. The indicator light will run turn off once the grill pan has reached a set temperature.
7. Please Note that the indicator light will turn on and off during operation indicating that a proper temperature is being maintained.
8. After preheating the Grill for 5 minutes, open the lid and place the food on the Grill pan by using heat-resistant, non-metal utensils. Close the lid.

9. When the food is cooked as desired, lift the lid and remove the food with cooking appropriate cooking utensils. Close the lid to preserve heat when cooking more food.

NOTES: Cooking times for meat, poultry, or fish will vary according to its size and thickness. Make sure meat, poultry, or fish is cooked thoroughly by using an instant-read cooking thermometer (not included). Food containing fat may smoke when cooked. Position the Grill near an exhaust fan while using the appliance.

10. When cooking is complete, unplug the power cord from the electrical outlet.

CAUTION: Wait until the Grill cools completely before moving the appliance or removing the drip tray for cleaning.

11. Clean as directed in "CARE AND MAINTENANCE."

CARE AND MAINTENANCE

WARNING: Always make sure the grill is unplugged from the electrical outlet and completely cool the appliance before relocating, adding or removing parts, or cleaning the appliance.

CAUTION: Do not use abrasive cleaners or sponge on the grill.

1. Clean the grill pan and the Grease tray after each use.
2. Remove the grease tray and dispose contents. Place the drip tray on the top rack of a dishwasher or hand wash in warm, soapy water.
3. Clean the grill pan and exterior surfaces by wiping them with a water-dampened sponge or cloth. Make sure grill pan holes leading to the drip tray are cleaned and without drip contents.

WARNING: Do not immerse the Grill in water or any other liquid. Do not place the Grill in a dishwasher.

4. Store the Grill in a cool, dry location.



LIMITED WARRANTY

Unless otherwise prohibited, MC Appliance Corporation warrants each **GRILL MCSGL14ST** to be free from defects in material and workmanship and agrees to remedy any such defect or to furnish a new part(s) (at the company's option) of the unit that fails during the warranty period. **A copy of the dated sales receipt or invoice is required to receive warranty service or a refund.**

This warranty covers an appliance in use within the continental United States, Puerto Rico and Hawaii. The warranty does not cover the following:

- Damages due to shipping or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Repairs performed by unauthorized service agents.
- Service calls that do not involve defects in material and workmanship such as instruction on proper use of the product or improper installation.
- Failure of this product if used for other than for its intended purpose.
- Disposal costs for any failed unit not returned to our factory.
- Any delivery costs incurred as the result of a unit that fails to perform as specified.

This warranty is in lieu of any and all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without prior written consent from MC Appliance Corporation.

Model	Parts & Labor	Type of Service
MCSGL14ST	One-Year	Carry-In

For Service or Assistance please call

888-775-0202

Or visit us on the web at www.magicchef.com to request warranty service

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>