



# PIZZA OVEN

## INSTRUCTION MANUAL

Model: MCSPZO12ST



THANK YOU FOR PURCHASING A MAGIC CHEF PRODUCT. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

# CONTENTS

- SAFETY INSTRUCTIONS ..... 3**
- IMPORTANT SAFEGUARDS ..... 4**
- PARTS AND FEATURES ..... 6**
- BEFORE USE ..... 7**
- ASSEMBLY ..... 8**
- OPERATING INSTRUCTIONS ..... 9**
- CARE AND MAINTENANCE ..... 9**
- WARRANTY ..... 10**

# What You Need to Know About Safety Instructions

Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining, or operating appliance.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.

## Recognize Safety Symbols, Words, Labels

### **WARNING**

**WARNING**-Hazards or unsafe practices which **COULD** result in severe personal injury or death.

### **CAUTION**

**CAUTION**-Hazards or unsafe practices which **COULD** result in minor personal injury.

## **IMPORTANT SAFEGUARDS**

### **WARNING**

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# IMPORTANT SAFEGUARDS

**CAUTION: This appliance produces heat during use. Proper precautions must be taken to prevent risk of burns, fire or other injury to persons or damage to property.**

When using electrical appliances, basic safety precaution should always be followed, including the following:

**1. READ ALL INSTRUCTIONS.**

2. This appliance is for household use only. Do not use outdoors.
3. Before using for the first time, check if voltage indicated on the base of the appliance corresponds to the voltage in your home.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
6. The use of attachments or accessories, not recommended or sold by the manufacturer, may result in fire, electric shock, or injury.
7. When not in use, or assembling and disassembling, or before cleaning, unplug the appliance from the outlet. Make sure the appliance cools down completely before assembling, disassembling and cleaning.
8. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
9. Do not touch hot surfaces of the appliance. Use handles or knobs.
10. Leave about 6 to 8 inches of open space around the exterior of this appliance.
11. Do not place anything on top of this appliance.
12. Do not operate the appliance on a wall-mount, shelf, or near flammable materials such as blinds, curtains, etc.
13. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create fire or risk of electric shock.
14. This appliance should be operated on a separate electrical circuit from other operating devices.
15. Do not store anything inside the oven.
16. Do not cover the crumb tray or any part of the oven with metal foil. This overheats the appliance.
17. Do not clean with metal scouring pads.
18. Do not place on or near a hot gas or electric burner, or in a heated oven.
19. Use the handle when sliding food rack into the oven.

## Notes on the Cord Plug

This appliance has a polarized plug. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only in one way. If the plug does not fit fully into an electrical outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A. A shorter power-supply cord (or detached power-supply cord) is provided to reduce the risk resulting from being entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cords or extension cord is used:
  - 1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least equal or great than the electrical rating of the appliance.
  - 2. If the appliance is a grounded type, the extension cord should be a grounding-type 3-wire cord.
  - 3. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

### **WARNING:**

To protect against electric shock, fire, and injury to person(s), do not immerse main cord, plug, or unit in water or any other liquid.

### **CAUTION:**

Do not use an extension cord with this appliance. If necessary, an extension cord must have compatible rating for power and voltage. Do not modify the plug and extension cord with this appliance; including 3 prong grounded plug.

# PARTS AND FEATURES



1. Food Rack Cover
2. Handle
3. Food Rack
4. Crumb Tray
5. Timer

## Specifications

- Voltage Rating: 120V 60 Hz
- Power Rating: 1450 Watts
- Maximum Capacity: 12 Inch Diameter

## Features

- Stainless Steel Housing
- Cool Touch Handle
- 30 Minute Timer
- Removable Crumb Tray

# BEFORE USE

**WARNING: The oven surface will become hot during and after use. Keep your hand safe by not touching the surface.**

Wash all oven accessories with mild dish detergent and rinse thoroughly with clean water. Dry all accessories before reassembling. Do not immerse the Pizza Oven in water or other liquid.

- A. Carefully unpack the Pizza Oven and remove all packaging materials.
- B. Select a flat, heat-resistant, non-flammable surface to place the Pizza Oven.
- C. To remove any dust that may have accumulated during packaging, clean the surface with a damp cloth and remove any stickers (except for any warning/caution stickers).
- D. Before the first use, heat up the Pizza Oven empty for at least 10 minutes. This will burn off the brand new scent. A little smoke is normal and will disappear soon during use.

# ASSEMBLY

## Crumb Tray

1. Remove the crumb tray from the Pizza Oven.
2. Using one small screw and one black knob enclosed in the parts bag, hold the black knob to the outside of the crumb tray at the center hole and push small screw and tighten.
3. Slide completed crumb tray assembly back into its original position in the Pizza Oven.

## Handle Assembly

1. Remove food rack cover and food rack from the Pizza Oven.
2. Lay the food rack on a stable countertop with loop facing up and slightly over the edge of the counter.
3. Slip the slot on the front of the food rack cover over the loop so the food rack cover rests flat against the food rack.
4. Take the handle assembly and rotate the handle and bracket so they lie flat. Lay the bracket slot over the food rack loop on top of the food rack cover.
5. As a single unit, simultaneously rotate the handle and the food rack cover towards you.
6. Using provided parts, slide the large bolt through the round hole, capturing the loop, handle bracket and the food rack cover. Thread the thumb nut onto the large bolt from the opposite of the food rack and tighten.
7. Rotate the assembled handle down and slide the completed food rack back into its original position in the Pizza Oven.

### **WARNING:**

Improper assembly of the handle to the food rack could cause the food rack to rotate and fall when food is removed from the Pizza Oven. Do not attempt to grab hot foods with bare hands when removing food from the Pizza Oven.



# OPERATING INSTRUCTIONS

**CAUTION: Oven can cook pizza size up to 12 inches. Do not bake rising dough crust pizzas in the Pizza Oven.**

1. Slide the food rack out from the Pizza Oven.
2. Place the pizza on the food rack.
3. Slide the food rack into the Pizza Oven.
4. Set the timer to desired bake time to start baking. Remember to set the timer over 2 minutes in order to activate the timer.
5. Average baking time is 8 to 12 minutes depending on crust size, topping, and personal taste preferences.
6. Check the pizza midway through baking. If necessary, rotate the pizza to ensure even baking.

# CARE AND MAINTENANCE

**CAUTION: Pizza Oven has sharp surrounding edges on the unit and the crumb tray. Use proper caution when cleaning or operating the unit.**

- A. Allow the Pizza Oven to cool before cleaning.
- B. To clean the crumb tray, remove and rinse with warm soapy water.
- C. Use soft cloth to wipe dry the crumb tray before placing it back in the Pizza Oven.
- D. Proper cleaning and maintenances will reduce the risk of food accumulation that may cause smoke or carbon build-up.



### LIMITED WARRANTY

Unless otherwise prohibited, **MC Appliance Corporation** warrants each **PIZZA OVEN MCSPZO12ST** to be free from defects in material and workmanship and agrees to remedy any such defect or to furnish a new part(s) (at the company's option) of the unit that fails during the warranty period. **A copy of the dated sales receipt or invoice is required to receive warranty service or a refund.**

**This warranty covers an appliance in use within the continental United States, Puerto Rico and Hawaii. The warranty does not cover the following:**

- Damages due to shipping or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Repairs performed by unauthorized service agents.
- Service calls that do not involve defects in material and workmanship such as instruction on proper use of the product or improper installation.
- Failure of this product if used for other than for its intended purpose.
- Disposal costs for any failed unit not returned to our factory.
- Any delivery costs incurred as the result of a unit that fails to perform as specified.

**This warranty is in lieu of any and all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without prior written consent from MC Appliance Corporation.**

| <b>Model</b>      | <b>Parts &amp; Labor</b> | <b>Type of Service</b> |
|-------------------|--------------------------|------------------------|
| <b>MCSPZO12ST</b> | One-Year                 | Carry-In               |

**For Service or Assistance please call**

**888-775-0202**

**Or visit us on the web at [www.magicchef.com](http://www.magicchef.com) to request warranty service**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>