



# VEHICLE CONTENTS PROTECTION MODULE OPERATION MANUAL

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



**Model: ALA95FKE**

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Congratulations on your purchase of Silencer's "**Vehicle Contents Protection Module**". The Silencer **VCPM** was designed to enhance your vehicle's existing security system by providing protection for items inside the passenger's compartment of your vehicle. Typically, a factory installed security system is designed to prevent the theft of the vehicle but it usually will not protect the contents of the passenger's compartment. With the addition of the Silencer **VCPM** your vehicle is protected from theft and the items inside the vehicle are also protected.

To operate your new Silencer Vehicle Contents Protection Module, follow the instructions enclosed.

There are two (2) components of the **VCPM** that you will need to know how to use. The rest of the operation is automatic.

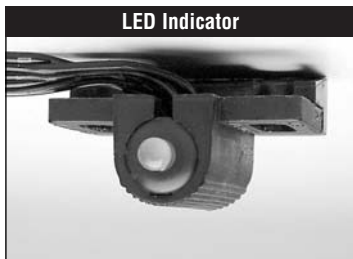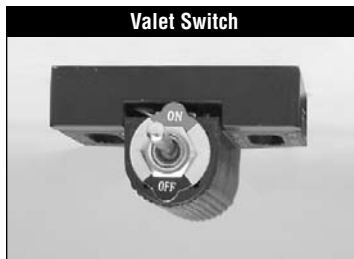

**Note:** In some vehicles the LED and valet switch will be in separate locations while in other vehicles, they will be located together in a housing at the bottom edge of the dashboard.

## Daily Operation

1. The LED indicates to you and others that the **VCPM** is active and protecting the interior of your vehicle when it is flashing.
2. Every time you turn off the ignition of your vehicle, the LED will begin to flash. When the ignition key is on, the LED is off .

## Flashing LED Indicator



## Valet Mode

There may be a time when you want to disable your **VCPM** such as when you give your vehicle to a mechanic or you are getting your car washed.

Putting your **VCPM** into “Valet Mode”:

1. Turn off your ignition key (the LED on the **VCPM** will begin to flash)
2. Locate the valet switch and flip it to the opposite position (The LED will stop flashing and LED will be off).

**Note:** Use of the valet mode will not effect the vehicle security system once it is set off (Triggered). When the vehicle security system is triggered, press the “Unlock” button on your dealer supplied transmitter to disarm the vehicle security system.

Getting Out of Valet Mode:

If you forget to turn your **VCPM** back on, the LED will remind you that the unit is in valet mode. In valet mode, the LED will be ON and NOT flashing every time you turn the ignition key on.

To get out of valet mode, simply locate the valet switch and flip the switch to the opposite position.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>