

 **Marksman**

# Extreme Series

## Owner's Manual

**Model: X9**

For Technical Assistance, please call (800) 638-3600,  
or visit [www.magnadyne.com](http://www.magnadyne.com)

Congratulations on your purchase of a quality Marksman automotive security and remote start system. Marksman security products have been designed to provide the consumer with a technologically superior product and years of trouble free operation. The information enclosed will provide a ready reference of the operation and maintenance of your new Marksman security and remote start system.

## Contents

<b>Remote Control Transmitters / Programming</b> .....	3-6
<b>Alarm Status</b> .....	6-7
<b>System Arming / Disarming</b> .....	8-10
<b>Panic Function</b> .....	10
<b>Anti-Car Jacking</b> .....	11
<b>Speciality Features</b> .....	12
<b>Remote Start Operations / Programming</b> .....	13-15
<b>Second System Operation</b> .....	16

## Warnings

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

- Keep the transmitter out of children's reach.
- Do not leave anyone in the vehicle while running on remote control.
- Alert servicing personnel that the vehicle can be started automatically.
- Do not start the vehicle by remote while it's in an enclosed area.
- Always apply the parking brake and lock the vehicle as you exit the vehicle.
- The vehicle windows must be rolled up.
- Should the unit malfunction, disconnect the fuse until the problem is corrected.
- Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.

## Remote Control Transmitters

The LCD screen on the 2-way remote control displays graphic icons. It provides visual information on any trigger of the sensors and around the clock surveillance of your vehicle, as well as displaying the present status of the system.



2-Way LCD Remote








 



 
 
 


 
 

 


LCD Display Icons






























1-Way Remote

### LCD Remote Icons

 <b>Door Lock</b> Vehicles Doors are Locked	 <b>Timer Control Start</b> Automatic Engine Start (Timed)
 <b>Door Unlock</b> Vehicles Doors are Unlocked	 <b>Power Save Mode</b> Saves The Battery Power when Transmitter is not in Use
 <b>Armed Mode</b> Security System is Armed	 <b>Vibrate Mode</b> Vibrates when Security System is Triggered
 <b>Valet Mode</b> Security System is Disarmed	 <b>Low Battery</b> Replace the Transmitter Battery
 <b>Remote Transmission</b> Transmitting a Signal	 <b>Shock Sensor</b> Shock Sensor Triggered
 <b>In-Range Indicator</b> You are within Remote Control Range	 <b>Ignition</b> Engine Starting by Remote Control
 <b>Door Triggered</b> Doors are Opened (Zone 3)	 <b>Ignition</b> Trigger On Ignition Switch (Zone 5)
 <b>Trunk/Hood Triggered</b> Trunk/Hood are Open	 <b>Engine Running</b> Vehicle Engine is Running
 <b>Warn Away</b> Shock Sensor Triggered (Zone 1)	 <b>Driver Paging / Lost and Found</b> Someone is Paging you from the Vehicle
 <b>Second Vehicle</b> Communicate with a Second Vehicle's Security System	 <b>System Trigger/Panic</b> Alerts that the System has been Triggered




 
### Transmitter Operation


Transmitter Button	System Function	Remark
	Lock Doors & Arms System	
 - 	Arm and Delete the 2-Stage Shock Sensor	Press Twice within 3 Seconds
 - 	Arm System and Hidden Alarm Function	Press within 3 Seconds
	Car Locator	Upon Armed
	Panic Function	Press and Hold for 3 seconds.
 + 	Silent Arming/Disarming	Ignition in "OFF" Position
 + 	Active Anti-Car Jacking Mode	Ignition in "ON" Position, Press and Hold for 2 Seconds
	Unlock Doors & Disarm System	
 - 	Two Steps Door Unlock and Disarm System	Press Twice within 3 Seconds
	Trunk Release - Channel 3	Press and Hold for 1.5 Seconds
 - 	Passive Arming Bypass	While the System is in "Disarmed" Mode
 - 	Activate or Turn Off the Remote Start	Press Twice within 3 Seconds
 + 	Channel #4 Timer Control Output	
 - 	Turbo Timer Mode	
	Second Vehicle System Control	Press Once on 1-Way Remote
 +  (Hold) Then  (Hold)	Enter/ Exit Second Vehicle System Control using the LCD Transmitter	See Page 17 of this Manual for More Details

## LCD Remote Programming
 
### Vibration/Melody Mode




This mode is useful when you are in a noisy place and it is difficult to hear the beep from the transmitter. While in the Vibration/Melody Mode, the transmitter will vibrate if your security system has been activated.


1. Press and hold the  and  buttons at the same time until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the  button to toggle between "ON" or "OFF". The  icon will be displayed in the LCD display when the Melody Mode is On.
3. To exit the Programming Mode, take no action for five seconds. The remote control will generate two long beeps to indicate Programming Mode has been exited.



### Power Save Mode

  While in the Power Save Mode, the LCD remote transmitter will "Sleep" until a button is pushed, extending the life of battery. When Power Save Mode is "OFF", the remote control will wake up periodically to check for messages from the security system.




1. Press and hold the  and  buttons at the same time until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the  button to toggle between "ON" or "OFF". The remote will beep once for "ON", and twice for "OFF". When Power Save Mode is "ON", the **SAVE** icon on the LCD screen indicates entry into Power Save Mode.
3. To exit Programming Mode, take no action for five seconds. The remote control will generate two long beeps indicating Programming Mode has been exited.




### Screen Lamp On



 
Press the  button once, and the LCD screen lamp will turn on for 5 seconds.

### System Status Check

 To check the system's present status through the LCD screen, press the transmitter  button first, then within 3 seconds press  and  buttons at the same time. The response will be one melody sound, and the LCD screen will be illuminated. **Note:** If no response is received, then you are out of range.



### Clear the Flash Icon and Melody Sound

Press the  button first, then within 3 seconds press the  and  buttons at the same time. These steps will clear the flash icon and melody sound on the LCD transmitter.

 
### Stop the Trigger Melody Sound


While triggering the alarm the LCD screen will alert the user through a melody sound and a flashing trigger icon. Press any button on the LCD transmitter to stop melody sound only, and the remote control will not send a command to the system.

### LCD Remote Programming

Press Buttons at the Same Time:	Then Press Button Within:	System Function
🔓 + *	🔒 5 Sec.	Switching to 2nd Vehicle or Returning to 1st Vehicle Operation
🔓 + *	🔒 5 Sec.	Melody / Vibration Mode
🔓 + *	* 5 Sec.	Power Save Mode
🔓		LCD Screen Lamp Turns On for Five Seconds
🔓 + 🔒	🔒 3 Sec.	System Status Check
🔓 + 🔒	* 3 Sec.	Clear the Flash Icon and Melody Sound

### Battery Replacement (Applies to LCD Transmitter Only)

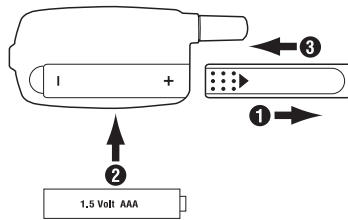

The LCD remote control is powered by a 1.5 Volt AAA Alkaline battery. When the power of the battery weakens the battery icon  will be displayed on the screen. When the old battery is replaced with a new one, there will be a beep to indicate the power is up. To replace the battery, follow the steps in the illustration at left.

**Note:** Press the \* button two times when the battery compartment is empty, then insert the new battery.

### Interference

The transmission range may decrease if the system encounters interference from tall structures or stronger radio frequencies such as high-voltage power lines.

### LED Indicator

LED	Function
OFF	System is Disarmed
Slow Flashing	System is Armed
Fast Flashing	System in Automatic Arming
1 Flash Every 5 Seconds	System in Valet Mode (Ignition Key On or Off)
2 Flashes - Pause	Zone 2, Trigger on Trunk/Hook
3 Flashes - Pause	Zone 3, Trigger on Door Switch
4 Flashes - Pause	Zone 4, Trigger on Shock Sensor
5 Flashes - Pause	Zone 5, Trigger on Ignition Switch

### Parking Light Indicators

Flash	Function
1 Flash	System is Armed
2 Flashes	System is Disarmed
3 Flashes	Disarmed / Triggered
3 or 6 Flashes	Car Locator
Constant On or Flashing	Under Remote Start


### Chirp Indicators

 
Chirp	Function
1 Chirp	System is Armed
2 Chirps	System is Disarmed
3 Chirps	Ajar Warning
4 Chirps	Disarm / Triggered
2,3,6 Chirps	Progressive Car Locator

### System Characteristics

	Siren/Horn	Parking Light	LED	Doors	Starter	Dome Light
1. Arming	1 or 3 Chirps	1 Flash	Slow Flash	Locking	Disabled (Option)	
2. Disarming	2 or 4 Chirps	2 or 3 Flashes		Unlocking		Turns on for 30 Seconds
3. Trigger	Alarming	Flashes	Slow Flash		Disabled (Option)	Flashes
4. Panic	Alarming	Flashes				Flashes
5. Car Jacking	Alarming	Flashes			Disabled (Option)	Flashes
6. Car Locator	2,3,6 Chirps	3,6 Flashes				



## Manual Lock/Arm

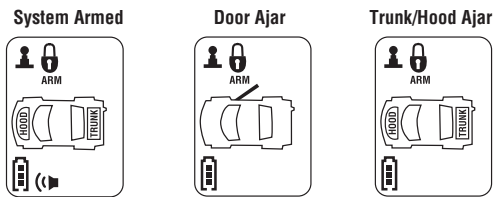1. Press the  button on the transmitter.
2. The siren will chirp once and parking lights will flash once indicating that the system is now armed. The vehicle door will lock upon arming when interfaced with the security system.




**Ajar Warning:**  
If the siren sounds 3 chirps,  
then you have left a door,  
trunk, or hood lid ajar.



### Silent Arming/Disarming

Press the transmitter  and  button at the same time to arm or disarm your security system. No chirp sound will be heard. The arm/disarm confirmation will be through the vehicle's parking lights only.

### Shock Sensor Bypass

Press the  button on the transmitter two times within 3 seconds. This will arm the security system and bypass the shock sensor. The system will chirp one additional time to confirm the sensor Bypass Mode was activated. The sensor bypass feature is programmed to activate for one arming cycle only. The security system will return to normal operation during the next arming cycle.

### Hidden Alarm Function

Press the  button first, within 3 seconds press the  button to activate the hidden alarm function. The security system will arm, but the siren / horn will be silenced even if the sensor is triggered in the armed status.

## Automatic Arming

Manual arming/disarming is controlling your security system via the remote transmitter. This security system is equipped with an optional Automatic Arming feature which allows the security system to arm 30 seconds after the last door is closed. Operation is as follows:

1. Turn the ignition to the "OFF" position and exit the vehicle.
2. After all entrances are closed, the security system LED will flash fast for 30 seconds. If you reopen any Door, Hood, Trunk the security system LED will stop flashing. It will begin flashing again once the vehicle's entrances are closed.
3. After the 30-second timer has elapsed, the security system will automatically "ARM". The siren/horn will chirp once, and the parking lights will flash once.




### Automatic Arming with Automatic Door Locking (Programmable)

The vehicle doors will automatically lock after the passive arming cycle has been completed.




## Automatic Arming (Continued)

 
### Automatic Arming Bypass

While the system is in Disarmed Mode, press the  button twice. The horn/siren will respond with one chirp and the LED will turn "ON". The security system will remain in this mode for as long as you wish. To exit this mode press the  or  buttons and the system will return to normal status.


## Manual Un-Lock / Disarm

1. Press the  button on the transmitter.
2. The siren will chirp twice and parking lights will flash twice indicating that the system is now disarmed. The vehicle door will unlock and the dome light will turn on for 30 seconds upon disarming when interfaced with the security system.


System Disarmed

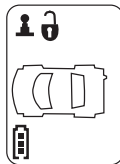


Doors Triggered

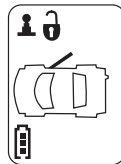 


Trunk/Hood Triggered

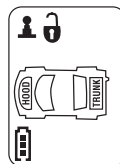 

Shock Sensor Triggered

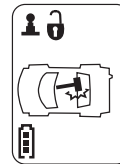 

Ignition Triggered

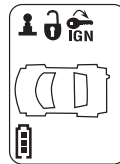 

### Tamper Disarming

If the security system is triggered upon disarm, the siren will chirp 4 times and the parking lights will flash 3 times.

### Pathway Illumination

This feature turns the parking lights "ON" for 30 seconds upon a unlock signal and for 10 seconds upon the lock signal.

### Two Step Door Unlock

This feature will independently unlock the driver's door only when disarming the security system. Pushing the  button a second time within 3 seconds will unlock the other doors.

### Automatic Rearm

If this feature is selected, the security system will automatically rearm itself within 60 seconds after disarming with the remote transmitter. Automatic rearm will cancel if any door is opened before the 60 second timer is up.

## Disarming without a Transmitter



The override function may be used if the remote transmitter is lost or inoperative. Override can be done without password/pin number (this is the factory default setting).

1. Enter the vehicle and turn the ignition switch to "ON" position (alarm will sound).
2. Within 10 seconds push and release the valet switch. The alarm will stop sounding and enter the Disarm Mode. You can now start and operate the vehicle normally.

## RF Valet Mode (Applies to All Transmitter Types)



RF valet mode provides the same functions as manual valet mode but allows you to enter and exit the valet mode using the remote transmitter. When the system is in Valet Mode, all alarm functions and remote start functions are off. However, the remote panic feature and remote door locks remain operational. To enter/exit the RF Valet Mode, repeat the following procedures.

### Enter Valet Mode

1. In the Disarmed Mode, turn the ignition to "ON" position and open the drivers door.
2. Push and hold the  and  transmitter buttons until the door locks cycle "Lock then Unlock".  
The LED will flash every 5 seconds to indicate that the unit is in the Valet Mode.




Note: When the unit is in valet mode, the LCD transmitter  icon will be displayed

### Exit Valet Mode

1. To return to normal operation, turn "ON" ignition.
2. Push and hold the  and  transmitter buttons until the door locks cycle "Lock then Unlock".  
The LED will stop flashing every 5 seconds to indicate that the unit is out of the Valet Mode.

### Progressive Remote Vehicle Locator System

Note: The remote vehicle location system is active 30 seconds after the alarm is armed.


1. Press the  button to active the vehicle locator system. The horn/siren will beep 2 times and the parking lights will flash 3 times. This operation will repeat a second time.
2. Press the  button again within 30 seconds. The horn/siren will beep 3 times and the parking lights will flash 3 times. This operation will repeat a second time.
3. Press the  button again within 30 seconds. The horn/siren will beep 6 times and the parking lights will flash 6 times.

## Manual Valet Mode

Manual valet mode allows you to bypass all alarm functions eliminating the need to hand your transmitter to parking attendants or garage mechanics. This mode is also a necessity if your transmitters become in-operable. When the system is in Valet Mode, all alarm functions and remote start functions are off. However, the remote panic feature and remote door locks remain operational. To enter the Manual Valet Mode, the system must first be disarmed either by using your remote transmitter, or by operating the manual override sequence.

### Enter Valet Mode

1. When in Disarmed Mode, turn the ignition to the "ON" position.
2. Push and hold the valet switch for 2 seconds. The LED will flash every 5 seconds as long as the unit is in the Valet Mode.

Note: When the unit is in valet mode, the LCD transmitter  icon will be displayed



Hold 2 Seconds









### Exit Valet Mode

1. To return to normal operation, turn "ON" ignition.
2. Push and hold valet switch for 2 seconds. The LED will stop flashing, indicating the system has now exited the Valet Mode.

Note: When the unit is out of valet mode, the  icon will be off.

### Panic Feature

The transmitter can be used as a remote panic switch to manually trigger the alarm system in case of an emergency.

1. Press and hold the  button for 3 seconds to enter the Panic Mode (horn/siren will start to sound and parking lights will flash).
2. While in Panic Mode the transmitter  and  buttons can be used to lock and unlock the door (if that option is installed). However, if the  button is pressed, the vehicle's starter disable device (when installed) will be disabled, allowing the vehicle to start.
3. To turn off the panic function, press and hold the  or  button again for 3 seconds.  
**Note:** If any transmitter buttons other than  or  button is pressed the panic function will be turned off.
4. If the panic function is not turned off by the transmitter, it will turn off and reset itself after 30 seconds.

### Domelight Supervision

The Security System has a unique feature for using your vehicle's dome light:


1. Upon disarming the vehicles security system, the interior dome light will remain on for 30 seconds.
2. If the security system is triggered, the dome light will flash for the same duration as the horn/siren.

**Note:** Turn "ON" the ignition switch or arm the system to turn off the dome light.



### Ignition Key Controlled Door Lock/Un-Lock

If the vehicles door locks have been interfaced with the security system, the system will automatically lock the doors when the ignition is turned "ON", or unlock the doors when ignition key is turned "OFF".

### Channel #3 Trunk Release Output

Press and hold the  button for two seconds to activate the trunk release (Channel 3 output) and/or any other devices connected.



### Channel #4 Timer Controlled Output

Press and hold the  and  button at the same time to activate the Channel 4 output. Channel 4 is user programmable timer output. You may program the built-in timer to send a ground signal for any time duration from 1 second to 120 seconds. For example, this timer output may be used to turn on the headlights, power window or sunroof (Factory defaults setting at momentary output.)

## Anti-Carjacking Feature

**Warning:** This security system has a car jacking feature. Its default setting is "OFF". So be sure to enable this feature if you feel it is needed.

### Active Anti-Car Jacking

1. Press and hold the transmitter  and  buttons at the same time for 2 seconds while the vehicle's ignition is "ON". The parking lights will turn on for 1.5 seconds to indicate the system has entered the Anti-Car Jacking Mode.
2. Once the system is armed in the Anti-Car Jacking Mode, the system will trigger when the door is opened and closed while the ignition is "ON".

### Passive Anti-Car Jacking

1. Turn the ignition switch to the "ON" position, and the system will enter the Anti-Car Jacking Mode.
2. Once the system is armed in the Anti-Car Jacking Mode, the system will trigger when the door is opened and closed while the ignition is "ON".

### When the Anti-Car Jacking Feature is Triggered


- A. 50 seconds after the system has been triggered. The siren will start chirping for 15 seconds.
- B. During this 15 second period of chirping, you can push the valet switch once to turn off the car jacking feature.
- C. 65 seconds after the system has been triggered. The siren starts sounding and the parking lights start flashing.
- D. 90 seconds after the system has been triggered:
  1. The siren will still be sounding and the parking lights flashing.
  2. The starter disable will activate to prevent the vehicle from starting.
  3. Anti-Car Jacking Mode will remain active until the override procedure is performed or the vehicle's battery power is exhausted.

 
### Override the System to Turn Off Anti-Car Jacking

Turn the ignition switch from OFF to ON, and within 10 seconds push the valet switch. The siren will stop sounding and the security system is now disarmed.

**Note:** If you use password pin code to double protect the vehicle, you will need to use it to completely disarm the system.



## Driver Paging / Lost and Found (Applies to LCD Transmitter Only)

Driver Paging / Lost and Found is useful the event that someone wants to page the driver of the parked vehicle, or someone cannot find the LCD transmitter. With the ignition switch in the "OFF" position, press and hold the valet switch for 2 seconds to page the driver. One chirp shall be emitted and the paging melody continues sounding from the LCD transmitter and  will flash on the screen.



### Out of Range Indication



If the Out-of-Range Indication feature is activated the system will automatically check the range every 30 minutes after armed.

1. If the user is within the range, the  icon will display on the LCD screen.
2. If user is out of range, the  icon will disappear from the LCD screen and the transmitter will beep 5 times.

**Note:** Activating this feature will decrease the life expectancy of battery.

## REMOTE START OPERATIONS

### Remote Start Your Vehicle Using the Remote Transmitter

 
1. Press the \* button twice on the transmitter.
2. The parking lights will turn on indicating the remote start has received the signal (A melody sound from your LCD transmitter and the  icon will flash on the LCD screen to confirm the remote start was activated.)
3. The engine will start in approximately 5 seconds.
4. Once the engine is running, the parking lights will turn on again after a few seconds, and the climate controls will activate and adjust the vehicles interior temperature to your preset setting. While the vehicle is running, the icon  will flash on the LCD screen indicating the count down timer based on the 5, 10, 20 or 30 minute run-time setup by the installer.
5. The vehicle will run for 5 to 30 minute cycles and automatically shut down. (When the unit shuts off, the count down timer will turn off and the transmitter will play a melody).

**Note:** The Remote Start Unit will not start the vehicle if any one of the following


conditions exists:

1. The hood is opened.
2. The brake pedal is pressed.
3. Move the optional remote start enable toggle switch to OFF position (if installed).
4. The vehicle is in a gear other then "Park" or "Neutral".


### Activate Remote Start




### Engine Running

 

### Safe Start Mode (Child Safety Mode)

If the default method of remote starting has been reprogrammed to Child Safety Mode Operation, to remote start your vehicle is to press the  and the \* buttons at the same time.

**Note:** To turn off the remote start press the  and the \* buttons at the same time.

### Vehicle Operation when Running in Remote Start Mode

1. Insert the ignition key, and turn it to the "ON" position, NOT the "START" position.
2. Press the brake pedal.

**Note:** If the brake pedal is pressed before the key is in the "ON" position, the engine will automatically shut off.

### Temporary Stop Feature

This feature allows the vehicle to remain running after the key has been removed from the ignition. It is useful on occasions when you wish to exit and lock the vehicle for a short period of time, but keep the engine running allowing the climate controls to stay on.

1. Before turning the engine off with the ignition key, press the \* button twice. The LED will flash three times indicating the feature has been activated.
2. Turn the ignition key to the "OFF" position (the engine will stay running).
3. The engine will run until the pre-programmed time has elapsed or shutdown input is received.

## Timer Starting Mode

**Important!** Timer Start should be used only in open areas. Never start or leave a vehicle running in an enclosed area such as a garage or carport.

 
This unit can be programmed to auto-start and run the engine every 2 or 3 hours (3 hours is the default setting). The engine will run for the programmed run time and then shut down. This feature is designed to prevent the engine from freezing in cold climates.

**A Maximum of Six Auto-Start Cycles can Occur.**

## Timer Starting

### Enter Timer Start:

1. Press the \* button twice to remote start the vehicle.
2. As soon as the parking lights have turned on or are flashing, press the ⚙ button once. Then press and hold the \* button. The parking light will flash 3 times, the siren or horn will chirp 3 times and the 🕒 icon will appear on the LCD display. The vehicle is now programmed to start every 3 hours.
3. Press the brake pedal to shut off the engine.

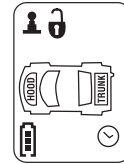

### Exit Timer Start:

1. Make sure the remote start system is not operating the engine.
2. Turn the ignition "ON". The LED and parking lights will flash 4 times. The horn chirps 4 times. The vehicle is no longer programmed to Timer Start automatically.

 
### Or

1. Press the \* button twice to remote start the vehicle.
2. As soon as the parking lights have turned on or flashing, press the ⚙ button once. Then press and hold the \* button. The parking lights will flash 4 times. The siren or horn chirps 4 times. The vehicle is no longer programmed to Timer Start automatically.

## Turn Off Remote Start System

When the engine is running by remote start and you wish to shut it off, follow these steps:

1. While in Remote Start Mode, press the \* button twice on the remote transmitter.
2. Move the optional remote start toggle switch to the "OFF" position (if installed).
3. Press the vehicle's brake pedal, the engine will stop running and the parking lights will turn off to indicate the engine has been shut off.

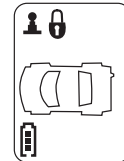

## Toggle Switch Disable (If Installed)

The disabling the Remote Start System feature allows your system's remote start unit to be temporarily disabled, which prevents the vehicle from being remote started accidentally. This is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the "OFF" position.

### Turbo Timer Mode

After arriving at your destination, Turbo Timer keeps the engine running for a programmable time period of 1, 3 or 5 minutes. This allows the engine's turbo charger time to conveniently cool down after you have left the vehicle.

**To Activate:**

1. While the engine is running, set the emergency brake and place the transmission into "Park".
2. Before turning off the engine, press and release **Ⓟ** and **★** buttons at the same time. The parking lights will flash indicating the remote start has entered Turbo Timer Mode.
3. Remove the ignition key and the engine will keep running.
4. Exit and secure the vehicle. The engine continues running until the pre-programmed time has elapsed.

### Remote Start Shutdown Inputs

If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:

1. The hood is opened.
2. The brake pedal is pressed.
3. The hand brake is released (for Standard Transmission vehicles only).
4. Engine is over-revved (Tachometer Checking Type only).
5. The preprogrammed run time (5/10/20/30 minutes) has elapsed.
6. Press the **★** button twice on the remote transmitter under Remote Start Mode.
7. Move the optional remote start enable toggle switch to "OFF" position (if installed).
8. The vehicle refused to start running after 3 unsuccessful attempts.



## Second Security System Operation

If your transmitters have been programmed to a second Marksman security system, follow the steps below.



### For 1-Way Remote Control Transmitter:

1. First press the **II** button on the transmitter.
2. Once the **II** button is pressed, the LED on the transmitter will illuminate for 3 seconds to indicate second vehicle transmitter operation.
3. While the LED is illuminated, press any button on the transmitter to control the second vehicle's security system or alarm function (arm/disarm/trunk/remote start).



 
**Note:** Button functions are the same for the second car as they are for the first car.

### For LCD Remote Control Transmitter:

Second Vehicle Operation: While the  icon is displayed on the LCD screen, you can remote control and communicate with a second vehicle security system.


 
1. Press and hold  and  buttons at the same time until one long beep is heard. Programming Mode has now been entered.

**Note:** No action for five seconds will generate two long beeps indicating the Programming Mode has been exited.


2. Within 5 seconds, press and hold the  button until two beeping sounds are heard and the  icon is displayed on the LCD screen indicating second car operation.
3. While the  is displayed, press any button on the transmitter to control the second vehicle's security system or alarm function (arm/disarm/trunk/remote start).



**Note:** Button functions are the same for the second car as they are for the first car.

### Return to First Car Operation (LCD Remote Only)



  1. Press and hold  and  buttons at the same time until one long beep is heard. Programming Mode has now been entered.

**Note:** No action for five seconds will generate two long beeps indicating the Programming Mode has been exited.

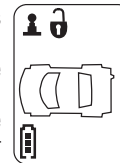

2. Within 5 seconds, press and hold the  button until two beeping sounds are heard and the  icon is not displayed on the LCD screen indicating first car operation.



Replacement Transmitters

TRANSMITTERS	DESCRIPTION	MODEL #	\$ PRICE
	2-Way LCD Remote for the X9 Security System	<b>X4RF-LCD</b>	<b>139.95 ea.</b>
	1-Way Remote for the X9 Security System	<b>X7RF</b>	<b>59.95 ea.</b>

 Replacement Batteries

REPLACEMENT BATTERIES	
	1.5 Volt AAA Alkaline Battery commonly found in grocery stores, hardware stores, etc.
	CR2032 - 3 Volt Lithium Battery (1 pc.) <b>Models:</b> Radio Shack: #23-162 Duracell: #DL2032 Eveready: #ECR2032 Panasonic: # CR2032

## Replacement Parts Order Form

### Credit Card or Money Order Only

(Sorry No Cash, C.O.D. or personal checks accepted)  
 Call: (310) 884-7777 Fax: (310) 637-9542

Mail to: Magnadyne Corporation  
 ATTN: Consumer Parts Sales  
 P.O. Box 5365  
 Carson, CA 90749-5365

SHIP TO: (No P.O. Boxes)

LAST NAME	FIRST NAME	INITIAL
STREET ADDRESS		
ADDITIONAL ADDRESS		
ADDITIONAL ADDRESS		
CITY	STATE	ZIP CODE
DAY TIME PHONE NUMBER		

CREDIT CARD INFORMATION

CREDIT CARD NO.	EXPIRATION DATE	<input type="checkbox"/> VISA <input type="checkbox"/> MC
CARD HOLDER'S LAST NAME	FIRST NAME	INITIAL
STREET ADDRESS		
CITY	STATE	ZIP CODE

PART #	DESCRIPTION	QTY.	PRICE EACH	TOTAL

<b>Shipping and Handling</b>	Sales Subtotal = _____ . _____
Up to \$20.00      \$5.00	California Residents Add Sales Tax = _____ . _____
20.01 to 30.00    5.95	Shipping and Handling (See Chart) = _____ . _____
30.01 to 45.00    6.50	TOTAL = _____ . _____
45.01 to 70.00    6.95	
Over 70.01        7.95	

On regular orders please allow 4-5 weeks for delivery.  
 Please give a shipping address where this order may be delivered between the hours of 9 am and 5 pm weekdays.  
 If UPS is unable to deliver, your order will be returned and additional shipping charges will be required.

## Limited Lifetime Warranty

Magnadyne Corporation or its authorized agents will, for the life of the vehicle and to the original purchaser, repair, replace or refund the retail sales price of said product or any part thereof, at the option of the Magnadyne Corporation or its authorized agents, if said product or part is found defective in materials or workmanship, when properly connected and operating on the correct power requirements designated for the specific product. This warranty and Magnadyne Corporation or its authorized agents obligations, hereunder do not apply where the product was: damaged while in the possession of the consumer, subjected to unreasonable or unintended use, not reasonably maintained, utilized in commercial or industrial operation, or serviced by anyone other than Magnadyne Corporation or its authorized agent, or where the warning seal on the product is broken or the power plugs or wires are detached from the unit. Magnadyne Corporation or any of its authorized agents do not assume any labor costs for the removal and reinstallation of any product found to be defective, or the cost of transportation to Magnadyne Corporation or its authorized agents. Such costs are the sole responsibility of the purchaser.

This warranty does not cover the cabinet, appearance items, normal wear and tear or accessories used in connection with the product resulting from improper installation, alteration, accident, misuse, abuse or acts of nature.

This Limited Life Time Warranty applies only to the receiver section of the security system. Neither the siren, transmitters, wire harness or any accessory item added to or used with a Remote Mobile security system are covered by this Limited Life Time Warranty. Sirens, transmitters, wire harness or any accessory item are covered by our standard 12 month limited warranty.

**Magnadyne Corporation or its authorized agents shall not be liable to anyone for consequential or incidental damages or claims that may arise due to failure of product to operate properly except those accorded by law. Magnadyne's or its authorized agents liability to the repair, replacement of the product as stated above if all conditions of the warranty are met. No expressed warranty or implied warranty is given except those set forth herein. Magnadyne does not warrant or guarantee against break in damage or the theft of the vehicle in part or whole, or against the loss or damage to the contents of any vehicle in which a security system is installed. Magnadyne security systems are only a deterrent against possible theft.**

This warranty extends only to the original purchaser of the product and for the vehicle in which it was originally installed. This warranty is not transferable or assignable to any person or vehicle. Defective merchandise should be returned to the original point of purchase or secondly to Magnadyne Corporation, 1111 W. Victoria Street, Compton, CA 90220. A return authorization must be obtained before sending, or merchandise may be refused.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>