

Keyless Entry/Convenience System

OWNER'S MANUAL

Model: PL10S

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

© Copyright 1999 Magnadyne Corp.

The information enclosed will provide a ready reference of the operation and maintenance of your new keyless entry/convenience system.

Remote Control Transmitters

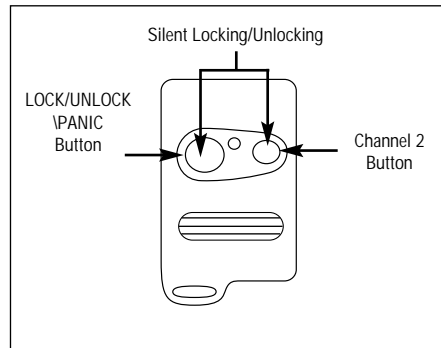

Keyless Entry System Operation:

Proper operation of the keyless entry function will require the use of the remote control transmitter to lock and unlock the doors. Follow the enclosed procedure for proper operation:

1. Press and release the LOCK/UNLOCK button on the transmitter. The doors will become locked.
2. Press and release the LOCK/UNLOCK button on the transmitter. The doors will become unlocked.

Chirper or Horn Status Indicator

An optional chirper or the vehicle's horn can be used to indicate if the doors are locked or unlocked.

Operation:

- One Chirp = Doors are locked.
- Two Chirps = Doors are unlocked.

User Discretion Silent Locking/Unlocking:

By using your remote transmitter you can activate your lock/unlock feature at any time without the chirp or horn indicator. To operate this feature simply press both buttons at the same time to lock or unlock your vehicle without the chirp indications.

Remote Panic

To activate the panic feature:

Depress and hold the LOCK/UNLOCK/PANIC button for more than 3 seconds.

1. The chirper or horn will begin sounding when the panic feature is activated.
2. On your remote transmitter press the LOCK/UNLOCK/PANIC button to turn off the panic feature.

Note: If you do not turn off the panic feature with the transmitter, the alarm will sound for 60 seconds.

Optional Dome Light Supervision

If this option is installed it will allow your PL10 to activate your existing interior lighting system. Every time the system is unlocked, the PL10 will turn ON your interior lighting system. This will provide added security when approaching your vehicle in a dark environment.


Operation:

1. Exit the vehicle and the interior lighting is off.
2. Lock then unlock the PL10 system. Upon unlocking, the interior lighting system will become illuminated. From that point, the interior lighting system will remain illuminated for a period of 30 seconds or until the ignition key is turned on whichever occurs first.

Remote Trunk/Hatch Release

Installing this will allow the remote transmitter supplied with your security system to open your vehicles trunk or rear hatch. Pressing the Channel 2 button on the transmitter for 3 seconds will open the existing power trunk/hatch release mechanism.

Note: Vehicles that are not factory equipped with an electronic trunk release system will require additional parts than a vehicle with a factory installed trunk release system.

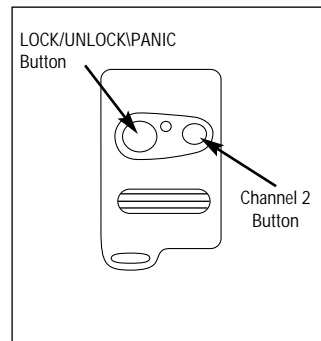

System Maintenance:

The only maintenance that your security system requires is a periodic check of its operation to be sure that all functions are operating properly. The batteries supplied with your transmitter will usually last about 1 year. Heavier usage will shorten battery life. Reduced transmitter range is usually a sign that the battery in the transmitter is becoming weak and should be replaced.

Note: The battery supplied with transmitter will last about 1 year.

Battery Replacement:

Replacement batteries for your transmitter are available in most drug stores and camera shops. To replace the battery, remove the small Phillips screw from the transmitter case and pull apart the top and bottom case halves. Remove the battery from its holder. Insert the new battery in place of the old one observing the batteries +/- polarity. Gently snap the top and bottom case halves together (DO NOT force them together) and replace the Phillips screw (DO NOT over tighten the screw)

Replacement Transmitters:

In the event that the transmitter supplied with your security system becomes damaged or lost, return to the installation facility that installed your security system to purchase a new one.

Limited Lifetime Warranty

Magnadyne Corporation or its authorized agents will, for the life of the vehicle and to the original purchaser, repair, replace or refund the retail sales price of said product or any part thereof, at the option of the Magnadyne Corporation or its authorized agents, if said product or part is found defective in materials or workmanship, when properly connected and operating on the correct power requirements designated for the specific product. This warranty and Magnadyne Corporation or its authorized agents obligations, hereunder do not apply where the product was: damaged while in the possession of the consumer, subjected to unreasonable or unintended use, not reasonably maintained, utilized in commercial or industrial operation, or serviced by anyone other than Magnadyne Corporation or its authorized agent, or where the warning seal on the product is broken or the power plugs or wires are detached from the unit. Magnadyne Corporation or any of its authorized agents do not assume any labor costs for the removal and reinstallation of any product found to be defective, or the cost of transportation to Magnadyne Corporation or its authorized agents. Such costs are the sole responsibility of the purchaser.

This warranty does not cover the cabinet, appearance items, normal wear and tear or accessories used in connection with the product resulting from improper installation, alteration, accident, misuse, abuse or acts of nature.

This Limited Life Time Warranty applies only to the receiver section of the security system. Neither the siren, transmitters, wire harness or any accessory item added to or used with a Remote Mobile security system are covered by this Limited Life Time Warranty. Sirens, transmitters, wire harness or any accessory item are covered by our standard 12 month limited warranty.

Magnadyne Corporation or its authorized agents shall not be liable to anyone for consequential or incidental damages or claims that may arise due to failure of product to operate properly except those accorded by law. Magnadyne's or its authorized agents liability to the repair, replacement of the product as stated above if all conditions of the warranty are met. No expressed warranty or implied warranty is given except those set forth herein. Magnadyne does not warrant or guarantee against break in damage or the theft of the vehicle in part or whole, or against the loss or damage to the contents of any vehicle in which a security system is installed. Magnadyne security systems are only a deterrent against possible theft.

This warranty extends only to the original purchaser of the product and for the vehicle in which it was originally installed. This warranty is not transferable or assignable to any person or vehicle. Defective merchandise should be returned to the original point of purchase or secondly to Magnadyne Corporation, 1111 W. Victoria Street, Compton, CA 90220. A return authorization must be obtained before sending, or merchandise may be refused.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>