 


MobileVision™

Operation and Installation Manual

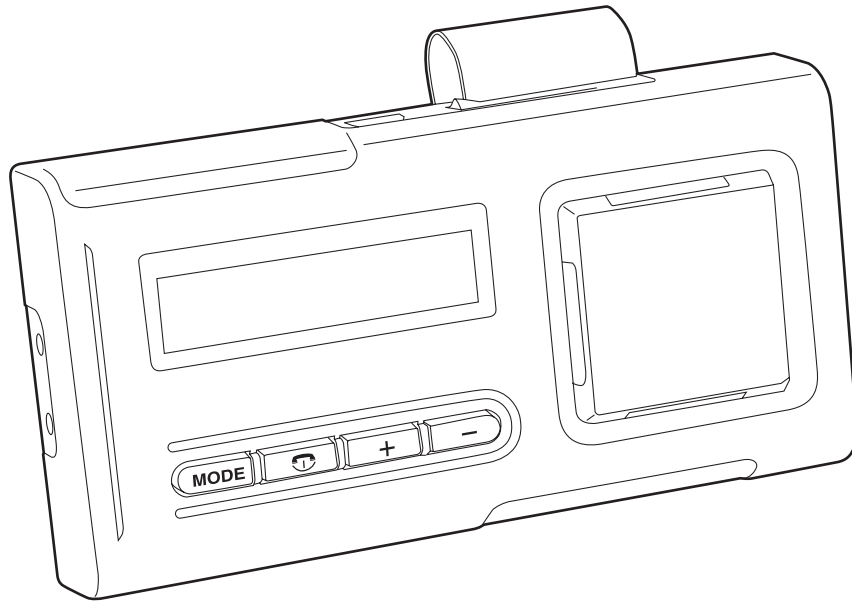

BT-HFKP30
Bluetooth Wireless Hands Free Kit
with LCD Display

Safety and Caution

 
- Never install the product in a location where it interferes with your field of vision.
- **This product must be installed and used in accordance with this manual. Any alterations to this product that enables it to be used in any way other than intended or designed could distract the driver and result in an accident causing injury or death. Magnadyne Corporation disclaims any and all liability that may result from failure to install and operate in any other manner in which this was intended.**
- Do not disassemble, modify the unit or attempt to repair the product yourself. If the product needs to be repaired, consult your dealer.
- Do not install the unit in a place exposed to direct sunlight or excessive heat or humidity. Avoid places with excessive dust or the possibility of water splashing.
- **Check local laws regarding use of a mobile handset and speakerphones while driving. If you use the speakerphone while driving, ensure your attention and focus remains on your responsibility of driving safely.**
- Observe all signs that require an electrical device or RF radio product to be switched off in designated areas. These could include hospitals, blasting areas, and potentially explosive atmospheres.
- Turn off your Speakerphone prior to boarding an aircraft. Do not use in aircraft.

FCC Compliance Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesirable operation.


Kit Contents

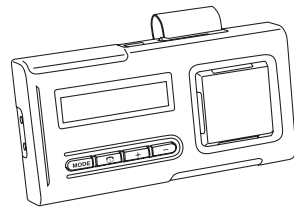


Speakerphone



 Mounting Clip



Battery

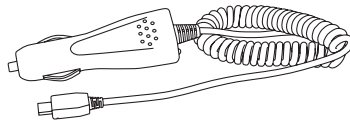 

VPA Charger

Bluetooth Speakerphone Introduction

This portable Bluetooth Speakerphone is specially designed for the user to enjoy the convenience of wireless communication. Use in a vehicle like a hands free car kit or on a desk-top like a conference speakerphone. The built-in microphone with D.S.P. technology has echo cancellation along with noise suppression to deliver impeccable sound quality.

Bluetooth Technology

Bluetooth wireless technology revolutionized personal connectivity by providing freedom from wired connections and enabling connectivity between mobile computers, mobile phones, portable handheld devices and other Bluetooth enabled devices within 30 feet. Bluetooth wireless technology utilizes global sound and digital data 2.4G ISM transmission.

Installation


Installing the Battery:

1. Remove the battery cover from the Speakerphone.
2. Insert the battery into the Speakerphone paying particular attention to the - and + indicators on the battery.
3. Reinstall the battery cover on the speakerphone.

Charging the Speakerphone:

 
 
Insert the charger into a vehicle power outlet and the charging plug into Speakerphone's charging socket. Charge the battery fully before using for the first time. Normal charging time is approximately 4 to 5 hours.

Charge Indication:

When the charger is plugged into the Speakerphone, the LCD background will light up. After the initial startup screens, the display will alternate between "Charging" and "BLUETOOTH". When the interior of the Battery Power Icon  stops moving, the battery is fully charged.

Notes:

1. Low power indication: The LCD will show "Low Battery" and beep every 30 seconds whenever the battery is low. Charge the Speakerphone immediately. If battery is not charged the Speakerphone will automatically shut off.
2. Charging indication may be delayed for a few minutes if the Speakerphone has not been used for a long time or the battery is drained.
3. Do not insert a SIM card during battery charging.

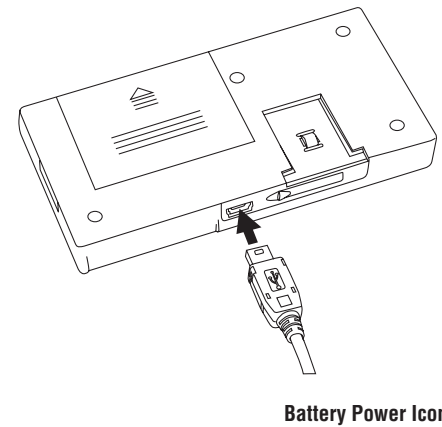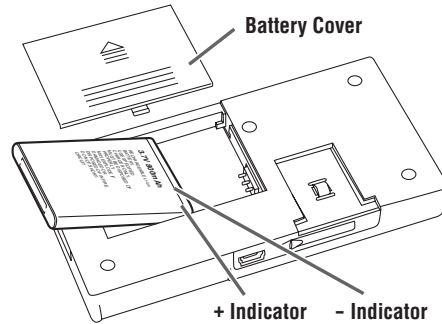

Installation (Continued)

 
 
PLEASE READ PRIOR TO INSTALLATION

CAUTION: The majority of vehicles manufactured today include air bag systems that inflate with great force during an accident. If necessary, contact the vehicle's manufacturer for air bag information specific to the vehicle. DO NOT place an object, including all components, in the area over the air bag or in the air bag deployment area. If the components are improperly installed, serious injury could occur during inflation of the air bag.


- Mount components securely to prevent shifting that could cause injury or interfere with the vehicle being operated safely.
- This hands-free kit is intended for 12 Volt DC operation only.

Mounting Speakerphone:

Insert the mounting clip into the speaker phone.

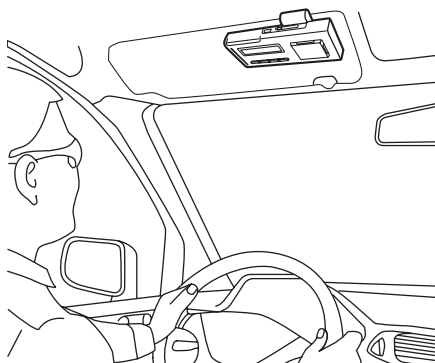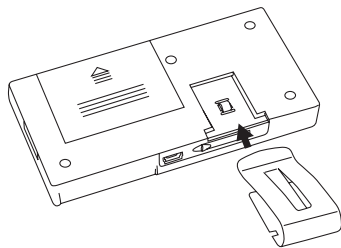

Button and Feature Locations

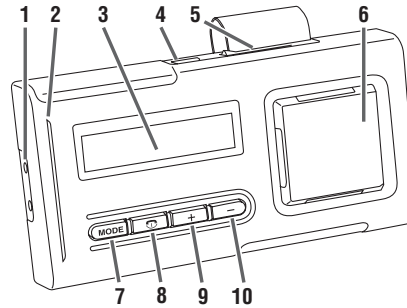 

- 1. Microphone**
- 2. LED indicator**
- 3. LCD display**
- 4. Charging socket**
- 5. SIM Card socket**
- 6. Speaker**
- 7. Mode/ Multi-function button**
Multi-function button. See Operation Instruction for more information.
- 8. Power On/Off button**
Press to turn the unit on and off.
- 9. Volume increase button**
Press to increase the speaker's output.
- 10. Volume decrease button**
Press to decrease the speaker's output.

Operation Instructions

Turning On/Off the Speakerphone

 
Turning On: Speakerphone is in Off mode:

Press and hold the Power button for about 5 seconds until LCD lights up and shows "checking SIM" in the display. When there's no SIM Card in the Speakerphone, the LCD will show "no SIM" and "BT-HFKP30" will show up in the display. The unit will beep twice and LED will flash every second.

Notes:

1. If the Speakerphone has not been paired with a Bluetooth device, "BLUETOOTH" will eventually appear in the display. See "Pairing to a Mobile Handset" for more information.
2. If the Speakerphone has been paired with a Bluetooth device, the Speakerphone will search for the last paired Bluetooth device and "Connecting" will appear in the display. When a connection is complete, the unit will go into standby mode and the LED will flash every 5 seconds.

Example: If the last paired Bluetooth device is Samsung SGH-A517 handset. The Speakerphone will search for NOK SGH-A517 handset; when the device is connected, the LCD display show the following:

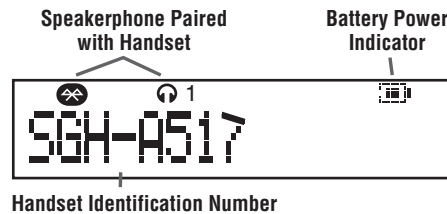

Turning Off:

Press and hold the Power button for about 5 seconds until you hear 2 long beeps from the speaker. The LCD screen will display "Power Off" and speakerphone will be powered off in 2 seconds.

Pairing to a Mobile Handset

Prior to using the Speakerphone for the first time, you must pair it with a Bluetooth-enabled mobile handset. The following steps describe pairing instruction for a typical Bluetooth-enabled mobile handset.

1. Place the Speakerphone and mobile handset no more than 3 feet apart.
2. Ensure the Speakerphone is in the Off mode.
3. Press and hold the Power button for 5 seconds until you hear a long beep. The LED will flash blue every second and "Connecting" will appear in the LCD. After a few seconds, the Speakerphone will return to standby. It's now ready for pairing.
4. Activate your mobile handset's Bluetooth accessing function by referring to your mobile handset user guide for details. Meanwhile, the handset will search for accessible Bluetooth devices.
5. Select "BT-HFKP30" from the list.
6. Enter the pre-programmed passkey "0000" and press "OK" to pair the Speakerphone and the handset. When pairing is complete, you may hear a long beep and LED will flash blue 3 times. The Speakerphone has returned to standby mode when LED flashes blue every 3 seconds.
7. Press "Ok" to go back to your handset's main menu. (For most mobile handset models, a headset icon or some other connection icon will be shown on the screen.) You should now be able to make and receive calls through the Speakerphone. Use the mobile handset no more than 30 feet away from the Speakerphone. (Obstruction could cause shorter sensing distance.)



IMPORTANT: If the pairing cannot be completed within 2 minutes, the Speakerphone will return to standby mode and the blue LED will flash every 5 seconds. Please repeat steps (2) to (7) to pair the Speakerphone and mobile handset again.

Operation Instructions (Continued)

Connection/Link to a Mobile Handset

When either the mobile handset or the Speakerphone is turned off, the two remain be paired. However, the connection (which allows the two to interact) will be lost. To reconnect, follow these steps.

1. On your mobile handset, select "BT-HFKP30" from the paired list of options on your handset screen.
2. On your speakerphone, press the multi-function button once and select "Accept" on your hand-screen to complete connection. Some mobile handsets may automatically connect.

IMPORTANT: Bluetooth  and Headset  appear on the Speakerphone when it is connected to a mobile handset.

Disconnect/Unlink from a Mobile Handset

 
To disconnect your mobile handset from the Speakerphone or to pair/connect another Bluetooth handset, follow these directions.

1. On the Speakerphone, press the "+" for 3 seconds. The device will beep and the LCD screen will display "Bluetooth".
2. On your mobile handset, select "BT-HFKP30" and select disconnect. The disconnection process on mobile handsets may vary slightly depending on model of phone.

How to use the SIM card reader

The SIM card reader allows the speakerphone to act as a caller ID and contact list by saving phone numbers in the speakerphone's memory.

1. Insert the SIM card with the touch pin facing forwards and press the Power button for three seconds. The Speakerphone will display "Checking SIM" and begin reading the phone book contained on the card. Once the Speakerphone is done reading and saving the contents of the card, "Remove SIM" will appear on the LCD and the Speakerphone will shut off after 2 seconds. The phone book is now saved into the Speakerphone's memory and it is safe to remove the card.
2. Turn the Speakerphone on again by pressing the Power button for 5 seconds. Make sure there is a connection between the Speakerphone and the mobile handset (from which the SIM card came).
3. Access the contacts by pressing and holding the "-" button until the letter "A" appears in the LCD. Press "+" or "-" to scroll through the letters in the alphabet until you reach the letter your contact name begins with.
4. Press the multi-function button to select the letter and view the contacts beginning with that letter.
5. Press "+" or "-" to scroll through the contacts and press MODE to call the selected contact.

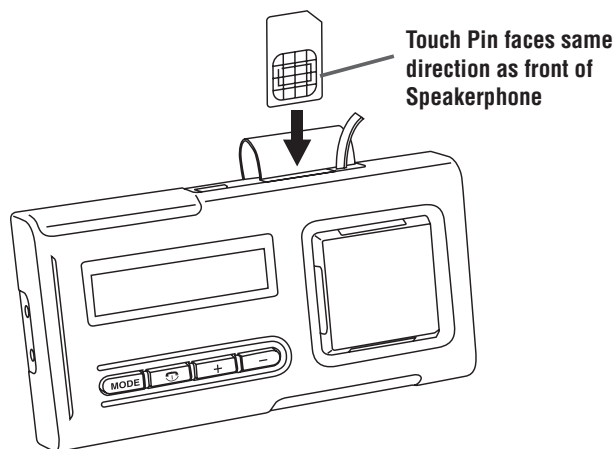

Operation Instructions (Continued)

How to use the speakerphone

Make sure the speakerphone is connected to your mobile handset and the battery is fully charged.

Answering a Call:

To answer a call, quickly press the multi-function button. "Active Call" will appear on the LCD screen.

Ending a Call:

To end a call, quickly press the On/Off button. The speakerphone will return to standby mode.

Reject a Call:

To reject a call, quickly press the On/Off button. "Reject" will appear on the LCD screen and the speakerphone will return to standby mode in 10 seconds.

Last Number Re-Dialing:

When the speakerphone is in standby mode, press the multi-function button twice.

Adjusting the Volume:

Press the + (to increase) or the - (to decrease) until the desired volume level is reached.

Call Transfer:

During a conversation, you may transfer a call from the speakerphone to your mobile headset and vice versa.

1. Speakerphone to Handset: Press and hold the multi-function button for about 3 seconds.
 2. Handset to speakerphone: Press and hold the multi-function button for about 3 seconds or quickly press the multi-function button. (Operation may vary.)
- IMPORTANT: This function is only accessible with Hands-Free Profile mobile handsets.

Contact List:

You can search through the contact list saved in the speakerphone, choose a contact and dial the number.

1. Press the "-" button for 2 seconds. Search through letters by pressing "+" or "-".
2. Press the multi-function button once select a contact ID.
3. Press the multi-function button again to select the number of the contact ID.
4. Press the multi-function button once more to dial the number or quickly press the multi-function button twice to return to the previous screen.

Operation Instructions (Continued)

Buttons and Sound Indication

Buttons	Functions	Operation	Sound Indication
Power On/Off	Power On	Press and hold for 5 seconds	2 long beeps
	Power Off	Press and hold for 5 seconds	2 long beeps
	Call Reject	Press and hold once	
	Call End	Quickly press once	
Multi-Function Button (MODE)	Pairing	Quickly press once	
	Call Answer	Quickly press once	
	Last Number Redial	Press twice	
	Call Transfer	Press and hold for 3 seconds	1 beep
	Reconnect/Link	Quickly press once	1 beep
+	Volume Increase	Quickly press once	
	Disconnect	Press and hold for 3 seconds	1 beep
-	Volume Decrease	Quickly press once	
	Contact List	Press and hold for 3 seconds	

LCD, LED and Sound Indication

Speakerphone Mode	LCD Indication	LED Indication	Sound Indication
Power On	"Checking SIM" "No SIM" "BT-HFKP30"	On for 5 seconds	2 long beeps
Standby	"BLUETOOTH"	Flash on every 5 seconds	
Call in Progress	"Active Call"	Flash on every 5 seconds	
Power Off	"Power Off"	Flash on every 5 seconds	2 long beeps
Pairing in Progress	"Connecting"	Flash on every 5 seconds	
Pairing Completed	Bluetooth device ID	Flash on every 5 seconds	1 beep
Low Voltage	"Low Battery"	Flash on every 5 seconds	1 beep

NOTE: The LCD backlight will come on and stay on for 10 seconds when any button is pushed while the unit is in standby mode.

NOTE: The speakerphone supports 6 languages - English, German, French, Italian, Spanish and Dutch. Some available only on handsets that support a wide range of languages.

Care and Maintenance

- Turn off when not in use.
- Do not expose the Speakerphone to liquid, moisture or humidity. It is not waterproof.
- Do not use abrasive cleaning solvents to clean the Speakerphone.
- Do not expose the Speakerphone to high temperatures.
- Do not attempt to disassemble the Speakerphone. It does not contain serviceable components.
- If you do not use the Speakerphone for long periods, store it in a dry place, free from extreme temperature, humidity and dust.
- Only use the MobileVision supplied charger when charging the Speakerphone.
- Only charge the Speakerphone's built-in battery in accordance with the instructions of this user guide.
- Avoid charging the Speakerphone in extremely high or low temperatures.
- Do not use charger outdoors or in damp areas.
- Do not disassemble the charger.
- Do not expose the Speakerphone to sharp objects which may cause scratching or other damage.
- Do not stick anything inside the Speakerphone which may cause damage to its internal components.

Trouble Shooting

If you are unable to connect your Speakerphone and mobile handset, try the following:	Ensure the Speakerphone is paired with your mobile handset.
	Ensure your mobile handset's Bluetooth feature is activated.
	Please refer to your mobile handset user guide for specific instructions.
	Ensure the Speakerphone is within a maximum of 30 feet of your mobile handset(s) and there are no obstructions, such as walls or other electrical devices in between as it may cause shorten or interfere with transmission.
	If all the above steps do not resolve your problem, remove the battery for 10 minutes.

The Bluetooth Speakerphone is compliant with and adopts the Bluetooth Specification V1.2. However, interoperability between the device and other Bluetooth-enable products is not guaranteed because it depends on compatibility. For more information on the compatibility between the device with other Bluetooth-enabled products, please check with the manufacturer/importer.

Specifications

Bluetooth Specifications:	Version 1.2, Class 2, 10 Meters
Bluetooth Profile Supported:	H.S.P. 1.1, H.F.P. 1.5
Operating Frequency Band :	2.402 to 2.4835 GHz unlicensed ISM band
Rechargeable Li-ion Battery:	3.7V DC, 800mAH
Multi-Pairing:	Up to 7 Bluetooth devices
:	DC 5 v to 6 v, 400 mA, mini USB connector
Normal Charge Time:	4 hrs.(approx..)
Talk Time:	8 to 10 hrs.(approx..)
Standby Time:	150 hrs.(approx..)
Dimension(L/M/S):	11 x 7 x 3.8 cm.
Weight:	80 g. with battery

Warranty

ONE (1) YEAR LIMITED WARRANTY

Magnadyne Corporation or its authorized agents will within one year from the date of sale to you, repair, replace or refund the retail sales price of said product or any part thereof, at the option of the Magnadyne Corporation or its authorized agents, if said product or part is found defective in materials or workmanship, when properly connected and operating on the correct power requirements designated for the specific product. This warranty and Magnadyne Corporation or its authorized agent's obligations hereunder do not apply where the product was; damaged while in the possession of the consumer, subjected to unreasonable or unintended use, not reasonably maintained, utilized in commercial or industrial operations, or serviced by anyone other than Magnadyne Corporation or its authorized agents, or where the warning seal on the product is broken or the power and/or plugs are detached from the unit. Magnadyne Corporation or any of its authorized agents will not assume any labor costs for the removal and reinstallation of any product found to be defective, or the cost of transportation to Magnadyne Corporation or its authorized agents. Such cost are the sole responsibility of the purchaser.

This warranty does not cover the cabinet appearance items or accessories used in connection with this product, or any damage to recording or recording tape, or any damage to the products resulting from improper installation, alteration, accident, misuse, abuse or acts of nature.

MAGNADYNE CORPORATION OR ITS AUTHORIZED AGENTS SHALL NOT BE LIABLE TO ANYONE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES OR CLAIMS EXCEPT THOSE ACCORDED BY LAW. NO EXPRESSED WARRANTY OR IMPLIED WARRANTY IS GIVEN EXCEPT THOSE SET FORTH HEREIN. NO IMPLIED WARRANTY SHALL EXTEND BEYOND ONE YEAR FROM THE DATE OF SALE.

This warranty extends only to the original purchaser of the product and is not transferable. Some states do not allow limitations on how long an implied warranty lasts, and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

“NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.”

Defective merchandise should be returned to the original point of purchase or secondly, to Magnadyne Corporation, 1111 W. Victoria Street, Compton CA 90220.

Return Authorization must be obtained before sending, or merchandise may be refused.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>