

Your Movievision entertainment system is supplied with two (2) Movievision headphones. The correct operation, care and maintenance of the headphones is critical to their ability to provide the user with a lifetime of operation. Misuse, abuse and neglect of the headphones will result in poor performance and premature failure. Please read through the simple operation and maintenance instructions enclosed.


WARNING!

- Do not throw the headphones.
- Do not get the headphones wet or submerge them in any liquid.
- Do not use the headphones as a hammer.
- Do not step, stand or sit on the headphones.
- Do not lay heavy objects on the headphones.
- Refrain from turning the volume of the headphones to the maximum position, this may result in ear damage.

1. Install the Batteries (AAA Type)

To install the "AAA" batteries supplied, repeat the following procedure:


- Hold the headphones in one hand and place your thumb onto the gripping arrow on the battery holder cover.
- Press down on the gripping arrows while pulling downward on the battery door. Slide the door away from the headphones to expose the battery holder cavity.
- Place the batteries into the holder following the directions engraved inside the holder. Observe battery polarity.

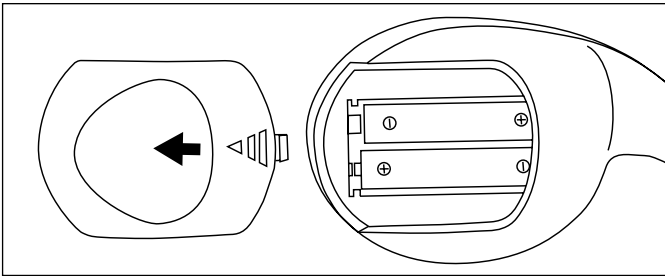

2. Adjust the Headphones to Fit Your Head


Repeat the following to adjust the headband to fit:

- Spread the ear pads apart and place the headphones on your head. Observe the "L" and "R" indicators.
- Grab the ear pads and use your thumb and forefinger to slide the adjusters up or down until a comfortable fit is achieved.

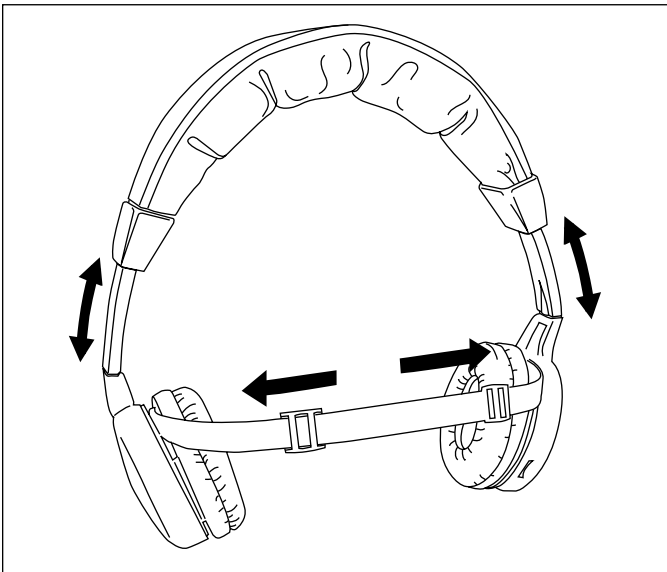



1. Turn On the Headphones:

To turn on the headphones, press the "PWR" button on the right side ear pad. The digital display will show radio station digits when the headphone is on.

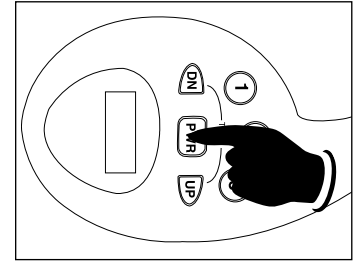


2. Tuning an FM Radio Station:

- Press the "UP" or "DOWN" button to manually tune in an FM radio station.
- Press and hold the "UP" or "DOWN" button for one second then release. The radio tuner will search up or down the radio band for the next strongest FM radio station. Note: FM radio stations are always received in Stereo Mode.
- Adjust the volume knob to the desired volume level.

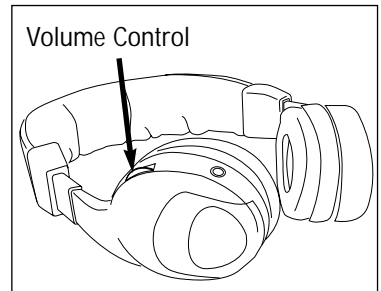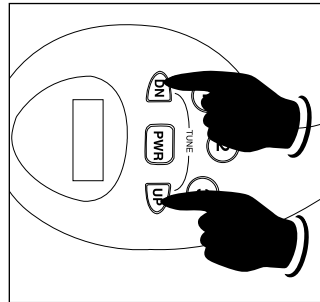


3. Listening to What Is Displayed on the Viewing Screen:

On the right ear pad are 3 pre-programmed buttons marked 1, 2 and 3. These buttons will tune the headphone radio to the exact MovieVision signals. Press the buttons one at a time until what you hear in the headphones is what is displayed on the viewing screen.

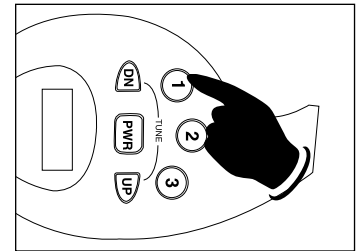

4. Turn Off the Headphones when you are Finished:


- Press the "PWR" button to turn off the headphones. The display will be blank when the headphones are off.
- The batteries supplied with your MovieVision headphones will last for approximately 10 hours of continuous use. Forgetting to turn off the headphones when they are not in use will decrease the battery life.

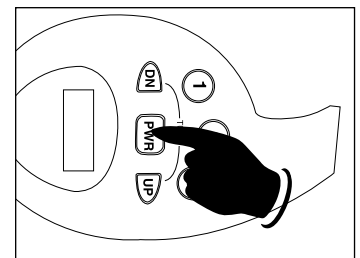

5. Connecting a Second Set of Headphones

Your Movievision headphones have a plug receptacle located at the side of the "L" ear pad. A second set of personal type headphones (Must have 3.5 mini male type plug) can be connected at this point.

Note: When a second pair of headphones are attached, the tuning and audio level is controlled by the Movievision headphone.

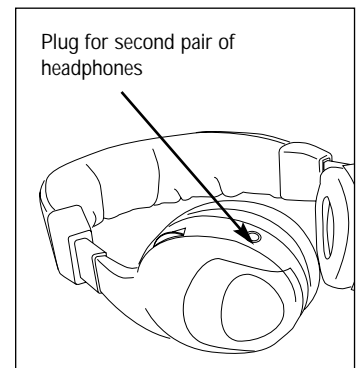

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>