

MAGNASONIC



Model NO.: MiC1000k

USER MANUAL

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

 
When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions for future reference. Take special note of all warnings listed in these instructions and on the unit.

- The unit should not be used near water.
- The unit should be placed so that its location or position does not interfere with proper ventilation. Do not cover with a cloth or blanket, or place in a bookshelf or cabinet.
- The unit should be away from heat sources such as radiators, stoves, heat registers or other appliances that produce heat. Do not place in direct sunlight.
- The unit should be connected to a power supply only of the type described in this manual, or that is marked on the unit.
- Power supply cords should be placed so that they are not likely to be walked on or pinched by items placed around unit. It is always best to have a clear area from the unit to the wall outlet it is plugged into.
- The unit should be cleaned only as recommended. Do not use abrasive, benzene, thinner or other solvents to clean the surface of the unit. Use only a mild cleaning solution and a clean soft cloth.
- Care should be taken so that objects or liquids do not fall on or into any openings on the unit. No vases or wet objects should be placed on top on the unit.
- Do not overload wall outlets or extension cords as this can result in the risk of electric shock.
- If the unit is to be left unused for a long period of time, the power cord should be unplugged to prevent damage or corrosion.
- The user should not attempt to service the unit beyond the measures described in the user manual. Please refer to qualified service personnel for repair.


FEATURES

- Play and charge iPhone / iPod
- Auto time synchronization
- FM radio (87.5-108MHz)
- Clock
- Dual alarm
- Sleep timer
- Snooze

PRODUCT ILLUSTRATION

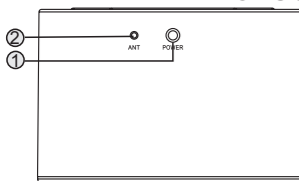


 1. **POWER:** DC input slot
2. **ANT:** FM antenna

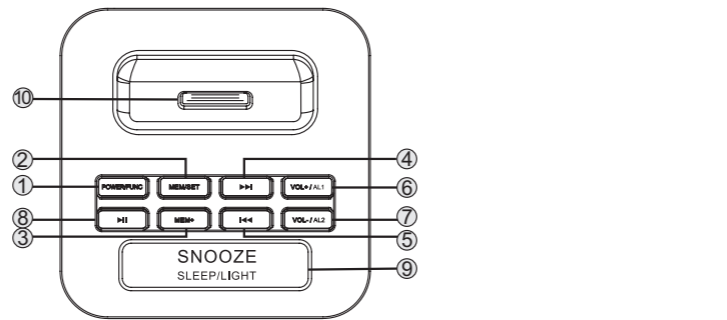

1. **POWER/FUNC:** "Power on" by long press/"Function" by short press
2. **MEM/SET:** "Memory" in FM mode/ "Time setting" when FM is off
3. **MEM+ :** Memory +
4. **▶▶:** Select the next station when in FM mode/Skip to the next when in IPHONE mode; Forward by long press.
5. **◀◀:** Select the previous when in FM mode/Skip to the previous when in IPHONE mode; Backward by long press
6. **VOL+/AL1:** Volume up when power on/ Alarm clock 1 setting when power off
7. **VOL-/AL2:** Volume down when power on/ Alarm clock 2 setting when power off
8. **⏸:** Play/Pause when in IPHONE mode
9. **SNOOZE/SLEEP/LIGHT:** Snooze/Sleep/LED background light when power off
10. IPHONE interface

 
STATUS DISPLAY



iPhone/iPod initialization



 iPhone/iPod playback mode



FM radio mode

OPERATION

- **Power On:** Insert the DC5V adapter plug into the power socket at the back of the music station. The display and time would turn on. Then, long press the "POWER/FUNC" to power on.
- **Play:** Default "IPHONE" mode is set when power on. Dock an IPHONE onto the iC1000k. Tap **◀◀/▶▶** to skip to the previous or the next song, while long press the same buttons for fast-forward and backward. (Can charge IPHONE/IPOD in any mode)
- **Incoming call alert:** When there is an incoming call during IPHONE music playback, the music station will stop the music and shift to ringtone. Music playback would resume when the phone call is finished.
- **Manual Search and Automatic Search:** Short press **◀◀/▶▶** for manual search; long press **◀◀/▶▶** for two seconds for automatic search. Once tuned to your favorite channel, press "MEM/SET" to store the FM station while press **◀◀/▶▶** to select saving location. Up to 20 FM stations can be stored.
- **Volume:** Volume level can be adjusted from 00 to 30.
- **Auto time synchronization:** Each time an iPhone/iPod is docked, the clock would automatically synchronize with the iPhone/iPod time.
- **Clock manual setting:** In standby mode, hold "MEM/SET" button for Clock setting. When you see time digits are flashing press "▶▶" to set the hours and "◀◀" to set the minutes. Press "MEM/SET" to set the time and resume to clock mode. There is an "AM" indicator and a "PM" indicator for different period of the day.
- **Alarm 1:** In standby mode, press and hold "VOL+/AL1" for alarm setting. When the alarm digits flash, press "▶▶" to set hour, "◀◀" to set minute and "VOL+/AL1" to confirm the setting. Then tab **◀◀/▶▶** to set alarm source (B: Buzzer/ F: FM Radio / I: IPHONE) and "VOL+/AL1" to return to clock mode. (a lower left dot lights up to indicate that Alarm 1 is ready) Double click "VOL+/AL1" to turn on / off Alarm 1.
- **Alarm 2:** In standby mode, press and hold "VOL+/AL2" for alarm setting. When the alarm digits flash, press "▶▶" to set hour, "◀◀" to set minute and "VOL+/AL2" to confirm the setting. Then tab **◀◀/▶▶** to set alarm source (B: Buzzer/ F: FM Radio / I: IPHONE) and "VOL+/AL2" to return to clock mode. (a lower left dot lights up to indicate that Alarm 2 is ready) Double click "VOL+/AL2" to turn on / off Alarm2.
- **Snooze:** When the Alarm rings, press "SNOOZE/SLEEP/LIGHT" to snooze. The Alarm would freeze and ring again in nine minutes. Press "POWER/FUNC" to stop the alarm.
- **Sleep:** Hit SNOOZE/SLEEP/LIGHT under any function of play/pause/stop and set the Sleep time from: M-90/ M-80/ M-70/ M-60/ M-50/ M-40/ M-30 / M-20/ M-10/M --OFF.



NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC and ICES-003 Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment to a supply outlet different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for help.

MAGNASONIC® WARRANTY

Consumer Electronics, Home Appliances and Home Office Products
Thank you for choosing MAGNASONIC®!
 BlueTronics Group gives the following express warranty to the original consumer purchaser or gift recipient for this MAGNASONIC product, when shipped in its original container and sold or distributed in Canada by BlueTronics Group or by an Authorized MAGNASONIC Dealer: BlueTronics Group warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, BlueTronics Group shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty. This warranty shall not apply to:

- Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- Any MAGNASONIC product tampered with, modified, adjusted or repaired by any party other than BlueTronics Group or MAGNASONIC's Authorized Service Centres.
- Damage caused or repairs required as a result of the use with items not specified or approved by BlueTronics Group, including but not limited to head cleaning tapes and chemical cleaning agents.
- Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands, shelves, cookware and cooking utensils.
- Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- Any product received without appropriate model, serial number and CSA/cUL/cULus/cETL/cETLus markings.
- Any products used for rental or commercial purposes.
- Any installation, setup and/or programming charges.

Should this MAGNASONIC product fail to operate during the warranty period, warranty service may be obtained upon delivery of the MAGNASONIC product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized MAGNASONIC Service Centre. In-home warranty service may be provided at BlueTronics Group's discretion on any MAGNASONIC television with the screen size of 27" or larger. This warranty constitutes the entire express warranty granted by BlueTronics Group and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of BlueTronics Group. To the extent the law permits, BlueTronics Group disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this MAGNASONIC product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of BlueTronics Group to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

CARRY-IN PARTS & LABOUR WARRANTY PERIODS:

- DVD Products: 1 Year (Remote Control—90 Days)
- LCD & Plasma Display TV: 1 Year (Remote Control—90 Days)
- Television Products: 1 Year (Remote Control—90 Days)
- VCR Products: 1 Year (Remote Control—90 Days, Video Heads—6 Months)
- Home Appliances: 1 Year
 - Microwave Magnetron parts only additional 3 Years
 - Refrigerator / Freezer Compressor parts only, additional 4 years
- Heating/Cooling & Humidification Products: 1 Year (Remote Control—90 Days)
 - Compressor parts only (if applicable), additional 4 years
- Home Office: 1 Year

To obtain the name and address of the nearest Authorized MAGNASONIC Service Centre or for more information on this warranty

--Visit www.magnasonic.ca

--Mail your inquiry to

BlueTronics Group

MAGNASONIC Customer Service

Niagara, ON L2H 1J9; or

--Call toll free 1- 800 - 663 - 5954, Monday to Friday 9:00am — 5:00pm

Eastern Time.

MAGNASONIC is a registered trade-mark of BlueTronics Group © 2010

Compatibility information and Chart

Play & Charge Compatibility

iPod Model	Play & Charge Compatibility
iPod mini 4GB 6GB	●
iPod 4th generation 20GB	●
iPod 4th generation 40GB	●
iPod 4th generation (color display) 20GB 30GB	●
iPod 4th generation (color display) 40GB 60GB	●
iPod shuffle 1st generation 512MB 1GB	●
iPod nano 1st generation 1GB 2GB 4GB	●
iPod 5th generation (video) 30GB	●
iPod 5th generation (video) 60GB 80GB	●
iPod nano 2nd generation (aluminum) 2GB 4GB 8GB	●
iPod shuffle 2nd generation 1GB	●
iPod classic 80GB	●
iPod nano 3rd generation (video) 4GB 8GB	●
iPod touch 1st generation 8GB 16GB 32GB	●
iPod classic 160GB (2007)	●
iPhone 4GB 8GB 16GB	●
iPhone 3G 8GB 16GB	●
iPod nano 4th generation (video) 8GB 16GB	●
iPod classic 120GB 160GB (2009)	●
iPod touch 2nd generation 8GB 16GB 32GB 64GB	●
iPod nano 5th generation (video camera) 8GB 16GB	●

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>