 


# Quick Use Guide

There are many ways to connect your new DVD Player to your Television and other equipment. This Quick Use Guide shows the easiest, most common connection between the DVD Player and a TV using the supplied cables.

Higher quality connections are explained in the accompanying owner's manual and will provide better sound or picture if your TV and/or audio system is compatible.

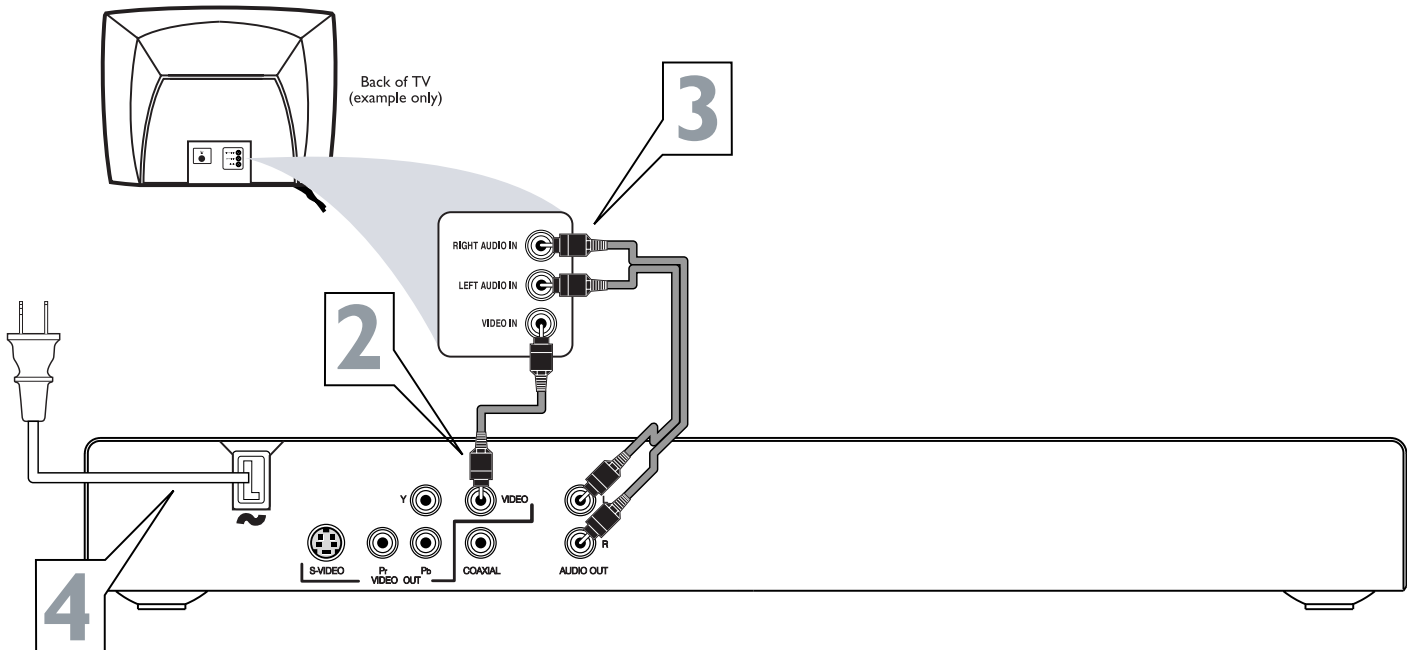 


- 1** **Disconnect all equipment from the power outlets.** Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.
- 2** **Connect the yellow VIDEO (VIDEO OUT) jack of the DVD Player to the corresponding VIDEO IN jack on your TV.** Use the supplied video cable, which has yellow ends. On the TV, the Video In jack is usually yellow and might be labeled video, CVBS, composite, or baseband.
- 3** **Connect the supplied audio cable to the red and white AUDIO OUT (left and right) jacks on the DVD Player and to the left/right AUDIO IN jacks on the TV.** The supplied audio cable has red and white ends. Match the cable colors to the jack colors. On the TV, the Audio In jacks are usually labeled Audio. The red jack is the right (stereo channel) and the white jack is the left (stereo channel).
- 4** **Plug the power cords of the DVD Player and the TV into an active power outlet. Press the STANDBY-ON button on the front of the DVD Player to turn on the DVD Player.**
- 5** **Turn on the TV power. Set the TV to the correct Video In channel.** Such channels may be called AUX or AUXILIARY IN, AUDIO/VIDEO or A/V IN, EXT1 or EXT2 or External In, etc. These channels are often near channel 00. See your TV manual for details. Go to your lowest TV channel (01 or 02), then change TV channels downward until you see the Player's screen saver on the TV.





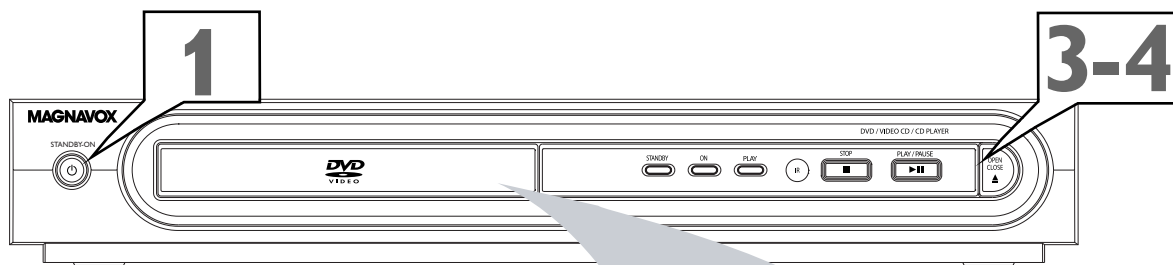

 

## Remember...

 
 
- Connect the DVD Player directly to the TV. For example, do not connect the DVD Player to a VCR, then connect the VCR to a TV. This type of connection may distort the picture and sound or give you a black and white picture. Also, your VCR might have the copy protection system, which could distort the DVD image or prevent playback of some Discs.
- If your TV does not have red, white, and yellow Audio and Video In jacks, refer to the owner's manual for other hookup options. If your TV only has a single Antenna In or RF In jack, you will need an RF modulator. See the owner's manual for details.
- If a DVD does not play properly, please contact Magnavox at 1-800-705-2000 for assistance. Due to the inconsistency of Disc formats provided by various Disc manufacturers, your DVD Player may require a playability enhancement. As DVD technology has advanced, these enhancements have become both common and easy to complete.

# Quick Use Guide (cont'd)



To simply play a Disc, follow these steps. Additional playback features are described in the accompanying owner's manual.

- 1** Press **STANDBY-ON** on the front of the DVD Player to turn on the Player. (You can turn on the DVD Player by pressing **POWER**  on the remote control as well.)
- 2** Turn on your TV. Set it to the correct Video In channel. You should see the Player's screen saver on the TV (if no Disc is in the Player).
- 3** Press **OPEN/CLOSE**  on the front of the DVD Player to open the disc tray.
- 4** Load your Disc in the tray, with the label facing up, and the shiny side facing down. If the Disc (DVD) is two-sided, make sure the label of the side you want to play is facing up. Press **OPEN/CLOSE**  again to close the tray.
- 5** Playback may start automatically. If not, press **PLAY** . If a Disc menu appears, use the , ,  and **OK** buttons or the Number buttons to select features or start playback from a menu. Follow the instructions in the Disc menu.
- 6** To stop playing the Disc, press **STOP** .

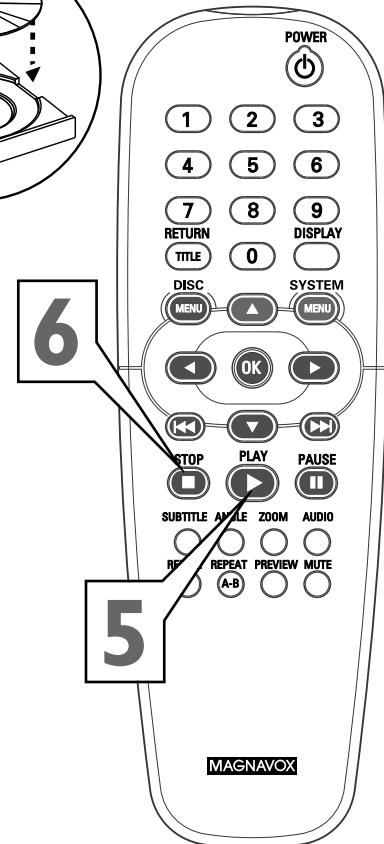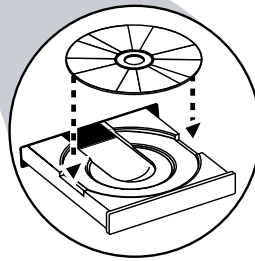

## Playable Discs

This DVD Player will play the following types of Discs:

 DVD (Digital Video Disc)	 Video CD	 CD-R (CD-Recordable)	 DVD+R (DVD+Recordable)
 Audio CD (Compact Disc Digital Audio)	 Super Video CD	 CD-RW (CD-Rewritable)	 DVD+RW (DVD+Rewritable)

## Region Codes

DVDs must be labeled for ALL regions or for Region 1 in order to play on this DVD Player. You cannot play Discs that are labeled for other regions. If one of these logos appears on your DVD or its case, it should play on this DVD Player.



## Color Systems

Recordings are made according to a color system. The most common color system in the United States is NTSC.

This DVD Player is compatible with NTSC and PAL. **Make sure the Discs you play were recorded in NTSC or PAL and your TV is NTSC or PAL compatible.** Look for the color system of the DVD on the DVD or on the Disc case. Set the Player's TV TYPE accordingly. See the owner's manual for details.

NTSC  PAL

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>