
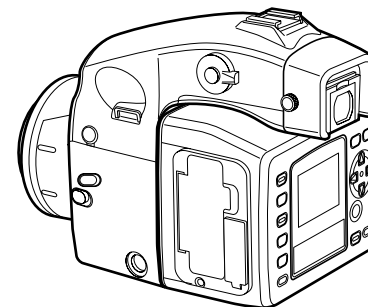


Mamiya

Digital Back

Mamiya ZD Back

Mamiya

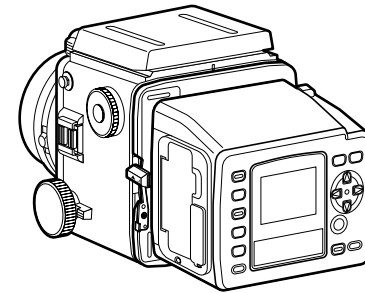

User's Manual

English

DCUG1205N01
Printed in Japan

Foreword

Thank you for purchasing a Mamiya Product. Make sure that you read and understand all of the explanations detailed in this User's manual before using this product. Keep the User's manual in a safe place for future reference.

Testing the camera functions

Make sure that the camera is recording images correctly by taking trial shots before actually using this product.

Mamiya assumes no responsibility for memory data of the photographed images that could not be saved or uploaded due to camera (main unit) or recording medium (memory card) problems.

Copyright

Except for the purposes of personal enjoyment, unauthorized use of the images of the subject that is copyright protected using this product is prohibited. There are also times when use of professional and personal photographic devices is restricted in some performances, shows, and other exhibitions.

Trademark

- Mamiya, Mamiya 645ADF, Mamiya 645ADF II, Mamiya RZ67PRO IID, and MamiyaZD Back are the trademarks of Mamiya digital imaging Co., Ltd.
- Adobe and Photoshop are the trademarks of Adobe Systems Incorporated.
- CompactFlash is a trademark of Sandisk Corporation.
- Windows is the registered trademark or the trademark in the U.S.A. and foreign countries of Microsoft Corporation.
- Macintosh is the registered trademark In the U.S.A. and foreign countries of Apple Computer.
- All other product names are the trademarks or registered trademarks of their respective manufacturers.

Cautionary points on safe operation and handling

Safety cautions

- Please read this “Safety cautions” section in order to operate this product safely and correctly and to prevent any harm coming to the user or any third party.
- The definition of each symbol and display is explained as follows:



Warning

The following refer to where inappropriate use by disregarding these displays can result in serious injury or even death.



Caution

The following refer to where inappropriate use by disregarding these displays can result in injury.



Warning

- The lithium ion battery and its charger are designed exclusively for this product. Only charge this battery using the specified charging system. Make sure that you read and understand the instructions detailed in the User's manual for correct use of the battery and its charger.
- Do not heat or throw the battery into an open fire.
- Do not connect the positive and negative terminals of the battery with metal objects, or carry or store together with metal items or metal accessories.
- Do not use or leave the camera in extremely hot conditions, such as in places where it is exposed to direct sunlight, in sun-heated vehicles or near stoves.
- Do not attempt to weld, deform, modify or disassemble the battery or camera. The terminals may be damaged or the contents scatter.
- Loss of sight can result if any battery acid makes contact with the eyes. If any battery acid does get into the eyes, do not rub them. Wash the infected eyes under clean running water and consult a doctor as soon as possible.
- Do not use in the vicinity of flammable and explosive gases. Refrain from using this product in areas where this type of gas may exist. Fires or explosions can result.
- Keep the camera in a safe place out of the reach of young children. The following cases show where accidents can occur.
 - Accidental strangling from wrapping the strap around the neck.
 - Swallowing the battery or other small items. Consult a doctor immediately in the event any item is swallowed.
- Do not use the camera to observe the sun or any bright light. This can cause eye damage.

Immediately stop using the camera and consult the local sales branch or service center when the following conditions are noticed.
- If the power plug and cord over-heat, emit a burning smell or start to smoke.
- The charger or the AC adapter becomes damaged, wires become severed; or the power plug is damaged or suffers from a faulty connection.

Cautionary points on safe operation and handling

Caution

- Do not touch the AC adaptor, charger, or battery while charging for an extended period. The charger and the battery become warm during the charging process. When the AC adaptor has been used for an extended period, the unit becomes warm. Extended periods of skin contact can produce a low-heat burn.
- Do not use or store in dusty, humid, oily, smoky, or steamy place for extended periods. Fire or electrical shocks can result.
- Do not dismantle or modify this product. This can result in injury or electrical shock.
- Do not allow water or other foreign particles to enter the mechanism of this product. If by chance water enters the unit, there is a possibility of fire or electrical shock. Turn off the main power and remove the battery. Consult your sales branch or nearest service center.
- Do not use in the event the product starts to produce any unusual smells, sounds, or smoke. Taking special care not to burn yourself, remove the battery and consult your sales branch or nearest service center. These can cause fires or burns.
- Do not use with wet hands. There is a danger of electrical shock. Do not try to insert or disconnect the AC adapter with wet hands.
- Make sure that the strap is not caught on anything when carrying the camera. Care should be taken in order to avoid catching the strap on other objects when carrying the camera. This can result in injury or accidents.
- Do not place this product in places with high temperature. This will cause deterioration of the parts and may cause fire.
- Only use the provided AC adapter, charger and batteries. A malfunction of this product or its power system may cause unexpected accidents. The warrantee does not cover any injury sustained from using an unspecified AC adapter.
- Do not damage the cord of the charger or the AC adapter. Always remove and insert by holding the plug. Never remove the plug by pulling on the cord. Do not use with an extension cord.
- If the battery terminals become dirty from sweat or grease, connections may become faulty. Always wipe clean with a clean, dry cloth.
- Do not use this battery with products from other manufacturers.
- Do not remove the battery from the camera immediately after the camera has been used for an extended period. Burns can result.
- In order to prevent short circuiting of the battery terminals, make sure that they are insulated for carrying and storage.
- Remove the battery from this product when it will not be used for long periods. Battery acid leakage can cause heat, fire and injury.

Cautionary points on handling this product

- This product is a precision instrument. Do not drop or use in a rough manner.
- This product is not waterproof and therefore should not be used in or near water. Consult your customer service center as soon as possible if this product comes into contact with water. Use a clean, dry cloth to remove any water or salt particles.
- Never place this product near any magnetic or motorized devices that produce strong magnetic fields. Avoid using or placing this product near radio towers, etc., that produce radio waves. Malfunction or damage to recorded data may result if the unit is exposed to electromagnetic waves or when used inappropriately.
- Keep this product away from direct sunlight or in areas where the temperature may exceed the manufacturer's standards. Avoid exposing this product to these conditions as damage can occur.
- Do not try to dismantle this product. This product is equipped with precision circuitry.
- Do not use cleaners including organic solvents to clean this product. Consult your nearest customer service center if this product becomes soiled.
- Do not touch the electrical connection points of this product. This can result in corrosion of the points. Corrosion of the points can result in the malfunctioning.
- Suddenly moving this product from particularly cold areas to hot areas can result in condensation buildup within this product. To avoid condensation buildup within this product, it is suggested that this product be placed inside a plastic bag and sealed. Remove this product from the bag when the conditions are suitable for this product to be exposed to the outside environment.
- Condensation can cause this product to malfunction and breakdown. Do not use when condensation is present. Remove the lens, memory card, and battery, and refrain from use until the condensation clears from inside this product.
- Remove the battery and store this product in a cool, well-ventilated area when it will not be used for an extended period.
- Avoid storing this product in areas such as laboratories, etc., where chemicals could cause this product to rust or corrode.
- Inspect this product before use after it has been stored for an extended period. Before using this product after extended storage or use overseas, it is important that this product be inspected by the owner or customer service center to ensure that this product is operating correctly.
- The LCD screen has been manufactured employing precision technology with 99.99% effective pixels, however, pixels at 0.01% and below or black/red spots can appear. This is not considered to be a malfunction. This will not affect any recorded images.
- One of the characteristics of LCD screens is that the display reaction time will slow when operated in low temperatures and may turn dark in high temperatures. Normal operation should resume when the temperature returns to normal levels.

Cautionary points on safe operation and handling

Safe operating cautions

Usable memory cards

The following memory cards have been verified for compatibility.

- SanDisk CF Card: Ultra II/Extreme III
- SanDisk SD Card: Ultra II/Extreme III
- LEXAR MEDIA CF Card: X40 and over
- Matsushita Electrics SD Card: 5MB/s to 2GB
- Microdrive CF Card: 2GB, 4GB

Any one of the memory cards with over 256MB can be used.

Check with the specific memory card manufacturer for any questions regarding the operation or functionality of a memory card.

Memory cards other than those stated above have not been verified for compatibility.

Safe operation of Memory cards

- Memory cards are precision instruments. Do not drop or allow them to be exposed to strong vibrations. This can corrupt data that is stored in the memory card.
- Do not use or store around television sets, speakers, or magnets where there are high levels of static electricity. There is the possibility of recorded image data being erased from the memory card.
- Do not leave in areas where exposed to direct sunlight or near heating devices, etc. The memory card may become deformed.
- Do not spill any liquid onto the memory card.
- In order to protect important image data stored within the memory card, always store the memory card in its intended case.
- Do not store in hot, dusty, or areas of high humidity.

Caution

Cautions when throwing away/giving away memory cards

- Due to the Format and Delete function of this product and personal computers, file information can be altered but the data may not be completely deleted. Data can be recovered through restoration software. Important recorded data may remain and is subject to revelation after disposing of/giving away the card. In order to avoid these problems, we recommend that the memory card be physically destroyed or special data deletion software (available separately) be used to delete any remaining data completely before disposing of/giving away the memory card.
The customer must assume the responsibility for data stored within the memory card.

About this User's manual

- Button operation and setting positions explained in the following use pictorials to display the buttons, dials and marks on this product.
- The ** in the bracketed figures (**) refer to reference pages.
- Explanations are provided on the assumption that the menu functions are in default mode.

The following marks shown in the columns are explained by each of the following.

Important: Refers to cautionary points to help avoid problems when taking photos.

MEMO: Points that are based on fundamental operations that should be remembered.

Contents

Foreword	2
Cautionary points on safe operation and handling	3
Contents	8
Before Taking Pictures	
Digital Back "Mamiya ZD Back"	12
Checking the Contents of the Package	13
Names of Parts	14
Front View	14
Back View	14
Left-side View	15
Bottom View	15
Digital LCD Panel	16
Buttons and Toggle Key Operations	16
Preparing the Mamiya ZD Back	17
Attaching the Mamiya ZD Back to the Camera (for the 645AFD II)	17
Attaching the Mamiya ZD Back to the Camera (for the RZ67PRO IID)	18
Removing the Mamiya ZD Back (for the 645AFDII)	20
Removing the Mamiya ZD Back (for the RZ67PRO IID)	20
Preparing the Lithium Ion Battery PB401 for Mamiya ZD Back	21
Removing the Battery	24
Date Settings and Preparing a Memory Card	25
Removing the Memory Card	28
IR Cut Filter YB401 (Standard)/Low-pass Filter YC401 (Optional)	29
Basic Setting	
Image-Related Settings	32
RAW Data	32
Image Size	32
Setting the Quality and Size	33
Picture Count	35
Number of Frames for Continuous Shooting	36
Turning the camera off (L) while saving to the memory card	36
Color Space	37
Color Space	37
White Balance	38
Color Temperature	39
Mired	40
Customized White Balance	41
ISO Sensitivity (Image Sensitivity)	43

Setting the Color Mode	44
Setting the Sharpness, Tone and Saturation	45
Selecting a Memory Card and Creating Folders	47
Creating a Folder	48
Automatically Creating a Folder	49
File Numbering	50
Folder and File Number Display	51
Playing Back Images	
Playing Back Images	54
Playing Back Frames	54
Zoom-in Display	55
Displaying the Information Screen	56
Erasing Images	58
Erasing 1 Frame	58
Erasing All Images (Entire Folder)	59
Protecting Images	60
Protecting Images	60
Menus	
Menu Screen Operations	62
Recording Menu	63
Recording Menu	63
Playback Menu	67
Playback Menu	67
Setup Menu	75
Setup Menu	75
Connecting to the PC	
Connection	84
Connecting to the PC	85
Taking Photographs with the Use of the Software	85
Transferring Image Data	85
Connecting to the TV	88
Maintenance	
Maintenance	90
Cleaning the filter	90
Mamiya ZD Back maintenance/checks	90
Troubleshooting	
Being Prepared for Problems	92
Error Messages and Recovery	94

Appendix

Digital Terminology	96
Index	101
Specifications	104

Before Taking Pictures

This chapter describes what you need to do before you start using this unit for the first time.

Digital Back “Mamiya ZD Back”

By replacing the magazine to the Mamiya ZD Back, the Mamiya 645ADF, Mamiya 645ADF II, and Mamiya RZ67PRO IID can be used as digital cameras.

MEMO


The optional Digital Back Adapter HX701 (sold separately) is required to attach the Mamiya ZD Back to the RZ67PRO IID.

Camera and Digital Back Settings

	Camera Setting	Digital Back Setting
RZ67 PRO IID	<ul style="list-style-type: none">• Shutter speed and aperture setting• Shutter release	<ul style="list-style-type: none">• Settings about digital images• Following settings can be adjusted when connecting the camera to a PC and opening a capture screen with Mamiya Digital Photostudio.<ul style="list-style-type: none">• Shutter release• ISO sensitivity• White balance setting• Storage mode and storage size• Image rotating
645AFD II	<ul style="list-style-type: none">• Shutter speed and aperture setting• Shutter release	<ul style="list-style-type: none">• Settings about digital images• Following settings can be adjusted when connecting the camera to a PC and opening a capture screen with Mamiya Digital Photostudio.<ul style="list-style-type: none">• Shutter speed• Aperture setting• Shutter release and AF operations• ISO sensitivity• White balance setting• Storage mode and storage size• Image rotating


Checking the Contents of the Package

Open the package containing the camera and accessories and check that it contains all the items shown below.

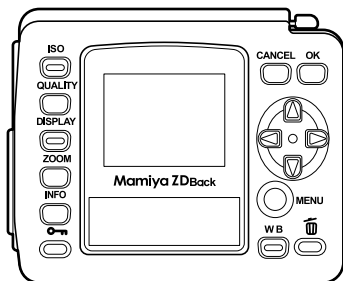

Mamiya ZD Back

- Mamiya ZD Back Soft Case KD403
- IEEE1394 cable BL301

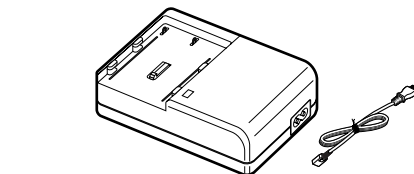


Battery charger PC401
Power cord



Lithium ion battery
PB401



 
Mamiya Digital PhotoStudio
(RAW data processing
software) BS301



Focusing Screen Type A SV403



Mamiya ZD Back User's
Manual (this manual)

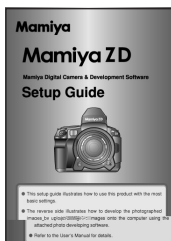

Mamiya ZD Setup Guide



Mamiya Digital
PhotoStudio User's
Manual


- Battery charger PC401 User's Manual
- Lithium ion battery PB401 User's Manual
- IR Cut filter/Low Pass filter User's Manual

MEMO

- A memory card for recording images must be purchased separately.
- The low-pass filter YC401 for Mamiya ZD Back must be purchased separately.
- Protective Cover KE403 for Mamiya ZD Back, viewfinder screen (type A) SV403, IR cut filter YB401 are attached to this product.

Names of Parts


Front View

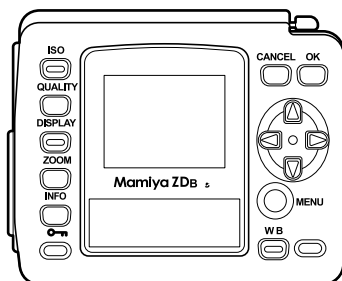

Back View

Left View


Memory card slot cover (P.26)

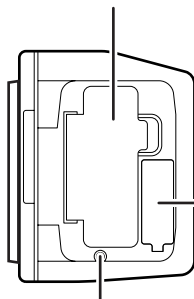

Terminal cover (P.84)

Memory card access
lamp (P.36)

Bottom View

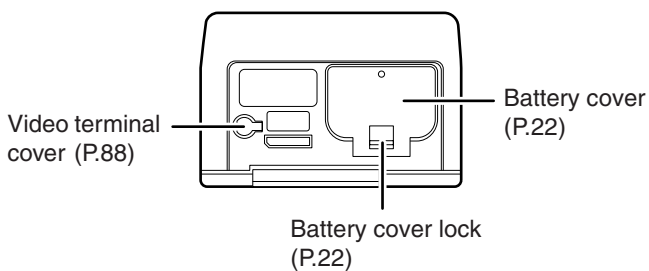


Video terminal
cover (P.88)

Battery cover
(P.22)


Battery cover lock
(P.22)

Names of Parts

Digital LCD Panel

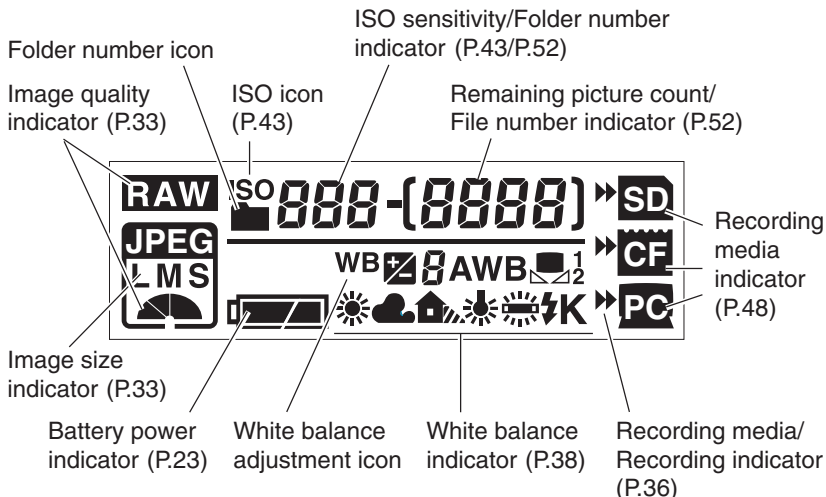

Buttons and Toggle Key Operations

The following functions can be set by various combinations of the toggle keys  and buttons.

	Indicator	Toggle key
ISO button	ISO	Sets the ISO sensitivity
Quality button	Quality icon	Selects the image quality
Display button	Image	Selects an image
Zoom button	Zoom position mark	Moves position up, down, left and right
Info button	Shooting data & histogram	Selects shooting data and histogram display (up/down)
White balance button	WB icon	Selects the white balance (up/down) Adjusts the white balance (left/right)/Selects color temperature (excluded the pre-set white balance)
MENU button	MENU	Moves the menu items up, down, left and right


Preparing the Mamiya ZD Back

Attaching the Mamiya ZD Back to the Camera (for the 645AFD II)

1. Remove the magazine from the camera.


MEMO

Refer to the instructions for the 645AFDII when removing the magazine.

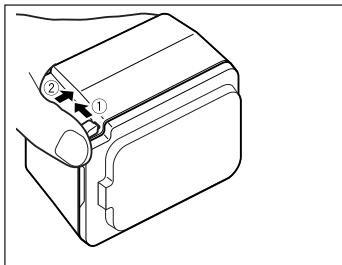


2. Remove the cap from the Mamiya ZD Back.

- ① Pull the detachment lever.
- ② Press the lever into the unit while simultaneously pulling it out.
The cap can then be detached.

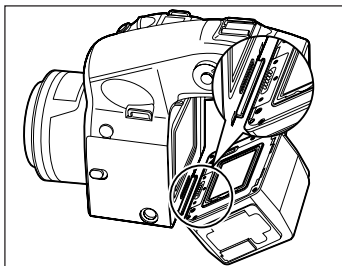

3. Align the fitting groove on the bottom of the Mamiya ZD Back with the holder attachment fitting on the bottom of the camera.

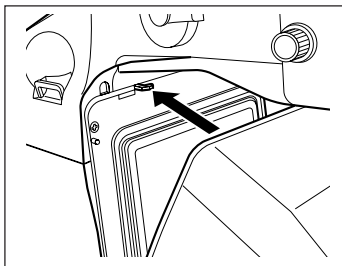

4. Press the Mamiya ZD Back onto the camera, and then insert the fitting groove at the top into the holder attachment fitting on the top of the camera to secure it in place.

The noise of the shutter being set in place will be heard when the camera is turned on.

Preparing the Mamiya ZD Back


Attaching the Mamiya ZD Back to the Camera (for the RZ67PRO IID)

Get the Digital Back Adapter HX701 (sold separately) ready.

1. Remove the magazine from the camera.


MEMO

Refer to the instructions for the RZ67PROIID when removing the magazine.

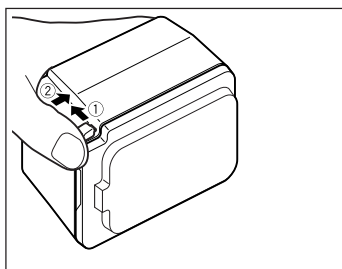


2. Remove the cap from the Mamiya ZD Back.

- ① Pull the detachment lever.
- ② Press the lever into the unit while simultaneously pulling it out.
The cap can then be removed.

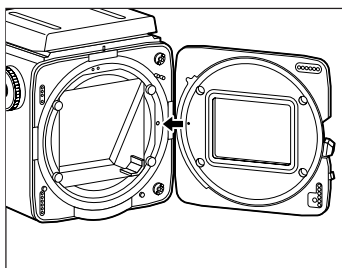


3. Align the orange circle on the Digital Back Adapter HX701 (sold separately) with the orange circle on the rear of the camera.

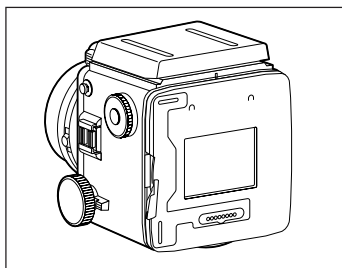


4. Attach the Digital Back Adapter HX701.

- ① Press the lever into the Digital Back Adapter HX701.
- ② Press the stopper as far as it will go in the direction of the arrow.

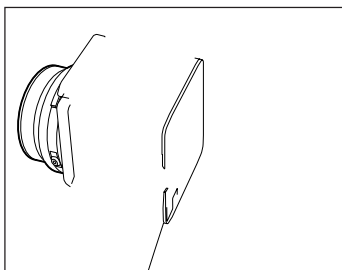


5. Align the attachment fitting groove on the bottom of the Mamiya ZD Back with the attachment fitting on the bottom of the adapter.

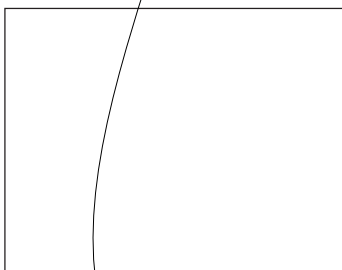

6. Press the Mamiya ZD Back onto the camera, and then insert the attachment fitting groove at the top into the attachment fitting on the top of the adapter to secure it in place.

Preparing the Mamiya ZD Back


Removing the Mamiya ZD Back (for the 645AFDII)

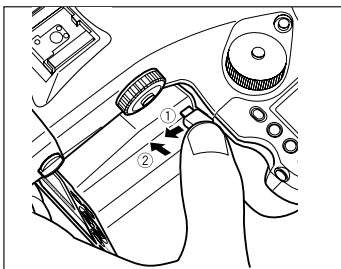

1. Remove the Mamiya ZD Back from the camera.


- ① Pull the detachment lever.
 - ② Press the lever into the unit while simultaneously pulling it out.
- The Mamiya ZD Back can then be detached from the camera.

Removing the Mamiya ZD Back (for the RZ67PRO IID)

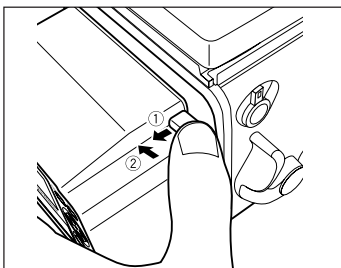

1. Remove the Mamiya ZD Back from the Adapter.

- ① Pull the detachment lever.
 - ② Press the lever into the unit while simultaneously pulling it out.
- The Mamiya ZD Back can then be detached from the adapter.

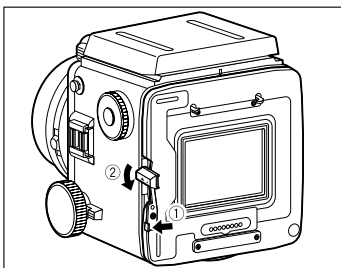

2. Remove the Digital Back Adapter HX701.

- ① Push the lever on the Digital Back Adapter HX701 outwards.
 - ② Press the stopper as far as it will go in the direction of the arrow.
- The adapter can then be detached from the camera.

MEMO

The Digital Back Adapter HX701 can be detached with the Mamiya ZD Back fitted.

Preparing the Mamiya ZD Back


Preparing the Lithium Ion Battery PB401 for Mamiya ZD Back

1. Plug in the battery charger PC401.

Plug one end of the power cord into the battery charger PC401 and plug the other end into a power outlet.

2. Charge the battery.

Insert the Lithium ion battery PB401 supplied with the camera into the battery charger PC401 as illustrated. The charging lamp lights and charging starts automatically. When the charging lamp lights-out, charging is finished.

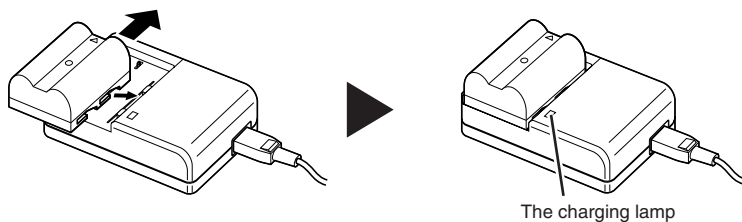

MEMO

- It will take about two hours to charge the battery for the first time when new.
 - For instructions on how to use the battery charger PC401, refer to the manual for the charger.
-

Pre

3. Lo

1


0

2 1




 
this unit off before lo

4. Check the battery power indicator.

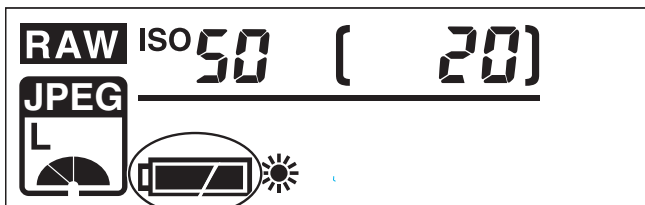- 1 Check the battery condition on the Digital LCD panel.




Battery power indicator

	The battery is sufficiently charged.
	There is little power remaining. Have a charged battery ready. (The camera will still operate.)
	There is very little power remaining. Replace the battery with a charged battery.
	When the battery is spent, "batt" and the battery power indication flash on the Digital LCD panel and viewfinder LCD when the shutter release button is pressed.


Preparing the Mamiya ZD Back

Removing the Battery

1. Press the battery cover lock to open the battery cover.

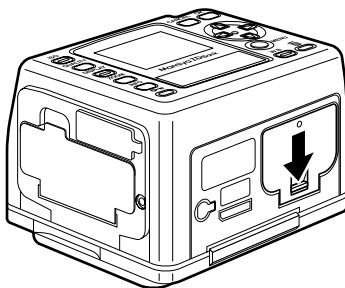

2. Press the and remove the battery.

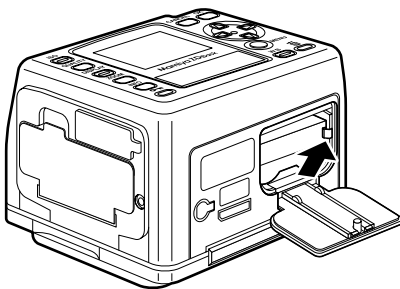

Caution

Be sure to turn this unit off before loading or unloading the battery.


 
Date Settings and Preparing a Memory Card

1. Set this unit date and time.


- 1 Press the MENU button to display the menu, press [▶] on the toggle key to select [] (Setup Menu) and press [▼] on the toggle key.




- 2 Use the toggle key [◀▶] to select [9] Date/Time and press the OK button.

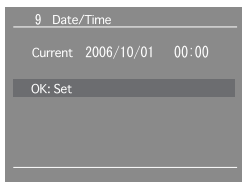

- 3 The current date and time is displayed. Press the OK button.

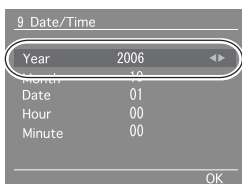

- 4 The year entry field is selected. Press [◀▶] on the toggle key to set the year.

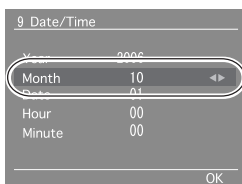


- 5 After setting the year, press [▼] on the toggle key to select the month.
- 6 Select the month, day, hour and minutes in the same way.
After the date and time are set, press the OK button to save the settings.


Preparing the Mamiya ZD Back

2. Insert a memory card (purchased separately).


- 1 Hold a finger on the top of memory card slot cover, and pull it in the direction of the arrow.

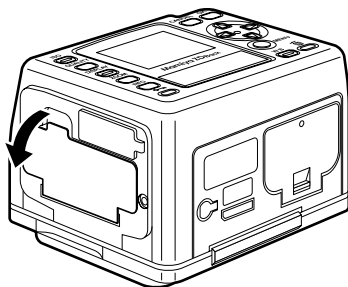

- 2 Insert the memory card as far as it will go, making sure it is oriented as illustrated.

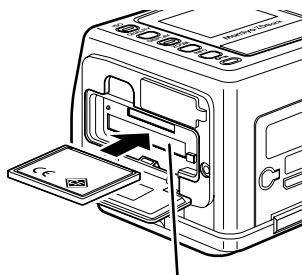

Compact flash (CF) card slot

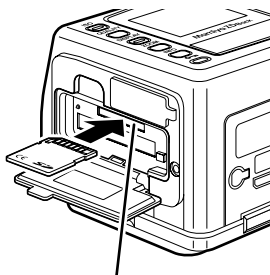

SD card slot

- 3 Close the memory card slot cover.

MEMO

- This camera uses an SD card or CF card.
 - SD memory cards with a capacity of up to 2GB can be used.
-

Important


 
Use a CF card with a capacity of 256MB or more or an SD card with a capacity of 256MB (5MB/S) or more.

3. Format the inserted memory card.


- 1 Press the MENU button to display the menu, press [▶] on the toggle key to select [] (Setup Menu) and press [▼] on the toggle key.



- 2 Use the toggle key keys [◀▶] to select [11] Format and press the OK button.

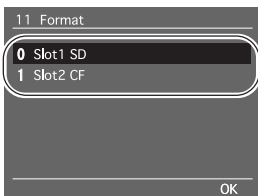

- 3 Press [▲▼] on the toggle key to select the slot that the memory card has been inserted in, and press the OK button.

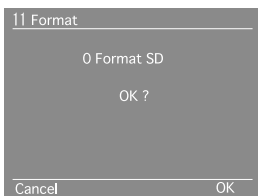

- 4 The confirmation dialog is displayed. Press the OK button to format.

MEMO

- To cancel formatting, press the Cancel button. The display returns to Step 2.




Important

- All image data stored on the memory card is deleted by formatting.
- Once deleted, image data cannot be restored.
- To avoid losing important data, check the images and data stored on the memory card before formatting (initializing).
- All protected images are also deleted by formatting.

Preparing the Mamiya ZD Back


Removing the Memory Card

1. Open the memory card slot cover.

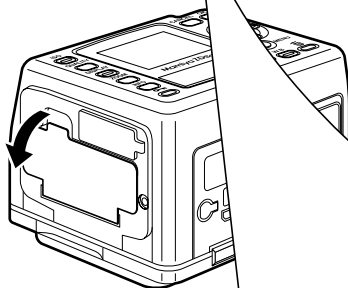


2. Remove the memory card.

- 1 To remove a CF card, press the eject button to make the button pop out. Press the button and pull it slowly out of the slot.

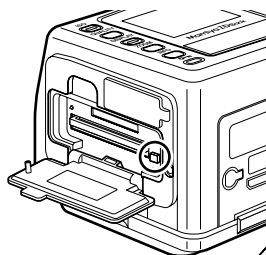

- 2 To remove an SD card, press the eject button lightly to eject it and pull it slowly out of the slot.

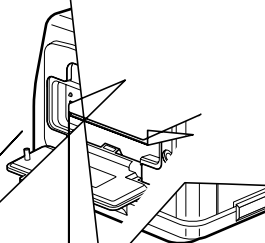


IR Cut Filter YB401 (Standard)/Low-pass Filter YC401 (Option)

It is possible to replace the IR cut filter and low-pass filter on this unit in accordance with the conditions of the subject being photographed. Refer to the instruction manual supplied with the IR Cut Filter and Low-Pass Filter for the replacement procedure.

IR Cut Filter YB401


- The IR cut filter YB401 only allows visible light to pass through it, cutting out infrared and other non-visible light.
- Using the IR cut filter YB401 produces higher levels of image resolution.
- The IR cut filter YB401 does not reduce false colors, moiré and other phenomena that are unique to digital images.

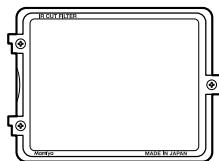


Low-Pass Filter YC401

- The low-pass filter YC401 reduces false colors, moiré and other phenomena that are produced depending on the subject and which are unique to digital images, and is therefore suitable for normal photography.
- Low-pass filters have the same capabilities as IR cut filters.

Removing the IR Cut Filter YB401 for Mamiya ZD Back

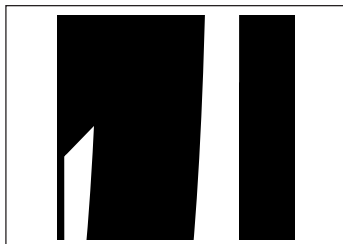

 
1. **Press the surface of the filter in the direction of the arrow while take care not to scratch it.**



2. **Keep pressing down on it and lift out the filter.**

The IR Cut Filter YB401 for Mamiya ZD Back can now be detached.

IR Cut Filter YB401 (Standard)/Low-pass Filter YC401 (Option)

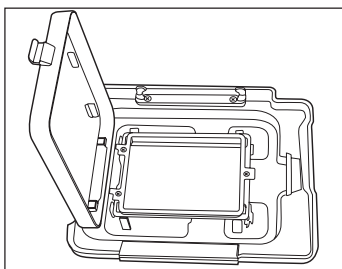


3. Store the IR Cut Filter YB401 for Mamiya ZD Back in the filter storage case of the Mamiya ZD Back cap KE403.

Attaching the IR Cut Filter YB401 for Mamiya ZD Back



1. Invert the filter so that the side engraved "IR CUT FILTER" is facing back.

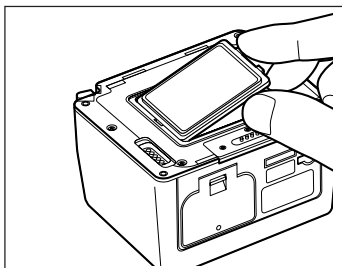

2. Align the notch on the filter attachment with the protruding part of the filter and press it into place.
The IR Cut Filter YB401 for Mamiya ZD Back is now attached.

Basic Setup

The functions available with the Mamiya ZD Back can be set up to match the style of photography required. This chapter contains explanations on the basic settings for photographic styles.

Image-Related Settings

Image Quality

You can select the quality of the images you capture.

There are three image settings to choose from: RAW uncompressed format, JPEG compressed format and RAW+JPEG format.

Quality	Description
RAW	Images are recorded in RAW (uncompressed) format.
RAW + JPEG	Images are recorded in RAW (uncompressed) and JPEG (compressed) format. For JPEG format, you can choose from 3 images sizes (L, M, S) and 3 compression rates (FINE, NORMAL, BASIC).
JPEG	Images are recorded in JPEG (compressed) format. For JPEG format, you can choose from 3 images sizes (L, M, S) and 3 compression rates (FINE, NORMAL, BASIC).

RAW Data

RAW data is image data that has not undergone any processing in this unit and has the extension .MEF. To view RAW image data on a computer, it must first be converted to processing, editing and general use format (TIFF, JPEG) by Mamiya Digital PhotoStudio software. This process is called “developing.”

MEMO

- RAW+JPEG images can be erased simultaneously, or you can use the menu settings to erase them separately. (Playback Menu [10] Select File Type to Erase P.129)
-

Image Size

You can choose the size of the images you capture. A large image size is best if you want to print large pictures.


Choose the image size when selecting the image quality.

Quality mode	Image size	Approximate print size	File size	
RAW	5328×4000 pixels Approx. 21,300,000 pixels	—————	Approx. 35MB	
JPEG	L 5328×4000 pixels Approx. 21,300,000 pixels	386.7 × 290.3mm	FINE	Approx. 10MB
	M 4096×3072 pixels Approx. 12,600,000 pixels		NORMAL	Approx. 5MB
			BASIC	Approx. 2.5MB
	S 3008×2256 pixels Approx. 6,800,000 pixels	297.3 × 222.9mm	FINE	Approx. 6MB
			NORMAL	Approx. 3MB
			BASIC	Approx. 1.5MB
		218.3 × 163.7mm	FINE	Approx. 3MB
			NORMAL	Approx. 1.5MB
			BASIC	Approx. 0.8MB

* The image file size varies depending on the subject and shooting environment.

* The print size is the approximate size when printing in 350dpi resolution.

Setting the Quality and Size

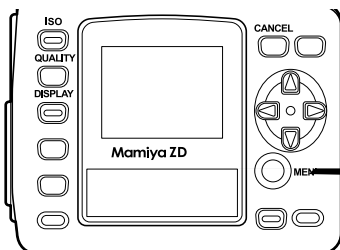

1. Press the **QUALITY** button.

The image quality indicator appears on the digital LCD monitor.

* JPEG Icon



Image size (L, M, S)

File size (Compressed mode)

FINE :

NORMAL:

BASIC :

The display will return to the normal screen when any button other than the [QUALITY], [OK] or [Cancel] buttons is pressed.

2.

3.

4.



RAW

RAW

RAW

Picture Count

The file size is determined by the image size and compression rate. The number of frames that can be saved to the memory card varies depending on the image size and compression rate.

Number of frames that can be saved to the memory card

Quality mode	Image size	File size	Picture count		
			1GB memory	2GB memory	4GB memory
RAW	—	—	27 frames	56 frames	112 frames
RAW + JPEG	L	FINE	21 frames	43 frames	87 frames
		NORMAL	22 frames	47 frames	95 frames
		BASIC	24 frames	50 frames	101frames
	M	FINE	22 frames	46 frames	92 frames
		NORMAL	24 frames	50 frames	101 frames
		BASIC	25 frames	52 frames	105 frames
	S	FINE	24 frames	50 frames	100 frames
		NORMAL	25 frames	53 frames	106 frames
		BASIC	26 frames	54 frames	108 frames
JPEG	L	FINE	94 frames	195 frames	390frames
		NORMAL	152 frames	315 frames	629 frames
		BASIC	266 frames	551 frames	1101 frames
	M	FINE	128 frames	266 frames	532 frames
		NORMAL	257 frames	533 frames	1065 frames
		BASIC	413 frames	856 frames	1709 frames
	S	FINE	238 frames	494 frames	988 frames
		NORMAL	477 frames	989 frames	1976 frames
		BASIC	766 frames	1587 frames	3170 frames

* The number of frames that can be taken varies depending on the shooting conditions.
The above figures are approximate.

* The figures for RAW+JPEG show the total frame count.

Image-Related Settings

Number of Frames for Continuous Shooting

Approximate number of frames taken in succession with the battery fully charged

Temperature	Frame Count
Normal temperature (20°C)	Approx. 450 frames
Low temperature (0°C)	Approx. 70 frames

* Under Mamiya test conditions based on CIPA standard conditions.

MEMO

- The picture count may be reduced depending on the actual shooting conditions, amount of LCD monitor use, etc.
- Battery performance deteriorates in low temperatures.
When using the camera in cold regions, have a spare battery ready and keep it warm in your pocket.
- When taking a lot of pictures, be sure to have a spare battery at hand.
- The shape of plugs and power outlets varies from country to country. When traveling abroad, be sure to check the shape of the outlet beforehand and take a correctly shaped adapter plug for the battery charger.

Turning the camera off (L) while saving to the memory card

If the camera is turned off (shutter release mode is set to [L]) while the memory card access lamp is lit, data saving continues until completed.

The remaining unsaved picture count appears on the digital LCD panel and top LCD panel.

The camera turns off when saving is completed.



Color Space

Color space refers to the area where colors are reproduced. The color reproduction area varies depending on the type of digital camera, monitor, printer or other input/output device. To match the colors from input to output, it is necessary to adjust the colors reproduced by each device by correcting/managing the different color reproduction areas.

Adobe RGB color space has a broader color reproduction area than sRGB and is mainly used for business purposes, such as commercial printing. When images taken in Adobe RGB mode are output on an sRGB device, they will appear slightly paler than output images taken in sRGB mode.


Color Space

You can set the color space of JPEG images. The default setting is [sRGB]. RAW images can be specified when developing images using Mamiya Digital PhotoStudio.


Setting	Description
sRGB	Sets the color space to sRGB. Suitable for general image use.
AdobeRGB	Sets the color space to Adobe RGB. With a broader color reproduction area than sRGB, it is suitable for uses such as commercial printing. However, the same gamut can only be reproduced on an image output device with the Adobe RGB color reproduction area.

NOTE:

- When sRGB or AdobeRGB color space is selected in the this unit Setup menu, the ICC profile is not embedded in JPEG images captured with this unit. When editing JPEG images captured with this unit using applications other than Mamiya Digital PhotoStudio, be sure to use the same work space as the color space that was selected when the pictures were taken.

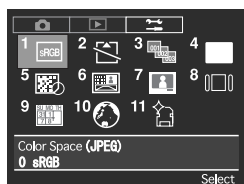

1. Select [1 Color Space (JPEG)] on the Setup menu and press the OK button.

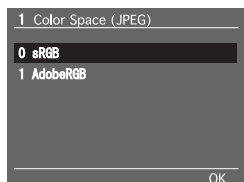









2. Press [▲] [▼] on the toggle key to select the color space.
3. Press the OK button to set.

White Balance


The adaptability of the human eye enables us to see white as white regardless of the light source, such as daylight, cloudy skies, incandescent lighting or fluorescent lighting. To capture white as white in the same way as the human eye in images taken with a digital camera, the camera must be adjusted to suit the light conditions under which the subject is captured.

Available white balance settings

Indicator	White balance	Color temperature	Description
AWB	Auto	Approx. 2900_6000K	The camera adjusts the white balance automatically.
	Daylight	Approx. 5200K	For taking pictures in fine weather with the sun behind the camera.
	Cloudy	Approx. 6000K	For taking pictures in overcast weather.
	Shade	Approx. 7500K	For taking pictures in the shade on a sunny day.
	Electric light	Approx. 3200K	For taking pictures under incandescent light.
	Fluorescent light	Approx. 4200K	For taking pictures under white fluorescent light.
	Flash	Approx. 5500K	For taking pictures using the flash.
	Customized white balance 1	Approx. 2900_6000K	For adjusting the white balance according to the shooting environment.
	Customized white balance 2	Approx. 2900_6000K	For adjusting the white balance according to the shooting environment.
K	Color temperature	Approx. 2800_10000K	For adjusting the color temperature.

* Minor adjustments can be made to the color temperature from Auto to Flash.

* The display mark will be displayed in the sequence listed in the above chart.

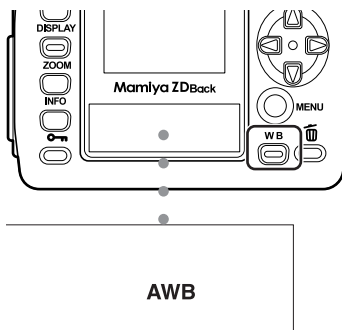


- 1. Press the WB button.**
The white balance indicator appears on the digital LCD panel.
- 2. Press [▲] [▼] on the toggle key to display the white balance indicator you want to set.**
- 3. Press the WB button to set.**
The display will return to the normal screen when any button other than the [WB], [OK] or [Cancel] buttons is pressed.

Color Temperature

Light has various hues and may be reddish or bluish, for example. Reproducing such hues requires an objective gauge (scale). The color temperature describes the hue by the absolute temperature (K: kelvin).

The higher the color temperature, the bluer the hue and the lower the color temperature, the redder the hue.

Approximate color temperature

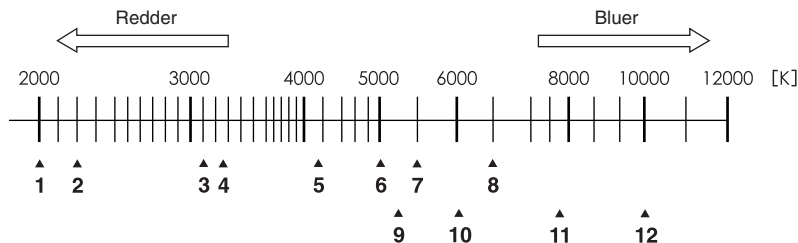

1 : Candlelight

2 : Oil lamp

3 : Incandescent lamp

4 : Halogen lamp

5 : White (fluorescent lamp)

6 : Daytime white (fluorescent lamp)

7 : Flash

8 : Daylight color (fluorescent lamp)

9 : Sunlight

10 : Cloudy

11 : Shade

12 : Fine weather

Minor Adjustment of White Balance

You can make minor adjustments to the white balance settings for auto, daylight, cloudy, shade, electric light, fluorescent light and flash in the range of ± 3 decamired steps. Adjusting in the plus direction produces a reddish tinge, while adjusting in the minus direction produces a bluish tinge.





1. Press the WB button.

The white balance indicator appears on the digital LCD panel.

White Balance



WB  AWB

2. Press [] [] on the toggle key to select the number of adjustment steps.

When an adjustment is made, the adjustment icon +/- and number of steps appear. The number displayed with the adjustment icon indicates the number of adjustment steps.

3. Press the WB button.

Setting the Color Temperature

You can set the color temperature used for the white balance by the color temperature setting (kelvin value).





5200

K

1. Press the WB button on the back of this unit.

The WB indicator appears on the LCD monitor.

2. Press [] [] on the toggle key to select the color temperature setting [K].

3. Press [] [] on the toggle key to select the color temperature (kelvin value) you want to set.

Press and hold down the toggle key to change the color temperature continuously.

4. Press the WB button.

Trial Shot

Check that the color temperature you have set is the correct white balance for the shooting conditions by taking a test shot using the white balance set by the color temperature setting.


Mired

The color temperature of the light source is expressed in kelvins (K), but it does not correspond to the color difference of the light source.


A difference of 500K in the high color temperature area is very different from a difference of 500K in the low color temperature area. The mired is a measure for expressing this breadth of variation. The mired value is the reciprocal of the color temperature multiplied one million times.

Customized White Balance

Use the customized white balance when the desired white balance cannot be obtained by the manual white balance settings or color temperature settings. Two customized white balance settings can be saved. This function is useful when taking pictures in a limited color temperature environment.

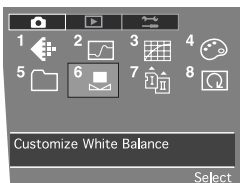


1. Press the MENU button to display the menu
2. Use the toggle key to select [6 Customize' white balance] in the Recording menu and press the OK button.

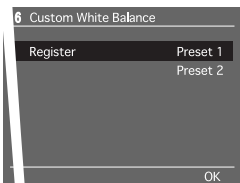

3. Select customized white balance [1] or [2] in the customize window and press the OK button.


Customized white balance [1] is used in this explanation.

The Custom White Balance window appears.

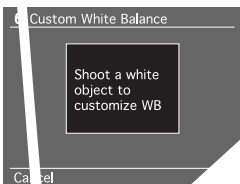

4. Aim the camera so that a white or gray object fills much of the picture area as possible and take the picture.

The customized white balance data appears on the LCD monitor.

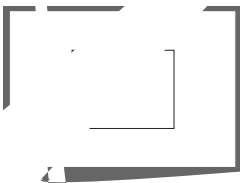

5. Check that the white or gray object is inside the frame in the customize window and press the OK button.

Half-press the shutter release button or press the MENU button to return to the previous screen.

White Balance

Important

- The white balance can be customized in any exposure mode, but auto mode is recommended.
 - The white balance can be customized without focusing (∞ can be used).
 - Take the white or gray object in standard exposure.
If excessively under- or overexposed, the correct customized white balance may not be obtained.
 - Select as achromatic an object as possible when customizing the white balance.
As photocopying paper and other OA paper contains a fluorescent coating, the correct customized white balance may not be obtained.
 - If the captured white or gray object is smaller than the frame in the customize window, the correct customized white balance may not be obtained.
 - The image used for customizing the white balance is not saved.
-

Using the Customized White Balance




1. Press the WB button.
2. Press [Δ] [∇] on the toggle key to select customized white balance [1].
or [2].
3. Press the WB button to set.
4. Take the picture.

ISO Sensitivity (Image Sensitivity)

The ISO sensitivity (image sensitivity) is a numeric indication of the degree to which the image sensor reacts to light. The higher the number, the greater the sensitivity to light and suitability to taking pictures in low light where a fast shutter speed is required. Greater sensitivity, however, is accompanied by some loss of quality, apparent as noise, color noise or grainy images.

The standard Mamiya ZD Back film speed is ISO 50. The recommended ISO sensitivity is ISO 50 to ISO 100 to capture images with low noise. The film speed can be adjusted in 1/3 steps from ISO 50 to ISO 400, but selecting a film speed above ISO 200 may result in visible noise or grainy images. Use only when you require a fast shutter speed in low light conditions.

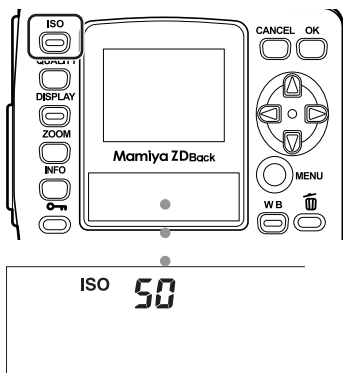

1. Press the ISO button.

The ISO icon and film speed appear on the digital LCD panel.

2. Press the toggle keys to select the film speed.

The display will return to the normal screen when any button other than the [ISO], [OK] or [Cancel] buttons are pressed.

3. Press the ISO button to set.

You can also press any button other than the toggle key  to set.


Important

- Selecting a high ISO sensitivity will result in greater noise, such as color noise or graininess.
- Taking pictures with a high film speed under long exposure conditions will produce more noise, such as color noise.
- More noise may appear in images when a high film speed is used in a high temperature environment.
- Use of the noise reduction function is recommended when using a film speed higher than ISO200. (P.78)


Setting the Color Mode

You can set the color reproduction of the images you capture. There are four color modes to choose from: standard, portrait, landscape and products. The default setting is standard mode.

Color mode	Description
Standard	Produces the most natural color tones. Suitable for most pictures.
Portrait	Emphasizes skin tones. Suitable for portrait pictures.
Landscape	Emphasizes bright greenery and blue skies. Suitable for landscape pictures.
Products	Emphasizes primary colors. Suitable for pictures of products.

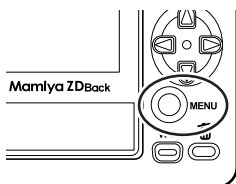

1. Press the **MENU** button to select the recording menu.

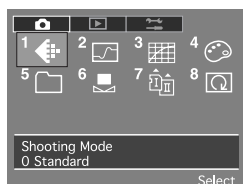

2. Press **[▲]** **[▼]** on the toggle key to select **[1 Shooting Mode]** in the Recording menu and press the **OK** button.




3. Press **[▲]** **[▼]** on the toggle key to select the desired color mode.
4. Press the **OK** button to set.


Setting the Sharpness, Tone and Saturation

Sharpness

You can adjust the sharpness to obtain sharply defined images.
The default setting is None.

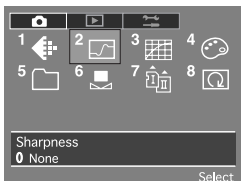


1. Press the MENU button. Press the toggle keys to select [2 Sharpness] in the recording menu and press the OK button.

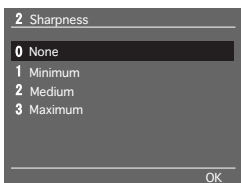


2. Press [▲] [▼] on the toggle key to select the desired sharpness.
3. Press the OK button to set.

Tone

You can adjust the tone of images. Select Low to reduce the contrast and High to increase the contrast.
The default setting is Normal.

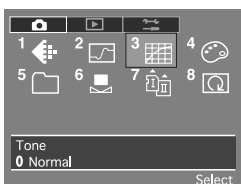

1. Press the MENU button. Press the toggle keys to select [3 Tone] in the recording menu and press the OK button.

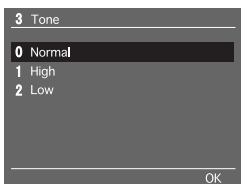


2. Press [▲] [▼] on the toggle key to select the desired tone.
3. Press the OK button to set.

Setting the Sharpness, Tone and Saturation


Saturation

You can adjust the saturation of images. Select High to increase the saturation and obtain bright images and Low to reduce the saturation.

The default setting is Normal.

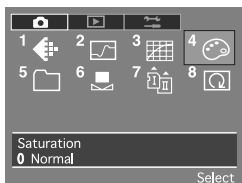

1. Press the MENU button. Press the toggle keys to select [4 Saturation] in the recording menu and press the OK button.

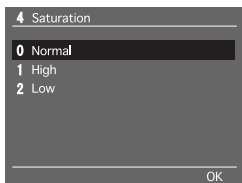

2. Press [▲] [▼] on the toggle key to select the desired saturation.

3. Press the OK button to set.

Important


- Any changes you make to the sharpness, tone and saturation are reflected in the JPEG images produced by the camera.
 - For RAW images, the settings are saved as the default settings when the images are opened with Mamiya Digital PhotoStudio.
-

You can use two types of memory card in this unit, a CF card and an SD card. The default setting is the slot that contains a card.


If both a CF card and an SD card are inserted when the default setting is set, priority is given to the SD card.

[▶▶] will be displayed by the digital LCD panel's memory card mark that has been specified as the storage destination.

Selecting a Memory Card

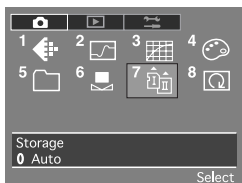


1. Press the MENU button. Press the toggle keys to select [7 Storage] in the recording menu and press the OK button.

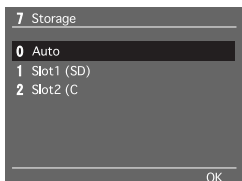

2. Press [▼] on the toggle key to select a card slot.

3. Press the OK button to set.

 Subsequently captured images are saved to the memory card in the selected card slot.



* When you have selected a card slot, no images will be saved to the memory card in the other card slot, if a card has been inserted.


* Insert the memory card that you want to use before selecting the card slot.

Selecting a Memory Card and Creating Folders


Creating a Folder

You can create and select folders for storing images in.


Creating a New Folder

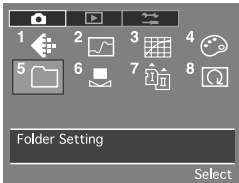

1. Press the **MENU** button. Press the toggle keys to select **[5 Folder Setting]** in the recording menu and press the **OK** button.

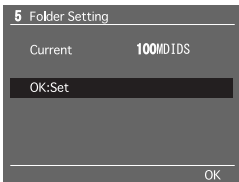

2. A new folder setting window appears. Press the **OK** button.

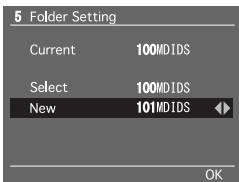

3. Press **[V]** on the toggle key to select **[New]**.
4. Press **[◀ ▶]** on the toggle key to set the folder number.

The folder number can be set up number 100 to 999.

5. Press the **OK** button to set.

The selected folder number appears in the current folder field and subsequently captured images are saved to this folder.

- * The number after the highest existing folder number appears in the new folder field in a new folder display window.
- * When folder numbers have been skipped between folder settings, the folder numbers between these folders cannot be specified. The memory card must be formatted in order to enable their use.

Changing the Folder

1. **Display the folder setting window and press the OK button.**
2. **Press [V] on the toggle key to select [Select].**
3. **Press [◀ ▶] on the toggle key to select the number of an existing folder.**
4. **Press the OK button to set.**

The selected folder number appears in the current folder field and subsequently captured images are saved to this folder.

* When the camera is turned off or the memory card cover is opened, the settings are reset and the folder with the highest number is selected.

Automatically Creating a Folder

- A folder is automatically created when the memory card is formatted or a card containing no folders is inserted.
- A new folder is created when the number of files saved to the folder exceeds 9999.

* If multiple folders have been created, the folder with the number closest to the currently used folder is selected and a new folder is not created. If the folder with the highest number was selected, a new folder is created with the next sequential number.

- A new folder is created when the number of files saved to the folder exceeds 9999.


Selecting a Memory Card and Creating Folders

File Numbering


When file numbering is set to [ON], the file number of the last captured image is stored in the camera and the next time you take a picture, it is saved with the subsequent number. When multiple memory cards are used, images are saved with sequential file numbers to facilitate management of captured images.

Setting	Description
OFF (File Numbering)	<ul style="list-style-type: none">• Images are saved in folders according to file number until the memory card is formatted.
	<ul style="list-style-type: none">• When the memory card is formatted, folder numbering starts from 100 and file numbering starts from 0001.
	<ul style="list-style-type: none">• A new folder is created when the file number reaches 9999.
	<ul style="list-style-type: none">• File numbering starts from 0001 when a new folder is selected or a new memory card is inserted. However, when the selected folder or memory card already contains images, numbering starts from the next file number after the highest existing file number in the folder.
	<ul style="list-style-type: none">• When the memory card is full, [FOLDER NO. FULL] appears on the LCD monitor, then [CARD FULL] appears and the shutter release is locked.
ON (File Numbering)	<ul style="list-style-type: none">• Images are saved with sequential file numbers, regardless of the file numbers in the memory card. However, if a file number in a folder is duplicated or a file number that is higher than the current file number already exists, the image is saved with the subsequent file number.
	<ul style="list-style-type: none">• A new folder is created when the maximum number of image files is reached.
	<ul style="list-style-type: none">• When the memory card is full, [FOLDER NO. FULL] appears on the LCD monitor, then [CARD FULL] appears and the shutter release is locked.
RESET	<ul style="list-style-type: none">• You can reset the file numbers stored in the camera in file numbering mode. When the settings are reset, a new folder is created and file numbering starts from 0001.

Setting File Numbering

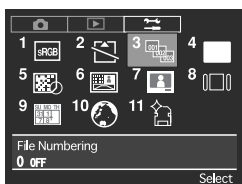

1. Press the MENU button. Press the toggle keys to select [3 File Numbering] in the setup menu and press the OK button.

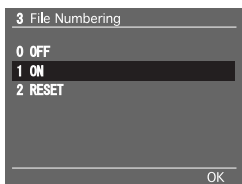


2. The file numbering window appears.
Press [▲] [▼] on the toggle key to select [1 ON].
3. Press the OK button.

Folder and File Number Display

You can change the display on the LCD monitor from the ISO sensitivity and picture count to the folder number and file number. While the ISO sensitivity and picture count are displayed on the monitor, press the ISO button while holding down the INFO button. The ISO sensitivity and picture count change to the folder number and file number. The setting is saved when the camera is turned off. To restore the normal display, press the ISO button while holding down the INFO button again.

ISO sensitivity and picture count display

 

Folder number and file number display





Playing Back Images

This section explains how to playback and delete photographs with this unit attached to the camera.

Refer to the instruction manual for the software in use when playing back images on a computer.

Playing Back Images

This section explains the various methods of viewing images on the LCD monitor of this unit.

Playing Back Frames


Displays the images frame by frame on the LCD monitor.

1. Press the Display button.

The most recently recorded image will be displayed on the LCD monitor.


2. Select the image you wish to display with the toggle key .


Press [◀] to display the previous image, and [▶] to display the next image. When the most recently taken photograph is displayed, pressing the [▶] key on the toggle key will display the first photograph taken.

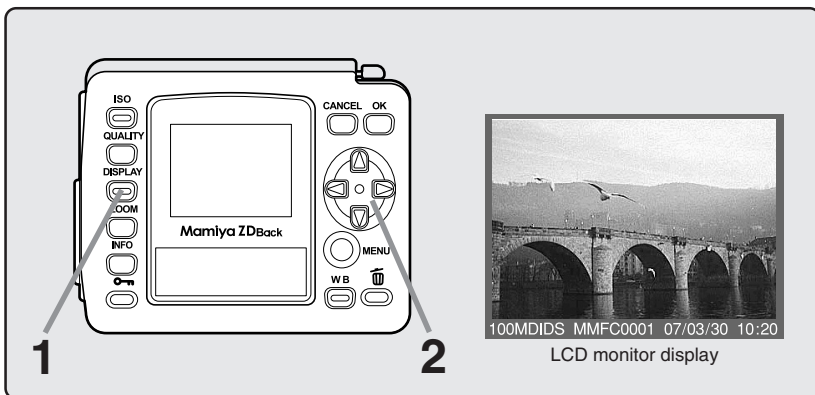

Zoom-in Display

Zooms in on the frame being displayed.

1. Press the Display button to display the frame.
2. Select the image you wish to zoom in on with the toggle key.
3. Press the ZOOM button. Keep your finger pressed down on the button. A frame that indicates the area to zoom in on will be displayed on the screen.
4. With your finger pressed on the ZOOM button, move the frame to the area you wish to zoom in on with the toggle key .
5. Release the ZOOM button. A zoom-in image of the area selected with the frame will be displayed. Use the toggle key to scroll around the zoomed-in image.
6. Press the ZOOM button once again to return to the normal viewing screen.

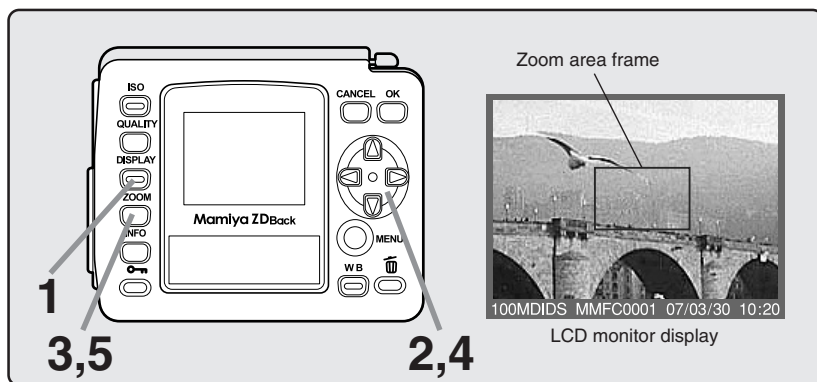

Memo:

- Press the shutter release button half-way to cancel the playing back images and switch off the monitor.
- The magnification ratio of the zoom can be changed with the [7 Set Magnification] function (see page 128.)

Playing Back Images

Display screen #2

Display screen #3




Folder
File number
Date
Histogram
Highlight and
shadow alerts

Display screen #5

Image only


Display screen #4

Folder
File number
Date
Histogram

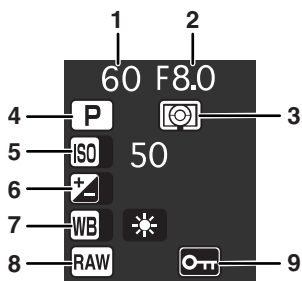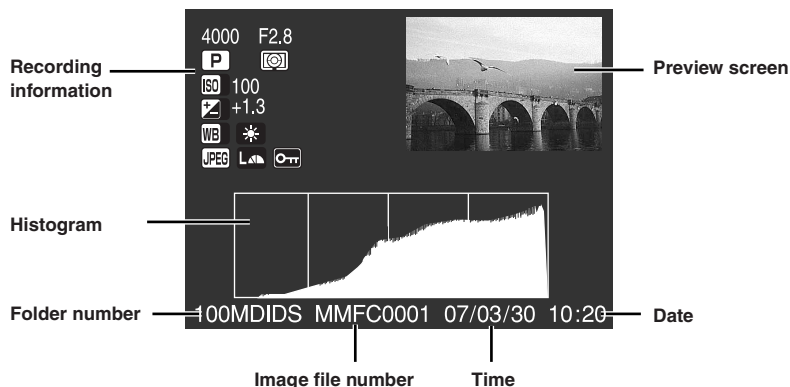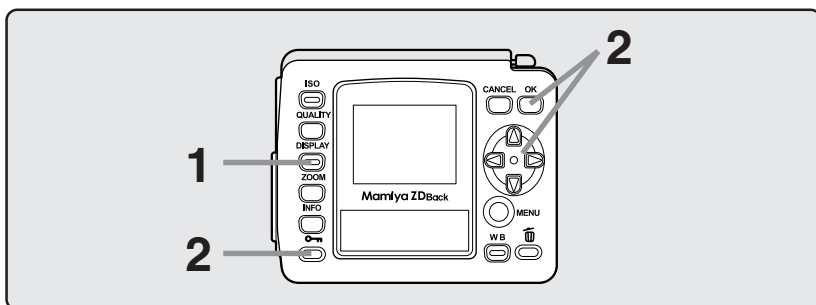

Recording Information

- 1 Shutter speed
- 2 Aperture
- 3 Metered mode
- 4 Exposure mode
- 5 ISO sensitivity
- 6 Exposure compensation
- 7 White balance
- 8 Image Quality mode
Only "RAW" will be displayed if recording together with JPEG is selected.
- 9 Image protection
Displayed when the image is protected.

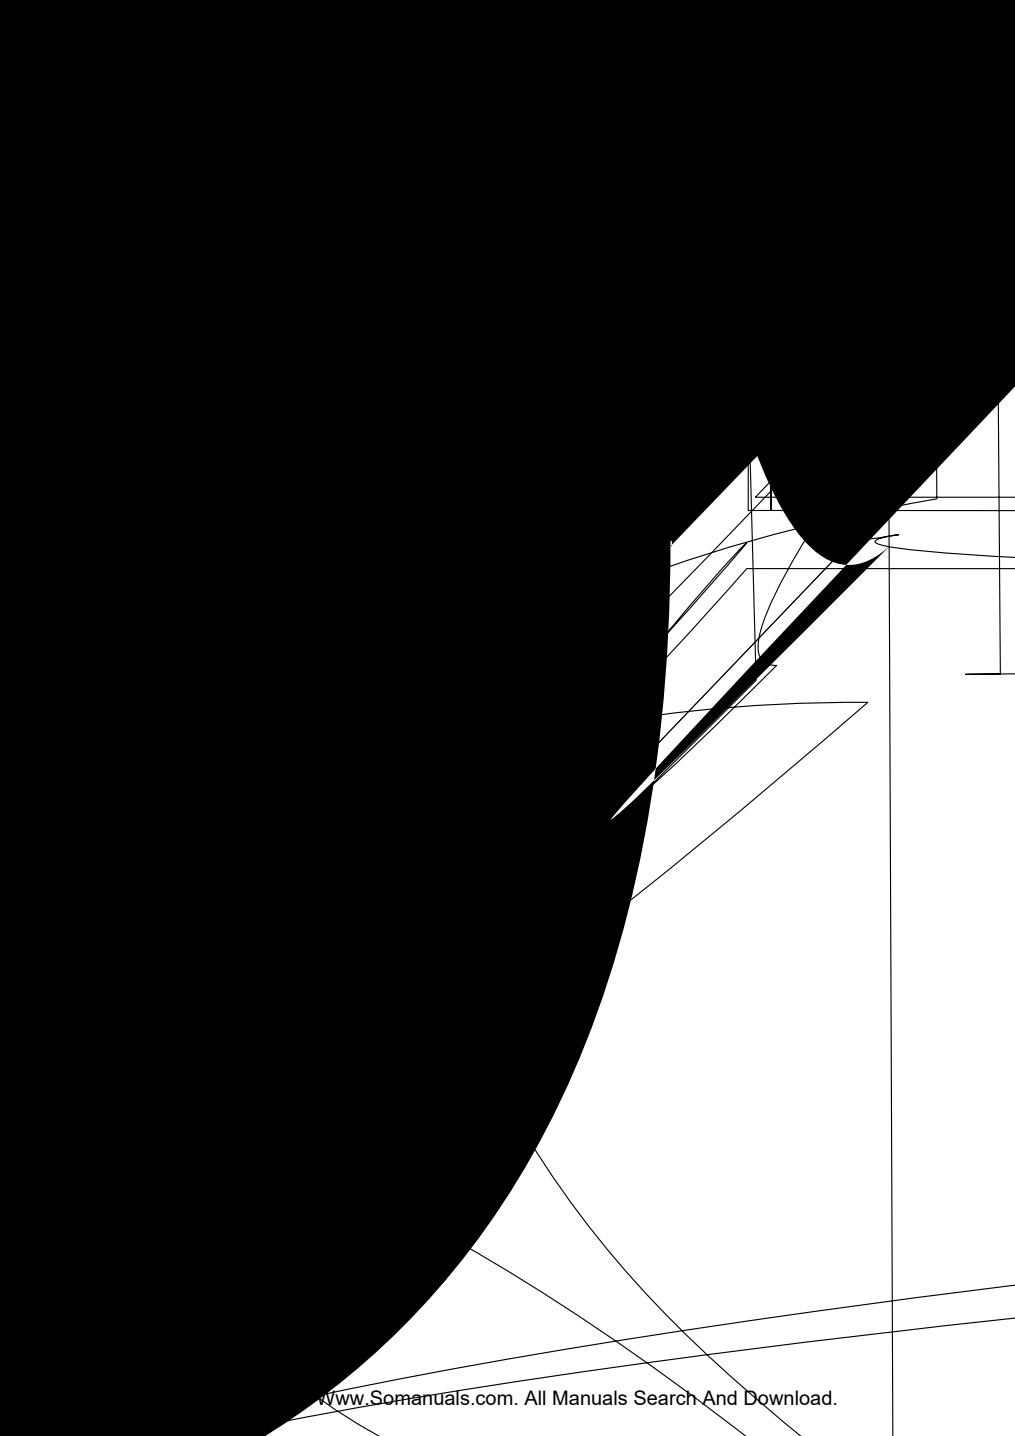

Protecting Images

This section explains how to protect images.

Set the shutter release mode selector lever to any position other than L to protect images.

Protecting Images

Enables frames to be protected one by one while confirming the image on the LCD monitor.


1. Press the Display button.


The most recently recorded image will be displayed on the LCD monitor.

2. Select the image you wish to protect with the toggle key .


Press [◀] to display the previous image, and [▶] to display the next image.

3. Press the Protect button.

The protection symbol [] will be displayed on images that have been protected.

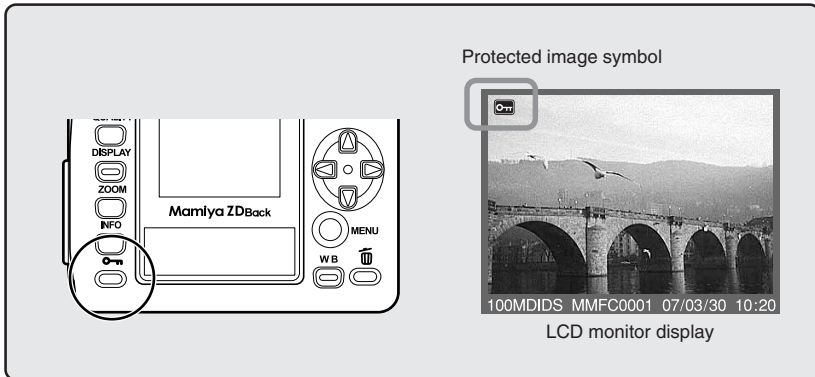

Memo:

Images that have been protected and display the [] mark cannot be deleted with the [1 FRAME] or with [ALL IMAGES] deletion procedures, but they will be erased completely if the memory card is formatted.

Menus

This chapter explains the functions that can be selected from this unit's menu screen.



There are three types of menu mode available; Recording Menu, Playback Menu and Setup Menu.

the 1990s, the number of people in the United States who are 65 years of age or older has increased by 50 percent, and the number of people 75 years of age or older has increased by 100 percent. The number of people 85 years of age or older has increased by 200 percent. The number of people 95 years of age or older has increased by 400 percent. The number of people 100 years of age or older has increased by 1,000 percent. The number of people 105 years of age or older has increased by 2,000 percent. The number of people 110 years of age or older has increased by 4,000 percent. The number of people 115 years of age or older has increased by 8,000 percent. The number of people 120 years of age or older has increased by 16,000 percent. The number of people 125 years of age or older has increased by 32,000 percent. The number of people 130 years of age or older has increased by 64,000 percent. The number of people 135 years of age or older has increased by 128,000 percent. The number of people 140 years of age or older has increased by 256,000 percent. The number of people 145 years of age or older has increased by 512,000 percent. The number of people 150 years of age or older has increased by 1,024,000 percent. The number of people 155 years of age or older has increased by 2,048,000 percent. The number of people 160 years of age or older has increased by 4,096,000 percent. The number of people 165 years of age or older has increased by 8,192,000 percent. The number of people 170 years of age or older has increased by 16,384,000 percent. The number of people 175 years of age or older has increased by 32,768,000 percent. The number of people 180 years of age or older has increased by 65,536,000 percent. The number of people 185 years of age or older has increased by 131,072,000 percent. The number of people 190 years of age or older has increased by 262,144,000 percent. The number of people 195 years of age or older has increased by 524,288,000 percent. The number of people 200 years of age or older has increased by 1,048,576,000 percent. The number of people 205 years of age or older has increased by 2,097,152,000 percent. The number of people 210 years of age or older has increased by 4,194,304,000 percent. The number of people 215 years of age or older has increased by 8,388,608,000 percent. The number of people 220 years of age or older has increased by 16,777,216,000 percent. The number of people 225 years of age or older has increased by 33,554,432,000 percent. The number of people 230 years of age or older has increased by 67,108,864,000 percent. The number of people 235 years of age or older has increased by 134,217,728,000 percent. The number of people 240 years of age or older has increased by 268,435,456,000 percent. The number of people 245 years of age or older has increased by 536,870,912,000 percent. The number of people 250 years of age or older has increased by 1,073,741,824,000 percent. The number of people 255 years of age or older has increased by 2,147,483,648,000 percent. The number of people 260 years of age or older has increased by 4,294,967,296,000 percent. The number of people 265 years of age or older has increased by 8,589,934,592,000 percent. The number of people 270 years of age or older has increased by 17,179,869,184,000 percent. The number of people 275 years of age or older has increased by 34,359,738,368,000 percent. The number of people 280 years of age or older has increased by 68,719,476,736,000 percent. The number of people 285 years of age or older has increased by 137,438,953,472,000 percent. The number of people 290 years of age or older has increased by 274,877,906,944,000 percent. The number of people 295 years of age or older has increased by 549,755,813,888,000 percent. The number of people 300 years of age or older has increased by 1,099,511,627,776,000 percent. The number of people 305 years of age or older has increased by 2,199,023,255,552,000 percent. The number of people 310 years of age or older has increased by 4,398,046,511,104,000 percent. The number of people 315 years of age or older has increased by 8,796,093,022,208,000 percent. The number of people 320 years of age or older has increased by 17,592,186,044,416,000 percent. The number of people 325 years of age or older has increased by 35,184,372,088,832,000 percent. The number of people 330 years of age or older has increased by 70,368,744,177,664,000 percent. The number of people 335 years of age or older has increased by 140,737,488,355,328,000 percent. The number of people 340 years of age or older has increased by 281,474,976,710,656,000 percent. The number of people 345 years of age or older has increased by 562,949,953,421,312,000 percent. The number of people 350 years of age or older has increased by 1,125,899,906,842,624,000 percent. The number of people 355 years of age or older has increased by 2,251,799,813,685,248,000 percent. The number of people 360 years of age or older has increased by 4,503,599,627,370,496,000 percent. The number of people 365 years of age or older has increased by 9,007,199,254,740,992,000 percent. The number of people 370 years of age or older has increased by 18,014,398,509,481,984,000 percent. The number of people 375 years of age or older has increased by 36,028,797,018,963,968,000 percent. The number of people 380 years of age or older has increased by 72,057,594,037,927,936,000 percent. The number of people 385 years of age or older has increased by 144,115,188,075,855,872,000 percent. The number of people 390 years of age or older has increased by 288,230,376,151,711,744,000 percent. The number of people 395 years of age or older has increased by 576,460,752,303,423,488,000 percent. The number of people 400 years of age or older has increased by 1,152,921,504,606,846,976,000 percent. The number of people 405 years of age or older has increased by 2,305,843,009,213,693,952,000 percent. The number of people 410 years of age or older has increased by 4,611,686,018,427,387,904,000 percent. The number of people 415 years of age or older has increased by 9,223,372,036,854,775,808,000 percent. The number of people 420 years of age or older has increased by 18,446,744,073,709,551,616,000 percent. The number of people 425 years of age or older has increased by 36,893,488,147,419,103,232,000 percent. The number of people 430 years of age or older has increased by 73,786,976,294,838,206,464,000 percent. The number of people 435 years of age or older has increased by 147,573,952,589,676,412,928,000 percent. The number of people 440 years of age or older has increased by 295,147,905,179,352,825,856,000 percent. The number of people 445 years of age or older has increased by 590,295,810,358,705,651,712,000 percent. The number of people 450 years of age or older has increased by 1,180,591,620,717,411,303,424,000 percent. The number of people 455 years of age or older has increased by 2,361,183,241,434,822,606,848,000 percent. The number of people 460 years of age or older has increased by 4,722,366,482,869,645,213,696,000 percent. The number of people 465 years of age or older has increased by 9,444,732,965,739,290,427,392,000 percent. The number of people 470 years of age or older has increased by 18,889,465,931,478,580,854,784,000 percent. The number of people 475 years of age or older has increased by 37,778,931,862,957,161,709,568,000 percent. The number of people 480 years of age or older has increased by 75,557,863,725,914,323,419,136,000 percent. The number of people 485 years of age or older has increased by 151,115,727,451,828,646,838,272,000 percent. The number of people 490 years of age or older has increased by 302,231,454,903,657,293,676,544,000 percent. The number of people 495 years of age or older has increased by 604,462,909,807,314,587,353,088,000 percent. The number of people 500 years of age or older has increased by 1,208,925,819,614,629,174,706,176,000 percent. The number of people 505 years of age or older has increased by 2,417,851,639,229,258,349,412,352,000 percent. The number of people 510 years of age or older has increased by 4,835,703,278,458,516,698,824,704,000 percent. The number of people 515 years of age or older has increased by 9,671,406,556,917,033,397,649,408,000 percent. The number of people 520 years of age or older has increased by 19,342,813,113,834,066,795,298,816,000 percent. The number of people 525 years of age or older has increased by 38,685,626,227,668,133,590,597,632,000 percent. The number of people 530 years of age or older has increased by 77,371,252,455,336,267,181,195,264,000 percent. The number of people 535 years of age or older has increased by 154,742,504,910,672,534,362,390,528,000 percent. The number of people 540 years of age or older has increased by 309,485,009,821,345,068,724,781,056,000 percent. The number of people 545 years of age or older has increased by 618,970,019,642,690,137,449,562,112,000 percent. The number of people 550 years of age or older has increased by 1,237,940,039,285,380,274,899,124,224,000 percent. The number of people 555 years of age or older has increased by 2,475,880,078,570,760,549,798,248,448,000 percent. The number of people 560 years of age or older has increased by 4,951,760,157,141,521,099,596,496,896,000 percent. The number of people 565 years of age or older has increased by 9,903,520,314,283,042,199,193,993,792,000 percent. The number of people 570 years of age or older has increased by 19,807,040,628,566,084,398,387,987,584,000 percent. The number of people 575 years of age or older has increased by 39,614,081,257,132,168,796,775,975,168,000 percent. The number of people 580 years of age or older has increased by 79,228,162,514,264,337,593,551,950,336,000 percent. The number of people 585 years of age or older has increased by 158,456,325,028,528,675,187,103,900,672,000 percent. The number of people 590 years of age or older has increased by 316,912,650,057,057,350,374,207,801,344,000 percent. The number of people 595 years of age or older has increased by 633,825,300,114,114,700,748,415,602,688,000 percent. The number of people 600 years of age or older has increased by 1,267,650,600,228,229,401,496,831,205,376,000 percent. The number of people 605 years of age or older has increased by 2,535,301,200,456,458,802,993,662,410,752,000 percent. The number of people 610 years of age or older has increased by 5,070,602,400,912,917,605,987,324,821,504,000 percent. The number of people 615 years of age or older has increased by 10,141,204,801,825,835,211,974,649,643,008,000 percent. The number of people 620 years of age or older has increased by 20,282,409,603,651,670,423,949,299,286,016,000 percent. The number of people 625 years of age or older has increased by 40,564,819,207,303,340,847,898,598,572,032,000 percent. The number of people 630 years of age or older has increased by 81,129,638,414,606,681,695,797,197,144,064,000 percent. The number of people 635 years of age or older has increased by 162,259,276,829,213,363,391,594,394,288,128,000 percent. The number of people 640 years of age or older has increased by 324,518,553,658,426,726,783,188,788,576,256,000 percent. The number of people 645 years of age or older has increased by 649,037,107,316,853,453,566,377,577,152,512,000 percent. The number of people 650 years of age or older has increased by 1,298,074,214,633,706,907,132,755,154,305,024,000 percent. The number of people 655 years of age or older has increased by 2,596,148,429,267,413,814,265,510,308,610,048,000 percent. The number of people 660 years of age or older has increased by 5,192,296,858,534,827,628,531,020,617,220,096,000 percent. The number of people 665 years of age or older has increased by 10,384,593,717,069,655,257,062,041,234,440,192,000 percent. The number of people 670 years of age or older has increased by 20,769,187,434,139,310,514,124,082,468,880,384,000 percent. The number of people 675 years of age or older has increased by 41,538,374,868,278,621,028,248,164,937,760,768,000 percent. The number of people 680 years of age or older has increased by 83,076,749,736,557,242,056,496,329,875,521,536,000 percent. The number of people 685 years of age or older has increased by 166,153,499,473,114,484,112,992,659,751,043,072,000 percent. The number of people 690 years of age or older has increased by 332,306,998,946,228,968,225,985,319,502,086,144,000 percent. The number of people 695 years of age or older has increased by 664,613,997,892,457,936,451,970,639,004,172,288,000 percent. The number of people 700 years of age or older has increased by 1,329,227,995,784,915,872,903,941,278,008,344,576,000 percent. The number of people 705 years of age or older has increased by 2,658,455,991,569,831,745,807,882,556,016,689,152,000 percent. The number of people 710 years of age or older has increased by 5,316,911,983,139,663,491,615,765,112,033,378,304,000 percent. The number of people 715 years of age or older has increased by 10,633,823,966,279,326,983,231,530,224,066,756,608,000 percent. The number of people 720 years of age or older has increased by 21,267,647,932,558,653,966,462,060,448,133,513,216,000 percent. The number of people 725 years of age or older has increased by 42,535,295,865,117,307,932,924,120,896,267,026,432,000 percent. The number of people 730 years of age or older has increased by 85,070,591,730,234,615,865,848,241,792,534,052,864,000 percent. The number of people 735 years of age or older has increased by 170,141,183,460,469,231,731,696,483,585,068,105,728,000 percent. The number of people 740 years of age or older has increased by 340,282,366,920,938,463,463,382,967,170,136,211,456,000 percent. The number of people 745 years of age or older has increased by 680,564,733,841,876,926,926,765,934,340,272,422,912,000 percent. The number of people 750 years of age or older has increased by 1,361,129,467,683,753,853,853,531,868,680,544,845,824,000 percent. The number of people 755 years of age or older has increased by 2,722,258,935,367,507,707,707,063,737,361,089,691,648,000 percent. The number of people 760 years of age or older has increased by 5,444,517,870,735,015,415,414,127,474,722,178,383,296,000 percent. The number of people 765 years of age or older has increased by 10,889,035,741,470,030,830,828,254,949,444,356,766,592,000 percent. The number of people 770 years of age or older has increased by 21,778,071,482,940,061,661,656,509,898,888,713,533,184,000 percent. The number of people 775 years of age or older has increased by 43,556,142,965,880,123,323,313,019,797,777,427,066,368,000 percent. The number of people 780 years of age or older has increased by 87,112,285,931,760,246,646,626,039,595,554,854,132,736,000 percent. The number of people 785 years of age or older has increased by 174,224,571,863,520,493,293,252,079,191,109,708,265,472,000 percent. The number of people 790 years of age or older has increased by 348,449,143,727,040,986,586,504,158,382,218,416,530,944,000 percent. The number of people 795 years of age or older has increased by 696,898,287,454,081,973,173,008,316,764,436,833,061,888,000 percent. The number of people 800 years of age or older has increased by 1,393,796,574,908,163,946,346,016,633,528,872,666,123,776,000 percent. The number of people 805 years of age or older has increased by 2,787,593,149,816,327,892,692,033,267,057,745,332,247,552,000 percent. The number of people 810 years of age or older has increased by 5,575,186,299,632,655,785,384,066,534,115,490,664,495,104,000 percent. The number of people 815 years of age or older has increased by 11,150,372,599,265,311,570,768,133,068,230,981,328,990,208,000 percent. The number of people 820 years of age or older has increased by 22,300,745,198,530,623,141,536,266,036,461,962,657,980,416,000 percent. The number of people 825 years of age or older has increased by 44,601,490,397,061,246,283,072,532,072,923,925,315,960,832,000 percent. The number of people 830 years of age or older has increased by 89,202,980,794,122,492,566,145,064,145,847,850,631,921,664,000 percent. The number of people 835 years of age or older has increased by 178,405,961,588,244,985,132,290,128,291,695,701,263,843,328,000 percent. The number of people 840 years of age or older has increased by 356,811,923,176,489,970,264,580,256,583,391,402,527,686,656,000 percent. The number of people 845 years of age or older has increased by 713,623,846,352,979,940,529,160,513,166,782,805,055,373,312,000 percent. The number of people 850 years of age or older has increased by 1,427,247,692,705,959,881,058,321,026,333,565,610,110,746,624,000 percent. The number of people 855 years of age or older has increased by 2,854,495,385,411,919,762,116,642,052,667,131,220,221,493,248,000 percent. The number of people 860 years of age or older has increased by 5,708,990,770,823,839,524,233,284,105,334,262,440,442,986,496,000 percent. The number of people 865 years of age or older has increased by 11,417,981,541,647,679,048,466,568,210,668,524,880,885,972,992,000 percent. The number of people 870 years of age or older has increased by 22,835,963,083,295,358,096,933,136,421,337,049,771,771,945,984,000 percent. The number of people 875 years of age or older has increased by 45,671,926,166,590,716,193,866,272,842,668,099,543,543,891,968,000 percent. The number of people 880 years of age or older has increased by 91,343,852,333,181,432,387,732,545,685,337,199,087,087,783,936,000 percent. The number of people 885 years of age or older has increased by 182,687,704,666,362,864,775,465,091,370,674,398,174,175,567,872,000 percent. The number of people 890 years of age or older has increased by 365,375,409,332,725,729,550,930,182,741,348,796,348,351,135,744,000 percent. The number of people 895 years of age or older has increased by 730,750,818,665,451,459,101,860,365,482,697,592,696,702,271,488,000 percent. The number of people 900 years of age or older has increased by 1,461,501,637,330,902,918,203,720,730,965,395,185,393,404,542,976,000 percent. The number of people 905 years of age or older has increased by 2,923,003,274,661,805,836,407,441,461,930,790,370,786,809,085,952,000 percent. The number of people 910 years of age or older has increased by 5,846,006,549,323,611,672,814,882,923,861,580,741,573,618,171,904,000 percent. The number of people 915 years of age or older has increased by 11,692,013,098,647,223,345,629,765,847,723,160,148,314,733,343,808,000 percent. The number of people 920 years of age or older has increased by 23,384,026,197,294,446,691,259,531,695,446,320,296,629,466,687,616,000 percent. The number of people 925 years of age or older has increased by 46,768,052,394,588,893,382,518,063,390,892,640,593,258,933,375,232,000 percent. The number of people 930 years of age or older has increased by 93,536,104,789,177,786,765,036,126,781,785,281,186,517,866,750,464,000 percent. The number of people 935 years of age or older has increased by 187,072,209,578,355,573,530,072,253,563,570,562,373,037,333,500,928,000 percent. The number of people 940 years of age or older has increased by 374,144,419,156,711,147,060,144,507,127,141,124,746,074,667,001,856,000 percent. The number of people 945 years of age or older has increased by 748,288,838,313,422,294,120,289,014,254,282,249,492,149,334,003,712,000 percent. The number of people 950 years of age or older has increased by 1,496,577,676,626,844,588,240,578,028,508,564,498,984,298,668,007,424,000 percent. The number of people 955 years of age or older has increased by 2,993,155,353,253,689,176,481,156,057,017,128,997,968,597,336,014,848,000 percent. The number of people 960 years of age or older has increased by 5,986,310,706,507,378,352,962,312,114,034,256,995,937,194,672,029,696,000 percent. The number of people 965 years of age or older has increased by 11,972,621,413,014,756,705,924,624,228,068,513,991,874,389,344,059,392,000 percent. The number of people 970 years of age or older has increased by 23,945,242,826,029,513,411,849,248,456,137,027,983,748,778,688,118,784,000 percent. The number of people 975 years of age or older has increased by 47,890,485,652,059,026,823,698,496,912,274,055,967,497,557,376,237,568,000 percent. The number of people 980 years of age or older has increased by 95,780,971,304,118,053,647,397,993,824,548,111,934,995,114,752,475,136,000 percent. The number of people 985 years of age or older has increased by 191,561,942,608,236,107,294,795,987,649,096,223,869,990,229,504,950,272,000 percent. The number of people 990 years of age or older has increased by 383,123,885,216,472,214,589,591,975,298,192,447,739,980,459,009,900,544,000 percent. The number of people 995 years of age or older has increased by 766,247,770,432,944,429,179,183,950,596,384,895,479,960,918,019,801,088,000 percent. The number of people 1000 years of age or older has increased by 1,532,495,540,865,888,858,358,367,901,192,768,790,959,921,836,039,602,176,000 percent. The number of people 1005 years of age or older has increased by 3,064,991,081,731,777,716,716,735,802,385,537,581,919,843,672,079,204,352,000 percent. The number of people 1010 years of age or older has increased by 6,129,982,163,463,555,433,433,471,604,771,075,163,839,687,344,158,408,704,000 percent. The number of people 1015 years of age or older has increased by 12,259,964,326,927,110,866,866,943,209,542,150,327,679,374,688,316,817,408,000 percent. The number of people 1020 years of age or older has increased by 24,519,928,653,854,221,733,733,886,419,084,300,655,358,749,376,633,634,816,000 percent. The number of people 1025 years of age or older has increased by 49,039,857,307,708,443,467,467,772,838,168,601,310,717,498,753,267,269,632,000 percent. The number of people 1030 years of age or older has increased by 98,079,714,615,416,886,934,935,545,676,337,202,621,434,997,506,534,539,264,000 percent. The number of people 1035 years of age or older has increased by 196,159,429,230,833,773,869,871,091,352,674,405,242,869,995,013,069,078,528,000 percent. The number of people 1040 years of age or older has increased by 392,318,858,461,667,547,739,742,182,705,348,810,485,739,990,026,138,157,056,000 percent. The number of people 1045 years of age or older has increased by 784,637,716,923,335,095,479,484,365,410,697,620,971,479,980,052,276,314,112,000 percent. The number of people 1050 years of age or older has increased by 1,569,275,433,846,670,190,958,968,730,821,395,241,942,959,960,104,552,628,224,000 percent. The number of people 1055 years of age or older has increased by 3,138,550,867,693,340,381,917,937,461,642,790,483,885,919,920,209,105,256,448,000 percent. The number of people 1060 years of age or older has increased by 6,277,101,735,386,680,763,835,874,923,285,580,967,771,839,840,418,210,512,896,000 percent. The number of people 1065 years of age or older has increased by 12,554,203,470,773,361,527,671,749,846,571,161,935,543,679,680,836,421,025,792,000 percent. The number of people 1070 years of age or older has increased by 25,108,406,941,546,723,055,343,499,693,142,323,871,087,359,361,673,842,051,584,000 percent. The number of people 1075 years of age or older has increased by 50,216,813,883,093,446,110,686,999,386,284,647,742,174,718,723,347,684,410,368,000 percent. The number of people 1080 years of age or older has increased by 100,433

Recording Menu



 





The following screen will be displayed on the LCD monitor when the MENU button is pressed.




The [] symbol displayed in the top left-hand corner indicates the Recording Menu. Use the toggle key  to select the recording menu when the menu symbol has been selected.

Recording Menu

The Recording Menu contains the following parameters:

-  : [1] Shooting Mode
-  : [2] Sharpness
-  : [3] Tone
-  : [4] Saturation
-  : [5] Folder Setting
-  : [6] Customize White Balance
-  : [7] Storage
-  : [8] Auto Rotation

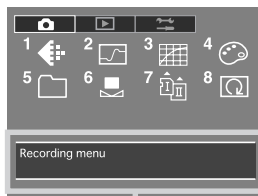


Parameter status display area

- The name of the menu currently selected and the current parameter setting will be displayed at the parameter status display area of the menu.
- The Shooting Mode, Sharpness, Tone and Saturation settings are activated for the JPEG images generated by this unit. These settings can be amended for RAW images while confirming the effects during development with the Mamiya Digital PhotoStudio.

Recording Menu

[1] Shooting Mode

The shooting mode for images is set up on this menu suitable for the subject being photographed.

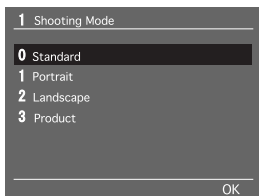


The default setting is [Standard].

See “Basic Setup: Setting the Shooting Mode” (page 45) for further details.

[2] Sharpness

The sharpness (strength of the outlines) for images is set up on this menu.

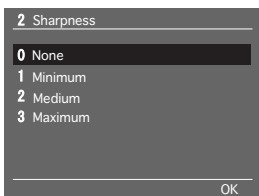


The default setting is [None].

See “Basic Setup: Setting the Sharpness, Tone and Saturation” (page 46) for further details.

[3] Tone

The tone for images is set up on this menu.

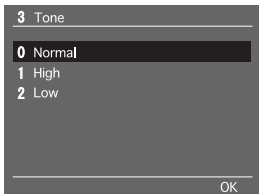


The default setting is [Normal].

See “Basic Setup: Setting the Sharpness, Tone and Saturation” (page 46) for further details.

[4] Saturation

The saturation for images is set up on this menu.

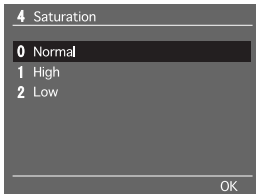


The default setting is [Normal].

See “Basic Setup: Setting the Sharpness, Tone and Saturation” (page 47) for further details.

[5] Folder Setting


The folder in which recorded images are to be stored is set up on this menu.

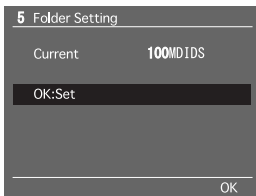

See “Basic Setup: Creating a Folder” (page 49) for further details.

[6] Custom White Balance

The customized white balance for images is acquired on this menu. A maximum of two customized white balances can be registered.

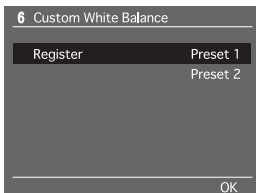


See “Basic Setup: Customized White Balance” (page 41) for further details.

Recording Menu

[7] Storage

The memory card onto which images are to be stored is selected on this menu.

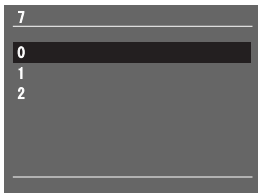



Two different types of memory card can be used, CF cards (Compact Flash Cards) and SD cards, but images cannot be stored on both types of card simultaneously. See “Basic Setup: Selecting a Memory Card” (page 48 for further details on selecting the storage medium.

[8] Auto Rotation


This menu sets up whether to rotate images or not.



When set at [OFF], horizontal and vertical images are stored in the horizontal display format, and when set at [ON], horizontal and vertical images are stored and displayed in the vertical format. The default setting is [OFF].

- 1 Press the MENU button, select [8 Rotate or Not?] with the toggle key , and then press the OK button.
- 2 Select [ON] or [OFF] with the toggle keys  .
- 3 Press the OK button.

Playback Menu

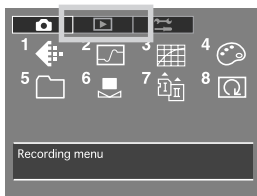









The following screen will be displayed on the LCD monitor when the MENU button is pressed.




The [] symbol displayed second from the left indicates the Playback Menu. Use the toggle key  to select the playback menu when the menu symbol has been selected.

Playback Menu

The Playback Menu contains the following parameters:

-  : [1] Erase Image
-  : [2] Playback Folder
-  : [3] Slide Show
-  : [4] LCD Brightness
-  : [5] Protect/Unprotect
-  : [6] Highlight/Shadow Alerts
-  : [7] Set Magnification
-  : [8] Highlight Alert Level 1
-  : [9] Shadow Alert Level
-  : [10] Select File Type to Erase

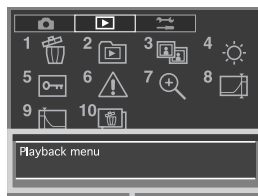


Parameter status display area

* The name of the menu currently selected, the details of the icon, and the current parameter setting will be displayed at the parameter status display area of the menu on the digital LCD panel.


[3] Slide Show

This activates the slide show in which the images stored on the memory card are displayed sequentially.




- 1 Select the Playback Menu, and then select [3 Slide Show] with the toggle key .
- 2 Press the OK button.




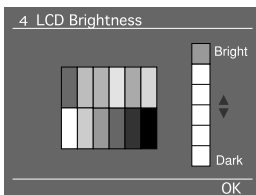
- 3 Select [Start] with the toggle key .
- 4 Press the OK button to start the slide show. Press the Cancel button to end the slide show.


[4] LCD Brightness

This adjusts the brightness of the LCD monitor. The brightness can be adjusted to six different stages to match the environment in which images are being played back. The adjustments are made with the use of the toggle key. The default setting is the brightest display.

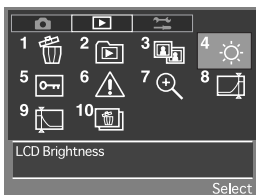

- 1 Select the Playback Menu, and then select [4 LCD Brightness] with the toggle key .
- 2 Press the OK button.



- 3 Adjust the brightness level with the toggle keys .
- 4 Press the OK button.


Playback Menu

Switching Across to the High Contrast Screen

It is possible to switch the display across to the high contrast screen when images are difficult to see on the LCD monitor owing to the surrounding environment being so bright that the brightness adjustment is ineffective.

Press the MENU button for one or more consecutive seconds with the LCD display switched off to switch across to the high contrast screen.


To return to the normal brightness display, press and hold the MENU button again with the LCD display switched off.

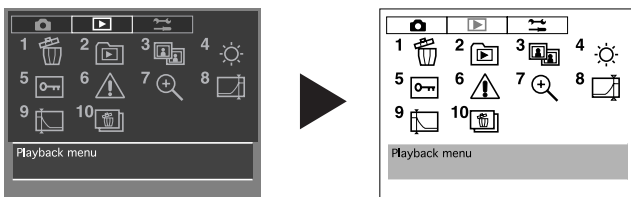


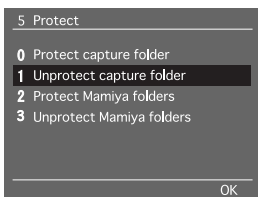
[5] Protect/Unprotect

This function enables the protection function to be activated or deactivated for the images stored on the memory card individually or in bulk for all images in the folder.

Parameter	Details
Protect capture folder:	Activates the protection function for all images in the selected playback folder or the recording folder.
Unprotect capture folder:	Deactivates the protection function for all images in the selected playback folder or the recording folder.
Protect Mamiya folders:	Activates the protection function for all of the images stored in multiple Mamiya folders on the memory card.
Unprotect Mamiya folders:	Deactivates the protection function for all of the images stored in multiple Mamiya folders on the memory card.

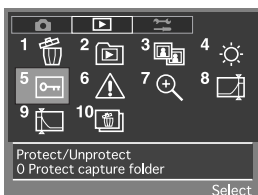

- 1 Select the Playback Menu, and then select [5 Protect/Unprotect] with the toggle key .
- 2 Press the OK button.



3 Select the required parameter with the toggle keys



4 Press the OK button to activate the protection function.


* Protected images cannot be erased.

[6] Highlight/Shadow Alerts

This establishes the setting to display highlight and shadow alerts in order to avoid the white blurs caused by over-exposures and black smudging caused by under-exposures when preview format Type 3 has been selected with [6 Image Review] on the Setup Menu.

These alerts can be selected for highlights only, shadows only, or both highlights and shadows.


White blurs and black smudges will flash when this has been activated, providing an indication that exposure compensation needs to be carried out. The default setting is [No].

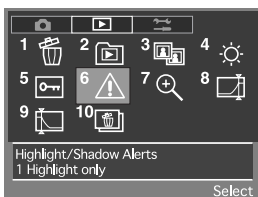

1 Select the Playback Menu, and then select [6

Highlight/Shadow Alerts] with the toggle key .


2 Press the OK button.

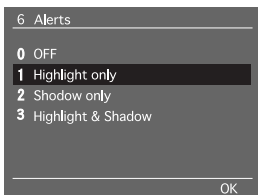

3 Select the required parameter with the toggle keys



4 Press the OK button.

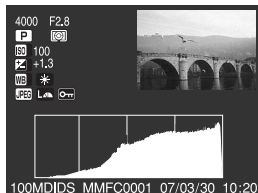



• The highlight/shadow alerts for played-back images are displayed with preview format Type 3, which has been selected with [6 Image Review] on the Setup Menu.


Playback Menu


[7] Set Magnification

This sets the magnification ratio for enlarging a certain area of an image being played back with the use of the ZOOM button. You can choose from three magnification levels: x4, x9 and x16. The default setting is [x4].

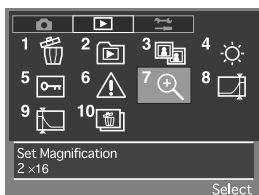


- 1 Select the Playback Menu, and then select [7 Set Magnification] with the toggle key .
- 2 Press the OK button.

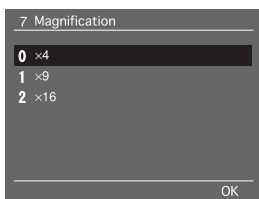


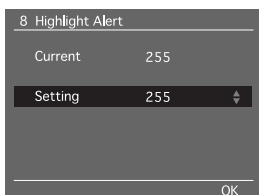
- 3 Select the required parameter with the toggle keys .
- 4 Press the OK button.


[8] Highlight Alert Level

This sets the level of the highlight for which an alert is to be displayed when the highlight and shadow alert function has been activated. The value for this can be set within a range of 255 to 246. The default setting is [255].

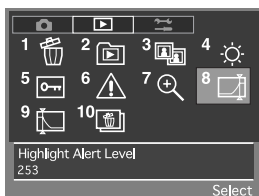


- 1 Select the Playback Menu, and then select [8 Highlight Alert Level] with the toggle key .
- 2 Press the OK button.




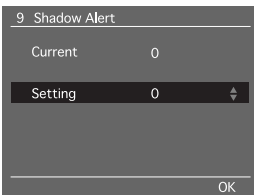
- 3 Select the required highlight alert level with the toggle keys .
- 4 Press the OK button.


[9] Shadow Alert Level

This sets the level of the shadow for which an alert is to be displayed when the highlight and shadow alert function has been activated. The value for this can be set within a range of 0 to 9. The default setting is [0].

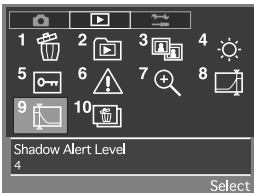


- 1 Select the Playback Menu, and then select [9 Shadow Alert Level] with the toggle key .
- 2 Press the OK button.




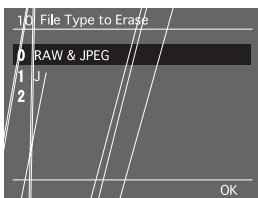
- 3 Select the required shadow alert level with the toggle keys .
- 4 Press the OK button.

[10] Select File Type to Erase

This sets the method in which RAW images and JPEG images stored simultaneously on the memory card are to be erased. The method selected here will be used when erasing single images and when erasing all images. Also, the parameter set here is only used for erasing images taken simultaneously. The default setting is [RAW & JPEG].

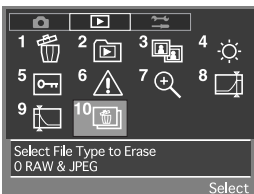



- 1 Select the Playback Menu, and then select [10 Select File Type to Erase] with the toggle key .
- 2 Press the OK button.



3 Select the required parameter with the toggle keys



4 Press the OK button.

- All images will be deleted regardless of the parameter set here if all images have been selected with the [] erase button or [1. Erase Image] on the playback menu.
- When both RAW and JPEG images are stored simultaneously and one of them is deleted, the remaining image will be displayed.
- Images that have been protected and display the [] mark will not be deleted when individual images or all images (contents of the folder) have been specified for deletion, but all images will be deleted completely if the memory card is formatted.

when using this unit are set up on this menu.
be displayed on the LCD monitor when the MENU




/m/1/c/



Setup Menu

[1] Color Space (JPEG)

The color space for images to be recorded in the JPEG format is set up on this menu. The default setting is [sRGB].

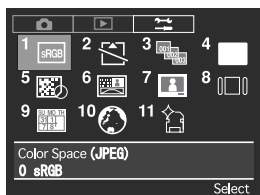


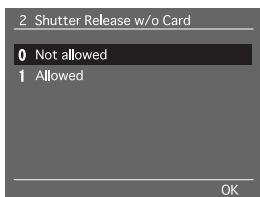
See “Basic Setup: Color Space” (page 37) for further details.


[2] Shutter Release w/o Card

Sets whether the shutter release is to be deactivated or not when no memory card has been inserted into the camera. The default setting is [Not allowed].



- 1 Press the MENU button, and then select [2 Shutter Release w/o Card] on the Setup Menu with the toggle key .
- 2 Press the OK button.





- 3 Select either [Yes] or [No] with the toggle keys .
- 4 Press the OK button.

Setup Menu

[5] Noise Reduction

Images taken with the ISO sensitivity set high or with long exposures tend to be grainy. This phenomenon is reduced when the noise reduction function is activated.

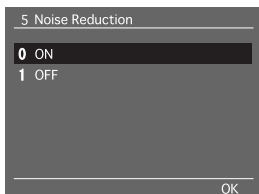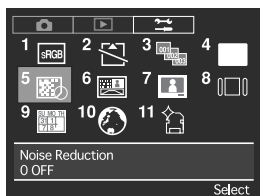

The default setting is [OFF].

- 1 Press the MENU button, and then select [5 Noise Reduction] on the Setup Menu with the toggle key.
- 2 Press the OK button.
- 3 Select either [ON] or [OFF] with the toggle keys.
- 4 Press the OK button.


* Image resolution is reduced when noise reduction is activated.

* This function cannot be cancelled for images recorded in the RAW format with Mamiya Digital PhotoStudio.


* Refer to ISO Sensitivity Setup (page 56) when setting up this parameter.

[6] Image Review


This function sets up the display format and display time of images that are to be displayed on the monitor at the same time as recording. There are four different types of display format, and the display time can be selected from three different choices of 2 seconds, 4 seconds, and continuous. This parameter can also be set not to display the images. The default settings are [Type 3] and [2 sec.].

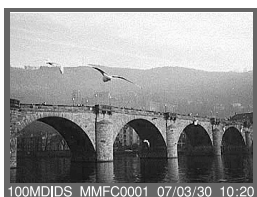


Type 1

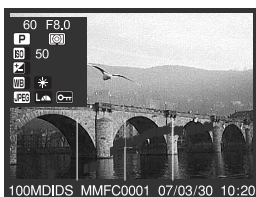


Type 2

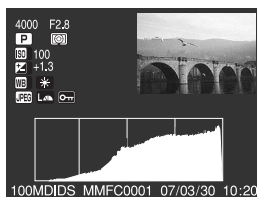


Type 3

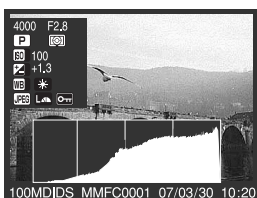



Type 4


- 1 Press the MENU button, and then select [6 Image Review] on the Setup Menu with the toggle key .
 - 2 Press the OK button.
- The [6 Image Review] screen will be displayed.

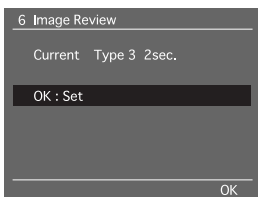


3 Press [OK].

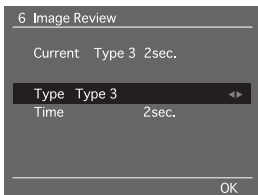

4 Select the required display format with the toggle key .


5 Select [Time] with the toggle key .


6 Select the required display time with the toggle key .

7 Press the OK button.


[7] Video Output


Sets whether the video output when the camera is connected to a television or other monitor is to be NTSC or PAL. The default setting is [NTSC].

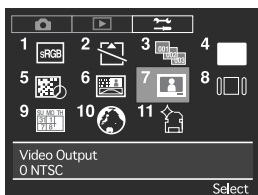

1 Press the MENU button, and then select [7 Video Output] on the Setup Menu with the toggle key .

2 Press the OK button.

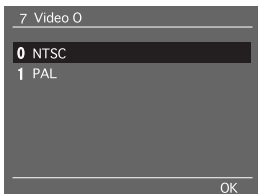

3 Select the required video output with the toggle keys .


4 Press the OK button.


- Images can also be viewed on the camera monitor at the same time when it is connected to a television.

Setup Menu


[8] Auto Monitor OFF


This menu sets the display time for displaying playback images and menu screens on the digital LCD display. The default setting is [15 sec.].

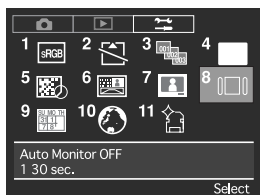

1 Press the MENU button, and then select [8 Auto Monitor OFF] on the Setup Menu with the toggle key .

2 Press the OK button.

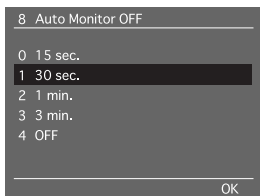


3 Select the required display time with the toggle key .

4 Press the OK button.

* When [4 OFF] has been selected, the display will continue until the power is switched off or the shutter button pressed half-way down. But battery power is consumed more quickly.

[9] Set Date/Time

Sets the date and time to be recorded when an image is taken.

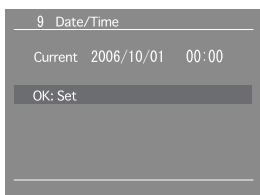



See (page 25) for further details.

[10] language


This menu sets the language to be used on the menu screens displayed on the LCD monitor. A total of five different languages can be selected; Japanese, English, German, French and Spanish.

The default setting is [Japanese].

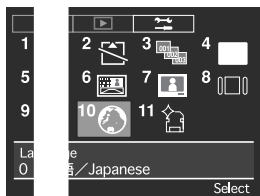


- 1 Press the MENU button, and then select [10 Language] on the Setup Menu with the toggle key .
- 2 Press the OK button.




- 3 Select the required language with the toggle key .
- 4 Press the OK button.

[11] format

Memory cards must be formatted before they can be used. The procedure is performed from this menu.

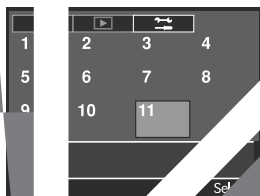

- 1 Press the MENU button, and then select [11 Format] on the Setup Menu with the toggle key .
- 2 Press the OK button.

Setup Menu

* Before Performing the Formatting Process

Note that all images on the memory card will be deleted when the formatting process is executed, even if they are protected.

It is recommended that the contents of the memory card are re-confirmed once again before going ahead with the formatting process.

* Precautions during Formatting

Do not switch off the power or open the slot cover to the memory card when formatting is in progress.

Do not remove the batteries or the memory card when formatting is in progress under any circumstances.

* File Formatting

Memory cards with a capacity of up to 2 GB will be formatted in the FAT16 format, and memory cards with a capacity that exceeds 2 GB will be formatted in the FAT32 format.

Important:

Precautions When Memory Cards are to be Disposed of or Given to Third Parties

- Note that the formatting and deletion procedures carried out by the camera or personal computers only amends the file's management information, and the data is not completely wiped from the memory card.
 - It is therefore recommended that the memory card is physically destroyed before being disposed of, or the data is completely wiped from the card with the use of special data erasure software sold on the open market before it is given to a third party.
 - The data recorded on memory cards is the full responsibility of the user.
-

Connecting to the PC

This section explains how to connect a camera fitted with the Mamiya ZD Back to a personal computer or television. Refer to the software instruction manual for detailed operation procedures.


Connection

You can connect a camera fitted with this unit to a television with the use of a video cable (sold separately) and display the contents of the LCD monitor on the TV screen. In addition, if the camera fitted with this unit is connected to a PC on which Mamiya Digital PhotoStudio is installed, you can operate the camera from the PC to take photographs or transfer images to it.

Connecting to the PC

By connecting a camera fitted with this unit to a personal computer on which Mamiya Digital PhotoStudio is installed with the use of an IEEE1394 cable (sold separately) it is possible to transfer images to the computer, and operate the camera from the PC to take photographs.

Refer to the Mamiya Digital PhotoStudio manual for details about installing, connecting and use.

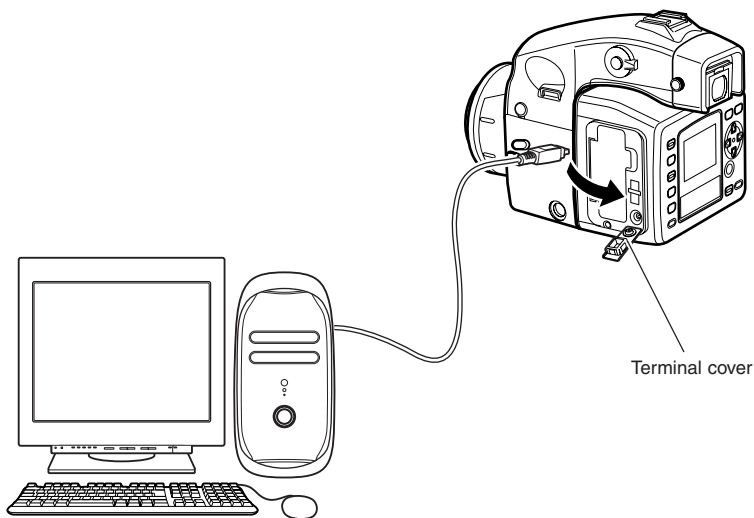

* Use the AC adapter PA301 when using camera fitted with this unit connected to a PC.


Memo:

To connect camera fitted with this unit to a PC, it is necessary to install the driver (Windows).
Refer to the Mamiya Digital PhotoStudio manual for instructions on installing the driver.

Connecting to the PC

Taking Photographs with the Use of the Software

By connecting the camera to a personal computer onto which Mamiya Digital PhotoStudio has been installed enables the camera to be controlled and photographs taken with software. Refer to the instruction manual provided with the Mamiya Digital PhotoStudio for further details.

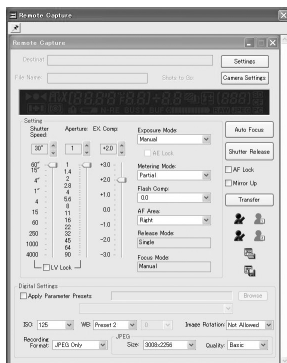


Transferring Image Data


There are two methods available for transferring image data to the PC: using a card reader (sold separately) and using Mamiya Digital PhotoStudio.

Transferring images from a card reader


Remove the memory card from this unit. Connect the card reader(Optional) to the PC, insert the memory card into the card reader and transfer the images.

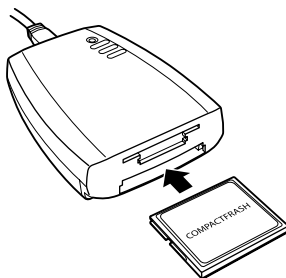


Connecting to the PC

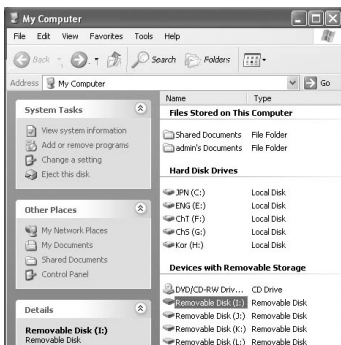


1. Connect the card reader to the PC.
2. Open the My Computer folder and double click on the card reader drive.

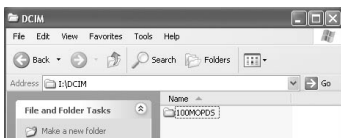

3. Double click on Mamiya Folder DCIM to display the folders containing images.

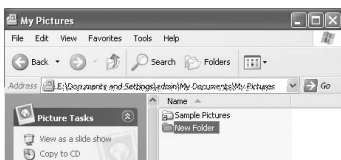

4. Open My Documents — My Pictures and create a [New Folder].

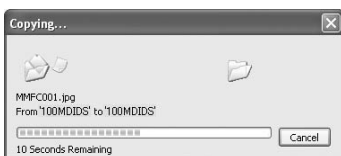


5. Drag and drop the folder containing the images to [New Folder].

Transfer of the images starts.

Changing the name of the transferred folder to the shooting date or place will facilitate management of your pictures.


Transferring images using Mamiya Digital PhotoStudio

Connect this unit to the PC and transfer the images from this unit memory card to the PC using the Mamiya Digital PhotoStudio image transfer function.

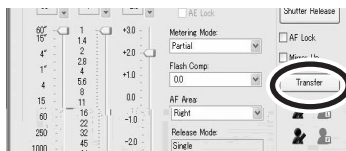

1. Click the [Transfer] button in the [Remote Capture] screen.

The [Data Transfer] screen appears.

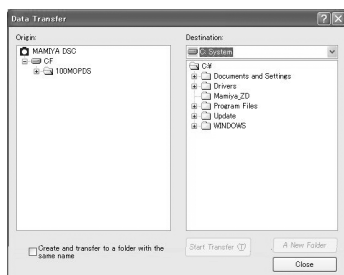


2. Select a folder in the camera memory card from the [Origin] tree.

3. Select a drive in the computer from the [Destination] list.

A folder tree of the selected drive appears below the list.

4. Select a folder to be transferred to and click the [Start Transfer] button.

- When creating a new folder, click the [A New Folder] button and enter the folder name into the screen that appears.
- Adding a check mark to [Create and transfer to a folder with the same name] transfers the entire folder.

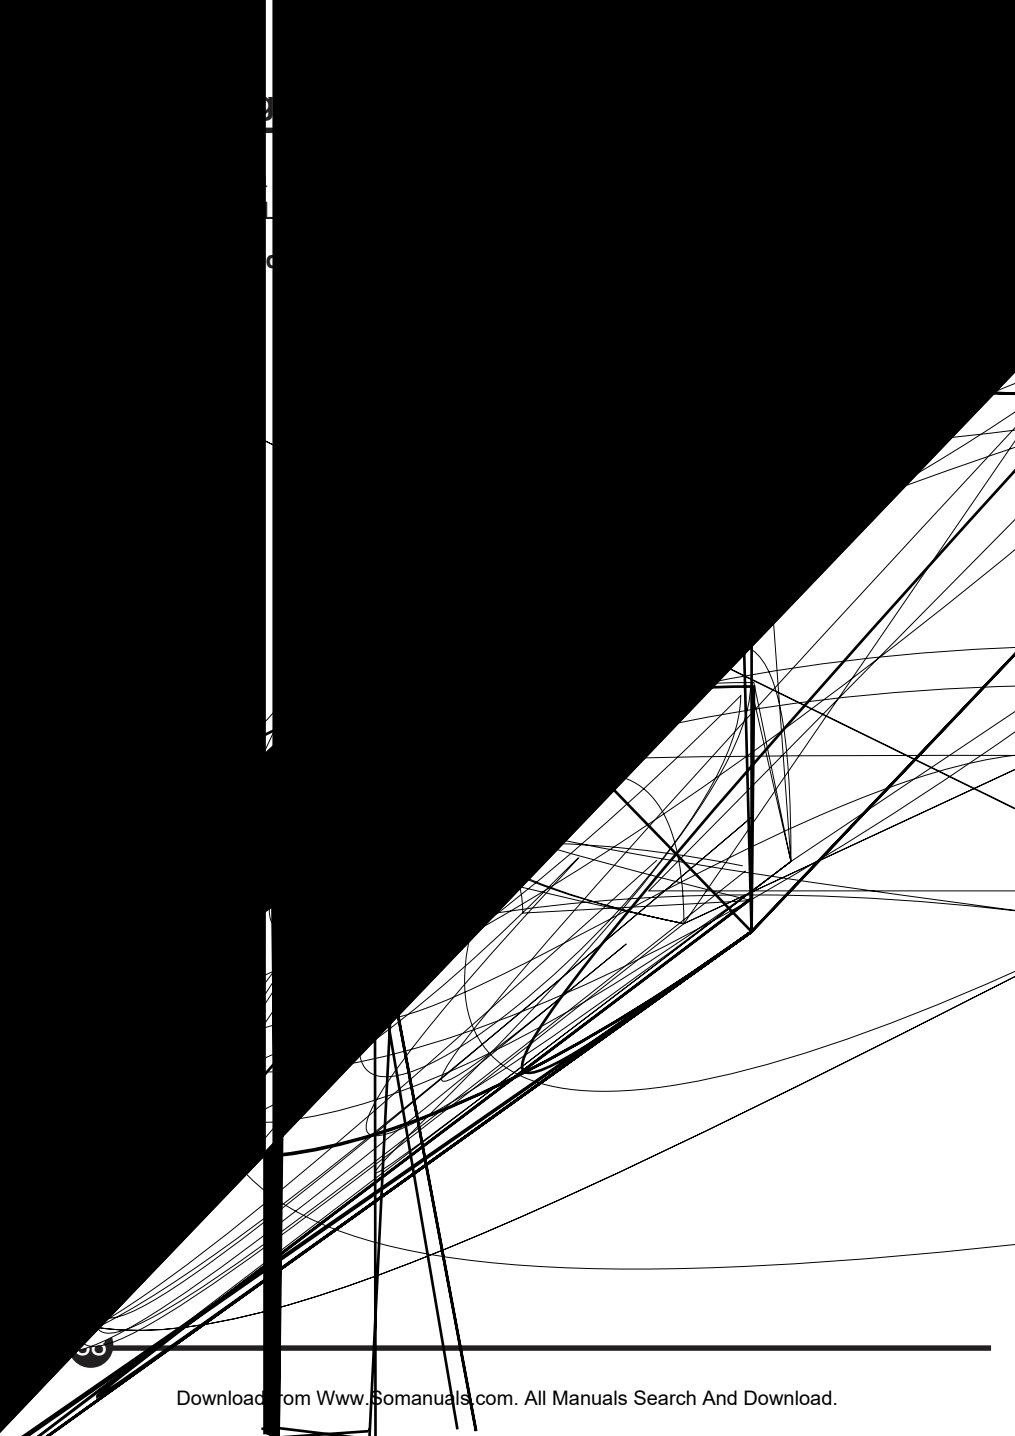


Maintenance

This chapter explains the daily maintenance procedures for this unit.


Maintenance

Cleaning the filter

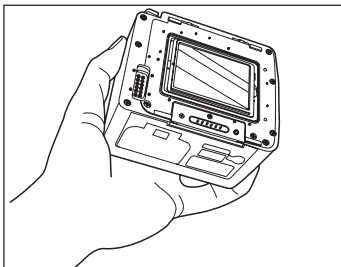

Check that dust or dirt does not adhere to the IR/Low Pass Filter by holding the camera and light shines on the filter.

* Dust and dirt is more conspicuous when light is shined on the filter.

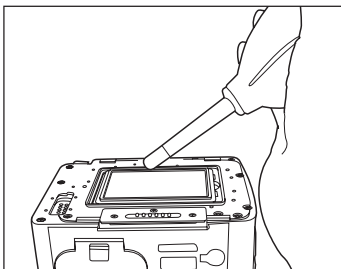

Carefully remove all dust with a lens blower that is available on the open market.

* When using a blower, make sure the tip does not come into contact with the surface of the filter.

* Use a lens blower that is not equipped with a brush. The use of a blower with a brush may result in the surface of the filter being scratched.

Mamiya ZD Back maintenance/checks

- Always place the lens selector lever in the L when this unit is not going to be used.
- Remove the lithium ion battery and store it in a well ventilated place when this unit is not going to be used for an extended period.
- Never try to dismantle or modify the camera in any way.
- The connections could become loose or corroded if they are damaged or become dirty.
- Use this unit carefully to avoid dropping or banging against other items.
- Use a damp cloth that has been soaked in water and then wrung to clean the camera if it has been exposed to salty air.
- This unit may be damaged if used/stored in areas where chemical gasses are present.
- Wipe with a soft, dry cloth when cleaning. Do not use solvents, etc. The product can cause discoloration.
- Before using this unit after it has been in storage for an extended period, it is important that either you or your nearest customer service center carry out a few simple checks to make sure this unit is operating correctly.

Troubleshooting

This chapter contains information that should be read thoroughly before problems occur with this unit.

Being Prepared for Problems

Before deciding that you have a problem with this unit, check the problem against the following list to ascertain its cause.


- I cannot recharge the battery.
 - Are you using the correct battery?
Make sure you use the special lithium ion battery PB401.
 - Is the lithium ion battery properly set in the special battery charger?
Set the lithium ion battery PB401 properly in the special battery charger.
 - Has the lithium ion battery run out?
Recharge the lithium ion battery.
 - Is the lithium ion battery properly set in this unit?
Set the lithium ion battery PB401 properly in this unit.
- The battery runs out quickly.
 - Are you sure you have fully charged the lithium ion battery?
Make sure it has been fully charged.
 - Has the lithium ion battery reached the end of its life-span?
Purchase a new lithium ion battery PB401.
- I can't take photographs or store images
 - Have you left the memory card slot cover open?
Make sure the memory card has been fully inserted, and then close the memory card slot cover firmly.
 - Has the memory card been set in place correctly?
Set the memory card firmly in place.
 - Is the memory card full up?
Either replace the memory card with a new one, or erase unwanted images.
 - Is the camera focusing correctly? (Is the <●> focus mark in the viewfinder flashing?)
Half-press the shutter button once again to realign the focus. If it will still not focus, focus it yourself manually.

-
- The LCD monitor displays and images are blurred.
 - Is the screen dirty or otherwise soiled?
Wipe the screen with a lens cleaner or similar type of soft cloth.
 - Has the LCD reached the end of its life-span?
Contact our Customer Service Center.
 - I can't erase images.
 - Are the images protected?
Cancel the protect function.
 - Is the SD card protected?
Unprotect the SD card.
 - The date and time of taking the images are not correctly displayed.
 - Have you set the date/time parameters correctly?
Set the date/time parameters correctly.

Error Messages and Recovery

Error messages are displayed on the LCD monitor when errors occur with the camera.

Error Messages and Recovery

Error Message	Recovery
The card cover is open.	Close the memory card cover.
A card does not exist in the specified slot.	Place a memory card in the specified slot, or change the memory card setting with [7 Storage].
Replace the card.	Remove the memory card, and then replace it. If the same message is displayed, replace it with a different memory card.
The card is not formatted.	Format the memory card.
FOLDER No. FULL. Cannot create folder.	Format the memory card.
CARD FULL. Cannot create folder.	The card is full up. Erase all unwanted images, and then try again to create a folder.
CARD FULL. The card is full.	The card is full up. Either erase all unwanted images, or replace the memory card.
Protected.	The images on the memory card are protected. Release the SD memory card lock switch.
No images.	Replace the memory card with one that contains recorded images.
Cannot playback this image.	The image format cannot be played back with the camera.
Cannot zoom this image.	The image cannot be enlarged.
	Processing. Please wait.

Appendix

This chapter provides information on digital terminology, an index, and the camera specifications.

Digital Terminology

Channel

The image's color component. On a "Curve/histogram" screen, there are four channels, "RGB", "R-ch (red)", "G-ch (green)", "B-ch (blue)", and the component distribution in each channel can be adjusted.

CMS

Abbreviation for "Color Management System". Refer to "Color management system".

CMYK

A method of expressing color. By changing the mix ratio of Cyan (C), Magenta (M), Yellow (Y), and Black (K), all colors can be expressed.

It is a method originally used in color printing.

Theoretically is possible to express every color using only the three primary colors, CMY, however black is added to the three primary colors in order to facilitate clean printing of the color black.

CMY are complimentary colors to RGB, and CMY is known as a subtractive color mixture method, as opposed to RGB, which is known as an additive color mixture method.

Color management system

A system for correcting any discrepancy in the color space depending on the output device and ensuring the same color is reproduced for the same data.

Typical examples are Macintosh's "ColorSync" and Windows' "ICM".

Color space

This refers to the area where color can be displayed. Color space varies depending on the output device. To match the colors from input through to output it is necessary to correct and manage the different color spaces of each device and then match the colors reproduced (color management).

Compression

The process of reducing the size of a file using a predetermined method. Conversely, the process of restoring compressed data is known variously as, “decoding”, “unpacking”, “expansion”, “decompression”, or “extraction”. Compression is necessary for saving or transmitting full color high resolution image data as the file sizes become large.

There are two types of compression method: “Reversible compression”, in which the image quality is not lost, and “non-reversible compression”, in which the compression ratio can be dramatically increased in return for allowing a certain amount of loss of image quality.

Crop

Selecting a range to be outputted in the case where only part of the file is to be outputted rather than the whole file. Crop is also used to denote the selected range.

FireWire

This is the nick name of the “IEEE1394” standard, which is a transmission mode/protocol that connects a computer and a peripheral device. Refer to “IEEE1394”.

Gamma value

The ratio of the change in image brightness and output voltage.

Where the gamma value is greater than 1, the image is darker than at the time of input, and in the case of a gamma value less than 1, the image is brighter than at the time of input.

Gradation

The degree of fineness refers to the slight changing gradation of color. It is expressed in units of n bits, or n gradations. The higher the number of gradations, the smoother the expression of color.

Histogram

A distribution graph of the image's luminance.

The horizontal axis represents the level luminance, and the vertical axis represents the occurrence rate of each level luminance.

Digital Terminology

IEEE 1394

A high speed serial transmission system/protocol that connects a computer with a peripheral device such as an MO drive or digital camera. High speed data transmission is performed through a connection cable.

JPEG

Abbreviation for "Joint Photographic Experts Group".

A compression system for still image data, the JPEG file format takes the name of a professional organization established by ISO.

During compression, the operator may choose between a compression method that entails slight loss of image quality (irreversible compression), or a method with no loss of quality (reversible compression), and in the case of the image quality loss compression, the degree of quality loss can be specified.

LCD

Abbreviation for "Liquid Crystal Display". A display device that uses liquid crystal.

LCD is thinner and lighter than other display devices, and consumes comparatively less power. It is often used in digital equipment.

Mired

This value is one million times the reciprocal number of the color temperature.

Even where the difference in color temperature is the same, where the color temperatures are low the color change in the color temperature is large, and where the color temperatures are high, the color change in the color temperatures is small.

For example, for a color temperature difference of 100K, in the 6000K range the color will hardly change at all, while in the 3000K range the color change will be large.

Mired is a standard for expressing the variation widths that are substantially the same. Mired is also used as a unit for color temperature correction filters.

Noise

Conventionally, noise was unnecessary in an image and caused the image to deteriorate.

ppc

This is an abbreviation for a unit of resolution, “pixels per centimeter”. It expresses the number of pixels in one centimeter. A higher number relates to a higher resolution.

ppi

This is an abbreviation for a unit of resolution, “pixels per inch”. It expresses the number of pixels in one inch. A higher number relates to a higher resolution.

Profile

A file that defines the color characteristics, and the color reproduction area of each input device.

In a color management system, this profile is used to correct color differences between input devices and to perform color matching.

RAW image

An image captured with the picture quality mode set to “RAW”, in which the raw output from the CCDs (image capture element) is stored in non-compressed, 12 bit format.

These images can only be opened with this software, and if the image is to be used in another application it is necessary to develop it and save it in JPEG or TIFF format first.

The settings of various types of image retouch information such as tone curve, white balance, or color balance can be stored in a RAW image, so the image can be adjusted without any loss of image quality.

Resolution

A standard for expressing the fineness of an image and the smoothness of the image quality.

Resolution is expressed as how many points can be expressed as a cluster within a unit width. The higher this value is, the finer the image that can be obtained.

The number of dots displayed on the screen represents the quality of the picture. Printed or scanned documents are expressed in dpi or ppi.

Digital Terminology

RGB

A method of expressing color.

Colors are expressed by overlaying and combining the three colors, red (R), green (G), and blue (B). These three colors are called the three primary colors of light, and by overlaying and combining them, every color can be expressed. Like light, the image becomes brighter as more colors are overlaid and combined, (if red, green and blue are all combined at 100%, they become white), so this method is known as the additive color mixture method.

TIFF

An abbreviation for "Tagged Image File Format".

TIFF is an image data format developed by Aldus and Microsoft.

It is able to organize and store the data of a single image into a single file with various different resolution, encoding systems and number of colors.

During compression, non-quality loss systems (irreversible compression) such as LZW or pack bit can be selected.

Thumbnail

An image that has been compressed in order to display a number of such images together in a list format.

Originally this comes from the words "thumb" and "nail". In this software, thumbnails are displayed when the imported images are displayed in list format on the thumbnail screen.

Threshold value

The boundary limit where some photographic processes do not work.

For example, the UnSharp Mask process defines the applicable criteria of whether or not an edge is added.

Tone Curve

When the shape of a curve is changed, the relationship between the input (original image color) and output (image color after adjustment) changes, and the brightness and contrast within a certain gradation range can be finely adjusted.

Unsharp mask

One of the sharpness processes, when unsharp mask is applied the color and brightness of outline parts is accentuated.

Index

A

Auto Monitor OFF	79
Auto Rotation	66

B

Battery charger	12
Battery power indicator	16, 23

C

Cancel button	14
Card access lamp	14
Charging lamp	21
Color Space	75
Custom White Balance	65

D

Delete 1 frame	58
Delete button	14
Digital LCD panel	14
DISPLAY button	14

E

Erase Image	68
-------------------	----

F

File Numbering	77
File Type to Erase	73
Folder number icon	16
Folder Setting	65
Format	81

H

Highlight Alert	72
Highlight/Shadow Alerts	71

I

IEEE1394 cable	84
Image quality indicator	16
Image Review	78
Image size indicator	16
Info button	14

Index

Image Quality	33
IR Cut filter case	14
ISO button	14
ISO icon	16
ISO sensitivity/folder number indicator	16
ISO sensitivity	43

L

Language/	81
LCD Brightness	69
LCD monitor	14
Lithium ion battery	13

M

Magnification	72
Mamiya Digital PhotoStudio	13
Memory card slot cover	15
MENU button	14

N

Noise Reduction	77
-----------------------	----

O

OK button	14
-----------------	----

P

Playback 1 frame	54
Playback Folder	68
Playback menu	67
Power Saving Mode	77
Protect button	14
Protect/Unprotect	70
Protecting Image	60

Q

Quality button	14
----------------------	----

R

Recording indicator	16
Recording media indicator	16
Recording menu	63
Remaining picture count	16

S

Saturation	63
Set Date/Time	80
Set up menu	75
Shadow Alert	73
Sharpness	64
Shooting Mode	64
Shutter Release w/o Card	76
Slide Show	69
Storage	66

T

Toggle key	14, 16
Tone	46

V

Video Output	134
--------------------	-----

W

White Balance	38
White balance button	14
White balance indicator	16
White balance adjustment icon	16

Z

Zoom button	14
-------------------	----

Specifications

Camera Type	: AF single-lens reflex digital camera
Compatible Cameras	: Mamiya 645AFD/645AFD II/RZ67PRO IID (The Digital Back Adapter HX701 (sold separately) is required with the RZ67PROIID)
Image sensor	: 48mm x 36mm full-frame-transfer dimetric RGB CCD
Aspect ratio	: 4:3
Total Pixels	: Approximately 21.7 mega pixels
Effective pixels	: Approximately 21.3 mega pixels
Card Slot	: Twin-Slot, Slot #1: SD Card, Slot #2: CF Card (Type I/II) (256MB or more)
ISO sensitivity	: ISO 50 to 400 (1/3 steps)
Recording format	: RAW/JPEG (Exif 2.2 compliant), simultaneous RAW & JPEG
Image quality mode	: JPEG: L (5,328 x 4,000 pixels), M (4,096 x 3,072 pixels), S (3,008 x 2,256 pixels)
File size	: RAW: 35 MB (5,328 x 4,000 pixels) without compression JPEG L: Fine approximately 10MB, L: Normal approximately 5MB, L: Basic approximately 2.5MB JPEG M: Fine approximately 6MB, M: Normal approximately 3MB, M: Basic approximately 1.5MB JPEG S: Fine approximately 3MB, S: Normal approximately 1.5MB, S: Basic approximately 0.8MB * File sizes may differ depending on ISO sensitivity and subject.
Shooting speed	: 1.2 frames/second, 10-frame continuous burst possible (when attached to the 645AFD II)
Color space	: sRGB /Adobe RGB
White balance: Auto	: Daylight/Overcast/Shade/Light bulb/Fluorescent/Flash (all of these six can be finely adjusted) Preset 1/Presets 2/Color Temperature (can be set in units of 100K between 2,800K and 10,000K)
LCD monitor	: 1.8 inch low-temperature polysilicon TFT (thin-film transfer) LCD, Field of view = 100%, luminance adjustable, with white LED back light
Playback function	: Zoom, slideshow, histogram, highlight alert, shadow alert
Erase function	: Frame (selected image,) all images, card formatting
Language	: Japanese/English/German/French/Spanish (total of five languages)
Video Output	: Switching between NTSC and PAL
External I/F	: IEEE1394 4-pin
Filter	: IR Cut Filter included (can be used to replace the low-pass filter YC401 for Mamiya ZD Back, sold separately)

Power supply	: PB401 lithium ion battery (7.4V-DC 1500mAh) AC power supply can also be used with the PA302 AC adapter set (sold separately)
Battery check	: Remaining battery power indicator on LCD monitor
Dimensions	: 106 mm (W) x 90 mm (H) x 62 mm
Weight	: 450g (camera only), Battery: 100g
Working environment	: Working temperature: 0 deg. C to 40 deg. C, Working humidity: 75% or less

* These specifications are subject to change without prior notice for quality improvements.

* Although the LCD monitor is manufactured with extremely high-precision technology, there are cases in which pixels may be missing or constantly illuminated.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>