 


MC111M & MC111DM INTERCOM SYSTEM

OWNER'S GUIDE

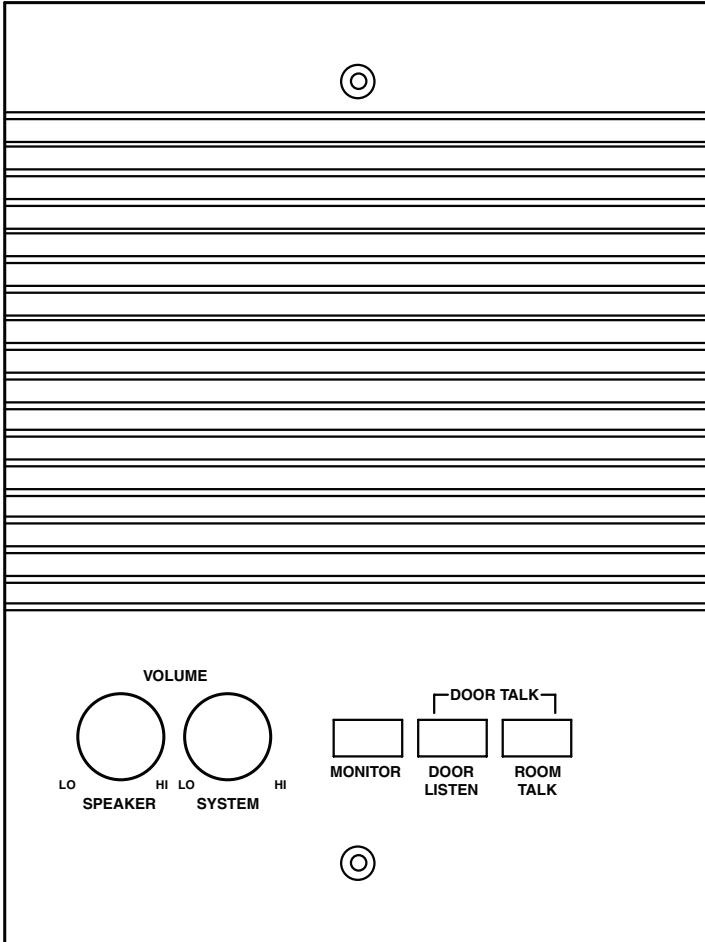

f i n e h o m e a c o u s t i c s™

This booklet contains the information you need to get the most enjoyment from your MC111M or MC111DM intercom as well as important warranty information. Retain this booklet for future reference.

CONTENTS

ABOUT YOUR SYSTEM	2
MASTER UNIT CONTROLS AND FEATURES	3
REMOTE STATION CONTROLS AND FEATURES.....	4
REMOTE STATION with MONITOR - CONTROLS AND FEATURES.....	5
SETTING UP YOUR SYSTEM.....	6
OPERATING YOUR SYSTEM	7
TROUBLESHOOTING TIPS.....	8
WARRANTY	9
NOTES	9

NOTE: Product specifications are subject to change without notice

Copyright © 2000 by M&S Systems

ABOUT YOUR SYSTEM

The MC111M or MC111DM from M&S Systems is a complete home communications system that includes these outstanding features:

Convenient room-to-room communication throughout your home.

Safely answer your front door from any room in the house.

A high quality built-in 3-note door chime that can be used on one or two doors. The second door will sound only one note for easy identification between the two doors.

Room monitoring that helps you to keep watch over your baby or small child.


Music distribution that allows any music source to be played over intercom speakers throughout your home.

A door release function is available on the MC111DM.

Like all M&S Systems products, the MC111M or MC111DM Master Units is designed to make your home atmosphere safe and enjoyable. M&S Systems is committed to producing high quality products for your home. If you have any questions about the operation of your system, please call us at 1-800-366-9422

MASTER UNIT CONTROLS AND FEATURES


The illustration below shows the controls and features used to operate the MC111M or MC111DM Master Units.

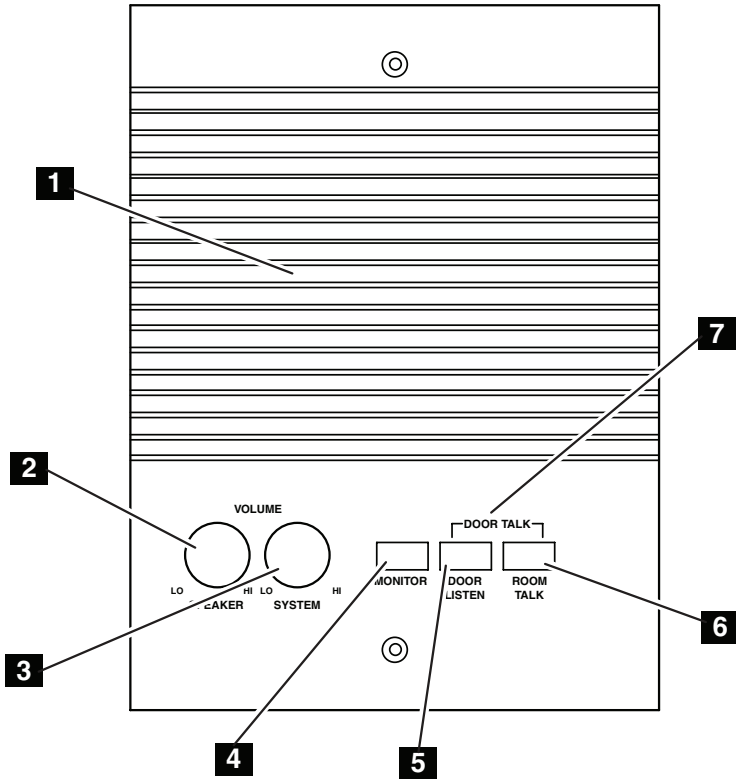

1. Speaker/Microphone
2. Speaker Volume
3. System Volume
4. Monitor Switch (Door Release on MC111DM)
5. Door Listen Switch
6. Room Talk Switch
7. Door Talk (Press both buttons)

REMOTE STATION CONTROLS AND FEATURES


The illustration below shows the controls and features used to operate the N35 or N35D remote station models.

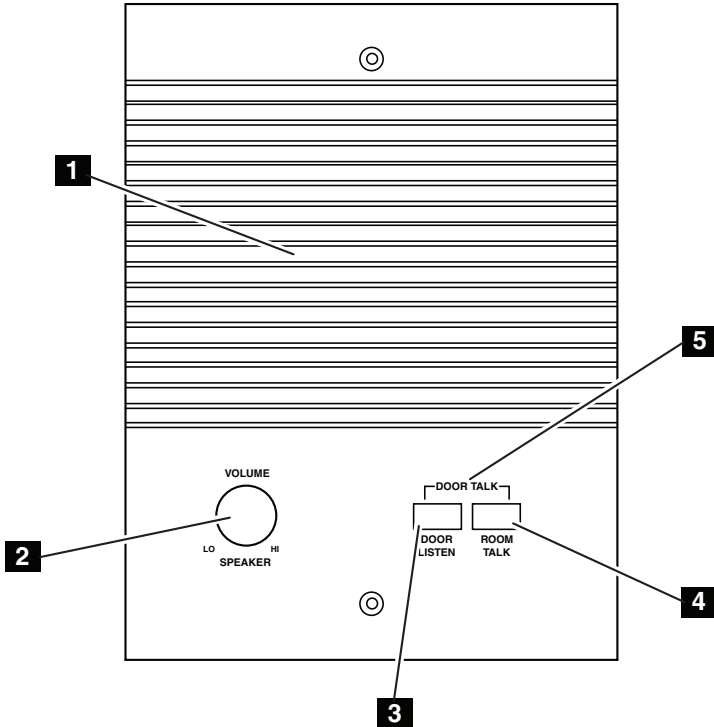

1. Speaker/Microphone
2. Speaker Volume (Door Release N35D only)
3. Door listen
4. Room talk
5. Door talk (Press both buttons)

REMOTE STATION with MONITOR - CONTROLS AND FEATURES

The illustration below shows the controls and features used to operate the N14 remote station model.

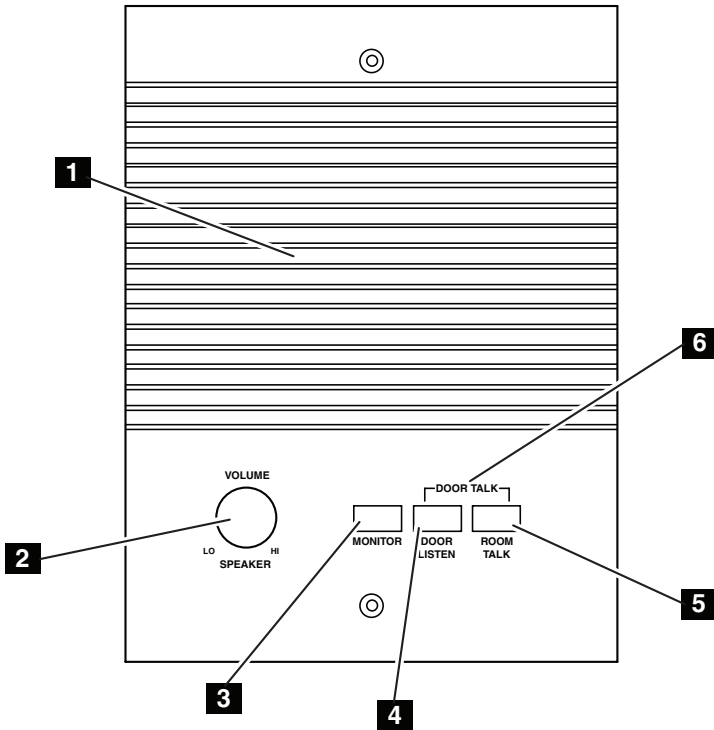

1. Speaker/Microphone
2. Speaker Volume
3. Monitor
4. Door listen
5. Room talk
6. Door talk (Press both buttons)

 

SETTING UP YOUR SYSTEM

System Volume Control - This control is located only on the master speaker. The normal range is between 12 and 1 o'clock.

Speaker Volume Control - The normal setting for speaker volume control knobs is the maximum clockwise position. Speaker volume controls should only be turned down to make a particular room quieter than others.

Chime Volume - Chime volume was set during installation but may be changed if necessary. Before changing the chime volume, be sure all speaker volume controls are at their maximum positions when you test the volume level. To adjust the chime volume, remove the master speaker from the wall and turn the chime volume control on the back with a small flat-bladed screwdriver.

Music Volume - Music volume can be controlled by the system volume control. However, the system volume control also affects the intercom communications volume level. A separate volume control for the music is contained inside the master speaker. This can be adjusted for softer background music while still maintaining intercom communications at the desired level. Be sure all speaker volume controls are at the maximum and the system volume has been set to the desired level before adjusting the music volume. To adjust the music volume, carefully remove the monitor button (door release on MC111DM) and adjust the volume using a small flat-bladed screwdriver.

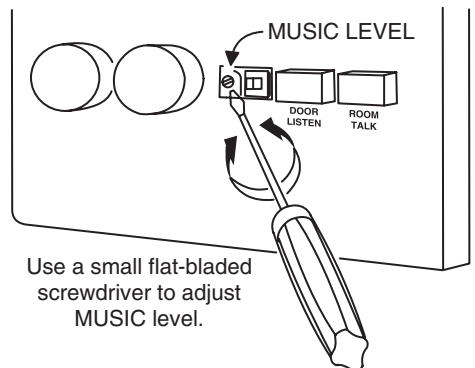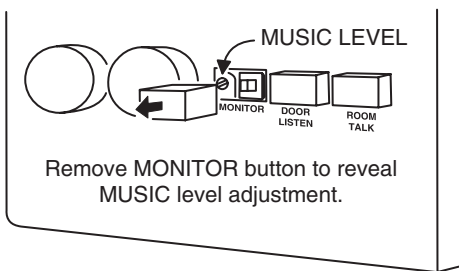

OPERATING YOUR SYSTEM

- Room Talk** Press and hold this button to talk to other room stations, including patio speakers.
- Door Listen** Press and hold this button to listen to the door speaker(s).
- Door Talk** Press and hold both 'Room Talk' and 'Door Listen' to talk to the door speaker(s).
- Monitor** Press this locking button to monitor this station from other rooms. For example, in a baby's room, you would press the button in and be able to hear the baby at any of the other room stations. Rooms in monitor mode cannot hear any communications from other rooms.
- Door Release** On the MC111DM, Press the button labeled "Door Release". On the N35D door release speakers, press the volume control knob to perform a door release function.

TROUBLESHOOTING TIPS

PROBLEM	WHAT TO CHECK
Chime does not ring or is not loud enough.	Speaker volume controls have been turned down.
	Check to see if speaker is in monitor mode.
	Chime volume needs to be adjusted (see Setting Up Your System).
Feedback or squeal is heard when communicating.	System volume has been set too high.
Intercom communication is not loud enough.	Speaker volume controls have been turned down.
	System volume is set too low.
Music volume is too loud or soft.	Speaker volume controls have been turned down.
	System volume is set too low.
	Music volume needs to be adjusted (see Setting Up Your System).
Can't MONITOR or MONITOR is not loud enough.	Remote station to be monitored does not have the MONITOR button pressed in.
	Speaker volume control on the monitored station is set too low.
	Speaker volume control turned down at stations to hear the monitored station(s).
	All stations and the master are in the MONITOR position. At least one station must NOT be in the MONITOR position to be able to hear the monitored stations.

WARRANTY

M&S Systems Limited 2-Year No-Fault Warranty

M&S Systems warrants for 2 years from date of “first user” purchase all products to be free of factory caused defects of material or workmanship. M&S Systems will repair or replace, at its option, parts and material at no charge. This warranty extends to the original purchaser of the product and to each subsequent owner of the product during the term of this warranty.

This No-Fault warranty covers only the liability described above and does not include liability for incidental or consequential damages.

NOTE: Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

M&S Systems will not be responsible for any service call charges from the installation or repair company to the homeowner. Defective product must be returned to the installing dealer or distributor by the homeowner. Transportation/freight charges on products submitted for replacement or repair are the customer’s responsibility. M&S Systems will pay return freight charges.

NOTES:

Please record the following information for future reference:

 
Installer _____

Date of Installation _____

Model _____

Serial number _____

Distributed by:



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>