





KEYLESS ENTRY SYSTEM

The system includes one retractable key fob which remotely locks and unlocks the doors and liftgate.

Release Button

- Push to extend key.
- Push & fold to retract key.

Unlock

- Push once to unlock driver's door.
- Push twice (within five seconds) to unlock all doors and liftgate.



Lock

- Push once to lock all doors and liftgate.
- Push twice (within five seconds) for horn sound verification that all doors are locked.

Panic Alarm

- Push for one second or more to activate alarm.
- Push lock, unlock, or panic alarm to turn alarm off.

NOTE: Leaving the key in the ignition or vehicle and pushing the lock switch will lock the doors with the key in the vehicle unless a door or the liftgate is left open.

LIFTGATE

- To open, push the liftgate button and raise the liftgate.
- To close, push liftgate down until it securely locks, but do not slam.

NOTE: When the liftgate opener switch is pushed, the liftgate will open slightly. If the liftgate is not opened within 1.5 seconds, the liftgate latch locks (you will hear it lock) and the liftgate cannot be opened or closed from this slightly raised position. To open/close the liftgate, push the liftgate opener switch, open the liftgate within 1.5 seconds, then close it. The door/liftgate ajar warning light will be on if the liftgate is not fully closed.





Genuine Mazda Accessory
Rear Bumper Guard is
available at your Mazda dealer.

MANUAL SEAT CONTROLS

Height Adjustment Lever

Raise or lower seat height by repeatedly pulling up or pushing down on the lever.

Recline Lever

Pull up to adjust seatback angle.



Slide Release Lever

Pull lever up to move seat backward or forward.

FOLDING SECOND-ROW SEATS

To increase cargo space, fold down one or both second-row seats.

- **1** Lower the head restraints all the way down.
- 2 Support the seatback with your hand.
- 3 Push the rear seatback knob down (red indicator is visible when seat is in the unlocked position).
- **4** Bring the seatback forward.
- **5** Secure the rear seat belt in the belt clip.



RETURNING SECOND-ROW SEATS TO UPRIGHT POSITION

- 1 Verify that the seat belt is secured in the belt clip.
- 2 Raise seatbacks until they lock into position (red indicator is not visible when seat is in the locked position).

NOTE: Make sure that seat belt is routed in front of the seat as shown.

- 3 Pull on the top of the seatbacks from inside the vehicle to make sure they are locked.
- **4** Check that all seat belts are routed properly for passenger use.









POWER MIRRORS (P. 11)

LIGHTING/TURN SIGNALS (P. 7)

WIPER/ **WASHER** (P. 8)

PASSENGER AIRBAG OFF INDICATOR¹

HAZARD WARNING

PASSENGER SEAT BELT OFF INDICATOR²



















AUDIO CONTROLS (PP. 15-16)

CRUISE CONTROL CONTROL

CLIMATE (P. 14)

ACCESSORY SOCKET

AUX JACK (P. 10)

AUDIO (PP. 15-16)



1 PASS AIRBAG This indicator light illuminates to remind you that the front passenger's front/side airbags and seat belt pretensioner will not deploy during a collision. The reason for this is that the weight in the seat is less than approximately 66 lb. Always wear your seat belt and secure children in the rear seats in appropriate child restraints. See the Owner's Manual for important information on this safety feature.

DSC -

² PASSENGER This indicator light illuminates if front passenger seat belt is not fastened. See the Owner's Manual for important information on this safety feature.





SPEEDOMETER

GLOSSARY OF WARNING AND INDICATOR LIGHTS

DASHBOARD

ILLUMINATION¹

TACHOMETER

NOTE: See Owner's Manual for more details and explanations.



Check Fuel Cap



Traction Control System (TCS)/Dynamic Stability Control (DSC)

On: TCS/DSC malfunction Flashing: TCS/DSC operating



Tire Pressure Monitoring System (TPMS) Warning Light

On/Warning Beep: Low tire pressure in one or more tires. Flashing: TPMS Malfunction







Low Engine Oil Pressure

Headlight High Beams On

Brake Warning Light

Check Engine Light

ABS (Antilock Brake

System) Malfunction

Airbag/Front Seat Belt

Pretensioner System

Malfunction

Security Indicator Light

fluid/malfunction

Parking brake on/low brake

¹ When the headlight switch is in the €045 or ≣D position, rotate the knob to adjust the brightness of the dashboard lights.

TRIP METER SELECTOR²

GAUGE TRIP METER **Dynamic Stability Control**

FUEL

(DSC)/Traction Control System (TCS) Off Indicator Light DSC OFF switched pushed and TCS/DSC turned off.



Charging System Malfunction



Door/Liftgate Ajar



Driver Seat Belt Unbuckled/Malfunction



Shift Lever Position Indicator (Automatic Transmission only)



Overdrive Cancel Indicator Illuminates when overdrive is off

² • Push to toggle between odometer and trip meter (A & B). When a trip meter is selected, push and hold to reset to zero.

NOTE: Low ambient temperature and or high altitude causes tire pressures to drop and may turn the TPMS warning light on. If the warning light comes on, check the tire pressure and fill the tires as soon as possible, preferably before moving the vehicle and warming up the tires. Tire pressure should be checked when the tires are cold.

SHIFT LEVER POSITION INDICATOR (AUTOMATIC TRANSMISSION ONLY)



ODOMETER/

High Engine Coolant Temperature

Flashing: Engine is starting to run hot. On: Engine is running hot/overheating.



Low Engine Coolant Temperature

The light comes on when the engine coolant is cold and goes out when the engine coolant reaches normal operating temperature. The vehicle may be driven when the light is on or off. The heater and defroster work best when light is off.

 
CRUISE Cruise Main Indicator Light On (AMBER)/Cruise Set Indicator Light On (GREEN)







LIGHTING CONTROL/TURN SIGNAL LEVER

Turns tail, parking, and dashboard lights on.



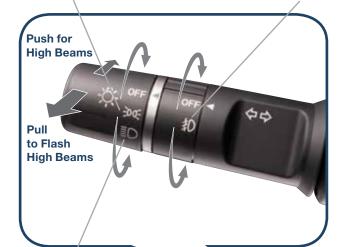

WINDSHIELD/REAR WINDOW WIPER/WASHER CONTROL LEVER

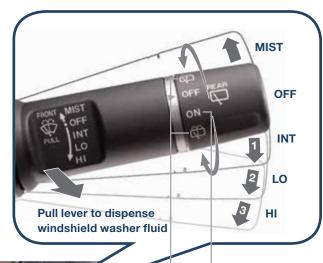

Turns tail, parking, dashboard, and headlights on.



Rear Window Wiper/Washer

ON: Normal speed

Washer/wiper (hold as desired)



ALUMINUM WHEEL CARE

Your aluminum wheels have a protective coating on them. Only use a mild soap or neutral detergent with a sponge or soft cloth to clean them. Using a wire brush, polishing compound, solvent, or any type of abrasive cleaner may damage the protective coating.



Genuine Mazda Accessory Wheel Locks are available at your Mazda dealer.



AUTOMATIC TRANSMISSION

The gearshift must be in Park or Neutral to start the engine and must be in Park to remove the ignition key.

D (Overdrive)

This is the normal driving position for the best fuel economy. The transmission shifts through all forward gears.

D (Overdrive Cancel)

Push the overdrive switch on the gearshift to engage/disengage overdrive. The indicator illuminates when overdrive is off. This feature is useful when going down a steep grade and in stop and go traffic. Refer to the Owner's Manual for complete details.



PORTABLE AUDIO PLAYER INTEGRATION USING THE AUX JACK

Your vehicle is equipped with an AUX or auxiliary jack that will allow you to play your portable audio player through the vehicle's audio system. Learn the system when parked and do not let it distract you while driving.

NOTE: You will need a cable with an 1/8 inch mini stereo plug to connect your portable audio player into the aux jack.



Refer to the Owner's Manual for additional information.

- 1 Locate the AUX jack on the center console.
- 2 Plug 1/8 inch mini stereo plug into the portable audio player and into the AUX jack. Turn portable audio player on.
- 3 Turn the vehicle audio system on.
- **4** Push the CD/AUX button on the audio face or the MODE button on the steering wheel controls.
- **5** Use the portable audio player controls to play music.

IMPORTANT: Set the volume level on your portable audio player to the highest level before distortion starts, then adjust the volume on the audio system.

REAR DOOR CHILD SAFETY LOCKS

These locks help prevent children from accidentally opening the rear doors. Use both whenever a child rides in the vehicle.

With child safety locks in the locked position, the door can only be opened by pulling the outside handle.





ANTENNA

When using the radio, move the antenna to the UP position (approximately 30 degrees).

To **remove** the antenna, turn it counterclockwise.

To **install** the antenna, turn it clockwise. Make sure the antenna is securely installed.



NOTE:

- To ensure the best possible radio reception be sure the antenna is in the up position.
- Remove antenna before using a car wash facility, entering a garage or other low clearance area.
- When removing snow from the roof be careful around the antenna.



















POWER MIRROR ADJUSTMENT



- 1 Place ignition switch in the ACC or ON position.
- 2 Push the selector switch to L for driver side or R for passenger side mirror adjustment.
- **3** Push the mirror switch in the desired direction.
- 4 Move selector switch to the center position to deactivate.



POWER WINDOWS

Driver Auto-Opening/Closing

To fully open the window automatically, push the switch down completely, then release.

To fully close the window automatically, pull the switch up completely, then release.

To stop the window partway, pull or push the switch in the opposite direction and then release.

Power Window Lock Switch

With the lock switch in the unlocked position (button not depressed), all power windows on each door can be operated.

With the lock switch in the locked position (button depressed), only the driver's side power window can be operated.

MECHANICAL-DIMMING MIRROR

Reduce headlight glare from the vehicles behind you by pulling the lever forward. Push the lever backward for day time driving.



Genuine Mazda **Auto Dimming Rearview Mirror** with Compass and HomeLink® available at your Mazda dealer.



DOOR LOCK SWITCH



Push lock side of switch to lock. Push unlock side of switch to unlock.

NOTE:

- · Leaving the key in the ignition or vehicle and pushing the lock switch will lock the key in the vehicle unless a door or the liftgate is left open.
- · Laying objects such as a purse on top of Door Lock Switch may accidently lock the doors with key inside.





CUP HOLDERS

This vehicle is equipped to hold up to five drinks. Use the center console divider to place a cup or canned drink on the center console tray.

Day/Night Lever



















Window

Switches

Feature Highlights

Manual Climate Control





(located on floor in front of driver's seat)

To open, pull the fuel door release.

Fuel

Regular Unleaded Fuel – 87 Octane



Fuel Door

To avoid scratching the paint during refueling, secure the fuel filler cap tether over the hook as shown.

 




LUGGAGE COMPARTMENT LIGHT

Push switch down to the ON position to allow automatic cargo light illumination when the liftgate is open.


Push switch up to the OFF position to cancel automatic cargo light illumination.





Temperature Control Dial

 Rotate the dial for temperature control.







The heater and defroster work best when blue coolant temperature light is off.

Fan Control Dial

  Rotate the dial to set desired fan speed (1-4).





NOTE: The recirculated air position should be used only when driving on dusty roads or for quick cooling of the interior.

 
Mode Selector Dial

Rotate the dial to select airflow mode.











A/C Push to manually turn air conditioning on or off.

Best Cooling Settings



Best Heating Settings





SETTING YOUR CLOCK-

With ignition in ACC or ON position, push and hold **CLOCK** button until beep is heard, clock starts flashing and ADJ appears.

- Use **H** ∧ to move hour forward.
- Use **M** ∨ to move minute forward.

When desired time is reached. push **CLOCK** button to set.



SEEK BUTTONS **RADIO MODE:**

- ▼ Push for next lower stored station.
- ▲ Push for next higher stored station.
- V/▲ Push and hold either button to seek all stations.

- ▼ Push to repeat
- ▲ Push to advance to next track.



current track.



Push the Power/Volume dial to turn the audio system on.

MEDIA SELECTION

Radio: Push FM/AM button to select the FM1. FM2 or AM band. The selected band will be displayed.

CD: With CD loaded, push the CD/ AUX button until CD mode appears.

Auxiliary Input: With portable audio player connected to AUX IN. push the CD/AUX button until AUX mode appears.

TUNING

The radio has the following tuning controls:

- Manual: Push ∧ TUNE/TRACK ∨ button to manually change the frequency.
- Seek: Push and hold the A TUNE/TRACK ∨ tuning buttons to automatically seek a higher or lower frequency with a station.
- Scan: Push the SCAN button to automatically sample strong

stations for seconds each. Push again to cancel.

- Preset Channel: Push the Preset Channel buttons (1-6) to select a station stored in memory. To store a station, push and hold a button (1-6) until a beep is heard.
- Auto Memory Tuning Push and hold the AUTO-M/ SCRL button to store an additional 6 stations on each FM and AM band without disturbing the previously stored stations. This is especially useful when driving in an area where the local stations are not known. Push and release the AUTO-M/SCRL button to recall auto-stored stations. Refer to the Owner's Manual for complete details. To return to the previously stored stations, push the FM or AM button.

LOADING A CD Single CD Player


• Insert CD. label-side up.

PLAYING A CD

- Push CD button to select CD player.
- Push ∧ ∨ FLDR (Folder) button to select a folder (MP3/WMA).
- Push ∧ TUNE/TRACK ∨ button to select a track.

MENU:

Push **MENU** to display options.

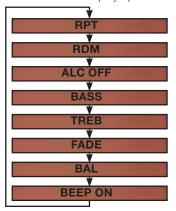

TEXT:



Pushing the TEXT button while a CD or MP3 disc is being played may display Album, Artist, Song, Track, etc (if available on CD or MP3 disc). Refer to the Owner's Manual for complete details.

DISPLAY SCROLL

Only 8 characters (File name) or 12 characters (Except file name) can be displayed at one time. To display the rest of the characters of a long title, push the AUTO-M/SCRL button. The display scrolls the next 12 characters. Push the AUTO-M/SCRL button again after the last 12 characters have been displayed to return to the beginning of the title.


16

Download from Www.Somanuals.com. All Manuals Search And Download.

Information Display

INFO

Push INFO button (optional) on steering wheel to display the following (actual text information will vary on your vehicle):

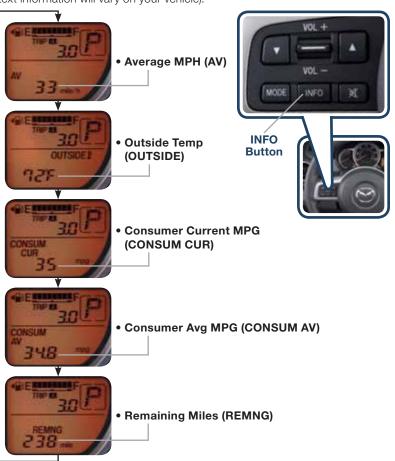



NOTE:

- To clear Average MPH or Consumer Avg MPG, push and hold INFO button when selected screen is displayed.
- To change the ambient temperature display between °F and °C or vice versa, push and hold INFO button for three seconds when Outside Temp is displayed.



MYMAZDA.COM —THE OFFICIAL SITE FOR MAZDA OWNERS

Register today on MyMazda.com
—the ultimate destination for
Mazda Owners. Once registered,
you'll be able to take advantage
of benefits exclusively for
Mazda Owners:

- Insider access to exclusive events and promotions
- Personalized maintenance schedules
- Zoom-Zoom Owner Magazine
- Warranty information and on-line Owner's Manuals
- Wallpaper, videos and other fun stuff
- Accessories specifically designed for your vehicle
- Car Care Discount Coupons available from your Mazda Dealer

Visit and register at MyMazda.com today!

Roadside assistance is available 24 hours a day, 365 days a year. Using the toll free phone number or iPhone APP (which uses GPS-enabled technology to determine your exact location), will put you in touch with a roadside assistance agent.

Phone: 1-800-866-1998

The APP can be downloaded, free of charge, by logging onto http://mazda.crosscountry-auto.com/

After downloading APP, customer name, email, iPhone number and VIN are required.

PERSONALIZE YOUR MAZDA2 WITH GENUINE MAZDA ACCESSORIES:

- Auto Dimming Rearview Mirror with Compass and HomeLink®
- · Cargo Net
- Roof Rack with available attachments to transport your bike, kayak, surfboard, snowboard, luggage and more
- Side Sill Extensions
- Tailpipe Finisher
- Mazda2 or Zoom Zoom License Plate Frame
- Wheel Locks
- · Fog Lights
- Splash Guards
- All Weather Floor Mats

- Rear Bumper Guard
- 3.5mm Audio Cable
- Portable Navigation Devices by Garmin
- Motorola T305 Bluetooth Calling Device
- First Aid Kit
- Roadside Assistance Kit

Customer Delivery Checklist

Customer Delivery Checklist

VEHICLE PRESENTATION:

Refer to Smart Start Guide during presentation

ricial to chiart danc daring present
 Keyless Entry
Seats2 • Adjustments
■ Driver's View3-4 • Location of Switches and Controls
■ Instrument Cluster 5-6 • Review of Warning and Indicator Light Function and Location
Lights
Aluminum Wheel Care7
☐ Wiper/Washer8
Automatic Transmission
AUX Jack10

)II	
☐ Door Lock	Switch 12
-	
☐ Fuel Door	13
90	 Fuel Door Release, Tether Hook and Fuel Spec

☐ Climate Control	

Set Clock	. 1
A PACINA	
Title 1	

Audio Controls 15-16
☐ Information Display17

SCHEDULED MAINTENANCE

When replacing or topping off engine oil, use Mazda Genuine Parts. For optimal engine performance, use SAE 0W-20 engine oil. Please consult an Authorized Mazda Dealer for additional information.

All items in the Customer Delivery Checklist have been reviewed with the customer and the first maintenance appointment has been scheduled:

SALES CONSULTANT	DATE	CUSTOMER	DATE

12		
13		
14		
15		
-16 17		
il		

DEALERSHIP	DATE
SALES CONSULTANT	CUSTOMER'S NAME
VIN	E-MAIL

PRESENTATION OF OWNER'S MATERIALS:

Review the following items with the customer

☐ Smart Start Guide

 Remove this checklist from Smart Start Guide

☐ Warranty Information

Warranty Start Date:

Customer Initial:

- Basic Vehicle –
 36 months/36.000 miles
- Roadside assistance program

SERVICE DEPARTMENT

- ☐ Introduce Service Manager; provide business cards
- Review Service and Parts
 Department hours of operation
- Explain free Full Circle Service Inspection
- ☐ Schedule first maintenance service

■ MyMazda.com

- Offer to register customer on MyMazda.com
- ☐ Owner's Manual



GENUINE MAZDA SERVICE

Because you and your Mazda deserve the best


Your new Mazda deserves nothing less than the very best. To keep it running like new for years to come, trust the experts at your local Authorized Mazda Dealer. Simply bring your vehicle in for your scheduled maintenance and any needed repairs.*

At participating Mazda Full Circle Service Centers,** our technicians will automatically perform a complimentary Full Circle inspection on your vehicle and issue a detailed report card at every visit. This is designed to help you keep track of your Mazda's critical operating condition. Our factory-trained technicians know your vehicle inside out and use Genuine Mazda Parts, giving your vehicle the optimum care and maintenance it requires to run with flawless precision.

Remember, to further enhance your driving experience, visit your local Mazda Service Center for your scheduled maintenance. It's also the place where you can find a wide variety of tires, parts, and accessories that are just right for your vehicle.

- * See vehicle's scheduled-maintenance program for details.
- ** Visit the Mazda Owners website at MyMazda.com/fullcircle to find a participating Mazda Full Circle Service Dealer.

Customer Assistance Center: 1-800-222-5500 Roadside Assistance Contact: 1-800-866-1998

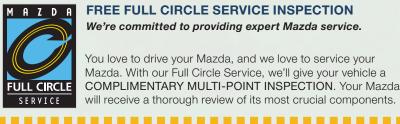

FREE FULL CIRCLE SERVICE INSPECTION

We're committed to providing expert Mazda service.

You love to drive your Mazda, and we love to service your Mazda. With our Full Circle Service, we'll give your vehicle a COMPLIMENTARY MULTI-POINT INSPECTION. Your Mazda will receive a thorough review of its most crucial components.

This easy-to-use Smart Start Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. Mazda reserves the right to change specifications or design without obligation.

© Mazda North American Operations Printed in U.S.A. 05/10 Print 1 9999 95 002C 11SS



www.MazdaUSA.com

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com