


---

# ide line®

---

ART.NR. 751-019

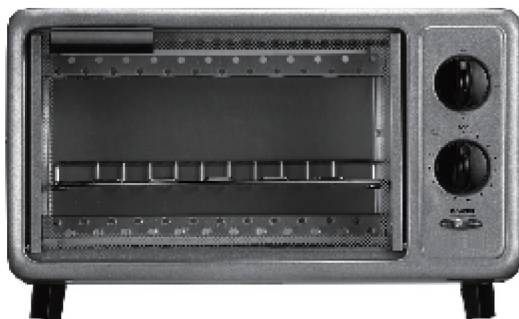

DK	Toasterovn.....	2
UK	Toaster oven.....	5

[www.ideline.com](http://www.ideline.com)

## INTRODUKTION

Før De tager Deres toasterovn i brug, beder vi Dem venligst gennemlæse denne brugsanvisning. Vi anbefaler Dem tillige, at gemme brugsanvisningen.


## ALMINDELIGE SIKKERHEDS

### FORANSTALTNINGER

1. Læs hele brugsanvisning.
2. Anvend kun ovnen til det, den er beregnet til.
3. Ovnen må kun tilsluttes 230 V (almindeligt i Danmark).
4. Bemærk at ovenns sider kan bliver meget varme, når ovnen er i brug. Berør derfor kun håndtaget på lågen og knapperne.
5. Selve ovnen eller ledningen må ikke nedsænkes i nogen former for væske.
6. Efter endt brug skal stikket tages ud af stikkontakten.
7. Før rengøring skal stikket tages ud af stikkontakten, og ovnen skal være fuldstændigt afkølet.
8. Undlad at trække i ledningen når De tager stikket ud af stikkontakten.
9. Lad ikke ledningen hænge udover bordkanten og sørg for at ledningen ikke kommer i klemme i skuffer eller lign. Ledningen bør holdes væk fra varmeoverfladen.
10. Anbring aldrig toasterovnen på eller nær komfur, ovn eller lign.
11. Anvend kun ovnen indendørs.
12. Rør aldrig varmelegemerne -heller ikke under rengøring.
13. Små børn bør holdes under opsyn, såfremt de befinder sig i nærheden af ovnen, mens den er i brug.
14. Såfremt apparatet eller ledningen skulle blive beskadiget, undlad da at benytte apparatet. Indlever da ovnen til en fagmand for reparation, da der skal anvendes special værktøj. Apparatet bør opbevares utilgængeligt for børn.
15. Børn der befinder sig i nærheden af apparatet, når dette er i brug, bør holdes under opsyn.
16. Benyt ikke apparatet hvis der er tydelige tegn på skader.
17. Benyt kun apparatet indendørs.
18. Ved anvendelse skal ovnen placeres stabilt på fødderne på en plan overflade. Bør ikke placeres på en ubehandlet træoverflade, benyt en varmebestandig overflade.

19. Garantien bortfalder ved tilslutning til forkert spænding.

## FØRSTEGANGSBRUG

Før De anvender Deres nye toasterovn første gang, bør ovnen stå tændt i ca. 5 min. Ved varmindstillingen . Det er muligt og helt normalt, at ovnen afgiver en smule lugt og røg de første par gange den er i brug.

Sluk ovnen og lad den afkøle fuldstændigt. Aftør derefter ovnen indvendigt med en ren, fugtig klud. Sørg for at ovnen er helt tør inden brug.

## TILBEHØR

- 1 stk. bageplade
- 1 stk. krummebakke

## FUNKTIONER

### Varmeindstilling:



= Begge varmeelementer er afbrudt.



= Kun nederste varmeelement er tilsluttet.














= Både øverste og nederste varmeelement er tilsluttet.



= Kun øverste varmeelement er tilsluttet.

## GODE TIPS

Begynd med at vælge varmeindstilling. Under tilberedningen kan det måske være hensigtsmæssigt at ændre varmeindstillingen. Hvilken varmeindstilling man skal benytte, afhænger af typen af fødevarer der tilberedes, gratineres etc. Herunder er vist nogle forslag for tilberedningstid samt varmeindstilling til diverse fødevarer. Efter at varmeindstillingen er foretaget indstilles tidsuret til ønsket antal minutter. Varmeelementerne tændes først når tidsuret er indstillet.

Menu	Frossen /Optøet	Varmeind stilling	Ca. tider
Toastbrød/ franskbrød	Optøet		5 min.
Toastbrød med pålæg	Optøet		8 min.
Sandwich	Optøet		8 min.
Flutes/ rundstykker	optøet		3 min.
Flutes/ rundstykker	Frossen		8 min.
rundstykker	Optøet		2 min.
Tarteletter	Optøet		80 min.
Bagte kartofler	Frossen		30 min.
Kyllingelår	Frossen		30 min.
Pommes frites	Frossen		25-30 min
Lasagne	Frossen		10-15 min

## TIDSINDSTILLING

Fungerer som et almindeligt minutur. Indstilles efter ønske (maximum 15 min. & minimum 2 min.). Ovnen slukker og signal lyder, når den indstillede tid er udløbet. Ønskes ovnen tændt mere end 15 min. indstilles uret blot igen.

NB! Vi skal for god ordens skyld gøre opmærksom på at ovnen er udstyret med en mekanisk timer. Denne kan aldrig være lige så præcis som en elektronisk timer.  
OBS! Timeren kan ikke sættes på mindre end 2 minutter.

## ALMINDELIGT BRUG

1. Anbring ovnen på et hårdt, vandret varmefast underlag.
2. Tilslut 230V og tænd for stikkontakten.
3. Sørg for at ovnlågen kan åbnes frit og sikkert. Ledningen må ikke røre nogen dele af ovnen.
4. Indstil varmen på øverste, nederste eller begge varmeelementer.
5. Sæt tidsuret på det ønskede antal minutter (max. 15 min.) Den røde kontrollampe begynder nu at lyse.
6. Ovnen afbryder automatisk og et signal lyder, når den indstillede tid er udløbet. Uret vil stadig gå ca. 1 minut efter at signalet har lydt, dette er helt normalt. Ovnen vil ikke varme mere efter signalet har lydt, heller ikke selvom uret stadig går. Ovnen kan afbrydes når som helst ved at dreje tidsuret (mod uret) til position O.

## RENGØRING

Sluk ovnen og lad den afkøle fuldstændigt. Efter derefter ovnen indvendigt med en ren, fugtig klud. Sørg for at ovnen er helt tør inden brug. Tag stikket ud af stikkontakten, og lad ovnen køle af.

Risten og bagepladen kan afvaskes. Efter ovnen udvendigt med en fugtig klud. Brug eventuelt en blød svamp til rengøring.

Rør aldrig varmelegemet, heller ikke under rengøring.

Brug INGEN former for stærke, opløsende, slibende rengøringsmidler eller skarpe genstande.

## MILJØ TIPS

Et el/elektronik produkt bør, når det ikke længere er funktionsdygtigt, bortskaffes med mindst mulig miljøbelastning. Apparatet skal bortskaffes efter de lokale regler i din kommune, men i de fleste tilfælde kan du komme af med produktet på din lokale genbrugsstation.

## GARANTIE DÆKKER IKKE


- hvis ovennævnte ikke iagttages.
- hvis apparatet har været misligholdt, varet udsat for vold eller lidt anden form for overlast.
- for fejl som måtte opstå grundet fejl på ledningsnettet.
- hvis der har været foretaget uautoriseret indgreb i apparatet.

## IMPORTØR

Adexi A/S

Vi tager forbehold for trykfejl  
Grundet konstant udvikling af vore produkter på funktions- og designside forbeholder vi os ret til ændringer af produktet uden foregående varsel.

## INFORMATION OM BORTSKAFNING OG GENBRUG AF DETTE APPARAT

Elektrisk og elektronisk udstyr (EEE) indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt. Produkter, der er mærket med den 'overkrydsede skraldespand' () er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt.

Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning. Brugere af elektrisk og elektronisk udstyr må ikke bortskaffe affald af elektrisk og elektronisk udstyr sammen med husholdningsaffald. Brugere skal benytte de kommunale indsamlingsordninger for at mindske den miljømæssige belastning i forbindelse med bortskaffelse af affald af elektrisk og elektronisk udstyr og øge mulighederne for genbrug, genanvendelse og nyttiggørelse af affald af elektrisk og elektronisk udstyr.

## INTRODUCTION

Before using your toaster oven for the first time, please read this user guide carefully. We further recommend that you keep the user guide for future reference.

## STANDARD SAFETY MEASURES

1. Read the user guide all the way through.
2. Use the oven for its intended purpose only.
3. Only connect to a 230 V supply (standard in Denmark).
4. Beware that the sides of the oven may be very hot, when the oven is in use. Therefore, only touch the handle on the door and the buttons.
5. Do not immerse the oven, cord or plug in any form of liquid.
6. After you have finished using it, remove the plug from the wall socket.
7. Before cleaning, remove the plug from the wall socket and ensure the oven is completely cool.

## USING THE OVEN FOR THE FIRST TIME


Before using your new toaster oven for the first time, the oven should be switched on for approx. 5 minutes at the setting n. The oven may give off a little smell and smoke the first couple of times it is used. This is perfectly normal.

Turn the oven off and leave it to cool completely. Then wipe the inside of the oven with a clean, damp cloth. Make sure the oven is completely dry before using it.

8. Avoid pulling the cord, when removing the plug from the wall socket.
9. Do not allow the cord to hang over the edge of the table, and make sure that the cord does not become trapped in a drawer or similar. Keep the cord away from the heated surface.
10. Never place the toaster oven on or near a cooker, oven or similar.
11. For indoor use only.
12. Never touch the heating elements – nor when cleaning.
13. Keep an eye on young children, when in the vicinity of the oven during use.
14. Do not use if the appliance or cable becomes damaged. Hand in the appliance to a professional for repair, as specialist tools are required. The appliance should be kept out of the reach of children.
15. Keep an eye on children in the vicinity of the appliance when it is in use.

16. Do not use the appliance if it shows obvious signs of damage.
17. For indoor use only.
18. During use, the oven must be placed on its feet on a stable and level surface. Do not place on an untreated wooden surface. Instead place on a heat resistant surface.
19. The guarantee is not valid if the oven is connected to the wrong voltage.

## USING THE OVEN FOR THE FIRST TIME

Before using your new toaster oven for the first time, the oven should be switched on for approx. 5 min. at the setting . The oven may give off a little smell and smoke the first couple of times it is used. This is perfectly normal.





Turn the oven off and leave it to cool completely. Then wipe the inside of the oven with a clean, damp cloth. Make sure the oven is completely dry before using it.

## ACCESSORIES

- 1 baking tray
- 1 tray for collecting crumbs

## FUNCTIONS












Heat setting:

-  = Both heating elements are turned off.
-  = Only the bottom heating element is turned on.
-  = Both heating elements are turned on.
-  = Only the top heating element is turned on.

## HINTS

Begin by choosing the heat setting. During cooking it could be advisable to change the heat setting. The heat setting to be used depends on the type of food to be cooked, heated etc. Below are suggestions for cooking times and heat settings for various foods.

After choosing the heat setting, the timer is set for the required minutes. The heating elements are not turned on, until the timer has been set.

Menu	Frozen /defrosted	Heat setting	Approximate times
Toast bread /white bread	Defrosted		5
Toast bread with fillings	Defrosted		8
Sandwich	Defrosted		8
French stick/ bread rolls	Defrosted		3
French stick/ Pastry shells	Frozen		8
Baked potatoes	Defrosted		2
Chicken drumsticks	Defrosted		80
Chips/French fries	Frozen		30
Lasagne	Frozen		30
Pizza	Frozen		25-30
Pizza	Frozen		10-15

## TIMER

Works as an ordinary timer. Set as required (maximum 15 minutes & minimum 2 minutes). The oven automatically switches off and a signal sounds, when the set time has elapsed. If you require the oven on for more than 15 minutes, simply reset the timer.

NB! Please note that the oven has a mechanical timer. This will not be as accurate as an electronic timer.

NB! Minimum setting for the timer is 2 minutes.

## ORDINARY USE

1. Place the oven on a solid, horizontal and heat resistant surface.
2. Connect the oven to a 230V supply, and switch on the wall socket.
3. Make sure, the oven door can be opened freely and safely. The cord must never touch any part of the oven.
4. Set the heat for top, bottom or both heating elements.
5. Set the timer for the required number of minutes (max. 15 min.) The red indicator light will now come on.

6. The oven automatically switches off and a signal sounds, when the set time has elapsed. The timer will continue for approx. 1 minute after the signal has sounded. This is perfectly normal. The oven will discontinue heating when the signal is heard, even if the timer continues. The oven can be turned off at any time, by turning the timer (anticlockwise) to position 0.

## CLEANING

Turn the oven off and leave it to cool completely. Then wipe the inside of the oven with a clean, damp cloth. Make sure the oven is completely dry before using it.

Remove the plug from the wall socket and allow the oven to cool down before cleaning.

The grid and the baking tray may be washed. Wipe the outside of the oven with a damp cloth. A soft sponge may be used for cleaning the oven.

Never touch the heating elements – nor when cleaning.

\*Do NOT use any form of strong, solvent or abrasive cleaning agent or sharp objects.

## ENVIRONMENTAL ADVICE

Once any electrical or electronic product is no longer functional, it should be disposed of in such a way as to cause minimum environmental damage. The equipment should be disposed of in accordance with the rules of your local council, but in most cases you can dispose of such products at your local recycling centre.

## THE GUARANTEE WILL BE VOID

- if the above instructions are not followed.
- if the equipment has been mishandled, subject to violence or any other form of damage.
- for faults that may have arisen as a result of faults in your electricity supply.
- if the appliance has been interfered with.

## IMPORTER

Adexi A/S


We cannot be held responsible for any printing errors.

Due to the constant development of our products in terms of function and design, we reserve the right to make changes to the product without prior warning.

## INFORMATION ON DISPOSAL AND RECYCLING OF THIS PRODUCT

Electrical and electronic equipment (EEE) contains materials, components and other matter that could be dangerous and harmful to human health and the environment if electrical and electronic waste (WEEE) is not properly disposed of. Products marked with a 'crossed out



waste bin' (  ), are electrical and electronic equipment. The crossed out waste bin symbolises that electrical and electronic waste must not be disposed of together with household waste, but should be separately disposed of.

For this purpose, all local authorities have established refuse arrangements where electrical and electronic waste can be handed in at recycling points or other refuse collection points free of charge, or collected directly from the households. For further information, contact your local technical administration. Users of electrical and electronic equipment must not dispose of electrical and electronic equipment together with household refuse. Users must use the local, public refuse arrangements in order to minimise the environmental hazards in connection with disposal of electrical and electronic waste and increase the opportunities for reuse, recycling and recovery of electrical and electronic waste.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>