

mellerware®

TRENDS FOR LIFE



robot 300
stick blender



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

 
 
 
m
3 0 0 W

CE
2 YEAR
GUARANTEE

Model:
85200

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year
guarantee

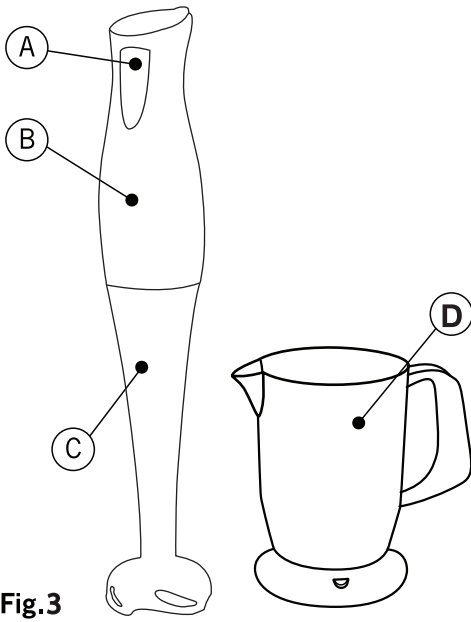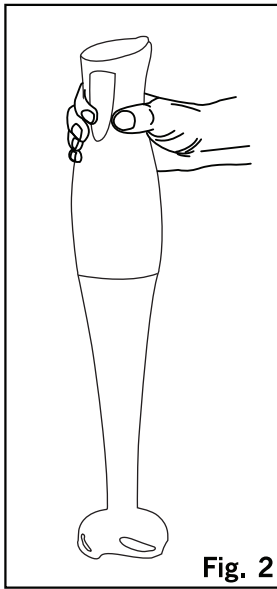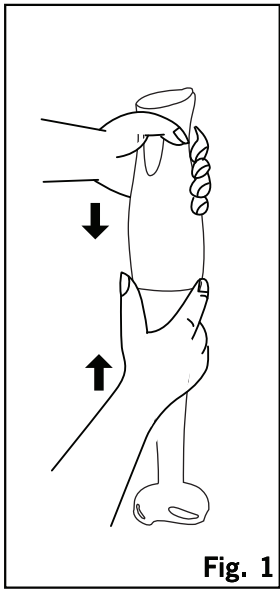



Robot 300

Dear customer,

Many thanks for choosing to purchase a MELLERWARE brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

Description

- A Start button
- B Motor unit
- C Blender attachment
- D Jug

Safety advice and warnings

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions may result in an accident.
- Clean all the parts of the product that will be in contact with food, as indicated in the cleaning section, before use.

Use or working environment:

- Keep the working area clean and well lit. Cluttered and dark areas invite accidents.

Electrical safety:

- Do not use the appliance if the cable or plug is damaged.
- Ensure that the voltage indicated on the Rating Label matches the mains voltage before plugging in the appliance.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- If any of the appliance's casing breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.
- Do not use the appliance with damp hands or feet, or when barefooted.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- Do not force the electrical wire. Never use the power cord to lift up, carry or unplug the appliance.
- Do not wrap the cord around the appliance.
- Check the state of the power cord. Damaged or tangled cords increase the risk of electric shock.
- Do not touch the plug with wet hands.

Personal safety:

- Take the necessary measures to avoid starting the appliance involuntarily.

- Do not touch any of the appliance's moving parts while it is operating.

Use and care:

- Fully extend the appliance's power cord before each use.
- Do not use the appliance if its accessories are not properly fitted.
- Do not use the appliance if it is empty.
- Do not use the appliance while the jug is empty.
- Do not use the appliance if the on/off switch does not work.
- Do not force the appliance's work capacity.
- Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.
- Unplug the appliance from the mains before replacing any accessory.
- This appliance is for household use only, not professional or industrial use.
- This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.
- This appliance should be stored out of reach of children and/or the disabled.
- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- Do not expose the appliance to extreme temperatures.
- Keep the appliance in good condition. Check that the moving parts are not misaligned or jammed and make sure there are no broken parts or anomalies that may prevent the appliance from operating correctly.
- The table adjoined contains example recipes with ingredient quantities and operating times.
- Pay special attention during the assembly and disassembly of blades, as they are sharp and could cause harm.
- Do not use the appliance on any part of the body of a person or animal.
- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.
- Do not use the appliance for more than 1 minute at a time. Do not use cycles of more than 3 minutes. When using 3 minute cycles; allow a resting period of at least 1 minute between each cycle. Under no circumstances should the appliance be operated for more time than necessary.

Instructions for use:

- Extend the cord completely before plugging it in.
- Connect the appliance to the mains.



- Switch the appliance on using the on/off button.
- Work with the food you want to process.

Once you have finished using the appliance:

- Stop the appliance by releasing the pressure on the on/off button.
- Unplug the appliance from the mains.
- Clean the appliance.

Cleaning

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use harsh solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.
- During the cleaning process, take special care with the blades, as they are very sharp.
- It is advisable to clean the appliance regularly and remove any food remains.
- If the appliance is not in good condition of cleanliness, its surface may degrade and adversely affect the duration of the appliance's useful life and could become unsafe to use.

Anomalies and repair

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.
- If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

Ecology and recyclability of the product

- The packaging materials of this appliance are recyclable. Should you wish to dispose of them, use the appropriate public containers for each type of material.
- The product does not contain concentrations of substances that could be considered harmful to the environment.
- Should you wish to dispose of the product once its working life has ended, take it to an authorised waste agent for the selective collection of waste from electric and electronic appliances.

Characteristics:

- Acoustic pressure level < 95dB(A)
- This appliance complies with Directive 73/23/EC on Low Voltage and Directive 89/336/EC on Electromagnetic Compatibility.

Food preparation Recipes

Mayonnaise (250ml)

Add 1 egg, salt, some drops of vinegar or lemon to the receptacle.
Fill with oil up to the level indicated and switch on, do not blend until the oil has been bound. Blend for 35 seconds.

Fruit milkshakes

Add the fruit and mix with blender until smooth.

Mashed potatoes (400g)

Potatoes can be blended while still in the saucepan for 30 seconds.

Baby food (300g)

Cut up 100g of apples and 100g of banana. Add 50g of biscuits and place into a receptacle. Add orange juice and blend for 25 seconds.

Mature cheese (50g)

Before blending, cut into 1cm cubes and blend for 10 seconds.



creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>