




mellerware®

CONTEMPORARY

Café Aroma Coffee Maker

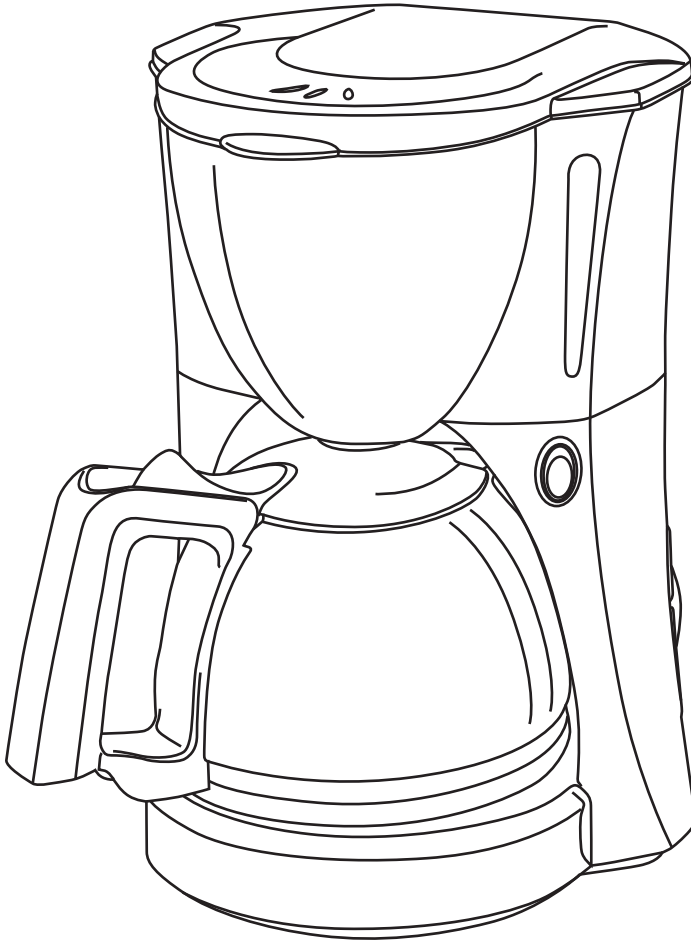

complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS



Model:
29500

PLEASE READ ALL INSTRUCTIONS BEFORE USE


2 year guarantee



KEY and CHARACTERISTICS

Description

- 1 Glass Jug
- 2 Drip filter
- 3 Water tank
- 4 Water level window
- 5 Power button
- 6 Keep warm plate

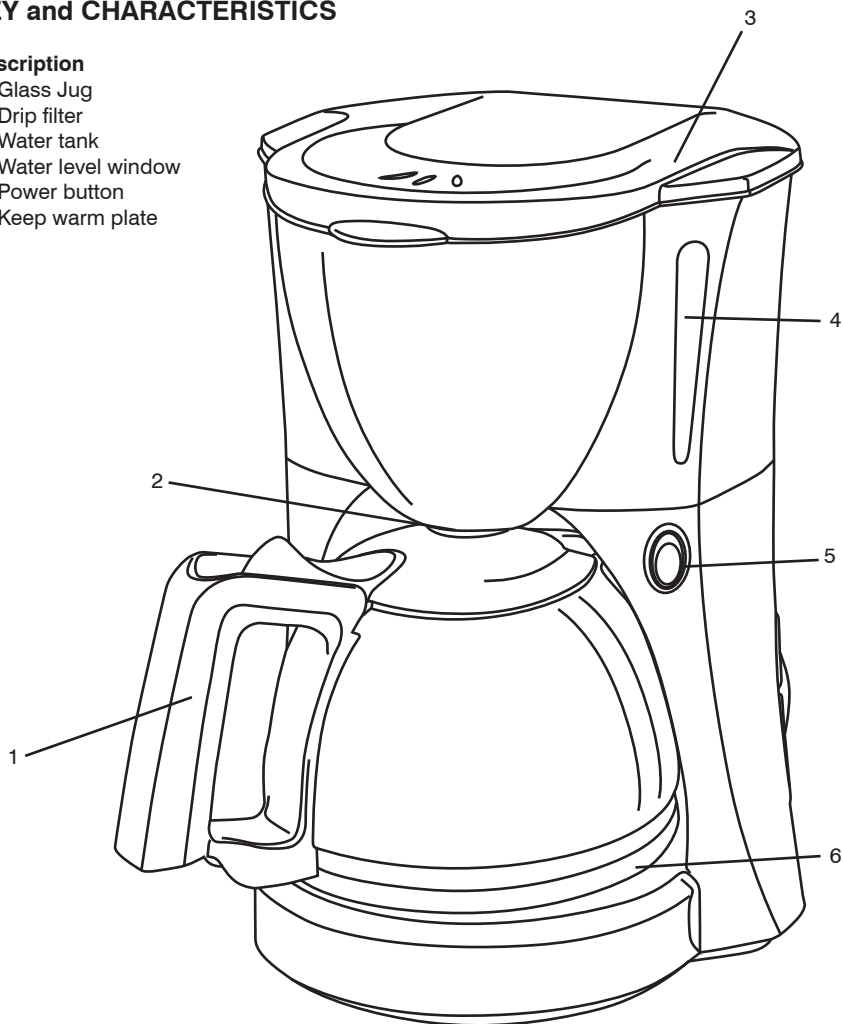

INSTRUCTIONS

Attention: Please read these instructions carefully before use in order to avoid damage due to incorrect operation. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over.

OPERATION INSTRUCTIONS

1. Clean the device when you use it for the first time.
2. Uncover the water tank lid and fill with clean water to the required level.
3. Put adequate coffee powder or tea in the permanent filter.
4. Place the filter in the filter basket.
5. Place the glass cup on the plate surface.
6. Insert the mains plug into the wall socket.
7. Turn on the switch. The indicator will light up and the coffee maker will start working.
8. When the coffee is ready, turn off the device first and then remove the glass cup.
9. Keeping the glass cup on the hot plate will keep your coffee or tea warm.



SAFETY GUIDE

1. Before plugging in the appliance, check that the current and power match those given on the rating plate.
2. Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
3. Never attempt to open the appliance or repair the appliance by yourself. This could cause an electric shock.
4. Do not allow the cable to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
5. Make sure that there is no danger that the cable or extension cable inadvertently be pulled or cause anyone to trip when in use.
6. If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord or plug may occur.
7. Stand the appliance on a firm, level and heatproof surface away from naked flames (e.g. gas oven) and out of the reach of children.
8. This appliance is neither suitable for commercial use nor for use in the outdoors.
9. Never leave the appliance unattended while it is in use.
10. Children cannot recognize the dangers involved in the incorrect use of electrical appliances. Therefore never allow children to use household appliances without supervision.
11. Always remove the plug from the socket when the appliance is not in use and each time before it is cleaned.
12. If you want to add some coffee powder or tea during the operation, please switch off the power and switch on again when you finished.
13. If there is no water in the water tank, switch off the power.
14. Use only clean water.
15. Do not touch the hot plate while the device is in operation or immediately after switching off, as it will be very hot.
16. After using it many times, the filter cone, cup and water tank must be cleaned thoroughly with warm water and detergent.

17. Do not switch on the coffee maker when the water tank is empty or the cup was removed.
18. This device is not intended for use by children.

CLEANING

- * Always remove the plug from the mains outlet before cleaning the appliance.
- * Never immerse the appliance in water. You can clean it with a damp cloth.
- * The removable items (filter, filter holder, drip tray) can be washed on hot spray water (or in a dishwasher).
- * Descale your appliance regularly. With normal use:
 - Hardness up to 18 DH (22.5 Clarke) –2 or 3 times a year;
 - Hardness over 18 DH (22.5 Clarke) –4 or 5 times a year.(Your water supply company can inform you about the hardness of your water.)
- * Clean the outside of the appliance with a soft damp cloth, do not use scouring materials.
- * Descale the appliance termly. Use detergent, which can be obtained from specialist shops, and follow the instructions given.
- * After decaling, let the appliance work twice or more with only water to rinse away the detergent remainders.

MAINTENANCE

- * Keep the appliance away from hot objects and clean it regularly.
- * If your appliance is not functioning correctly, it must only be repaired by the appointed service agent.
- * If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.

Technical data:

Voltage: 230V

Wattage: 900W



creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>