

mellerware[®]

ECO GRAPHITE
**2 slice
toaster**

makes life easier



Cool -touch
body

Variable
browning

Removable
crumb tray



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
750W


2 YEAR
GUARANTEE

Model:
24825



Dear customer,

Please read through these operating instructions carefully before connecting your device to avoid damage due to incorrect use. Should you pass the device on to someone else, please ensure that these operating instructions are enclosed as well.

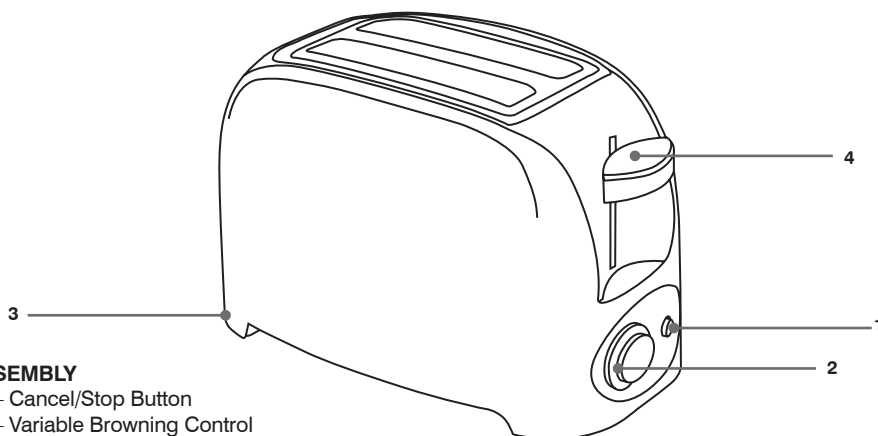

ASSEMBLY

1. – Cancel/Stop Button
2. – Variable Browning Control
3. – Removable Crumb Tray
4. – Bread Rack Lever

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.

CHARACTERISTIC	FUNCTION
Variable Browning Control	Adjust browning control to desired level. Your personal preference and different bread types will require different settings.
Cancel Button	Depress cancel button to stop toasting at any time.
Bread Rack Lever	Press lever down to begin toasting.
Crumb Tray	Remove the crumb tray after use and wipe clean to avoid attracting insects as well as preventing a fire hazard.

USING YOUR TOASTER

WARNING! Never attempt to extract toast, muffins bagels or any other item that has become stuck, with a knife or sharp metal object, as contact with the live elements can cause electrical shock. Unplug the appliance and allow it to cool down completely before attempting to remove obstructed items.

1. Insert the plug into a suitable mains supply socket and turn the power on.
2. Place two slices of bread into the bread slots.
3. Select the desired browning setting. (When using the toaster for the first time we suggest toasting on no. 3. Varying types of bread and personal preference may require a different browning setting)
4. Press the bread rack lever down until it clicks into place. The toasting cycle will automatically commence.

NOTE: If the toaster is not plugged in and switched on, the toast rack will not stay down.

5. The toaster automatically switches off and raises the toast after the desired toast cycle is complete. The toasting process can be stopped at any time by pressing the cancel button.

CARE AND CLEANING

1. Always turn the power off, remove the plug from the power supply outlet and allow the product to cool completely before cleaning.
2. To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty crumbs, wipe with a cloth and replace in the toaster before using it again.
3. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth. **DO NOT IMMERSE**



1. THE APPLIANCE IN WATER.

- To clean the interior, turn the toaster upside down over the sink and shake crumbs free. **DO NOT PLACE ANY METAL OR SHARP OBJECTS INSIDE YOUR TOASTER.**

IMPORTANT SAFEGUARDS

PLEASE READ ALL INSTRUCTIONS BEFORE USE AND KEEP FOR FUTURE REFERENCE

- To protect against electrical shock, do not immerse any part of the appliance or cord into water or any other liquid.
- Close supervision is necessary when the appliance is used by, or near children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not leave the appliance unattended when not in use.
- Always use the appliance on a dry and stable work surface.
- Do not use this appliance outdoors.
- Always unplug the appliance from the power outlet socket when not in use and before cleaning.
- Do not operate the appliance if damaged, or after it malfunctions. If the appliance is damaged or malfunctions in any manner, return to an approved service agent for service or repair to avoid any hazard.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged, return the appliance to an approved service agent for service or repair.
- Do not let the cord hang over the edge of the table or work surface, or touch any hot surfaces. Allow the appliance to cool before wrapping the cord in the cord storage area.
- Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- Do not place the appliance near a hot gas or electric burner, or where it could touch a heated oven or microwave oven.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- CAUTION:** When using this appliance, allow adequate space above and on all sides for circulation. Keep the appliance away from curtains, dish towels, wall coverings or any other flammable materials during use. Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- Do not use this appliance with any food stuff or product containing sugar, jam or preserves.


TROUBLE SHOOTING GUIDE

Problem	Reason	Action	Pre-caution
Bread rack lever does not stay down.	There is no power to the appliance.	Check that the mains switch is working and in the "ON" position.	To many appliances on the same circuit could overload it.
Inside elements are dull compared to outside.	The appliance is warmer in the centre so the inside elements are not as powerful as the outside elements.	This is normal.	Do not place any sharp objects into the toaster or this will create a hazard.
Toast is too brown or too light.	Thickness and type of bread will determine moisture content.	Use browning control to adjust to the required toasting time.	Keep the crumb tray clean to avoid a hazard and the infestation of insects.




creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>