

mellerware®

E X E C U T I V E
V I T T O R I A P A N I N I M U L T I - G R I L L



complies with
INTERNATIONAL
IEC60355
SAFETY SPECIFICATIONS

m
2000W

CE
2 YEAR
GUARANTEE

Model:
28550

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee



Dear customer,

Many thanks for choosing to purchase a MELLERWARE brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

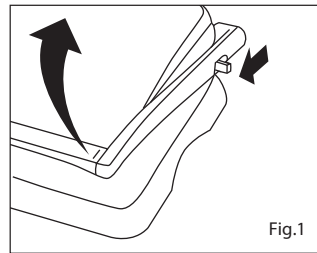 
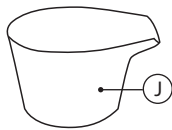 
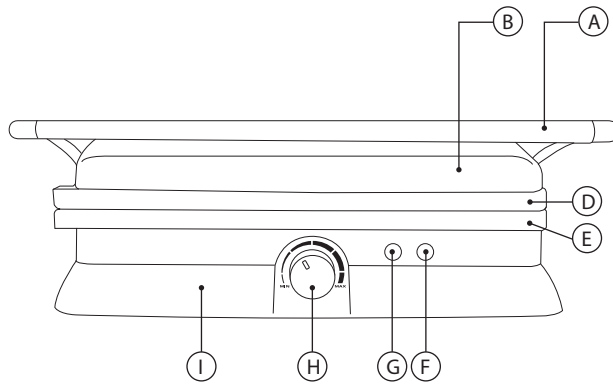 


Fig.1

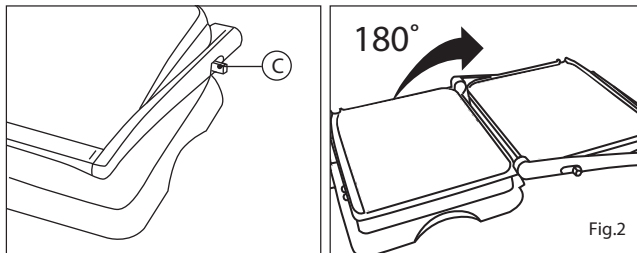 


Fig.2

Description

- A- Handle
- B- Upper Housing
- C- Hinge Release Lever
- D- Upper Non-stick Plate
- E- Bottom Non-stick Plate
- F- Ready Pilot Light (Green)
- G- Power Pilot Light (Red)
- H- Thermostat Knob
- I- Bottom Housing
- J- Grease container





Safety advice and warnings

- Read these instructions carefully before switching on the appliance and keep them for future reference.

Failure to follow and observe these instructions could lead to an accident.

- Before using for the first time, clean all the parts of the product which may come into contact with food, as indicated in the cleaning section.

Working environment:

- Place the appliance on a horizontal, flat, stable surface, which will withstand high temperatures.

Keep away from other heat sources and contact with water.

- Keep the appliance away from flammable material such as textiles, cardboard or paper, etc.

Electrical safety:

- Do not use the appliance if the cable or plug is damaged.

- Ensure that the voltage indicated on the rating label matches the mains voltage before plugging in the appliance.

- The appliance plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.

- Do not use or store the appliance outdoors.

- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.

- Do not force the electrical wire. Never use the electric wire to lift, carry or unplug the appliance.

- Do not touch the plug with wet hands.

Personal safety:

- The temperature of the accessible surfaces may be high when the appliance is in use.

Use and care:

- Fully unroll the appliance's power cable before each use.

- Do not use the appliance if the on/ off switch does not work.

- Do not move the appliance while in use.

- Disconnect the appliance from the mains when not in use and before undertaking any cleaning tasks.

- To keep the non-stick treatment in good condition, do not use metal or pointed utensils on it.

- This appliance is for household use only, not professional or industrial use.

- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

- This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.

- This appliance should be stored out of reach of children and/or the disabled.

- Never leave the appliance unattended while in use.

- Do not store or transport the appliance if it is still hot.

- Turn the thermostat control to the minimum (MIN) setting. This does not mean that the appliance has been switched off permanently.

- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Instructions for use

Before use:

- Make sure that all the product's packaging has been removed.

- Before using the product for the first time, clean the parts that will come into contact with food in the manner described in the cleaning section.

Use:

- Connect the appliance to the mains.

- The pilot light (G) comes on.

- Close the upper housing.

- Turn the appliance on, by using the thermostat knob.

- Select the desired temperature.

- Wait until the pilot light (F) comes on.

- Open the upper housing, and put the food you want to cook on the bottom cooking plate.

- Close the upper housing. Lower gently and allow the food to settle.

- When the food is to your taste, remove it from the appliance with the help of a wooden spatula or similar heat resistant implement, do not use utensils that could damage the nonstick coating.



Open grill function:

- Press the hinge release lever. (Fig 1)
- Open the upper housing, Slide back until it line up horizontally. (Fig 2)
- Use the appliance as an open grill to cook your desired food.

Once you have finished using the appliance:

- Select the minimum position (MIN) using the thermostat control.
- Unplug the appliance from the mains.
- Clean the appliance.

Cleaning

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.

Anomalies and repair

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.
- If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

This appliance has been filled with a quantity and quality of certain oils, therefore the replacement or refilling of oil in case of a leakage should be carried out by an authorised technical service centre.

Ecology and recyclability of the product

- The materials of which the packaging of this appliance consists are included in a collection, classification and recycling system. Should you wish to dispose of them, use the appropriate public recycling bins for each type of material.
- The product does not contain concentrations of substances that could be considered harmful to the environment.



- This symbol means that in case you wish to dispose of the product once its working life has ended, take it to an authorised waste agent for the selective collection of Waste from Electric and Electronic Equipment (WEEE).

This appliance complies with Directive 2006/95/EC on Low Voltage and Directive 2004/108/EC on Electromagnetic Compatibility.



creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>