 


# mellerware®

C O N T E M P O R A R Y  
F l o o r F a n H e a t e r

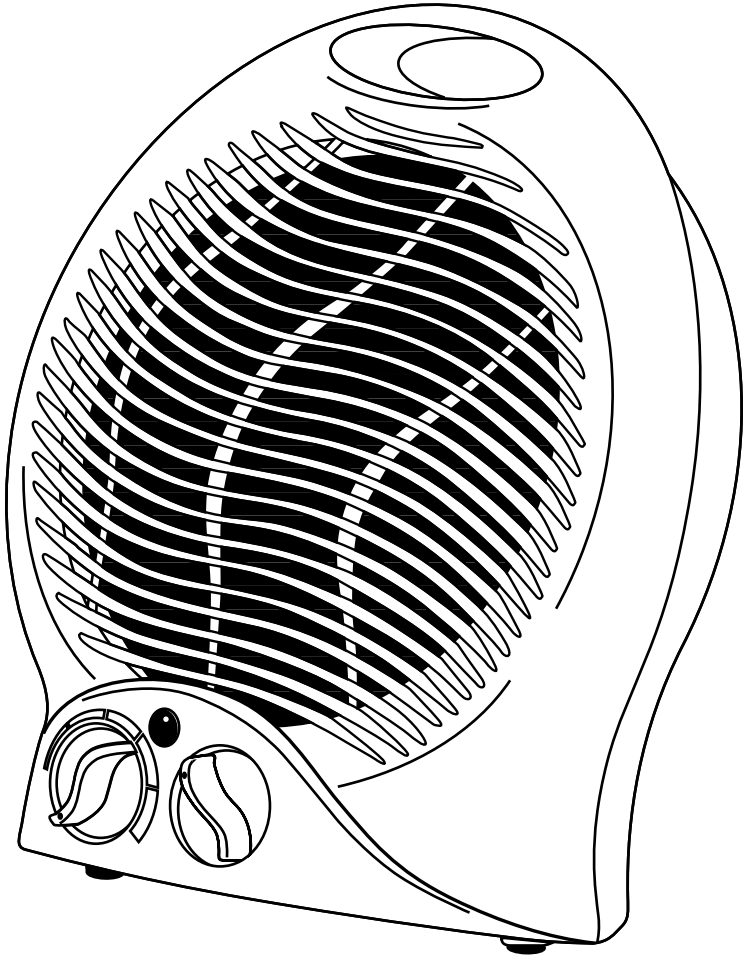

complies with  
SABS  
IEC60355  
SAFETY STANDARDS



 
Model:  
3 5 2 0 0

**PLEASE READ ALL INSTRUCTIONS BEFORE USE**

**2 year guarantee**

**KEY AND CHARACTERISTICS:**

1. Handle
2. Pilot Lamp
3. Thermostat
4. ON/OFF Selector Switch

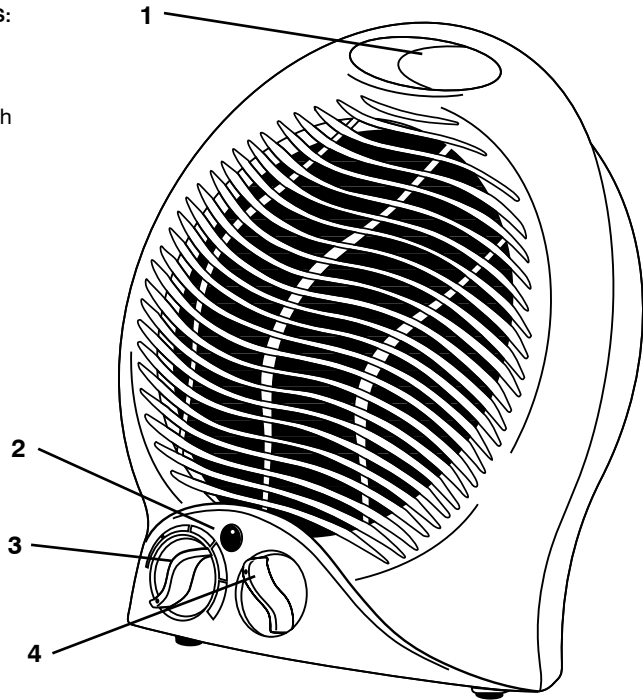

---

**IMPORTANT SAFETY INSTRUCTIONS:**

When using electrical appliances, the following safety precautions should always be followed to reduce the risk of electric shock, personal injury or fire. Read all these instructions carefully before using, and save for future reference or new users.

1. Keep all electrical appliances out of reach of children, in a secure place.
2. This appliance is not designed for children to use.
3. Close supervision is required when any appliance is used near children.
4. To protect against electric shock, never immerse any appliance, the mains lead or plug in water or any other liquid.
5. Never reach for any appliance that has fallen into water. Switch off the power at the mains immediately and unplug. Do not re-use.
6. Avoid placing the appliance where the power cord might be accidentally caught, or the appliance may be knocked into a sink.
7. Ensure hands are dry before operating the switch or turning off at the mains.
8. Ensure the appliance is switched OFF before connecting to the mains power supply.
9. Do not touch hot surfaces, use handles or knobs
10. Do not carry the appliance by the cord or pull the cord to remove the plug from the socket.
11. Do not operate this appliance with a damaged cord or plug. An authorized repair agent should carry out repairs.
12. If the appliance stops unexpectedly or appears to malfunction, unplug from the mains and discontinue use immediately.
13. Never leave the appliance unattended when connected to the mains power supply.
14. Unplug from the mains socket when not in use and before cleaning or changing accessories.
15. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
16. Keep all ventilation slots clear of debris and do not cover. Never drop or insert objects into the openings
17. Do not use outdoors. This appliance is designed for domestic household use only.
18. Only use the appliance as described in this booklet.

### ADDITIONAL WARNINGS FOR HEATERS:

 
1. Read all instructions before using the fan heater.
2. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
3. This appliance meets the electromagnetic compatibility requirements specified in EN55104/95 with regard to interference with radio and TV sets.
4. Do not leave your home while the appliance is in function, ensure that the switch is in OFF ("O") position and that the thermostat is in minimum position. Always unplug the appliance when not in use.
5. Keep combustible material such as furniture, bedding, cushions, clothes, curtains, paper etc. at least 100cm away from fan heater.
6. If wall mounted do not fix to combustible materials such as wood, synthetic or plastic surfaces. Do not hang anything from or in front of the fan heater.
7. Always unplug the heater when not in use. DO NOT pull the cord to unplug the heater.
8. Keep the air inlet and outlet free from objects at least 1m in front and 50cm behind the heater.
9. DO NOT use the heater below an electric socket.
10. DO NOT let children or animal play with the heater. Pay attention! The air outlet gets hot during operation (more than 80°C)
11. DO NOT COVER. If covered there is a risk of overheating.
12. DO NOT use this fan heater in the immediate surroundings of a bath, shower or swimming pool.
13. DO NOT use the heater in room with explosive gas or while using inflammable solvents, varnish or glue.
14. Keep the fan heater clean. DO NOT allow any objects to enter the ventilation or exhaust openings as this may cause electric shock, or fire or damage to the heater.
15. Always use the heater in an upright position.
16. DO NOT use the heater to dry laundry.
17. NEVER obstruct the intake and outlet grilles (danger of overheating).
18. The heater must be at least 50cm from furniture and other objects.
19. DO NOT use the appliance in room with less than 4m<sup>2</sup> floor area.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (eg: obstruction of intake/outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating and plug the appliance in again.

### INSTRUCTIONS FOR USE:

**This appliance requires no installation and should be used solely as a portable appliance.**

- Summer Service (ventillation only): turn the knob to fan setting.
- 1 Turn the thermostat knob (left) in a clockwise direction until it reaches the maximum setting.
  - 2 Heating at reduced power: turn the right knob to setting I (1000w).
  - 3 Heating at full power: turn the right knob to setting II (2000w).
  - 4 Switching off: turn the left knob to setting "O".

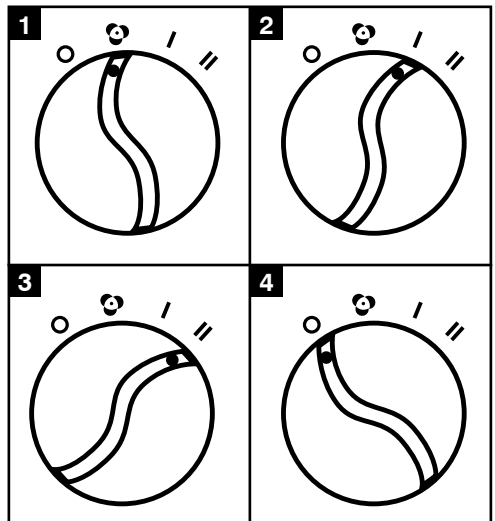

### REGULATING THE THERMOSTAT:

- When the room has reached the desired temperature turn the left thermostat knob in an anti-clockwise direction up to the point where the appliance switches off and not beyond.
- The temperature is fixed in this way and will be automatically regulated and kept at a constant level by the thermostat.

### CLEANING AND MAINTENANCE:

- Before cleaning always remove the plug from electrical socket.
- Clean the air inlet/outlet grilles frequently.
- Never use abrasive powders or solvents.

creative housewares

Service Centre Share Call: 086 111 5006

web: [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>