



# mellerware® HELIOS double spiral hotplate



Stainless steel double  
spiral elements

Thermostat control for  
each hotplate

On/Off lights for each  
hotplate




complies with  
INTERNATIONAL  
IEC60335  
SAFETY REQUIREMENTS

**m**  
2000W

2 YEAR  
GUARANTEE

Model:  
27200BK



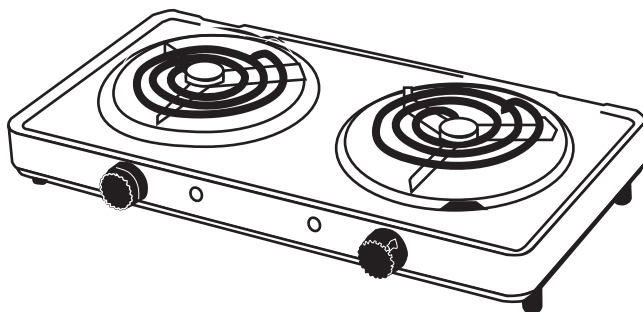

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug, base of the unit, or the complete appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from the outlet when not in use and before cleaning. Allow the appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. If a problem arises return the appliance to an authorized service agent for examination, repair or adjustment.
8. Do not use accessories or attachments that are not recommended by the appliance manufacturer.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, and do not touch the hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Ensure that the control knob is turned to the off setting before inserting or removing the plug from the wall outlet.
13. Do not use the appliance for anything other than it's intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
15. Place a heat resistant pad or mat under the unit before using it to prevent possible heat damage to the counter or table top.
16. Any appliance when plugged into an electrical outlet should not be left unattended.
17. Do not clean with metal scouring pads, which can break off the pad and touch the electrical parts, creating a risk of electrical shock.
18. Any maintenance other than cleaning should be performed only by an authorized service/repair agent. Alternatively the appliance can be returned to the store where it was purchased, along with the purchase slip.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. The temperature of accessible surfaces may be high when the appliance is operating.
22. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
23. This appliance is for household use only.





### Tips about the electrical cord

- A short power-supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is taken.
- If a long detachable power-supply cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance,
  - The longer cord should be arranged so that it will not drop over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

### Operating Instructions

1. Place your stove on a solid, safe surface. Do not place it on a glass surface or a finely finished wood surface.
2. Place a heat resistant pad or mat under the unit before using it to prevent possible heat damage to counter or table top.
3. Plug the cord into the electrical wall outlet and turn the thermostat to the desired heat setting (heat selection from 1 to 6).
4. Turn the thermostat to lowest setting (0 position) when finished. Then unplug the cord from the electrical outlet.

### Cleaning Instructions

1. Unplug the cord.
2. Wipe the surface with a damp cloth or sponge. Do not use steel wool or abrasives.
3. No maintenance other than cleaning is required on this appliance.

### NOTE!


**IF THE SUPPLY CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURER OR IT'S SERVICE AGENT TO AVOID A HAZARD.**






## creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117       +27 21 931 4058

Service Centre Helpline: 086 111 5006

 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>