



# mellerware®

ODISEO electric frying pan

makes life easier



30cm x 30cm cooking surface

Non-stick coating

Adjustable thermostat control

**Recipe book included**




complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

**m**  
1500W

2 YEAR  
GUARANTEE

Model:  
27700A

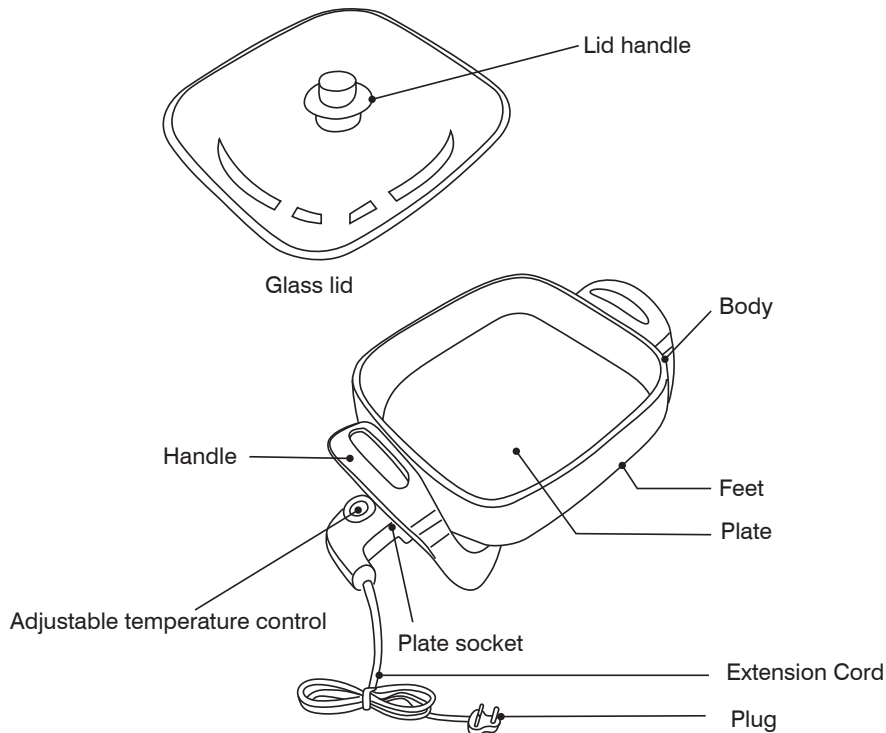

**Warning:**

TO AVOID THE RISK OF FIRE, ELECTRIC SHOCK AND BURNING, PLEASE READ AND FOLLOW THE INSTRUCTIONS CAREFULLY:

**Before use:**

1. Do not use the appliance on plastic or synthetic counter tops, or any unstable surface.
2. Do not use this unit near flammable goods, such as carpets, straw mats or curtain.
3. Ensure that the voltage on the rating label of the appliance corresponds to the voltage of the wall socket.
4. Do not use this unit if the power supply cord or plug is damaged.
5. If the appliance is dropped or damaged take it to the nearest authorised service centre for repair. Do not attempt to repair the unit yourself.
6. Do not touch the plate surface while in use or before it has cooled down even if the power is switched to the OFF position.
7. Do not unplug the adjustable temperature controller before it has cooled down because of the high temperature. Be sure to keep the unit away from children.
8. Only use non stick cooking utensils that will not scratch the surface of the pan. Do not use metal utensils.
9. Do not wash directly with water as this will cause electric shock
10. The appliance may be used only for its intended

purpose. No responsibility will be taken for any possible damage caused through incorrect use or improper handling.

11. Do not immerse the appliance or the plug in water or any other liquid.
12. Never leave the appliance unattended while it is in use.
13. This appliance is not intended for use by children and/or people with reduced mental, physical or sensory capabilities unless they have been given instruction on its use and are supervised by a person responsible for their safety.
14. Do not allow the cord to hang over the edge of a counter or table, and keep it away from any sources of heat and open flames. Remove the plug from the socket only by holding the plug.
15. Ensure that children are supervised at all times to ensure that they do not play with the appliance.
16. Never leave the appliance unattended while in use or while connected to the wall socket.
17. This appliance is intended for household use only.

**Safety Instructions**

1. Children should be supervised to ensure that they do not play with the appliance.
2. Do not use the appliance with wet hands
3. Do not touch the plug or cord with wet hands.
4. Do not place the appliance under a running tap. To clean the appliance, refer to the cleaning section.





1. Do not allow the cord to come into contact with any rough, sharp or hot surfaces.
2. Do not pull or tug on the cord to remove the plug from the wall socket. Switch off the unit on the control dial and at the wall socket, then firmly grip the plug to remove from the wall socket.
3. Do not use the cord or plug to carry or transport the appliance, even for a short distance. The appliance has 2 carry handles for this purpose.
4. The appliance will get hot during use. Switch off and remove the plug from the wall socket, then allow the appliance to cool down fully before cleaning or placing in storage.
5. Only use the supplied components when using the appliance. If a different cord, connector or lid is used, the warranty and manufacturer's liability will be rendered null & void.
6. The lid is constructed out of glass, please handle the lid with care to ensure that remains intact.
7. Do not remove the connector while the appliance is switched on or in use. Switch off the appliance as stated in the above instructions.
8. This appliance should not be used outdoors or for industrial or professional purposes.

#### USING THE FRYING PAN

**\*APPLY SOME COOKING OIL TO THE PAN BEFORE USE \***

##### 1. PLUG THE UNIT IN:

- a. Plug the adjustable temperature controller into the plate socket.
- b. Connect the plug directly into the wall socket, never use plug adaptors or extension leads with this product.

##### 2. TEMPERATURE SETTING:

###### THERMOSTAT SETTINGS

- 1- 90°C
- 2- 120°C
- 3- 150°C
- 4- 170°C
- 5- 195°C

Turn dial to the desired temperature and the indicator light will illuminate.

##### 3. START COOKING:

- a. The pilot light will switch off when the plate reaches the selected temperature.
- b. For your reference, it takes about 8 minutes to reach the required temperature on setting No. 5.

##### 4. AFTER USE:

- a. Switch the adjustable temperature controller to the OFF position, and unplug the unit from the wall socket.
- b. Once the unit has cooled down to room temperature, remove the temperature control unit from the pan.

##### 5. CLEANING:

- a. Before cleaning ensure the unit has been unplugged from the wall socket, the adjustable temperature control unit has been removed from the pan and the pan has cooled down to room temperature.
- b. Use a damp cloth with some dish washing liquid to clean the cooking surface. Ensure that it is a soft cloth that will not damage the non-stick layer.
- c. Use a soft dry cloth to clean the outside of the unit.
- d. Never use a scourer or any abrasive material when cleaning the pan as it will damage the non-stick surface.
- d. If the power supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

##### Read all instructions before use.

Save these instructions for further reference

##### SPECIFICATIONS:

###### ELEC. SPEC.

Please check the rating label indicated on the product.

###### DIMENSIONS:

Size: 30cm x 30cm / depth 6cm

###### TEMPERATURE RANGE :

90 C ~ 195 C (1-2-3-4-5 scale)

###### CORD LENGTH:

100cm

###### VOLTAGE :

AC230V ~ 50Hz 1500W

###### ACCESSORIES

Extension cord with adjustable temperature

controller..... 1 PC

Glass Lid..... 1 PC





## creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa  
 P.O. Box 6156 Parow East, 7501, South Africa  
 +27 21 931 8117     +27 21 931 4058  
Service Centre Helpline: 086 111 5006  
 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>