



mellerware®

TRENDS FOR LIFE

Marco Aldany

Pronto Hairclipper



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS



CE
2 YEAR
GUARANTEE

Model:
MA20001


PLEASE READ ALL INSTRUCTIONS BEFORE USE





Dear customer,

Many thanks for purchasing a MELLERWARE product. Thanks to its technology, design and operation and the fact that it goes through strict quality controls - we feel sure you will be entirely satisfied.

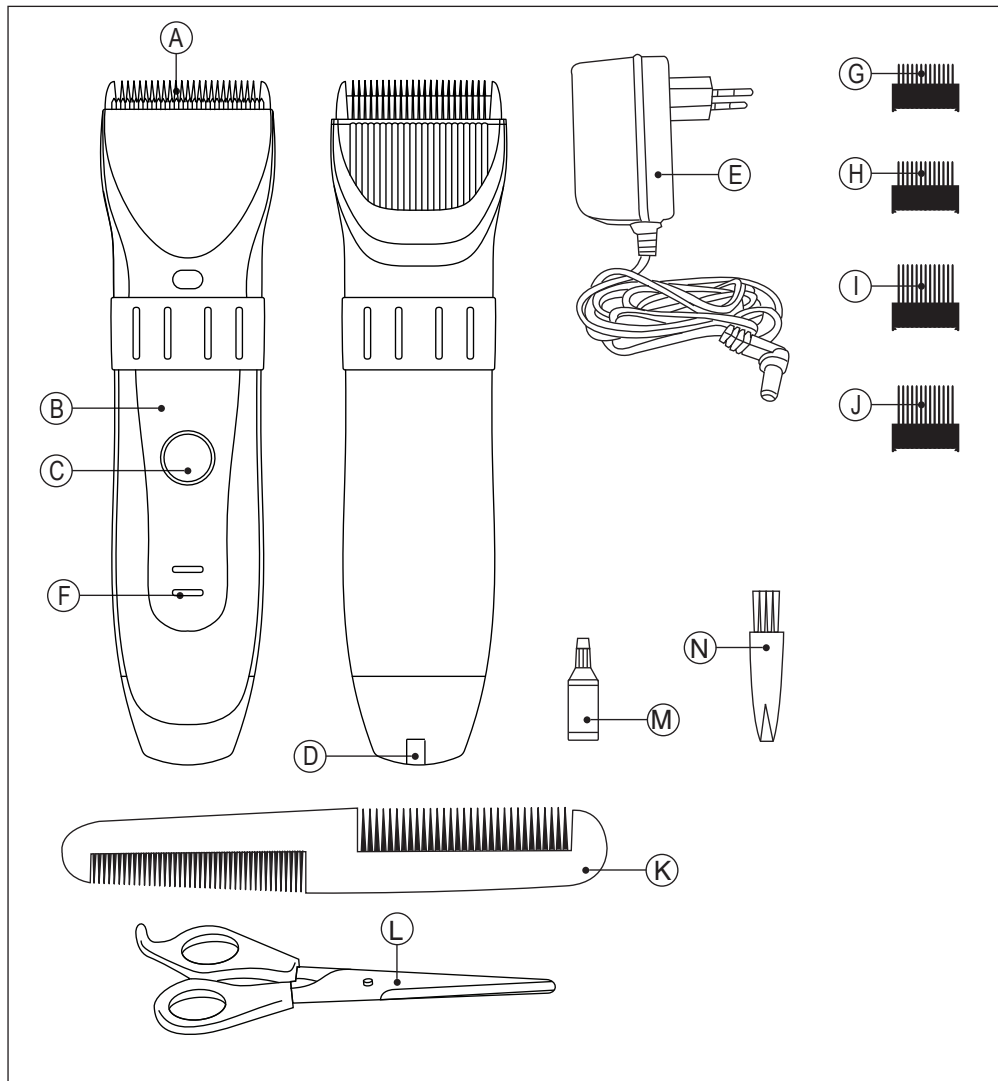



Description

A Ceramic and titanium blades

B Appliance body

C On/Off switch

D Connector for charger

E Battery charger

F Pilot light charge indicator

G Comb guide 3mm # 1

H Comb guide 6mm # 2

I Comb guide 9mm # 3


J Comb guide 12mm # 4

K Comb

L Scissors

M Lubricating oil for blades

N Blade-cleaning brush

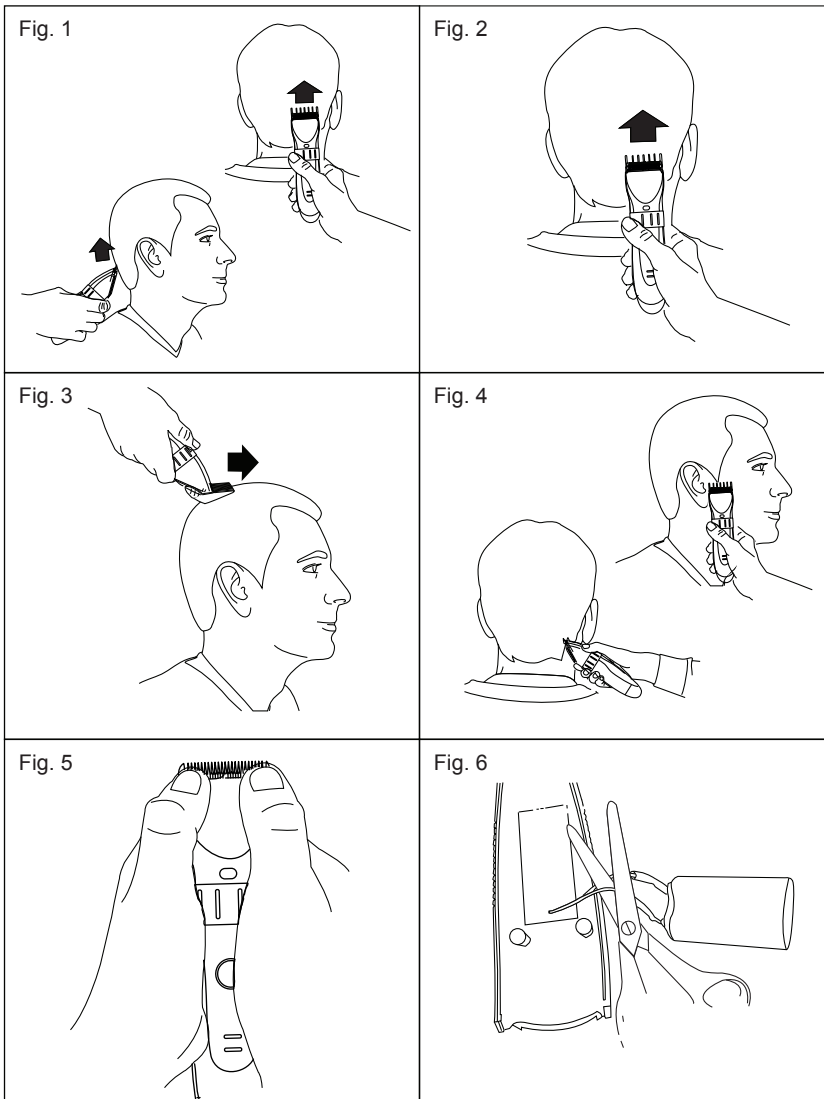



Safety advice and cautions

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions may result in an accident.

Electric safety

- Do not use the appliance if the cable or plug is damaged.
- Ensure that the voltage indicated on the nameplate matches the mains voltage before plugging in the battery charger.
- The battery charger's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Only use the appliance with the specified base / electric plug, provided with the appliance.
- If any of the appliance's casing breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- **WARNING:** Keep the appliance dry.
- **WARNING:** Do not use the appliance near water.
- Do not use the appliance near bathtubs, showers or swimming pools.
- Do not use the appliance with damp hands or feet, or when barefooted.
- Do not force the electrical wire. Never use the electric wire to lift up, carry or unplug the appliance.
- Ensure that the electric cable does not get trapped or tangled.
- Check the state of the electrical connection cable. Damaged or tangled cables increase the risk of electric shock.
- Do not touch the plug with wet hands.

Personal safety:

- Take the necessary precautions to avoid unintentionally turning on the appliance.
- Before using the appliance ensure that the tool is properly fixed in place.
- Do not touch any of the appliance's moving parts while it is operating.

Use and care:

- Fully unroll the appliance's power cable before each use.
- Do not use the appliance if the parts or accessories are not properly fitted.
- Do not use the appliance if joinable accessories are faulty. Replace them immediately.
- Do not use the appliance if the on/off switch does not work.
- If you use the appliance in a bathroom or similar place, unplug the appliance from the mains when it is not in use, even if it is only for a short while, as proximity to water involves a risk, even if the appliance is disconnected.

- Disconnect the battery charger from the mains when not in use and before undertaking any cleaning task.
- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its handling.
- This appliance is for household use only, not professional or industrial use.
- This appliance should be stored out of reach of children and/or the disabled.
- Do not use the appliance on pets or animals.
- Do not leave the appliance resting on surfaces when it is still switched on.
- Keep and store the appliance in a dry place, free from dust and away from sunlight.
- This appliance was oiled during the manufacturing process. To keep the appliance in good working condition, we recommend that you oil the blades every time the appliance is cleaned by pouring some drops of oil on the blade and turning the appliance on for a few seconds.
- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Charging the battery

Warning: The new battery does not come completely charged and must be charged up to the maximum before using the appliance for the first time.

- Charge the battery at room temperature between 4 and 40°C.
- Plug the charger in to the electric mains.
- The time needed to charge completely is 8 hours approximately. Never try to overcharge the batteries (although it is recommended that the batteries are charged for 10 hours for the first time).
- Plug in the charger connector to the appliance's electrical input, situated on the back/lower part of the appliance.
- When the battery is charging, the pilot light will turn red, indicating that the charger is on. It will turn green once charging is complete.
- The pilot light will remain green while turned on. Once flat the pilot light will switch off.
- When charging has finished, unplug the charger from the mains.

Instructions for use

Assembly of accessories:

- To fix the comb guide, take it by the ends and press it against the razors of the appliance until firmly fixed in place.
- To dry just pull out.





Use:

The appliance can be used connected to the electric mains or with batteries.

- Connect the appliance to the mains.
- Turn appliance on, pressing the On/Off switch.

How to cut hair

- Situate the person whose hair you are going to cut so that the top of their head is at your eye level. Place a protective towel or cloth around their neck.
- To obtain best results it is better to use the appliance on dry hair, as it is much easier to control the hair and the result.
- Comb hair well before cutting. Make sure that there are no tangles or knots.
- Hold the appliance in a calm and relaxed manner in order to ensure maximum control of the cut and a uniform result. Proceed to use short cuts gradually going around the head.
- Leave the hair a little longer than the desired length as it can always be altered later.
- While working adapt the comb/comb guide to the desired length.
- At regular intervals, stop cutting in order to comb the hair and check the results so far.

Step 1 Nape

- Attach comb guide #1 or #2.
- Hold the appliance with the razor facing downwards and begin to cut the hair from the base of the neck.
- Make some upward movements, raising the appliance gradually and away from the head, cutting the hair gradually until the height of the ears (Fig 1)

Step 2 The back of the head

- Attach comb guide #3, #4, #5, #6, #7 or #8 and continue with the back of the head (Fig 2)

Step 3 The side of the head

- Attach a new shorter comb guide (#1 or #2) to trim the sideburns.
- Attach the longest comb (#3, #4, #5, #6, #7 or #8) again and continue until you reach the top of the head.

Step 4 The top of the head

- Using comb guide #3, #4 or #5, pass the appliance from the back to the front, against the growth of the hair (Fig 3). In some cases it's necessary to go over what you have done a second time from front to back.
- The comb guide #1 or #2 is for when you want to achieve a more precise cut.
- Use comb guides #6, #7 or #8 to leave hair at a longer length. Hold the hair up with the comb or the comb and your fingers and cut.
- Always work from the back to the front, reducing the length between your fingers or the comb and the head gradually.

Step 5. Final touch

- Finally use the appliance without attaching any comb guides to the blades to cut the hair around the base of the neck, the sides of the neck and the ears.
- To make the sideburns straight, turn the appliance over to use the upper blades (Fig 4). Move the appliance adapting it to the physiognomy of the head. To achieve more precise results use the shaver or the finishing attachment.

Once you have finished using the appliance:

- Turn the appliance off, using the on/off switch.
- Unplug the appliance from the mains (If it was used connected to the mains.)
- Clean the appliance

Cleaning

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the device with a damp cloth that has been administered a couple of drops of detergent. Dry afterwards.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not submerge the appliance in water or any other liquid, or place it under a running tap.
- Clean the blades and the comb guides with the cleaning brush. Remove the hairs from the blades and from within the appliance using the brush. It is important to clean off all the hairs after each use.
- To remove the blades, make sure the appliance is turned off.
- Hold the hair trimmer with both hands, placing thumbs on the outside of the blades and push outwards as demonstrated in (Fig5)
- To replace the blades, push together and exert pressure against the body of the hair trimmer until a click is heard.
- Grease with oil regularly.

Anomalies and repair

- Take the appliance to an authorised technical support service if problems arise. Do not try to dismantle or repair without assistance, as this may be dangerous.
- If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

Ecology and recyclability of the product

- The materials of which the packaging of this appliance consists are included in a collection, classification and recycling system. Should you wish to dispose of them, use the appropriate public containers for each type of material.
- The product does not contain concentrations of substances that could be considered harmful to the environment.





- Should you wish to dispose of the product once its working life has ended, take it to an authorised waste agent for the selective collection of Waste from Electric and Electronic Appliances (WEEA).

- The product includes a battery; the user must remove them before disposing of the product. Remember that batteries must be disposed of in duly authorised containers. Do not dispose of them in fire.

How to remove the batteries from inside the appliance:

Warning: It is important that the batteries are completely de-charged before removing them from the appliance.

To remove the batteries once the appliance life has come to an end, follow the instructions:

Removal of blades

- Detach the two screws from razor
- Remove head by pulling outwards
- Remove the cut-length regulator by pulling outwards
- Separate the two main bodies of appliance
- Find battery and cut flaps that attach it to the circuit.

In order to eliminate short-circuit risks due to residual charge in the battery, first cut the Red cable and protect the conductor end with insulating tape, then proceed to cut the Black cable in the same manner.

(Fig 6)

- Safely extract the battery from its position.

This appliance complies with Directive 2006/95/EC on Low Voltage and Directive 2004/108/EC on Electromagnetic Compatibility.







creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>